




## CKR SRL

Sede legale: Via dell'Industria n. 23 – 35026 CONSELVE (PD)  
P.Iva e C.F. 04311900288 - Tel.: 049/2970285  
e-mail: [info@ckr.it](mailto:info@ckr.it) – sito web: [www.ckr.it](http://www.ckr.it)

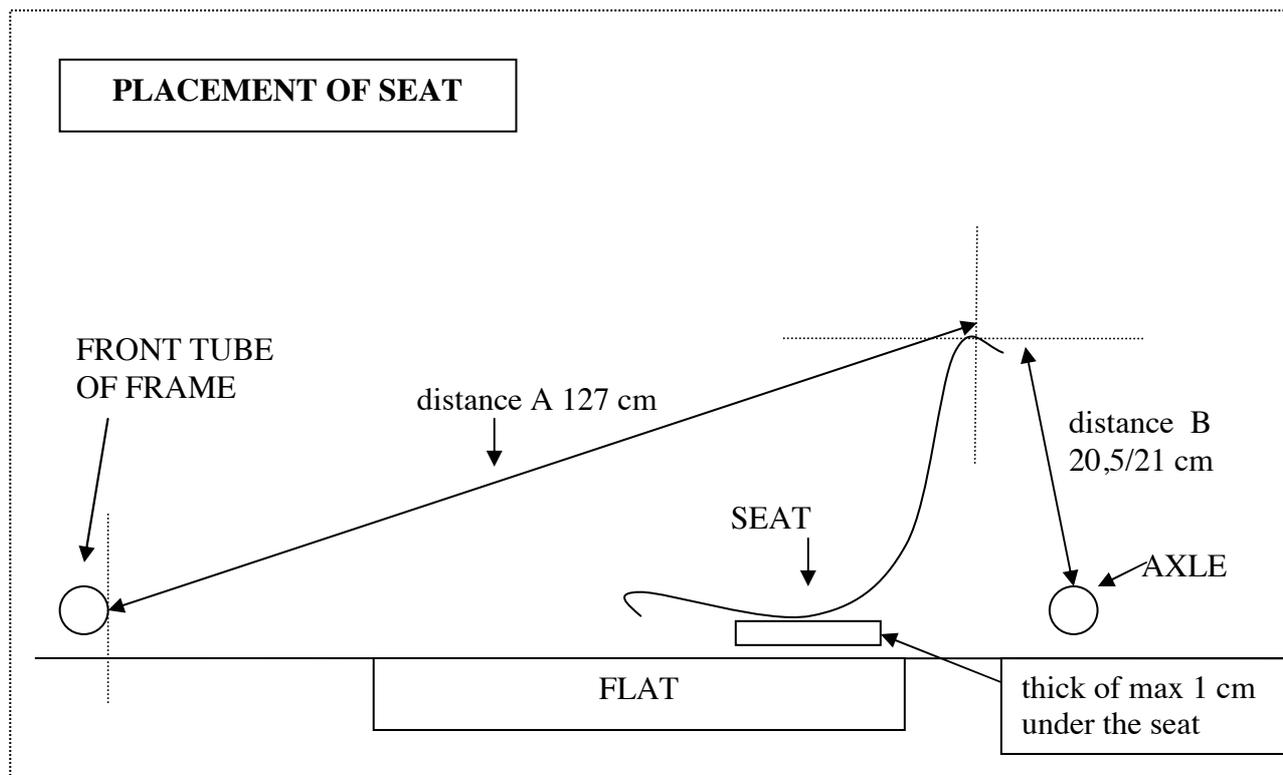

### INSTRUCTIONS:

- 1) the frame (without wheels) must be laid flat or on the floor;
- 2) according to the personal preferences, you can put under the seat, a thick of maximum 1 cm. or if you prefer, in order to reach a lower centre of mass, you can lay the seat directly on the base flat (it depends also on the kind of tyres and the conditions of the truck; more lower is the seat than higher is the possibility of rubbing on the floor).
- 3) You have to respect the measures indicated on the picture. Please control correctly the distances:
  - distance A: start from inside the front tube of the frame and arrive at the maximum top of the seat
  - distance B: start from the side up of the axle and arrive always at the top of the seat

P.S.: The Distance A can be modified in accordance with the height of the driver. Usually, you can maintain a measure of 124/125 cm, for a height of 1,70/1,75 mt.; over this limit it is better to have a distance of 127 cm.