


# ARMORDILLO GUARDS

## GQTRP SVL 75-2/95/97 INSTALL GUIDE


1



4

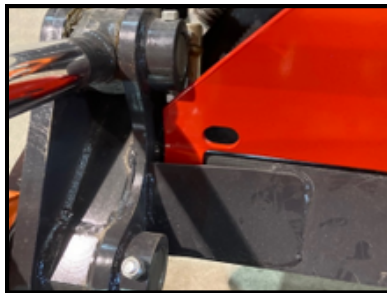

2

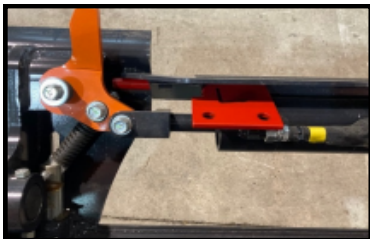

5



3



936.894.2060 [ARMORDILLOGUARDS.COM](http://ARMORDILLOGUARDS.COM)

# ARMORDILLO GUARDS

## GQTRP SVL 75-2/95/97 INSTALL GUIDE



2

Install retainer brackets shown by sliding rod portion under quick-tach frame stop gussets

4

Install guard as shown

4

Lower tas should slot between quick-tach frame and corner gussets on both sides

5

Install hardware as shown - (4) pieces

5

Ensure all hardware in placed correctly and tighten all bolts



936.894.2060 [ARMORDILLOGUARDS.COM](http://ARMORDILLOGUARDS.COM)