

ARMORDILLO™ GUARDS

QUICK-TACH CYLINDER GUARD INSTALLATION

GQTRP-75/95/97



Figure 1

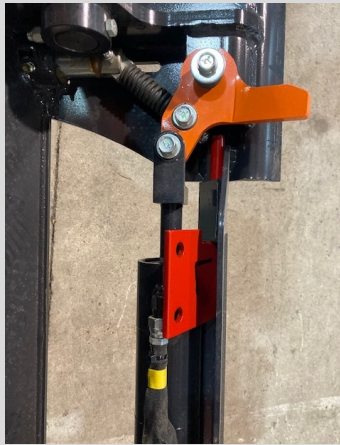


Figure 2- POV is from cab

- Install retainer brackets shown by sliding rod portion under quick-tach frame step gussets.
(1) LH
(1) RH



Figure 3



Figure 4-

- Install guard as shown--lower tabs should slot between quick-tach frame and corner gussets on both sides.



Figure 5-

- Install hardware as shown-- (4) places.
- Tighten all hardware.

