

ARMORDILLO™ GUARDS TAKEUCHI TL12 COUPLER GUARD INSTALLATION



1.



4.



2.



3.

Note: Lower coupler guard mount tabs install on top of factory grab rail mounting tabs. Retain washers from factory bolts to be re-used with supplied M10x1.5mmx30mm bolts (4 each).

1. Remove rear grab rail bolt and loosen front grab rail bolt.
2. Install lower guard as shown (Fig. 1&2). Do not tighten bolt completely.
3. Remove front grab rail bolt and install angle mount as shown (Fig. 3).
4. Tighten all bolts.



Flip page for more directions!



Keep skid steers on the job & save repair costs!

936.894.2060 ArmorDilloGuards.com

Takeuchi TL12 Hydraulic Coupler Installation Instructions Continued

5. Install inner guard support as shown with (2) supplied M10x1.5mm x30mm bolts (Fig.4). Do not tighten bolts completely.



5.

6. Install upper guard as shown (Fig. 5 & Fig. 6).




6.

7. Tighten all bolts once completely installed.

8. Check guard clearances to confirm there are no points of contact to hydraulic tubing lines.

Thank you for your purchase! See what else we offer on our website, Facebook, and YouTube.

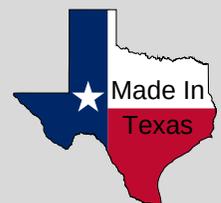

936.894.2060 ArmorDilloGuards.com