

# ARMORDILLO GUARDS

## GQT SVL 75-3 INSTALL GUIDE


1



2



3

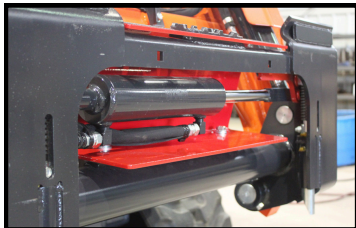

3



4/5



936.894.2060 [ARMORDILLOGUARDS.COM](http://ARMORDILLOGUARDS.COM)

# ARMORDILLO GUARDS

## GQT SVL 75-3 INSTALL GUIDE



- 1 Level Quick-Tach Assembly and install (2) 1/2" Hex Bolts, flat washers, and lock washers. Hand tighten only
- 2 Place Quick-Tach Guard as shown. Cylinder should be in open position
- 3 Close Cylinder and place flat bar under step
- 4 Install (2) 1 1/4" Hex Bolts, flat washers, and lock washers. Hand tighten only
- 5 Ensure all hardware is placed correctly and tighten all bolts



936.894.2060 [ARMORDILLOGUARDS.COM](http://ARMORDILLOGUARDS.COM)