

Vehicle Hard Top Lift Aid

EZTRUNK™ ASSEMBLY

MANUAL

#1900 0074

MAKE IT EZ

**Print the latest manual &
Watch the Video**



**Scan QR CODE for Video &
PDF MANUALS**



Customer Service

Any question? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060

























EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:30 am EST







WE CAN HELP YOU!

PO# :







Please read instructions fully before beginning assembly

NO	Illustration	Description	Part#	QTY.
1		Upright Pillar	19007401	1
2		Base Tube Long Side	19007402	1
3		Base Middle Tube	19007403	1
4		Base Tube Short Side	19007404	1
5		Pillar Base Plate	19007405	1
6		Wheel	19007406	4
7		Slanted Tube	19007407	1
8		Top Front Rail	19007408	1
9		Top Support	19007409	1
10		Top Back Rail	19007410	1
11		Handle Bar	19007410	1
12		Worn Gear Winch	19007412	1
13		Wheel Lock Nut M8 Pre Installed on Wheel	10082	4
14		Top Rubber Pad	19007414	6
15		Bolt M8x65	08652	4
16		Bolt M8x70	08702	8+1 extra
17		Lock Nut M8	10082	12 + 2 extra
18		Lock Nut M10	10102	3 + 1 extra
19		Hex Head Bolt M10x65	10652	3
20		Webbing Pipe(on part #1)	19007415	1
21		Locking Pin	28720	2
22		Pull Pin	18600	1
23		#5 Allen Wrench	#5	1
24		#13 & #15 Wrench	#1315	2

BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON **EZTRUNK.NET**

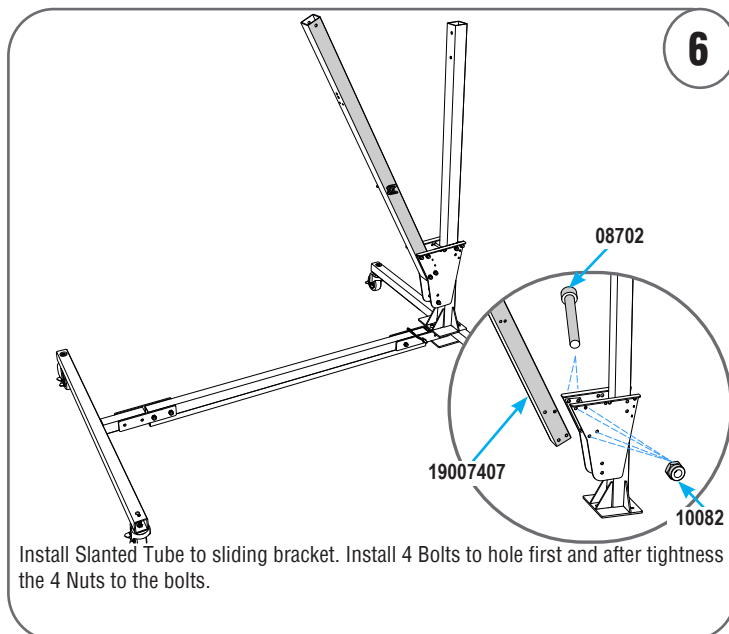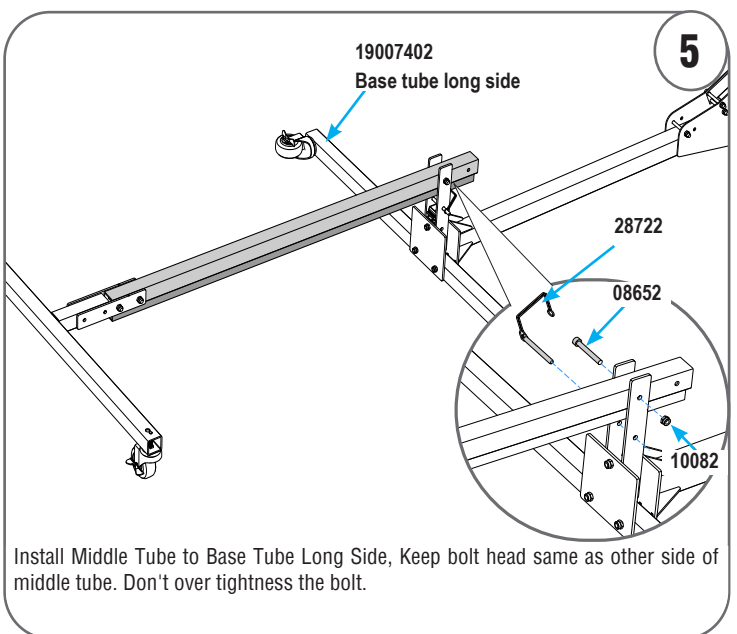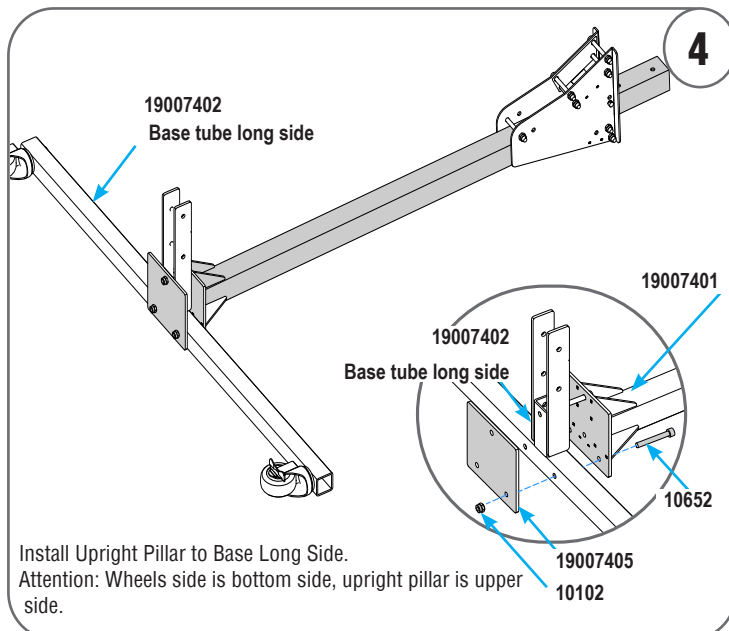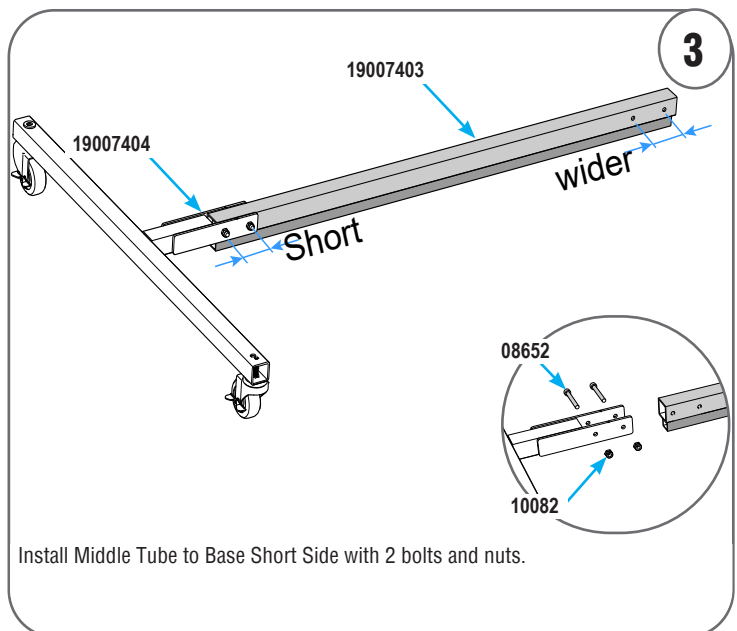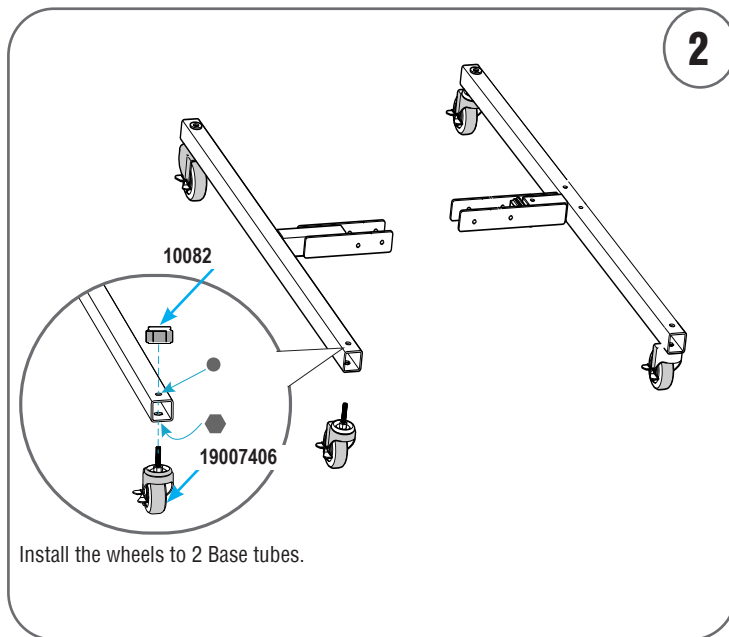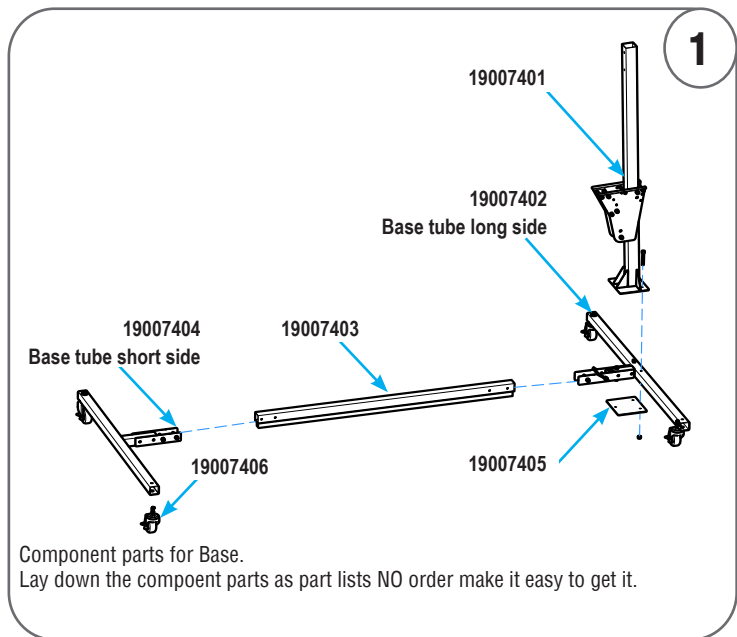


BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON **EZTRUNK.NET**

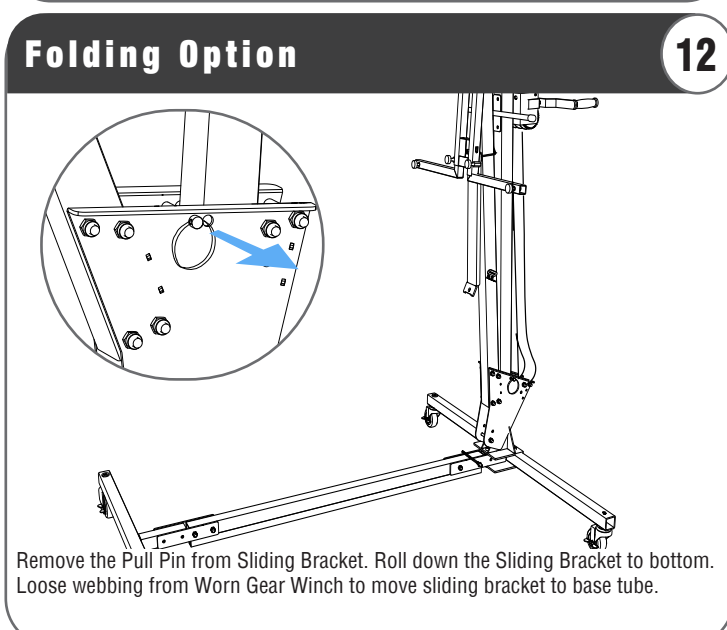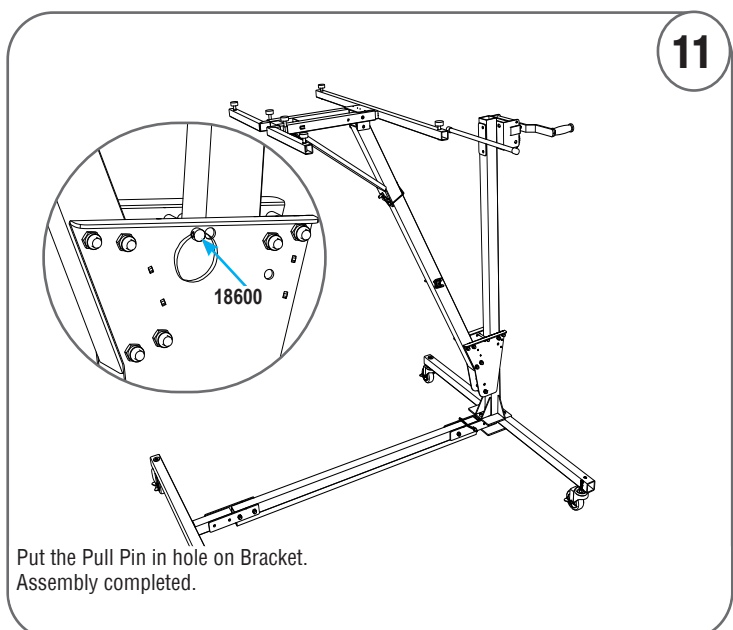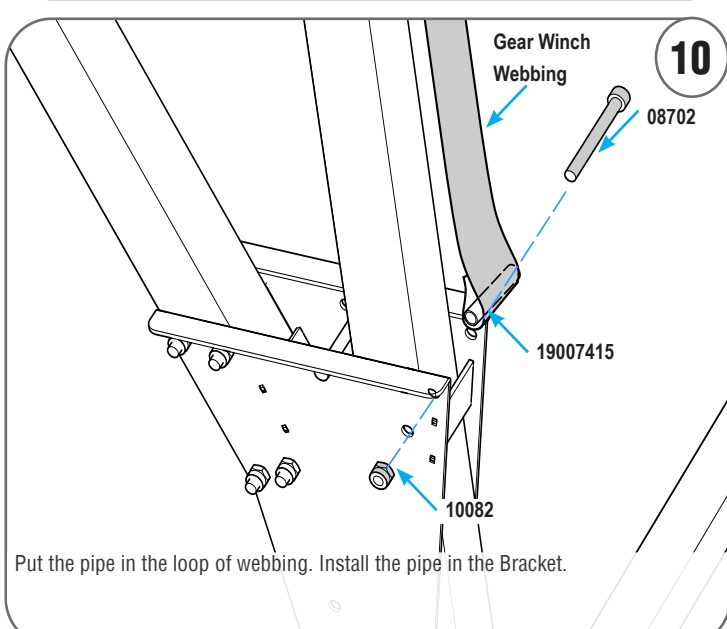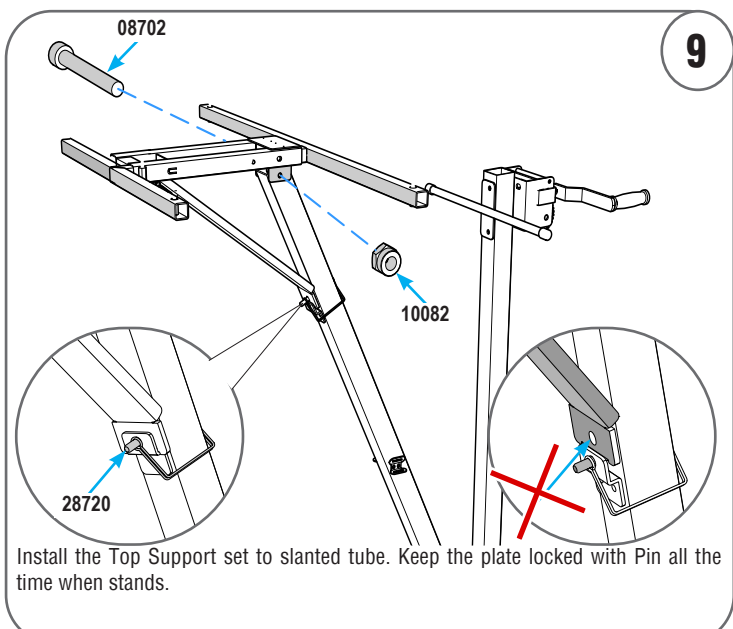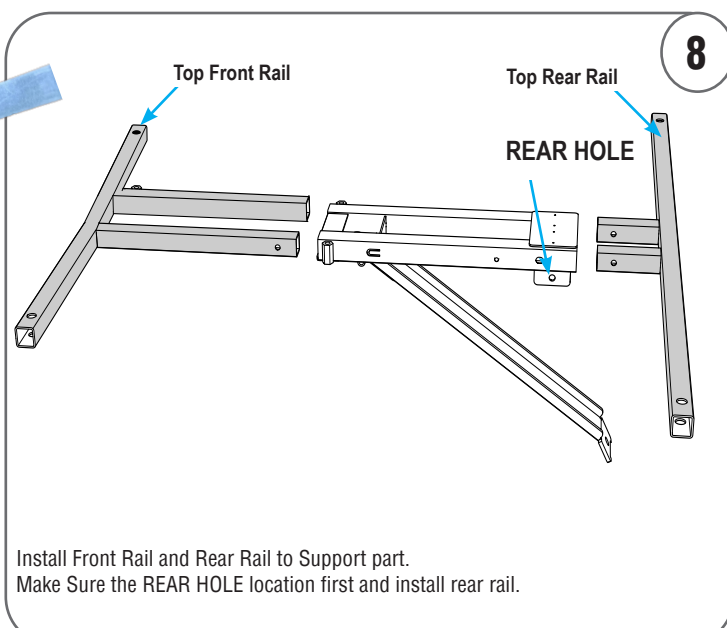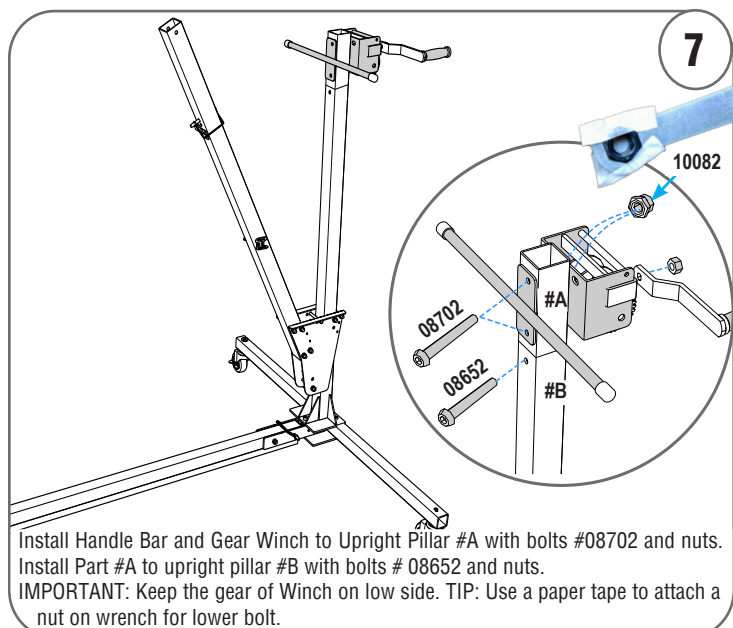

Folding Option


13

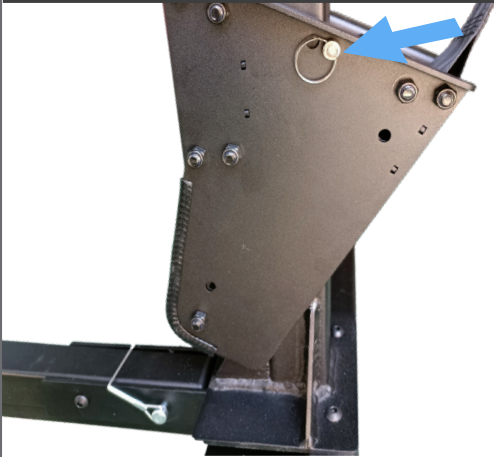

Move Slanted Tube close to Upright Pillar and put pin in the hole to lock the tube.

Folding Option


14

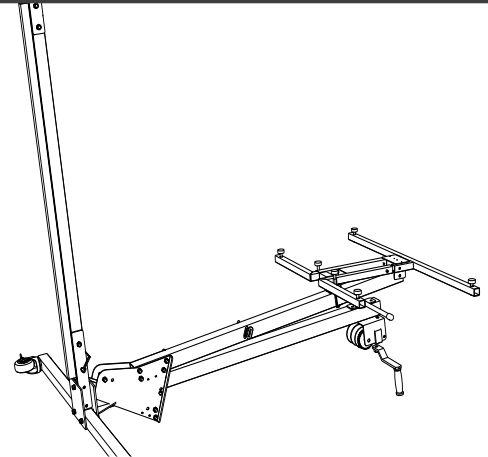

Fold Lift Aid upright Pillar on the ground

Folding Option

15

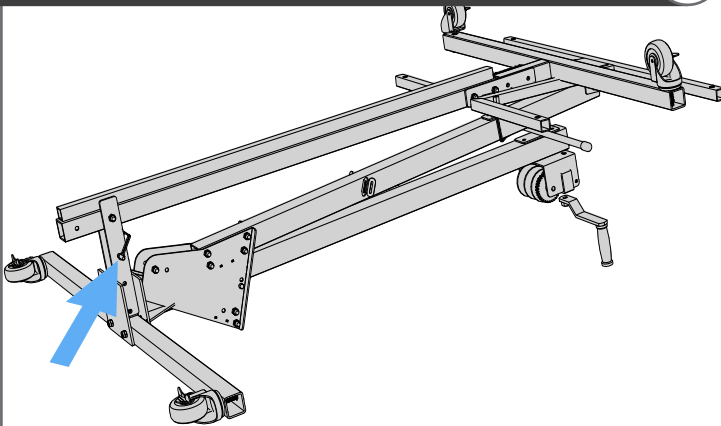

Fold down the Middle Tube and install the Locking Pin back the previous hole.

Folding Option

16




Use the Webbing with Hook bind Middle tube to Upright Pillar. Hooks goes in the slot on the slanted tube and pull the other side of webbing tight.

Folding Option

17



CAUTION: Need to hook the Lift Aid to the wall when storage. Avoid make an accident when foding down.

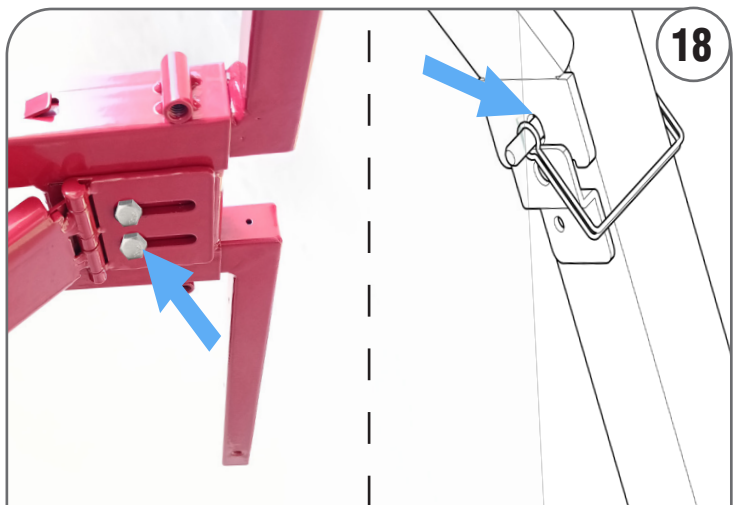

You can adjust the top support ground level with 2 bolts on top or second hole at slanted tube.

When you storage the hardtop on the Lift Aid. keep away from the children reach. Roll down the hardtop as the lowest as possible.

BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON **EZTRUNK.NET**

Lifting Hard Top

19




Drive vehicle on even ground.
Remove the Bolts from vehicle Hard top bottom edge.
Take off the freedom Hard tops. Disconnect the wire cable, open the rear doors.

20



Push Lift in the vehicle, set the support close middle of hard top.

21

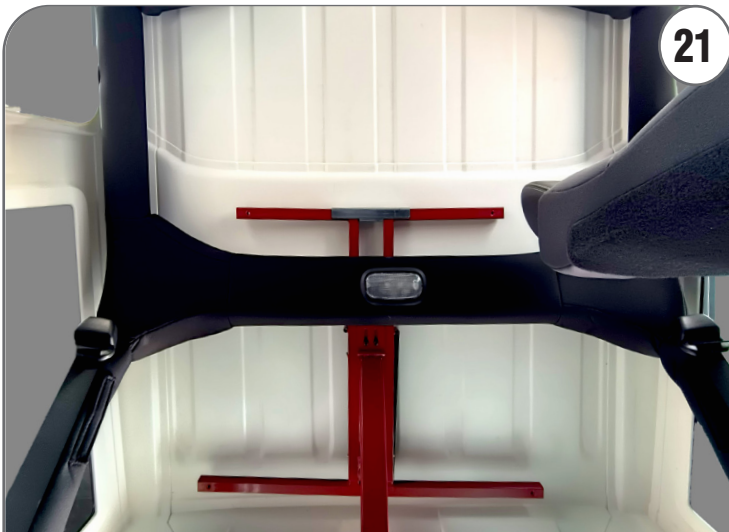

Slid the Front rail forward, keep the top support even touch hardtop. You can install provided rubber pads on top rail and high to support the hardtop even.

22



Install Rubber Pad on top rails if necessary. Be careful the don not hit the vehicle with bolts.

23



Hook both webbing to rear window hinge bracket and pull the webbing tight. Lift the Hard top off the vehicle.

Customer Service

Any question? WE ARE HERE TO HELP!

203-901-0055 / Call 203-591-9060
EMAIL US: SERVICE@EZTRUNK.NET

7 days a week 8:30 am EST

WE CAN HELP YOU!