

MANUAL


#1911 0152 #1911 0353


MAKE IT EZ

Print the latest manual & Watch the EZTRUNK Video



Scan QR CODE for Video & PDF MANUALS

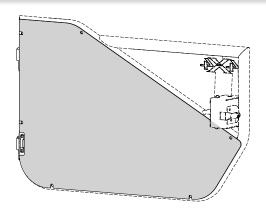

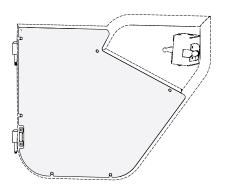

Customer Service

Any questions? WE ARE HERE TO HELP!

Text or Call 203-901-0055 / Call 203-591-9060 EMAIL US: SERVICE@EZTRUNK.NET

7 days a week - 8:30 am EST

WE CAN HELP YOU!


PO#:

BEFORE BEGINNING, SEE THE ASSEMBLY INSTRUCTION VIDEO ON EZTRUNK.NET


Please read instructions fully before beginning assembly

*1917 OFFE WAR

NO	Illustration	Description	Part#	Q ТҮ.	
1		Front Door Panel	1911007F	2	2
2		Rear Door Panel	1911007R	\	2
3		Thumb Turn Screw	06081	12	24

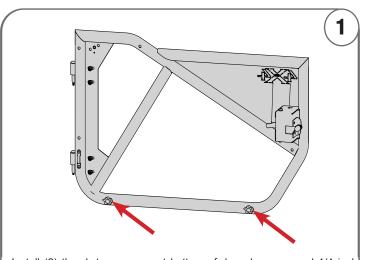

Install (2) thumb turn screws at bottom of door, leave around 1/4 inch space slide door panel in between. Align the other 4 holes to door and install all the thumb turn screws. Tighten all the thumb turn screws,

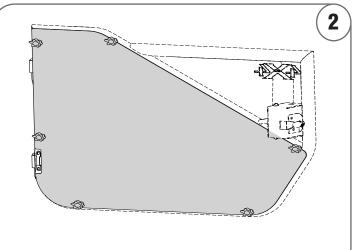

Use the thumb turn bolts to secure the panel. Store the panels so they do not rub against each other.

WARNING This product is intended to provide added "off-road" convenience and utility to your vehicle. This product is not intended to provide occupant containment or protection in the event of an accident or rollover. Further "on road" use may involve increased risk of serious injury in the event of side-impact accidents. To reduce risk from these types of injuries: Always wear seat belt and shoulder harness for all vehicle occupants. Keep arms and body inside vehicle. Drive safely, read and understand all manufacturers warnings and product instructions before installation. Periodically check and adjust all latches and fasteners. Failure to do so could result in the doors not latching securely.

CUSTOMER SERVICE: SERVICE@EZTRUNK.NET
Text & Call: 203-901-0055 / Call 203-591-9060