

#23110

10' Log Rack



| Item # | Description | Drawings | Qty |
|--------|-----------------------------------|----------|------|
| 1 | Bottom frame | | 4 |
| 2 | End Frame (With plastic caps) | | 2 |
| 3 | Slant tube (With plastic caps) | | 4 |
| 4 | Brace | | 2 |
| 5 | Bottom support bracket | | 2 |
| 6 | Mounting plate | | 2 |
| 7 | Hex bolt M8x45 | | 4 |
| 8 | Washer M8 | | 4 |
| 9 | Lock nut M8 | | 4+1 |
| 10 | Hex bolt M6x65 | | 4 |
| 11 | Hex bolt M6x60 | | 4 |
| 12 | Hex bolt M6x40 | | 8 |
| 13 | Washer M6 | | 16 |
| 14 | Lock nut M6 | | 16+1 |
| 15 | Rope | | 1 |
| 1610 | Cover | | 1 |

Installation Instructions

Please read instructions
COMPLETELY
before assembly.



**DO NOT RETURN
PRODUCT TO THE
STORE**

Missing Parts,
Need Replacements, or
Help with Assembly

PLEASE EMAIL

Customer Service:

Service@ezgoal.net

203 591 9033


95 Johnson Street Waterbury, CT
06710

Assembly Instructions

STEP 1

Connecting Bottom Support Frame together

using 2 Bottom support bracket (#5), 2 Mounting plate (#6), 8 Hex bolts (#12), 8 Washers (#13), and 8 Lock nuts (#14). See Figure 1 and Detail A.

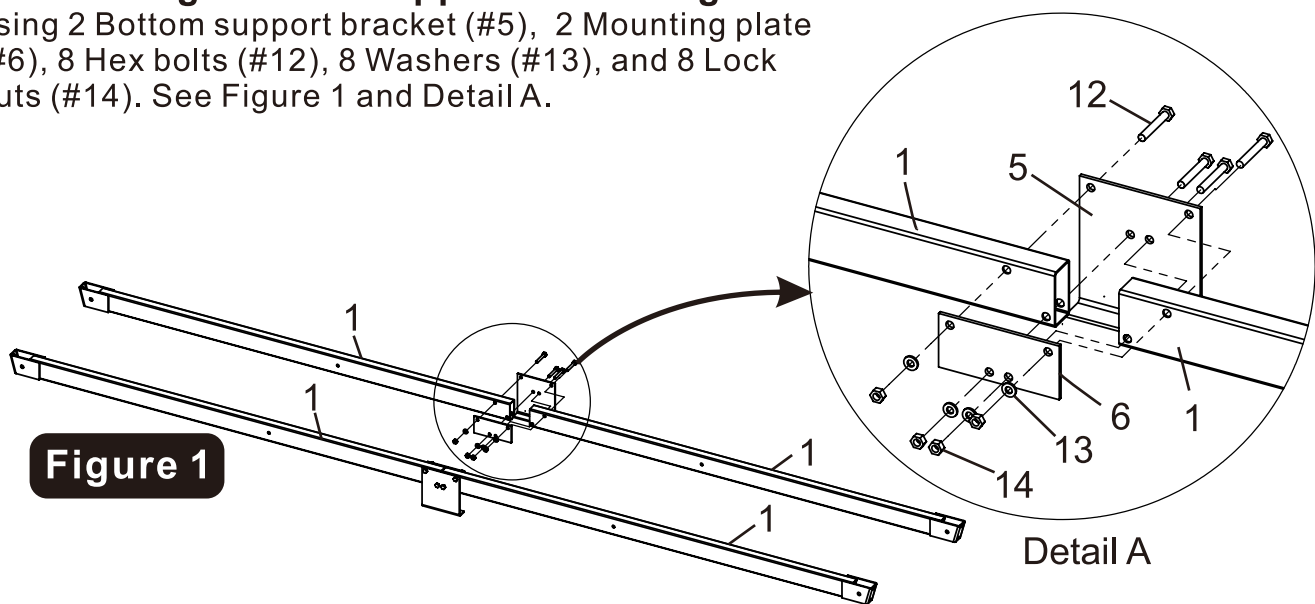


STEP 2

Connecting End frame (#2) to Bottom Frame (#1).

Lay assembly on the floor as shown in Figure 1, Slide End Frame (#2) thru the end bracket welded at the end of Bottom frame ((#1), secure them with 2 Hex bolts (#7), 2 Washers (#8) and 2 Lock nuts (#9) for End frame.

See figure 2 and Detail B.

Repeat this step for the other side.

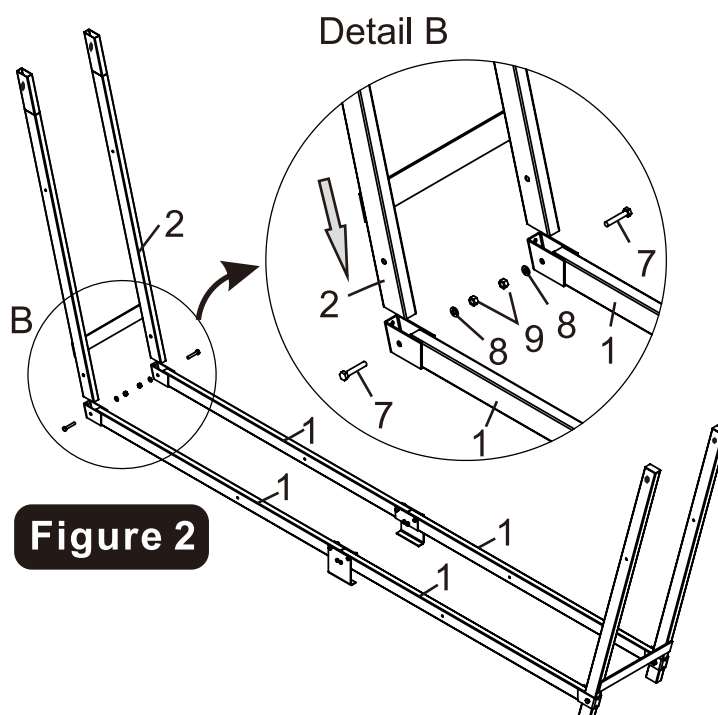

Assembly Instructions

STEP 3

Connecting Slant tube ((#3) to End Frame (#2). Place Brace (#4) inside Slant Tube (#3), and place Slant tube (#3) inside Brace (#4), Connect them together using 4 Hex bolts (#10), 4 washers (#13) and 4 Lock nuts (#14).

See Detail C.

connect the bottom of Slant tube (#3) to Base frame (#1) using 4 Hex bolts (#11), 4 Washers (#13), and 4 Lock nuts (#14). See Detail D.

Tighten all the bolts and nuts.

Tie one Rope(#15) to End frames (#2),rest Rope on attached Bolts at the top of End frame (#2).

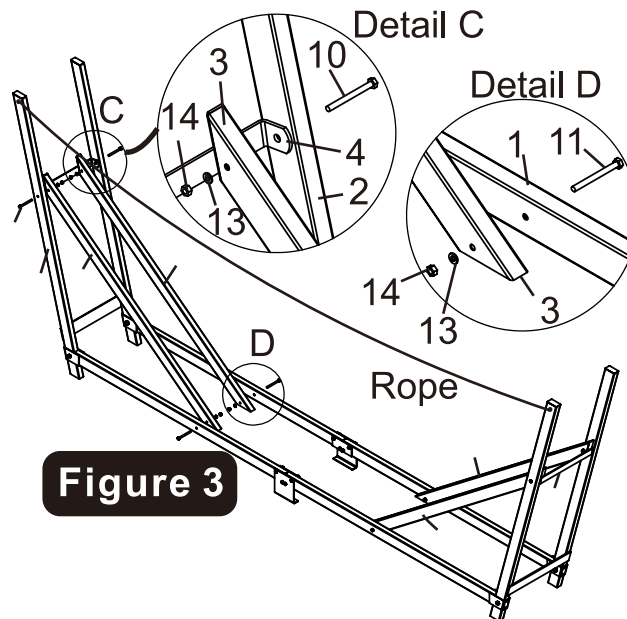




Figure 3

STEP 4

Tie Rope(#15) to Side tubes in the front only (#2), This will make the snow and rain slide off easy and makes the cover look better on the log rack.

Drape the Cover(#13) over the assembled rack, Get stitched Velcro engaged. See Figure 5.

Figure 4

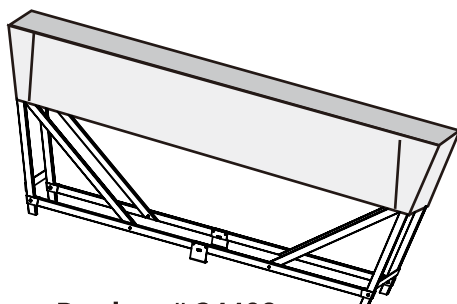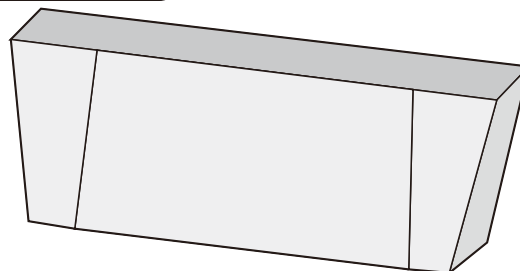

Product # 24408
1/4 Cover


Full & 1/4 -- Water repellent covers sold separately.

For purchase call:

Toll free: 1-888-466-8600

or 203 591 9033

email: service@ezgoal.net

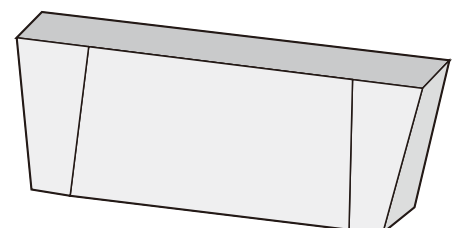

Product # 23110
Full Cover