

#23308 8' wood Rack



Item#	Description	Drawings	Qty
1	Bottom frame	. :	4
2	End Frame		2
3	Slant tube	2	4
4	Brace	©	2
5	Bottom support bracket		2
6	Mounting plate	0 0 0	2
7	Hex bolt M8x45		4
8	Washer M8		4
9	Lock nut M8		4+1
10	Hex bolt M6x65	<u> </u>	4
11	Hex bolt M6x60		4
12	Hex bolt M6x40		8
13	Washer M6		16
14	Lock nut M6		16+1
15	Rope	0	1
1508	Cover		1

Installation Instructions

Please read instructions COMPLETELY

before assembly.



DO NOT RETURN PRODUCT TO THE STORE

Missing Parts, Need Replacements, or Help with Assembly

PLEASE EMAIL

Customer Service:

Service@ezgoal net


203 591 9033

95 Johnson Street Waterbury, CT 06710

Assembly Instructions

STEP 1

Connect Bottom Frame (#1) together using 2 Bottom support bracket (#5), 2 Mounting plate (#6), 8 Hex bolts (#12), 8 Washers (#13), and 8 Lock nuts (#14). See Figure 1 and Detail A.

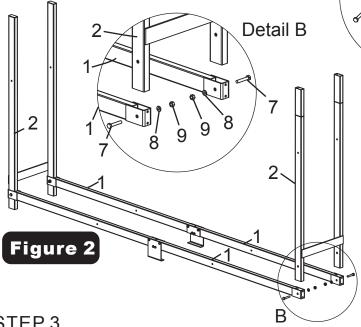

STEP 2

Figure 3

10

Detail D

11

12

Connect End frame (#2) to Bottom Frame (#1).

igure

Lay assembly on the floor as shown in Figure 1, Slide End Frame (#2) thru the bracket welded at the end of Bottom frame (#1), secure them with 2 Hex bolts (#7), 2 Washers (#8) and 2 Lock nuts (#9) for End frame (#2).

14

D

Detail C

10


See Figure 2 and Detail B. Repeat this step for the other side.

13

Detail A


STEP 3

Connect Slant tube (#3) to End Frame (#2). Place Brace (#4) inside End Frame (#2), and place Slant tube (#3) inside Brace (#4), Connect them together using 4 Hex bolts (#10), 4 washers (#13) and 4 Lock nuts (#14). See Detail C. connect the bottom of Slant tube (#3) to Base frame (#1) using 4 Hex bolts (#11), 4 Washers (#13), and 4 Lock nuts (#14). See Detail D. Tighten all the bolts and nuts.

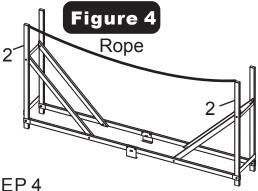

STEP 4

Tie Rope(#15) to Side tubes in the front only (#2), This will make the snow and rain slide off easy and makes the cover look better on the log rack.

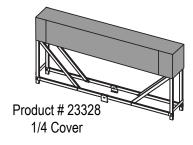

Full & 1/4 -- Water repellent covers sold separately. For purchase call:

Toll free: 1-888-466-8600 or 203 591 9033

email: service@ezgoal.net



page 2