





Item #	Description	Drawings	Qty
1	Bottom frame	·	4
2	End Frame		2
3	Slant tube	<u>&</u> 3	4
4	Brace		2
5	Bottom support bracket		2
6	Mounting plate	0 0	2
7	Hex bolt M8x45		4
8	Washer M8	\bigcirc	4
9	Lock nut M8	(D)	4+1
10	Hex bolt M6x65		4
11	Hex bolt M6x60	j	4
12	Hex bolt M6x40	}	8
13	Washer M6	\bigcirc	16
14	Lock nut M6	Ø	16+1

Installation Instructions

Please read instructions COMPLETELY before assembly.



DO NOT RETURN PRODUCT TO THE STORE

Missing Parts, Need Replacements, or Help with Assembly

PLEASE EMAIL

Customer Service:


Service@ezgoal.net

203 933 4442 West Haven, CT 06516

Assembly Instructions


STEP 1


Connect Bottom Frame (#1) together using 2 Bottom support bracket (#5), 2 Mounting plate (#6), 8 Hex bolts (#12), 8 Washers (#13), and 8 Lock nuts (#14). See Figure 1 and Detail A.

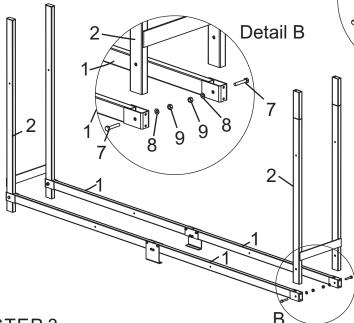

STEP 3

Connect Slant tube (#3) to End Frame (#2). Place Brace (#4) inside End Frame (#2), and place Slant tube (#3) inside Brace (#4), Connect them together using 4 Hex bolts (#10), 4 washers (#13) and 4 Lock nuts (#14).See Detail C. connect the bottom of Slant tube (#3) to Base frame (#1) using 4 Hex bolts (#11), 4 Washers (#13), and 4 Lock nuts (#14). See Detail D. Tighten all the bolts and nuts.

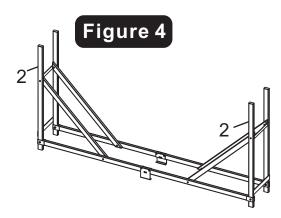

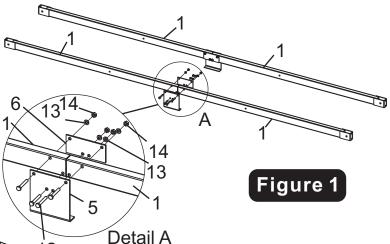

STEP 2

12

14

Connect End frame (#2) to Bottom Frame (#1).

Lay assembly on the floor as shown in Figure 1, Slide End Frame (#2) thru the bracket welded at the end of Bottom frame (#1), secure them with 2 Hex bolts (#7), 2 Washers (#8) and 2 Lock nuts (#9) for End frame (#2).

See Figure 2 and Detail B.

Repeat this step for the other side.

