




The Strongest Most Versatile Snowmobile Clamp Ever!

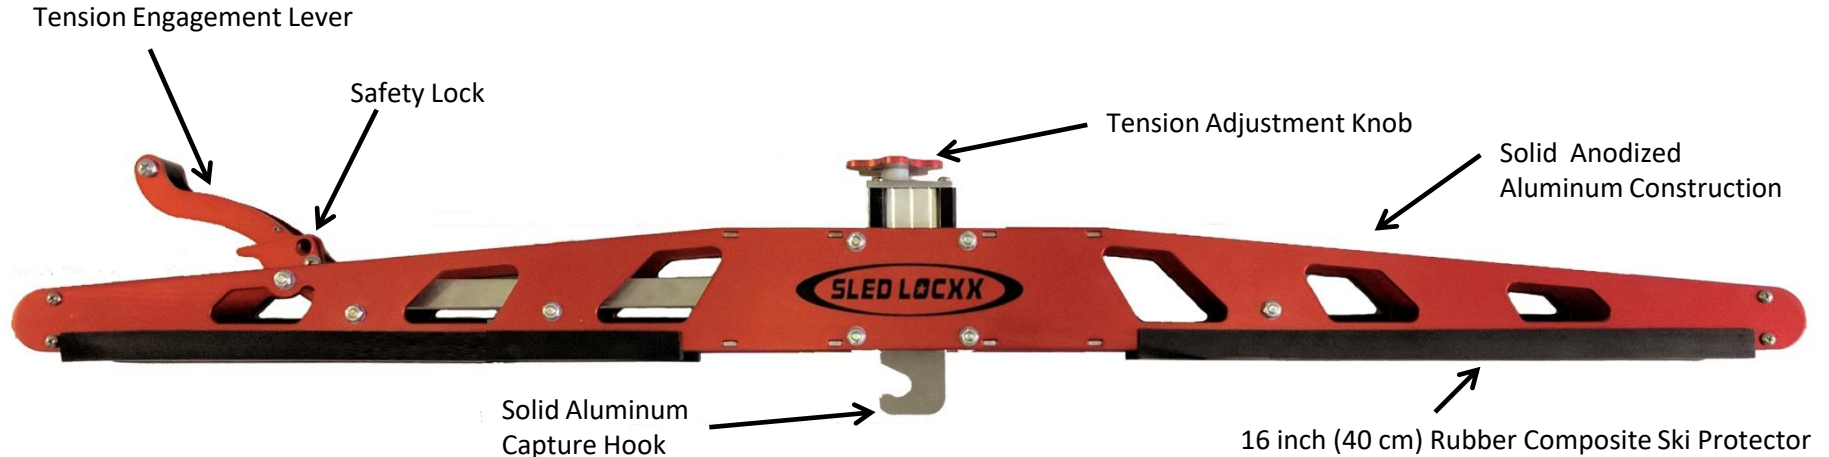

Instructions:

1. Install a deck hook (sold separately). The deck hook will be engaged by the Capture Hook on the SLED LOCXX. Position the deck hook accordingly. Attach the deck hook to a solid anchor point such as a frame structure.
2. Tension Adjustment: Move the Tension Engagement Lever to the forward position (towards the center of the SLED LOCXX). Lock the Capture Hook into the Deck Hook. Use the Tension Adjustment Knob to adjust the height of the Capture Hook, periodically pulling the Tension Engagement Lever back to test to grip on the skis of your snowmobile. When a moderate effort is required to pull back the Tension Engagement Lever back the clamp is tight enough. DO NOT OVER TIGHTEN.
3. When the Tension Engagement Lever is pulled to the outside position the Safety Lock will engage. When disengaging, or moving the Tension Engagement Lever to the inside position, pull up the Safety Lock first.

SLED LOCXX are designed for use with rear tie downs

Use SLED LOCXX with safety straps

Manufactured In Canada / USA

SLEDLOCXX.com