



Measure for impressions and sagging

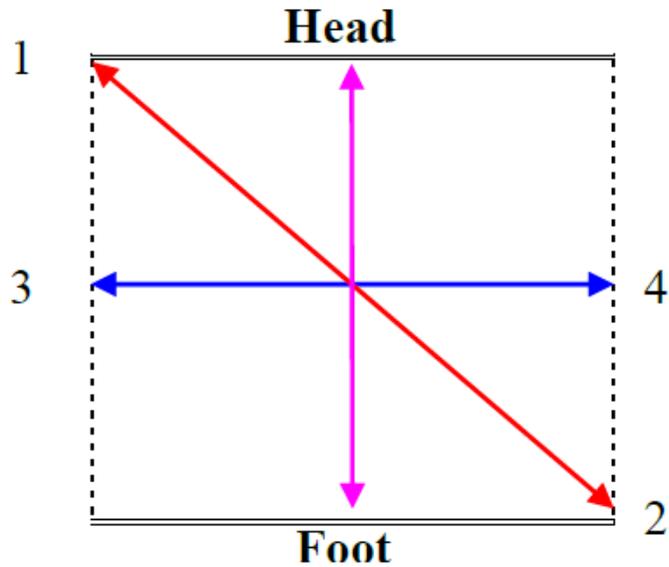

Place the string/weight assembly across the depressed area (corner to corner, side to side, and then head to foot) resting the straight edge on the "peak" or highest point of the quilted top at the edges of the mattress.

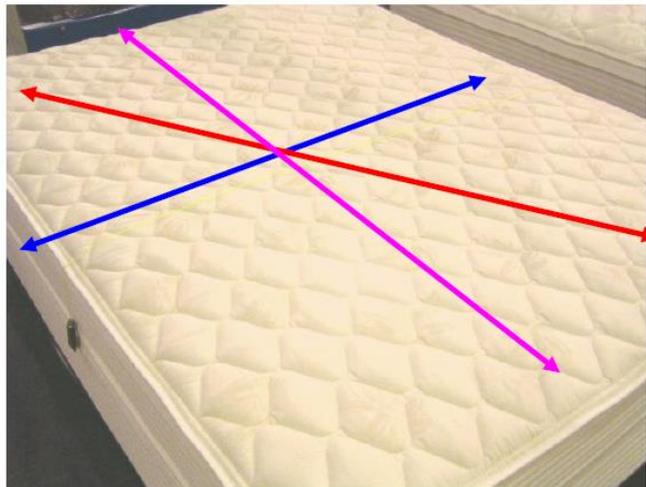

Move one end of the string horizontally along the mattress surface to visually locate the most depressed area.



Measure to the nearest 1/16" the space between the string and the mattress.