



EZ-GO TXT CLAYS BASKET INSTALLATION INSTRUCTIONS

04-011


INCLUDED:
MADJAX CLAYS BASKET
BRACKETS
HARDWARE PACK



Remove bolts from front struts.
Retain all factory hardware.
You will need it later.



Using retained factory hardware,
attach brackets to front struts.
Tighten bolts.

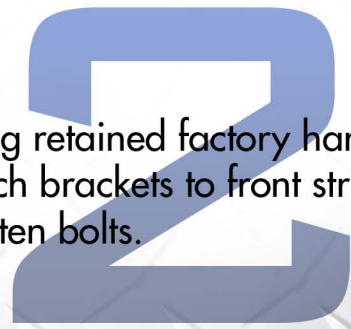



EZ-GO TXT CLAYS BASKET HARDWARE PACKS

HARDWARE PACK 1

- (4) 10MM X 40MM SHOULDER HEX BOLTS**
- (8) 10MM X 20MM X 2MM WASHERS**
- (4) 10MM ANTI-SLIP NUTS**

