



# EZ-GO TXT CLAYS BASKET INSTALLATION INSTRUCTIONS

04-011


**INCLUDED:**  
MADJAX CLAYS BASKET  
BRACKETS  
HARDWARE PACK



Remove bolts from front struts.  
Retain all factory hardware.  
You will need it later.



Using retained factory hardware,  
attach brackets to front struts.  
Tighten bolts.

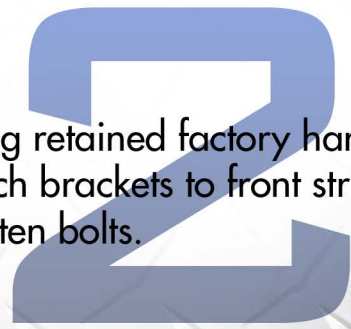



## **EZ-GO TXT CLAYS BASKET HARDWARE PACKS**

### **HARDWARE PACK 1**

- (4) 10MM X 40MM SHOULDER HEX BOLTS**
- (8) 10MM X 20MM X 2MM WASHERS**
- (4) 10MM ANTI-SLIP NUTS**

