



EZ-GO RXV LIGHT KIT INSTALLATION INSTRUCTIONS

MJLK2001

INCLUDED:

- 2 HEADLIGHTS
- 2 TAIL LIGHTS
- 1 WIRING HARNESS



Wiring Harness



Headlights

Tail Lights

Cut out template and place it against cart using the body lines for alignment.

1



Draw the inside of the template out with a writing utensil. Next drill a pilot hole so you will have a starting point to begin cutting.

2



DRILL PILOT HOLE



CUT BODY

Place tail light into the rear of the vehicle. Insert four screws into headlight using supplied hardware. *Repeat process on opposite side

4



INSERT TAIL LIGHT

Using the template you drew on the cart, cut out the light area of the body starting at the pilot hole from step 2.

3

Place headlight template against cart using the body lines for alignment. Draw the inside of the template out with a writing utensil.

5

Drill a pilot hole and cut out the shape of the headlight.

6





Insert headlight and attach to cart using clips located behind the headlight.



Feed threaded end of switch through the dash where the hole was drilled. Attach the nut to secure the harness.


Run wiring harness down the side of the frame of the cart as shown.



Attach push/pull knob for switch.



Run wiring harness beside the frame so it doesn't hang. Secure it with wire ties to keep it in place while you are riding.

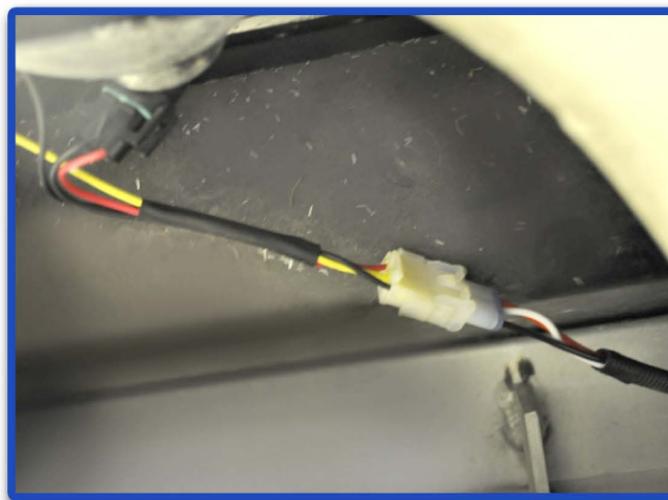


Plug headlights and tail lights into harness as shown.

Using a 5/16" drill bit, drill out the hole for the push/pull switch.



Secure remaining harness under cowl using provided ties.



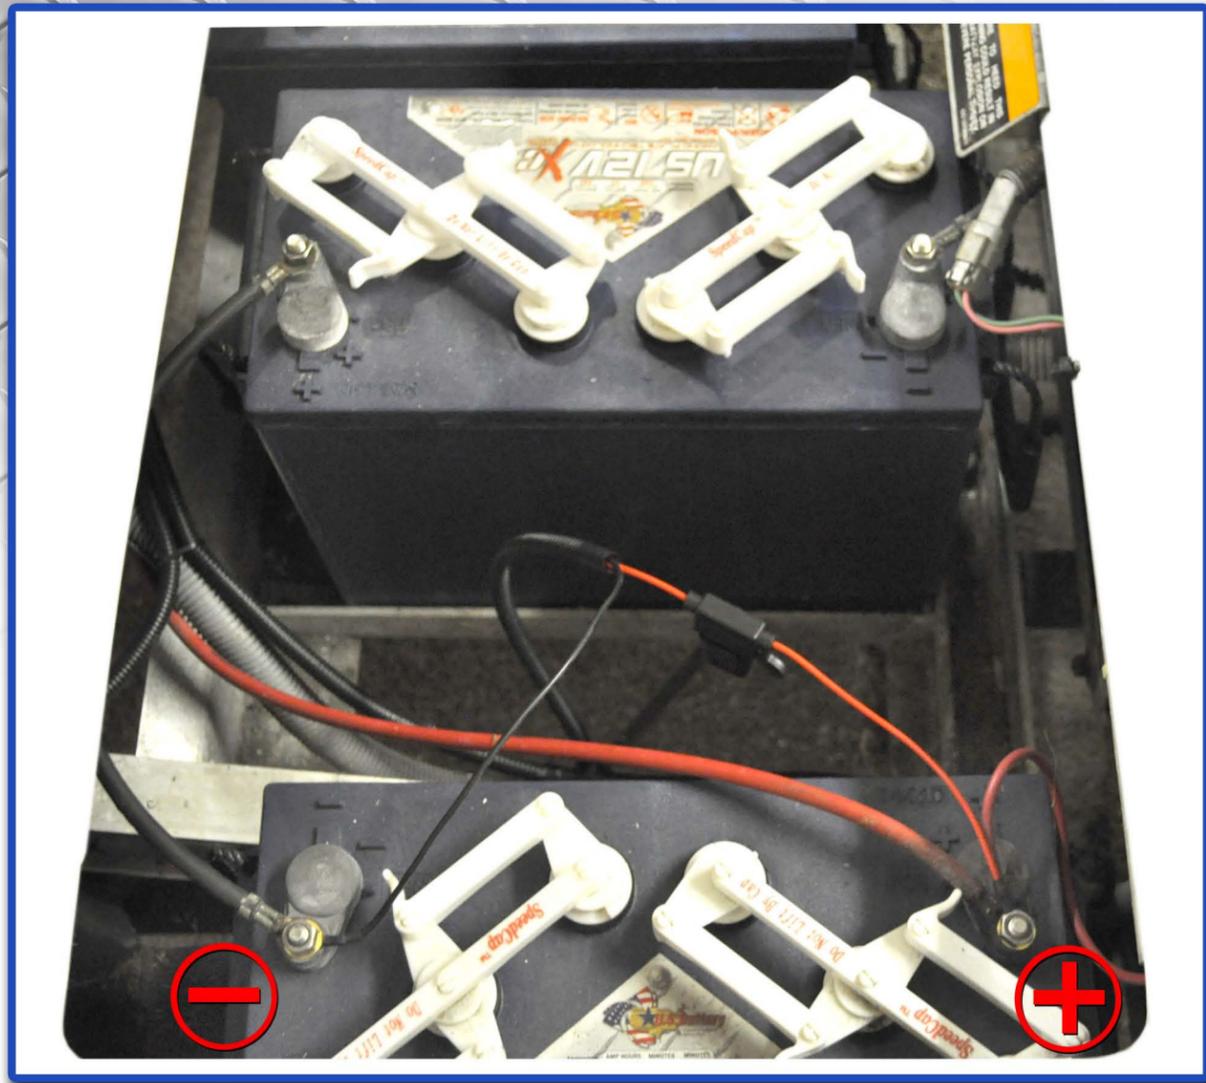

15
If you have 12 volt batteries wire the harness to the battery as shown. If you have 8 Volt batteries a voltage reducer will be necessary.



INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM

FOR INSTALLATION VIDEOS AND PRODUCTS

