

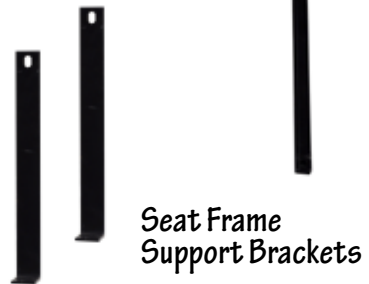


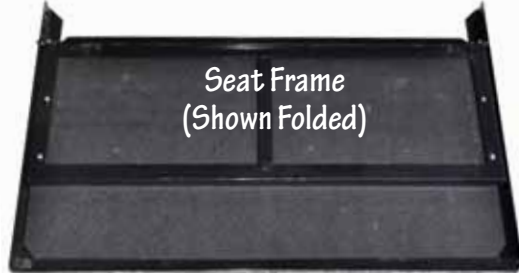

Rear Flip Seat for EZ GO Installation Instructions

CONTENTS OF KIT:

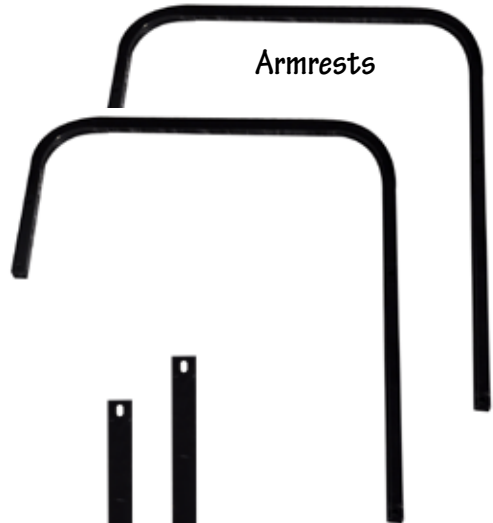

Tools needed: 1/2" drill bit, wrenches, phillips #2 and #3, and punch tool. Please Note: for more information on installation, refer to the diagram on the last page of the instructions. Before you begin installation, remove all accessories from rear of vehicle, if any.



1. Remove all canopy hardware (nuts, bolts and washers) from 4 corners (2 in front and 2 in rear) of vehicle canopy. Retain the hardware. You will need them to reattach canopy to vehicle.

2. Remove bolts from front seat back. Retain bolts. You will need them to reattach front seat back.




Remove Hardware



3. Remove and retain hardware that holds rear struts to vehicle. Slide out rear struts. You will need this hardware later.

Remove Hardware

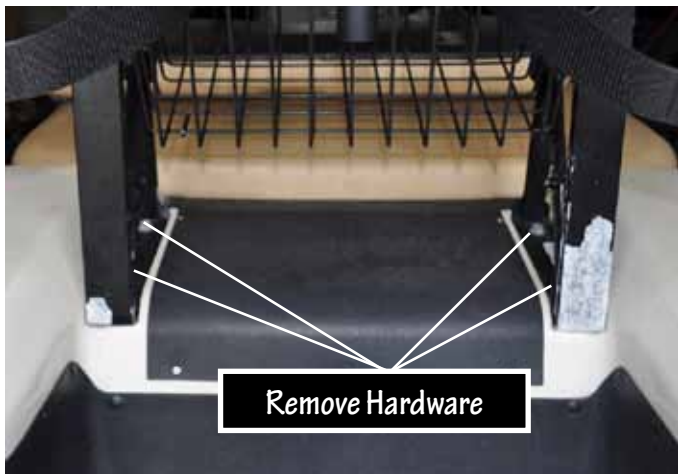

4. Remove rear basket hardware. Lift off basket.



5. Using a 1/2" drill bit, remove bag well rivets.



6. Set in rear seat supports and line up holes in supports with those where basket bolts were removed in step 4. Use hardware in pack #4 to attach seat supports to vehicle. Tighten hardware.



7. Attach seat frame support brackets using hardware from pack #2.





8. Attach footrest with hardware in pack #5 in 3 places where bag well rivets were removed.



9. Attach seat frame with hardware from pack #1. Do not tighten hardware.



10. Attach Horizontal Support Bracket and Armrests using hardware from packs #3 and #7. You will need the remaining hardware in pack #3 in the next step. Do not tighten hardware.



11. Attach struts to front side of horizontal support bracket using remaining hardware from pack #3. Attach canopy to top of struts using hardware retained in step 1.

Tighten all hardware.



12. Attach seat lean back brackets to seat back using hardware from pack #6.




13. Attach seat back cushion to horizontal bar bracket using hardware from pack #2.





14. Attach seat bottom cushion to seat frame using hardware from pack #8.

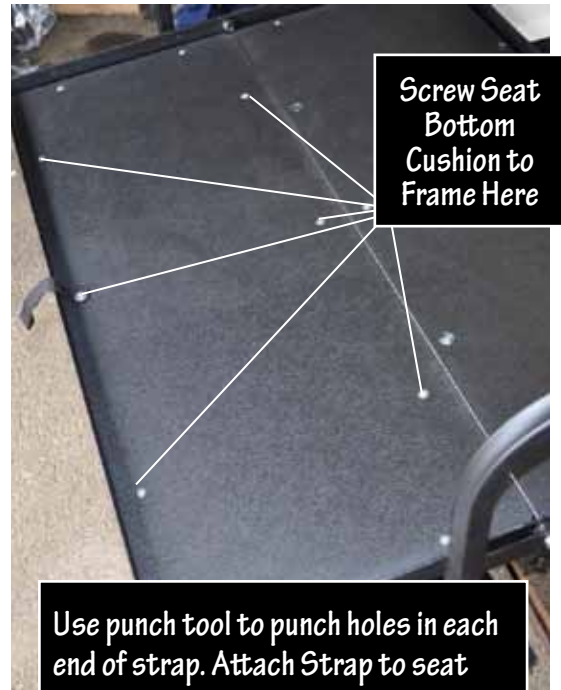

CONTENTS OF HARDWARE PACKS

Pack #1

- 4- 10mm x 25mm Shoulder Hex Bolts
- 8- 10mm x 25mm x 2mm Flat Washers
- 4 - 10mm Anti-slip Nuts

Pack #2

- 4- 10mm x 45mm Shoulder Hex Bolts
- 8- 10mm x 25mm x 2mm Flat Washers
- 4 - 10mm Anti-slip Nuts

Pack #3

- 10- 10mm x 70mm Shoulder Hex Bolts
- 20- 10mm x 25mm x 2mm Flat Washers
- 10 - 10mm Anti-slip Nuts

Pack #4

- 4- 10mm x 25mm English Standard with 3/8 thread Shoulder Hex Bolts
- 4- 10mm x 25mm x 2mm Flat Washers
- 4- 10mm Spring Washers

Pack #5

- 3- 12mm x 40mm Shoulder Hex Bolts
- 6- 12mm x 36mm 2mm Flat Washers
- 3- 12mm Spring Washers

Pack #6

- 4- 6mm x 40mm Shoulder Hex Bolts
- 4- 6mm x 18mm x 1.5mm Flat Washers
- 4- 6mm Spring Washers

Pack #7

- 2- 10mm x 45mm Countersunk Cross Head Bolts
- 2- 10mm x 25mm x 2mm Flat Washers
- 2- 10mm Anti Slip Nuts

Pack #8

- 8- 6mm x 40mm Countersunk Cross Head Self-tapping Bolts
- 1- 6mm Self Tapping Bolt
- 1- 6mm Flat Washer



INSTALLATION DIAGRAM

