


NOTE: Step 1 in this addendum replaces Step 4 in instructions for Light Kit, MJKL1000.

1. Install the sub-harness between factory wiring harness and bucket harness.

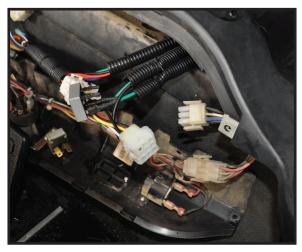



2. Fuse Assembly Addendum

Disconnect wires from Fuse/Circuit Breaker. Connect Fuse assembly to blue wires in battery compartment (as shown).

