Installing the RoninDevGru Plugin for X-Plane

Download the Plugin

*Get the RoninDevGru plugin from: https://cockpitparts.com/downloads

Extract and Install

*Extract the downloaded file.

Move the RoninDevGru folder to your X-Plane plugins directory:

X-Plane 11: C:\X-Plane 11\Resources\plugins

X-Plane 12: C:\X-Plane 12\Resources\plugins

Configure Encoder Speed *Open the config file located at:

C:\X-Plane##\Resources\plugins\RoninDevGru\config

Set the appropriate value based on your X-Plane version:

X-Plane 11: 0.0150


X-Plane 12: 0.0200

These values provide the best tested settings for encoder responsiveness.

Restart and Verify

*Restart X-Plane.

Open the Plugins menu to confirm that RoninDevGru is loaded successfully.

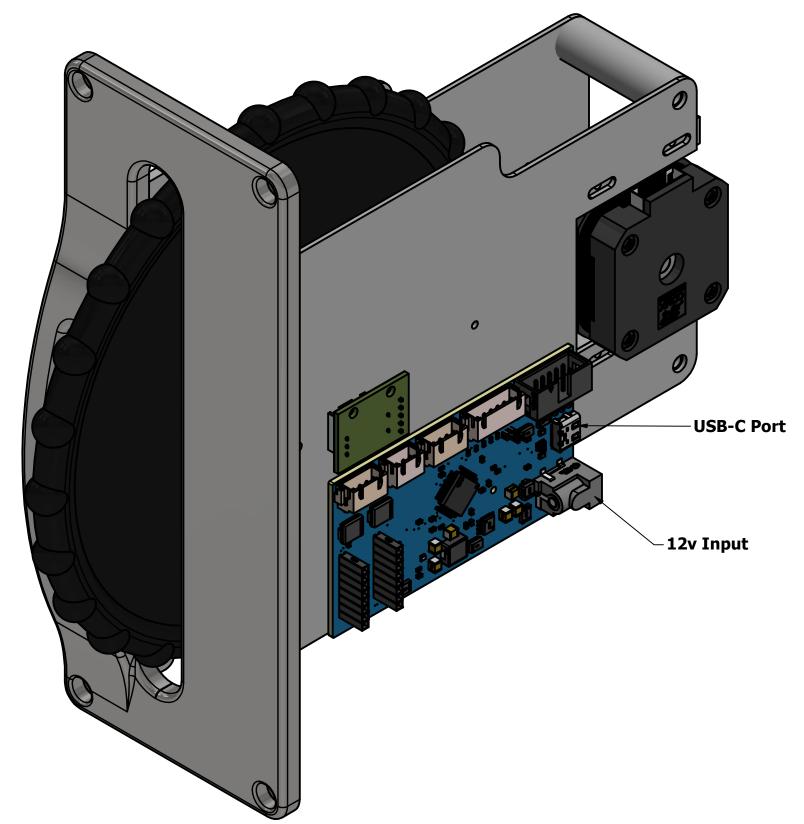

This drawing and the information contained herein are proprietary to DezAero and are intended solely for the use of DezAero and its authorized partners. Unauthorized use, reproduction, distribution, or dissemination of this drawing, either in whole or in part, is strictly prohibited without prior written permission from DezAero. All rights are reserved. © 2025 DezAero.

		1
	2.946	
	2.710	
	.198 -	-
		.324
<u> </u>	• •	1
<u> </u>		j
 7.716		
7.095		
		J
<u> </u>	\$	-
#6 Hole 4plc	'	

Cutout

www.DezAero.com DEZA ER STATE OF THE PROPERTY OF THE PROPERTY

DRAWN							
_ouie	1/6/2025						
CHECKED		1					
		TITLE					
AÇ							
		_		C172/182 Moto	rized TM		
MFG		- C172/182 Motorized TW					
		_					
APPROVED							
		SIZE		DWG NO		REV	
		C		C172 TW Ass	S Y		
		SCALE	1:1	•	SHEET 1 OF 1		
2					4	•	

1