

IMPORTANT:

It is important for tanks to be installed on a **SOLID AND COMPLETELY LEVEL SURFACE**. Tanks must be secured with brackets or posts.

- Wall brackets are available and can be supplied with the tank for an additional cost.
- Steel Posts can be sourced from your local hardware store (75mmx50mmx2400mm).


1000 Litre S2 - Against the wall (2400mm x 260mm x 1970mm)

- On an existing pavement, sloping away from a wall, the surface must be built up to ensure the tank face is vertical and the back of the tank is flush against the wall. See diagram.
- Position the tank on the prepared base and fix to the wall using bracket WB01-A on each end. The wall bracket needs to be fixed to the wall using Dyna Bolts on both ends of the brackets
- Place brackets approximately 1400mm above the base. See diagram.

Important: Tanks **MUST** be secured with brackets or posts

Wall brackets are available and can be supplied with the tank for an additional cost.

Against the wall

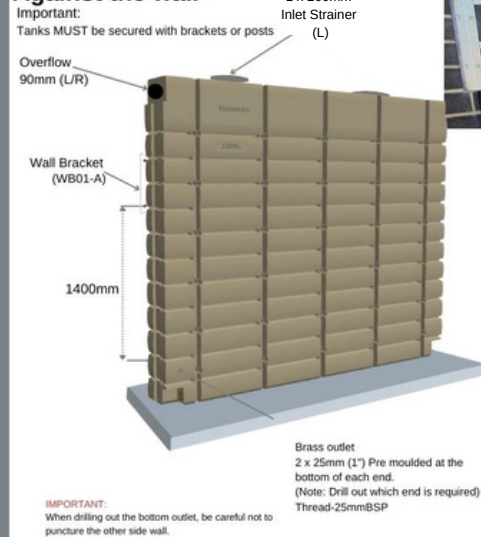

1000 Litre S2- Freestanding (2400mm x 260mm x 1970mm)

- Mark the position of support poles and excavate holes for 75mm x 50mm x 2400 long posts.
- Holes to be 300mm in diameter and 600mm deep.


Caution: This size may not be large enough in sandy areas. Seek advice from a local fencing contractor or a civil engineer

- Lay concrete slab/pavers between holes.
- Position 150mm PVC sleeves and concrete around outside of sleeves and up to slab/paver.
- After the concrete has been set, slide the tank into position up against the vertical post. When correctly positioned, the tank should sit flush with the post and be held in place by the end recess.
- Install the second post on the opposite side as per step 1
- Concrete around posts to finish off.

Important: Tanks **MUST** be secured with brackets or posts

Steel Posts (75mmx50mmx2400mm) can be sourced from your local hardware store

Freestanding

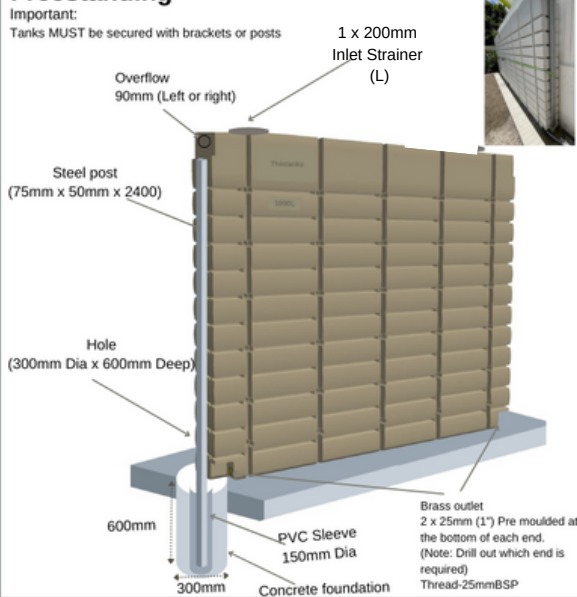

Multiple Tanks Freestanding

Continue the below steps when installing multiple tanks.




- Attach blue coupling to each tank. Insert blue coupling into installed tank and wrench tighten to secure.



- Install final post and concrete in position as per step 1 to finish the installation

Note: For multiple tanks, inlet and overflow must still be connected to the same tank.

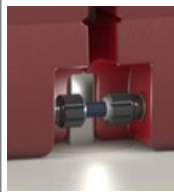

- Slide tank into position easing the pipe into the second tank coupling. Once full seated, the tanks will sit almost flush and fitting can be wrench tightened to secure.

IMPORTANT: Thread tape should be used on all couplings and ball valves.

Fittings



- Install the downpipe into the inlet pre-fitted with leaf strainer. Either end can be used.



- Install overflow pipework and plumb away from tank base.

WARRANTY Thin Tanks warrants its tanks by a pro-rata warranty for 10 years from the original date of purchase. This warranty covers the original purchaser only and is not transferable. Thin Tanks will repair or replace, at their discretion the tank affected by a defect caused by the manufacturing process or materials. Fading or colour change, damage caused by accidents or misuse, do-it yourself repairs or incorrect installation, and any subsequent costs (including freight of replacement tank) are not covered by warranty.