



CAN-AM SPYDER WHEEL RING KIT 2015-2019 SPYDER F3-T & F3 LIMITED MODELS INSTALLATION INSTRUCTIONS

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 210-765-0974



⚠ PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

KIT INCLUDES

- QTY- 1 Front Left Wheel Ring
- QTY- 1 Front Right Wheel Ring
- Note:** Uses factory nuts & bolts

TOOLS NEEDED FOR INSTALLATION

- Jack
- Jack Stands
- Socket set




THANK YOU FOR YOUR PURCHASE!
 FOLLOW US ON FACEBOOK & INSTAGRAM
 TO SEE OUR LATEST PRODUCTS.
 TAG US IN WITH YOUR FINISHED INSTALLED
 PICTURES FOR A CHANCE TO WIN FREE PRODUCTS!


PAGE 1
 REV 1 JAN 15 2020

! IMPORTANT: Use proper jack stands during installation. !

1 Remove upper and lower ball joint bolts.

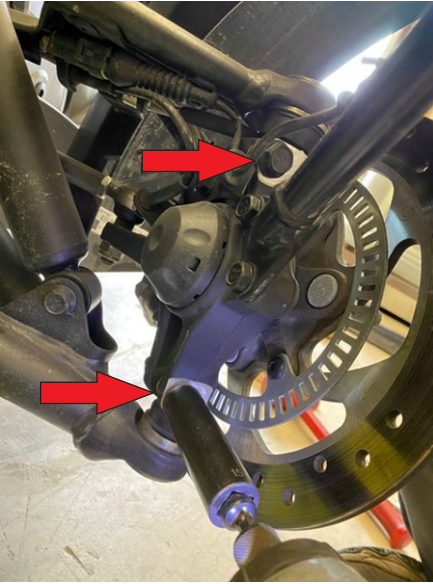

2 After bolts been removed, start aligning the wheel ring with the holes the bolts were removed from.

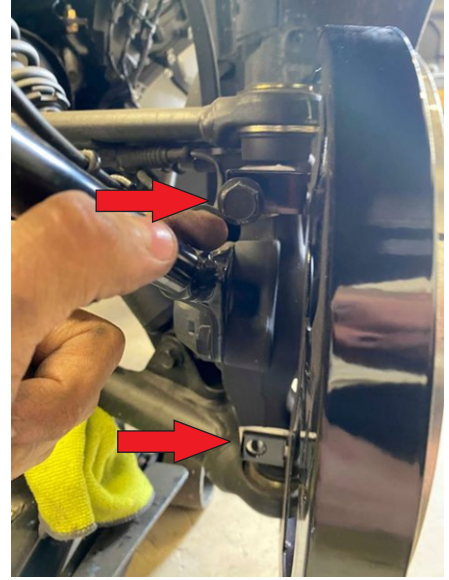

3 Ensure bolts are tightened to factory specs.



4 You have now completed the install of the wheel rings. **Note:** Notches have been factored into the design of the wheel rings to allow zip ties to be used to secure the lights of your choice.

