



SS DUAL CHARGE AND JUMP PORT PANEL KIT 2020-2021 SLINGSHOT MODELS INSTALLATION INSTRUCTIONS

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 888-552-9272



! PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

KIT INCLUDES

QTY- 2 (Pair) Panels

QTY- 1 Remote Battery Jumper
Terminals, Charging Post, Pair

QTY- 1 Battery Tender Ring

Terminal Accessory Cable, Pair

Stainless Steel Hardware:

QTY- 4 1/4"x 3/4"inch Bolts F19425

QTY- 4 3/16"x3/4"inch Bolts F13972


QTY- 8 Lock Nuts [4-F114752, 4-F12190]

QTY- 8 Stainless Washers [4-F117227, 4-F113873]

TOOLS NEEDED FOR INSTALLATION

- Allen wrench set

- Wrench set

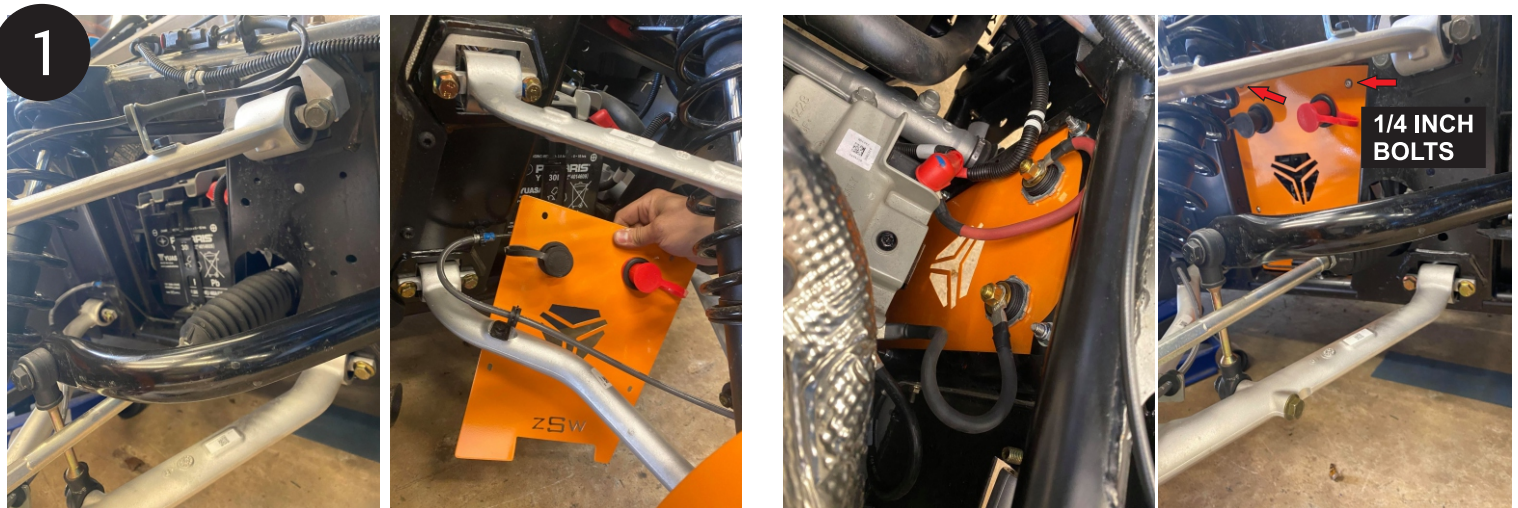

Start the installation by identifying the driver and passenger side plates. Passenger side plate is for the jump ports. The larger 1/4 inch bolts and nuts go into the upper side of the plate. The smaller 3/16 bolts go into the lower side of the plate.

2

Remove the factory zip tie that holds the brake line in place on the driver side.



3

Next slide the driver side plate in at an angle around the brake line. Note: The brake line may need to be moved slightly or bent to get the plate in. After the plate is in place, install the bolts (bigger bolts go on top and smaller ones on the bottom).



4

Once the driver side plate is bolted, re-install the zip tie supplied with the kit. The installation is now completed and can now easily access the battery.

