



SS FENDER ACCENT TRIM KIT 2017-2021 SLINGSHOT MODELS INSTALLATION GUIDE

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM


WWW.ZARATESTEELWORKS.COM | PHONE: 888.552.9272

A For each accent trim piece align to fender and mark holes for drilling guide marks.

Note: #3 accent trim uses factory bolts on first three holes.

B After holes are all marked use a 13/64 inch drill bit to drill the holes.

C Insert bolts provided for all trim pieces on #1, 2, 4 and 5. For #3 trim piece use factory bolts on first three holes. Use bolt provided for last hole on #3 trim piece.

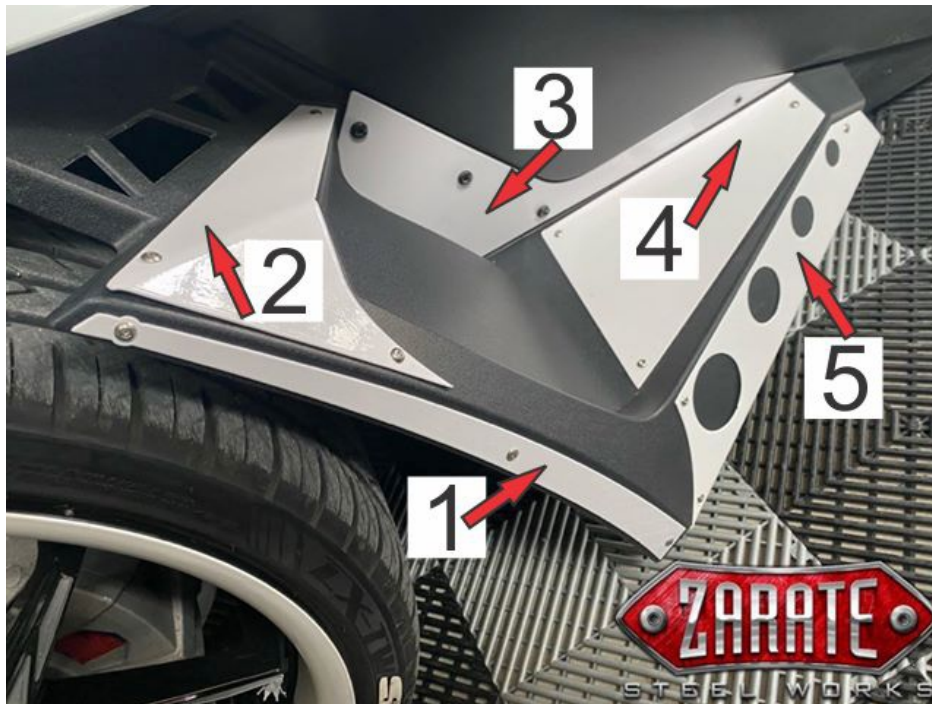

KIT INCLUDES

QTY- 10 Fender Accent Trim Pieces
Stainless Steel Hardware:
QTY- 24 3/16" x 1/2" Bolts F115208
QTY- 24 3/16" Lock Nuts F17B17
QTY- 2 Self tapper screws 3/4" (Use only on #3 pair) FB4571

TOOLS NEEDED FOR INSTALLATION

- Power Drill
- 13/64 Drill Bit
- Socket Set
- Wrench set



Like us

WARNING: Cancer and Reproductive Harm-
www.p65Warnings.ca.gov

DISCLAIMER

ALL ZARATE STEEL WORKS PRODUCTS ARE MADE FOR OFF ROAD USE ONLY

PAGE 1
REV2 FEB 2021