




SS REAR SPLASH PANEL 2015-2019 SLINGSHOT MODELS INSTALLATION INSTRUCTIONS

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 210-765-0974

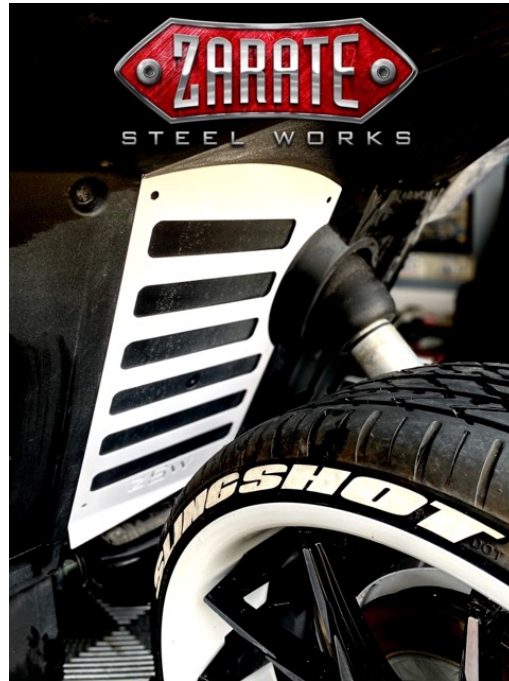

⚠ PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

KIT INCLUDES

QTY - 1 REAR SPLASH PANEL

QTY - 4 3/8 BODY CLIPS

TOOLS NEEDED FOR INSTALLATION

- POWER DRILL
- 21/64 DRILL BIT
- MARKER



THANK YOU FOR YOUR PURCHASE!
FOLLOW US ON FACEBOOK & INSTAGRAM
TO SEE OUR LATEST PRODUCTS.
TAG US IN YOUR FINISHED INSTALLED
PICTURES FOR A CHANCE TO WIN FREE PRODUCTS!



1
Clean surface thoroughly and ensure surface is dry before installing.



2
Begin to align the rear splash panel.
NOTE: Tab slides and tucks up behind the top of the panel.



3
Once aligned properly, mark your holes on all four corners.



4
! STOP & NOTE !
Gas tank is a few inches behind this panel. We recommend taking this panel off if you are not experienced in using a power drill.

Drill all 4 holes very slowly using the 21/64 drill bit.



5
After all your holes are drilled line up the rear splash panel in place.



6
Insert a body clip through each hole and snap the clips in place.