



SS SIDE VIEW MIRROR ARM TRIM KIT

2015-2021 SLINGSHOT MODELS

INSTALLATION INSTRUCTIONS


23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 888-552-9272




PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

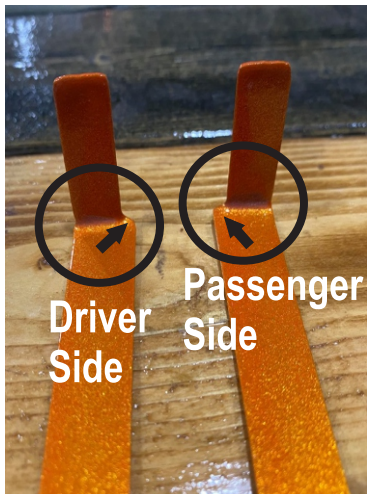

First identify the driver and passenger side mirror arm trims.



Remove the 3M red tape covering.

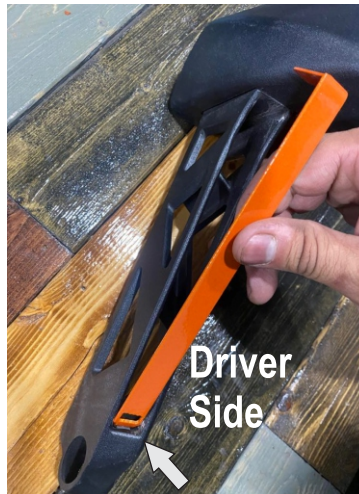

To install, slide the arm trim towards the bottom of the mirror canal as shown.



Then snap in the top arm trim in place. Repeat steps for passenger side.

Note: This added feature can also be used to mount your LED strip light down the arm of the Slingshot mirror giving it a clean look.



Like us



WARNING: Cancer and Reproductive Harm-
www.p65Warnings.ca.gov

DISCLAIMER
ALL ZARATE STEEL WORKS PRODUCTS
ARE MADE FOR OFF ROAD USE ONLY

REV2 FEB 2021