



# SS WIRING HEADLIGHT BACK COVERS

## 2015-2021 SLINGSHOT MODELS

### INSTALLATION INSTRUCTIONS

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 888-552-9272



#### KIT INCLUDES

- QTY- 2 Wiring Headlight Back Covers (Pair)
- QTY- 2 1/2 Self Tapping screws (Use for 2015-2016 models)
- QTY- 2 Lock nuts 6mm (Use for 2017+ models)
- QTY- 4 Plastic Push Clip Fasteners 6.4 mm

#### TOOLS NEEDED FOR INSTALLATION


- Power Drill if using Self Tappers (2015-2016 models)  
or
- 10 mm wrench (2017+ models)

1




To install, remove factory zip tie to loosen wires. Remove factory plastic clips from back of bar.

2

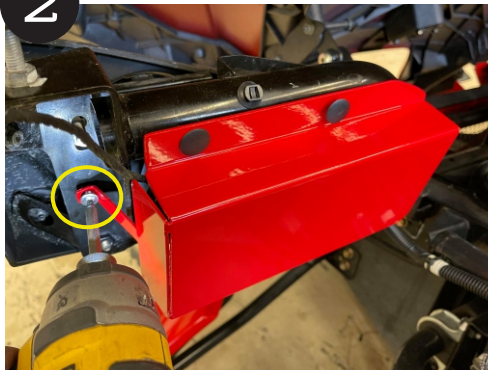

Insert plastic push clips into head light back cover. For 2015-2016 models use self tapping screws to secure side arm.

3

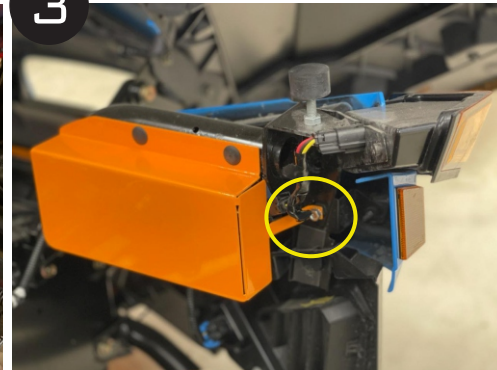

For 2017+ models use 10mm lock nut and tighten side arm onto the stock bolt. Insert plastic push clips into head light back cover.

THANK YOU FOR YOUR PURCHASE!  
FOLLOW US ON FACEBOOK & INSTAGRAM  
TO SEE OUR LATEST PRODUCTS.  
TAG US IN WITH YOUR FINISHED INSTALLED  
PICTURES!



**WARNING:** Cancer and Reproductive Harm-  
[www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov)

DISCLAIMER  
ALL ZARATE STEEL WORKS PRODUCTS  
ARE MADE FOR OFF ROAD USE ONLY

REV 1 JAN 2021