



# SS ZSW REAR SPOILER 2015-2021 SLINGSHOT MODELS INSTALLATION INSTRUCTIONS

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 888.552.9272



PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

## KIT INCLUDES

QTY- 2 (Pair) Rear Spoiler  
QTY- 8 3/16" Screws F84571  
3M Adhesive tape

## TOOLS NEEDED FOR INSTALLATION


- Power Drill
- 1/8 Drill Bit
- Phillips Head Screwdriver

1



Start off by getting the spoiler and test fitting it to the bike. Notice: There is a relief cut that is on each spoiler. Bend and form the spoiler as much as possible to the curve of the bike where the spoiler will be installed.

2

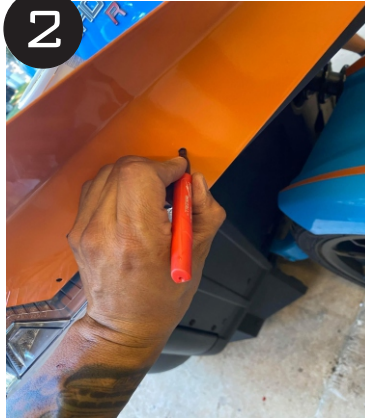

After the spoiler has been test fitted on both sides, begin marking the holes where they will be drilled.

3



Ensure the bonding surface is clean, dry and free of any product contamination where the 3M will be applied to the bike. With the supplied 3M cut into sections as shown in the picture above and begin to apply it to the bike.

4

Using a 1/8 drill bit begin to drill the holes that have been marked. Ensure holes are not large.  
**Caution:** Be very cautious when beginning to drill on the outer side of the bike. Be careful not to drill into the taillight. See picture below.



5

Remove the top layer of the 3M red covering and begin to line up the spoiler to the holes. Press and hold firmly the spoiler against the bike for good adhesion. Next begin installing the screws with a screw driver. Your installation is now complete



Like us