



VANDERHALL FRONT LOWER SPLITTER

2017-CURRENT YEAR / ALL MODELS

INSTALLATION INSTRUCTIONS

23815 HICKORY PASS SAN ANTONIO, TX 78264

SALES@ZARATESTEELWORKS.COM

WWW.ZARATESTEELWORKS.COM | PHONE: 888.552.9272



⚠ PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

KIT INCLUDES


QTY- 1 Front Lower Splitter
QTY- 6 1/4" Bolts
QTY- 4 1/4" Nuts
QTY- 12 1/4" Washers

TOOLS NEEDED FOR INSTALLATION

-Jack
-Jack Stand
-Standard socket & ratchet set
-Allen key set
-1/4" Drill Bit

1

Start by removing all 4 factory bolts that are on the front lower panel.

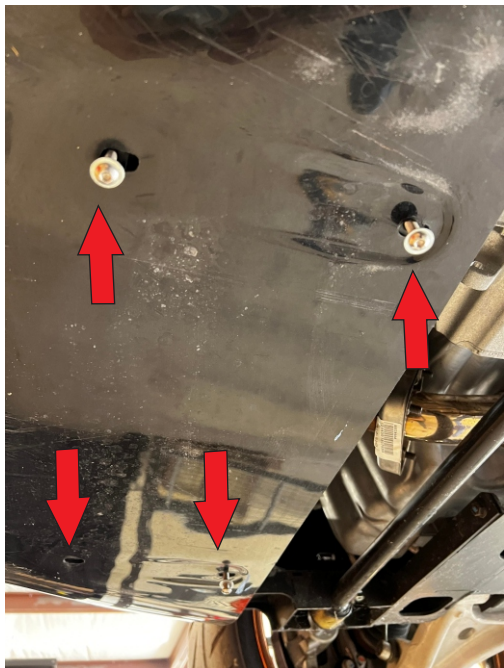

2

Look towards the rear where the factory bolts were removed and remove the factory plastic lower nut retainer on the 2 back side bolts only.

Note: Do not remove the 2 front nut retainers, leave in place for install.



3

Next, remove the 2 back brackets the plastic nut retainers were attached to.

Note: Save the 2 factory bolts as they will be reinstalled on Step 6.



4

Now hold new front splitter in place, install 2 of the 1/4" new bolts towards the front side of the splitter and hand tighten.



IMPORTANT: Do not fully tighten during this step.



5

Now moving towards the rear of the splitter, reinstall the 2 brackets in place and insert the new 1/4" bolts with washers and nut as shown.

Note: Only hand tighten during this step.



6


Now tighten the factory rear brackets with the factory bolts that were removed on Step 3

Note: Fully tighten



7

Adjust lower splitter to desired depth, slots shown allow for adjustment. Fully tighten down all 4 bolts.

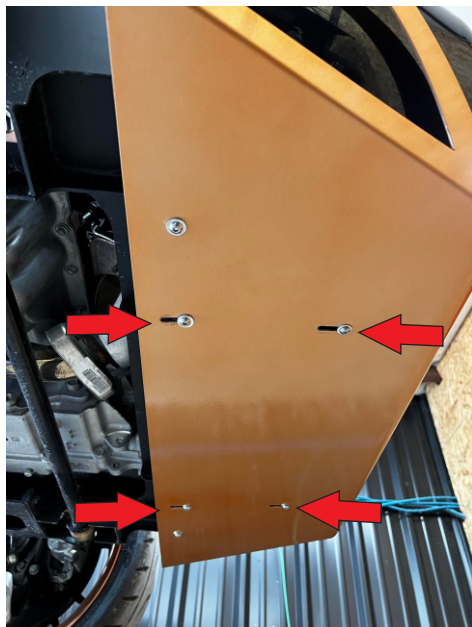

8

! IMPORTANT: Do not skip this step.

There are 2 remaining holes on the splitter that are to be used for reinforcement purposes. Drill through the existing holes on the splitter into your panel. Install the 2 new 1/4" bolts to finish installation.





Your installation is now complete!

THANK YOU FOR YOUR PURCHASE!
FOLLOW US ON FACEBOOK & INSTAGRAM
TO SEE OUR LATEST PRODUCTS.
TAG US IN WITH YOUR FINISHED INSTALLED
PICTURES!

