

3

To attach the crash bar:

A. Put crash bar into place and attach with remaining two screws. ▶



▶ B. Install pickup hose into DosaCart lid (bottom-up).



C. Insert filter end of pickup hose ▶ down into DosaCart tank.



Attach lid.

▶ D. Place hose nut onto hose, insert pickup hose onto bottom end of unit barb.

E. Tighten hose nut onto bottom of the unit.



ASSEMBLY INSTRUCTIONS

DosaCart

**Portable Fertilizer System - Part #: HS15-16
Fits D14 (14 GPM Model) or DI16 (11 GPM Model)**

(Dosatron Unit, Quick Hook-Up Kit and Cart Sold Separately)



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

2090 Sunnydale Blvd. • Clearwater, FL 33765 • 727-443-5404


2010-01-29 2008-88-HORT19

Customer Service and Technical Support

1 - 8 0 0 - 5 2 3 - 8 4 9 9

1 Remove black plate from DosaCart:

A. Unscrew the two (2) screws from the corners of the black plate on the back of the DosaCart.

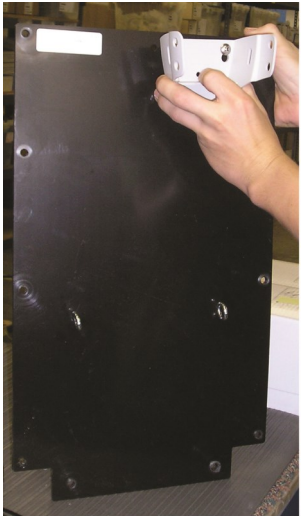

B. Remove plate and attach the Dosatron unit bracket for your unit (see note below) on the same side as the eyebolts, with the two (2) screws and (2) nylon locking nuts.



NOTE: Use the D14 or DI16 unit bracket, two (2) screws and (2) nylon locking nuts provided in the hardware bag.

C. Attach the plate back onto the DosaCart by installing eight (8) screws around the plate except for the top two (2) screws (these will be used for the crash bar, see step 3).

2 Attach Dosatron unit:

A. Assemble Quick Hook-Up Kit with unit (see *Quick Hook-Up Kit instructions that came with kit*).



NOTE: Be cautious not to use excessive force when attaching fittings onto blue housing of unit.

B. Attach Dosatron unit and Quick Hook-Up Kit onto unit bracket.

C. Zip tie hoses to eye hooks.

