



## Installation Instructions


[www.FireIDLLC.com](http://www.FireIDLLC.com)

610.639.5563 (mobile)

267.500.1626

**Thank you for your purchase of a FireID electroluminescent panel! Below you will find instructions for installing your panel into your vehicle.**

- 1) Determine the appropriate location on the inside of your vehicles windshield. *We recommend placement in a corner that does not obscure the operator's field of vision.*
- 2) Clean the windshield and allow sufficient time to dry.
- 3) Remove the red backing on the upper and lower adhesive strip and firmly press the panel to the windshield.
- 4) Do not attach the power supply to the panel until after it is connected to power. Remove the included fuse.
- 5) Utilizing the supplied power supply, extend the positive (red) and negative (black) wires to your vehicles 12V power supply, adhering to vehicle manufactures directions for after market accessories that receive ignition-on power. *Connecting the wires directly to the battery will result in the panel being illuminated even when the vehicle is off.*
  - a. The amp draw of the power supply is 0.75Amps.
  - b. Note: You will need customer-supplied wire and terminals to complete the connections based on your specific vehicle. We have included 2 solder heat shrink connectors to extend the power supply wiring.
- 6) Once the power supply is connected, the fuse may be re-installed and the connection to the ELP may be completed.

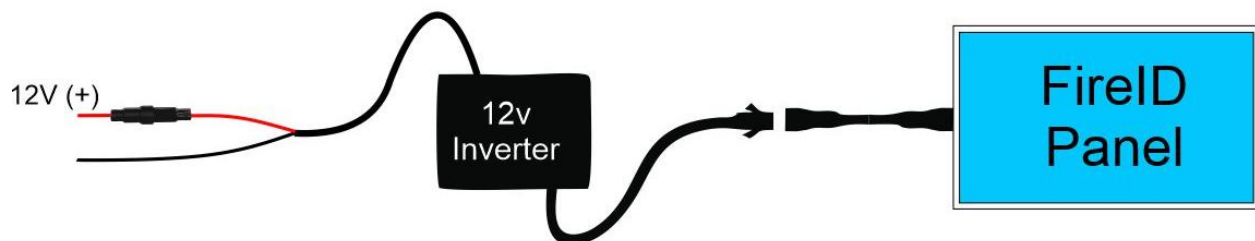

If you have any questions, please do not hesitate to contact us for assistance. We are glad to help!