




INSTALLATION INSTRUCTIONS FOR SPARE SHIELD TSS10JW-C & TSS12FB FOR JEEP WRANGLER & FORD BRONCO

1. STOP! PLEASE CONSULT YOUR VEHICLE'S OWNER'S MANUAL FOR INSTRUCTIONS ON HOW TO REMOVE THE SPARE TIRE.
2. REMOVE THE SPARE TIRE. (SEE PIC **A**)
3. INSTALL THE SPARE SHIELD JEEP WRANGLER LOCK PLATE WITH SLOTTED TAB OVER THE STUDS IN THE POSITION INDICATED. (SEE PIC **B**)
4. PUSH THE 3 WASHERS PROVIDED OVER EACH STUD UNTIL THEY ARE SECURE, PULLING ON PLATE CONFIRMING IT CANT BE PULLED FORWARD. (SEE PIC **B**)
5. REINSTALL THE SPARE TIRE AND THE OEM LUGS FOLLOWING MANUFACTURER'S RECOMMENDATIONS.
6. INSTALL THE SPARE SHIELD LOCK (SEE PIC **D**) THEN REMOVE THE KEY, PLACING ONE KEY ON YOUR KEY RING AND THE OTHER IN YOUR GLOVE COMPARTMENT.
7. PLACE THE RUBBER DUST COVER OVER THE LOCK (SEE PIC **E**) , FEEL A SIGH OF RELIEF THAT YOUR INVESTMENT IS PROTECTED WITH THE BEST TECHNOLOGY ON THE MARKET

A

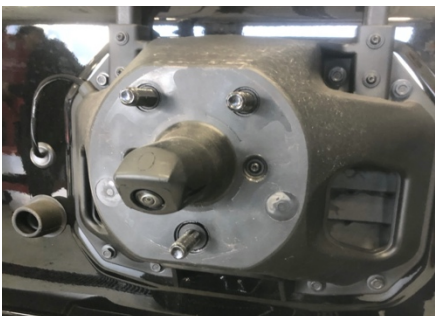

B



C



D



E



F

