


E - Beads Rod

D - Side Panel 2

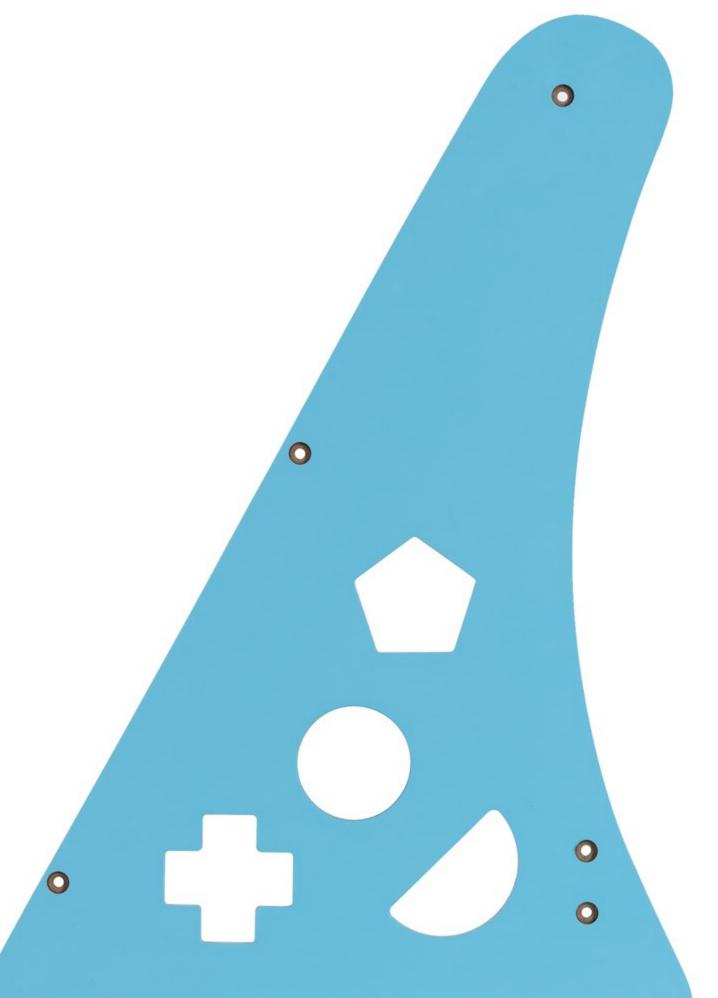






H - Wodden Rod (for wheels)



0

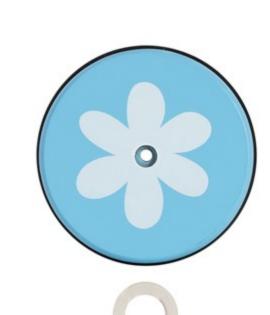

**B** - Back Panel with Groove






A - Floor Panel




## Step By Step Instructions

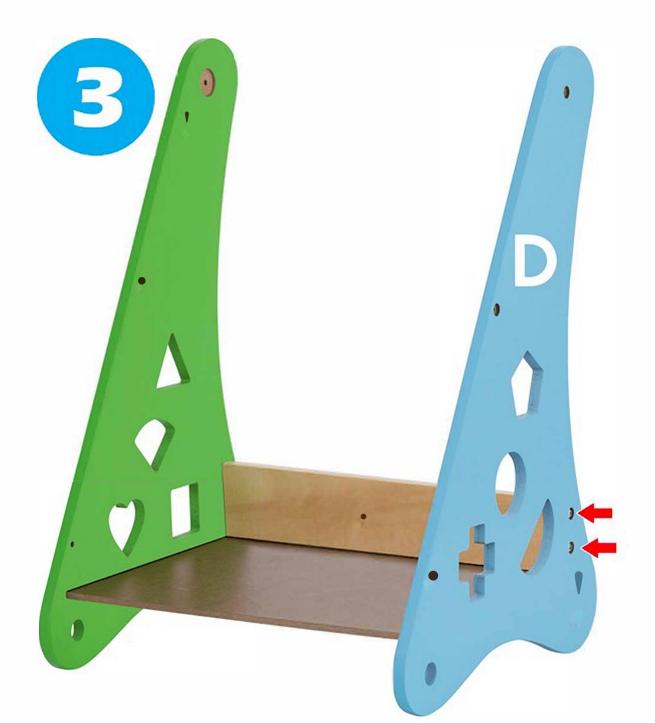


Attach D side panel 2 with screws



Insert G front activity board and attach With 2 screws on each side

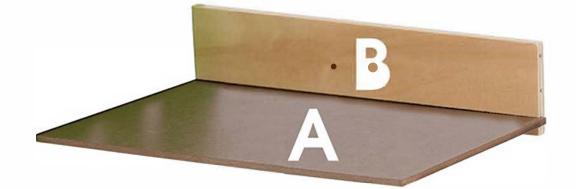

Insert A floor panel into the B Back panel with groove

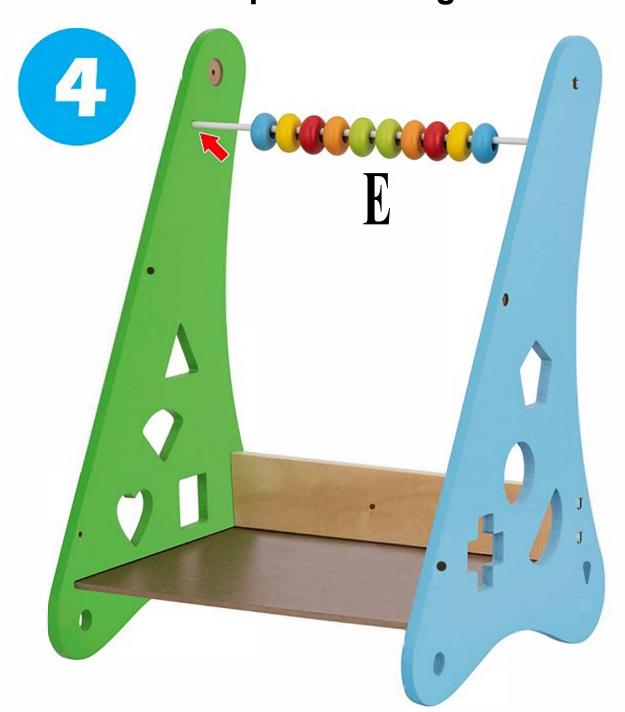

Put all the beads on the E Rod and insert into second hole from top



Slide on rubber washers - Attach 1 side wheel to the wooden rods - insert thru holes - slide on rubber washers



Attach C side panel I with screws



Insert and attach Fwooden handle
With screws from the 2 sides



Attach with screws opposite side wheels onto the rods