




- Step 1: With the level facing forward, insert level holder into middle piece to align on the wall
- Step 2: Insert provided anchor into hole on middle piece & fasten middle piece to the wall until anchor bottoms out in the back of the end piece

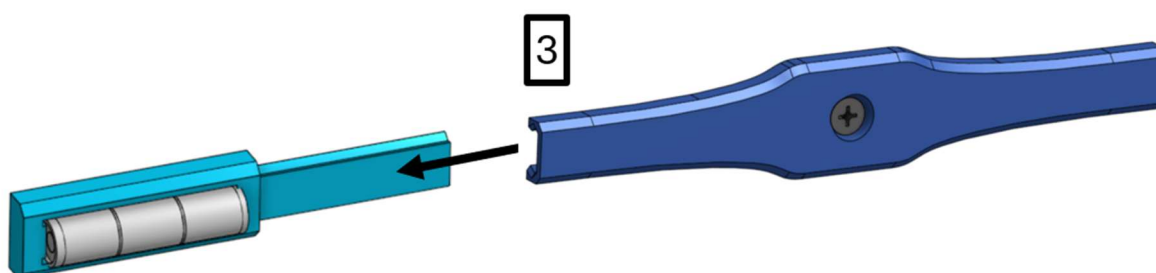

- Step 3: Remove Level Holder from middle piece to prepare for insertion of next section

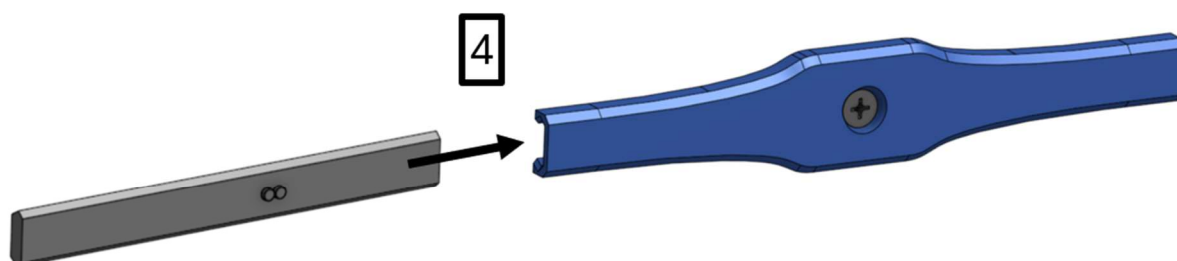

- Step 4: With the (2) circles facing forward, insert back bar connector into middle piece until 1<sup>st</sup> circle snaps into place

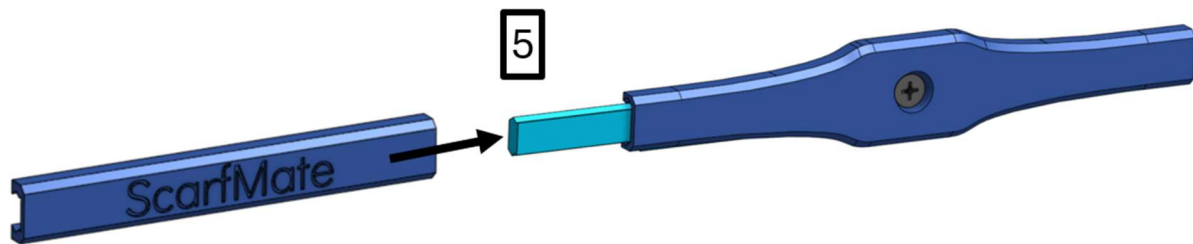

- Step 5: With the ScarfMate logo facing forward, slide front bar connector over back bar connector until 2<sup>nd</sup> circle snaps into place



- Step 6: With the (2) circles facing forward, insert another back bar connector in to front bar until 1<sup>st</sup> circle snaps into place




- Step 7: Repeat steps 5 – 6 until (3) ScarfMate bars are on one side of the middle piece



- Step 8: With the back side facing up, slide an end piece over the back bar connector until 2nd circle snaps into place



- Step 9: Insert provided anchor into hole on end piece & fasten it to the wall until anchor bottoms out in the back of the middle connector. You can also place the level on top of end piece to ensure it is level.

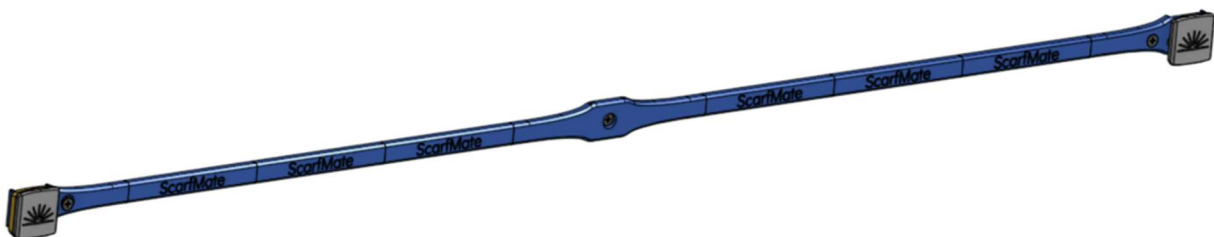

- Step 10, etc.: Repeat steps 4-9 on opposite side until assembly is complete. Finally, add front magnets by connecting to end pieces