




Assembly Instructions (Skip steps 5 & 6 if using vertical only product):

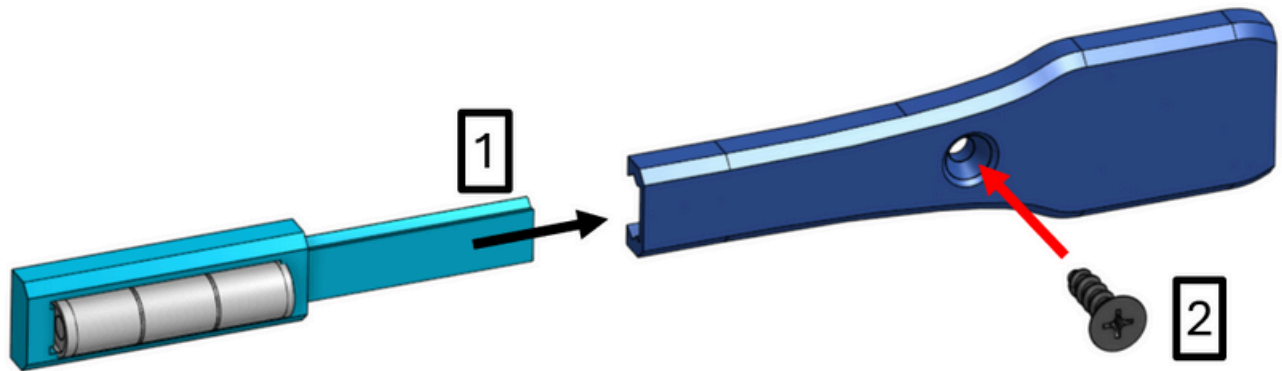


- Step 1: With the level facing forward, insert level holder in to end piece to align on the wall
- Step 2: Insert provided anchor in to hole on end piece & fasten end piece to the wall until anchor bottoms out in the back of the end piece

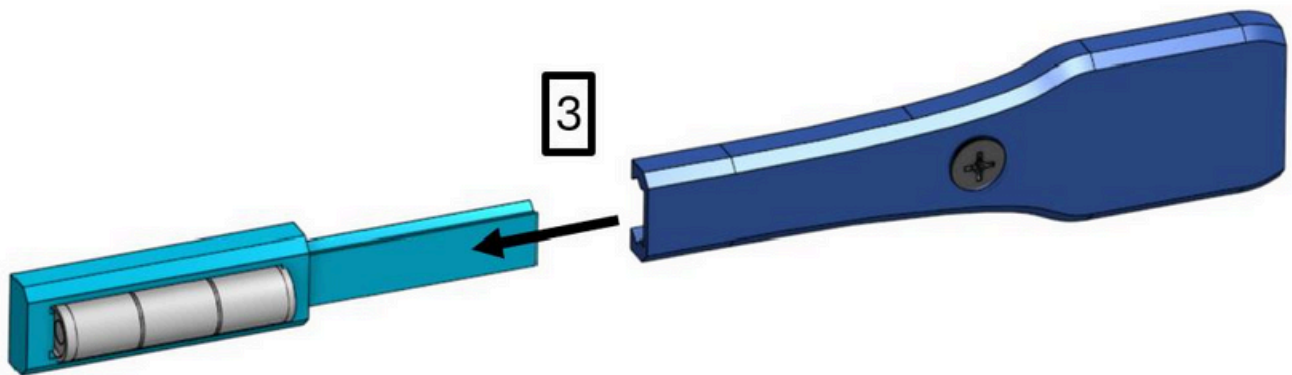

- Step 3: Remove Level Holder from end piece to prepare for insertion of next section

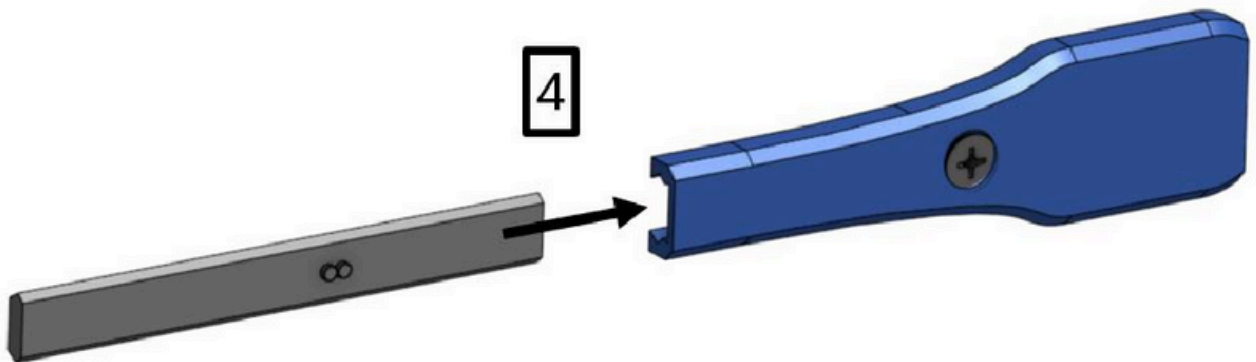


- Step 4: With the (2) circles facing forward, insert back bar connector in to end piece until 1<sup>st</sup> circle snaps into place

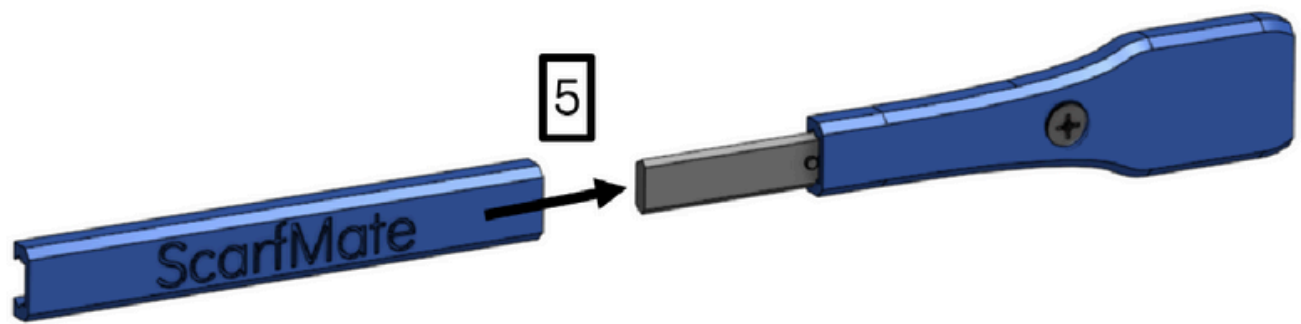

- Step 5: With the ScarfMate logo facing forward, slide front bar connector over back bar connector until 2<sup>nd</sup> circle snaps into place



- Step 6: With the (2) circles facing forward, insert another back bar connector in to front bar until 1<sup>st</sup> circle snaps into place

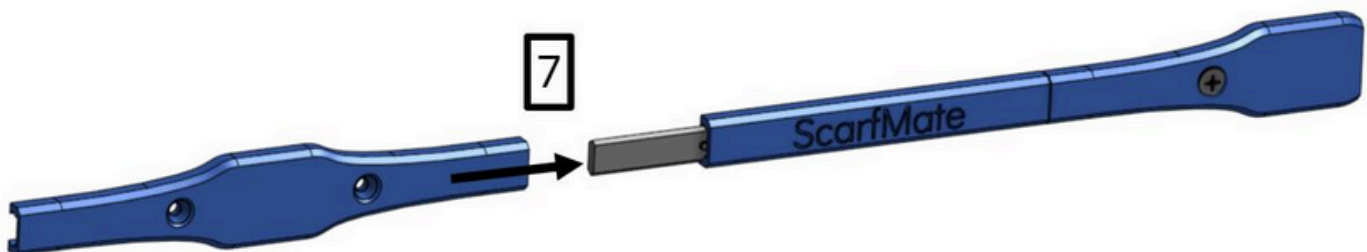

- Step 7: With the back side facing up, slide a middle connector over the back bar connector until 2<sup>nd</sup> circle snaps into place



- Step 8: Insert provided anchor in to hole's on middle connector & fasten it to the wall until anchor's bottoms out in the back of the middle connector



- Step 9, etc: Repeat steps 8-2 in opposite order until assembly is complete. Finally, add front magnets by connecting to end pieces

