


Mid-Century Collection Bar Cabinet - Top Unit

Assembly Instructions for: KN008-A - Walnut/White

KN008-C - Walnut/White

⚠WARNING:

ADULT ASSEMBLY REQUIRED - This product contains hardware that, before being assembled, can pose a chocking hazard to children under the age of 3 years. Care should be taken when unpacking and assembling this product.

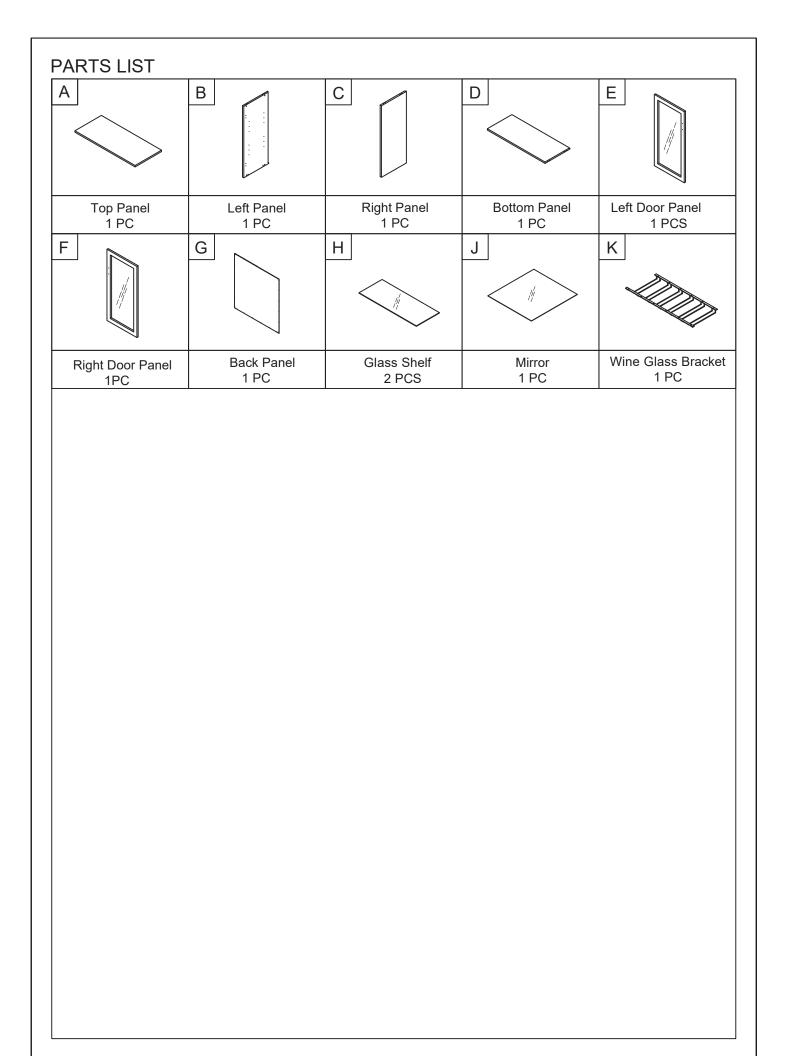

HARDWARE LIST

#1	#2	#3	#4	#5
	000			(Q)
		_	1/4"x25mm	1/4"x11mm
Handle 2 PCS	Cam Bolt 8 PCS (+1 Extra)	Cam Lock 8 PCS (+1 Extra)	Long Bolt 2PCS (+1 Extra)	Spring Washer 2PCS (+1 Extra)
#6	#7	#8	#9	#10
1/4"x13mm	1/4"x12mm	8x30mm		7x15mm
Flat Washer 2 PCS (+1 Extra)	Short Bolt 12 PCS (+1 Extra)	Wood Dowel 8 PCS (+1 Extra)	Hinge 4 PCS	Flat Head Screw 24 PCS (+1 Extra)
#11	1 #12		#14	#15
	- Own			
	6x15mm	4x22mm		8x15mm
Double Magnet 1 PC	Round Head Screw 2 PCS (+1 Extra)	Round Head Bolt 4 PCS (+1 Extra)	Shelf Holder 8 PCS (+1 Extra)	Short Screw 22 PCS (+1 Extra)
#16	#17	#18	#19	
	7x15mm	M4		
Connecting Plate	Flat Head Screw 8 PCS (+1 Extra)	Allen Wrench 1 PC	Safety Strap Kit 1 SET	
2 PCS	8 FC3 (+1 EXIIA)	I FC	I SEI	


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1.

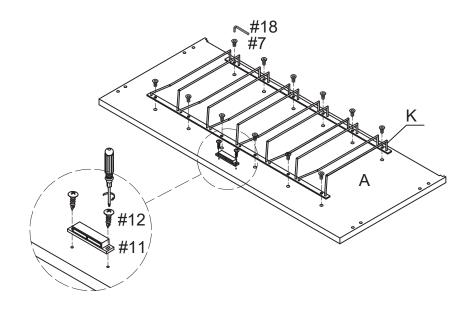


Step 2.

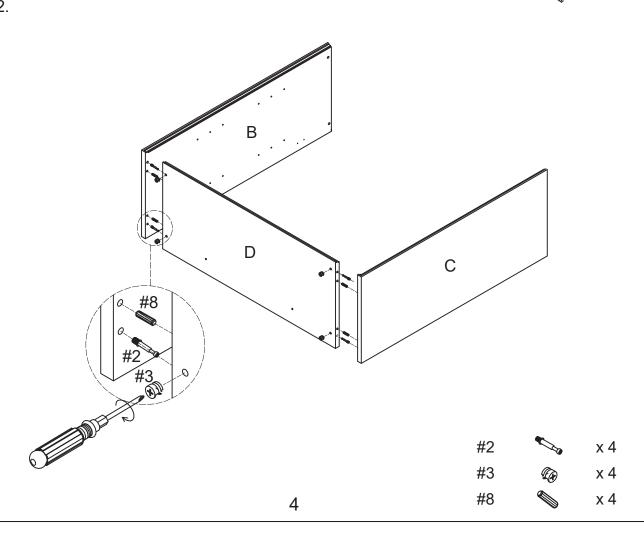

Step 3.

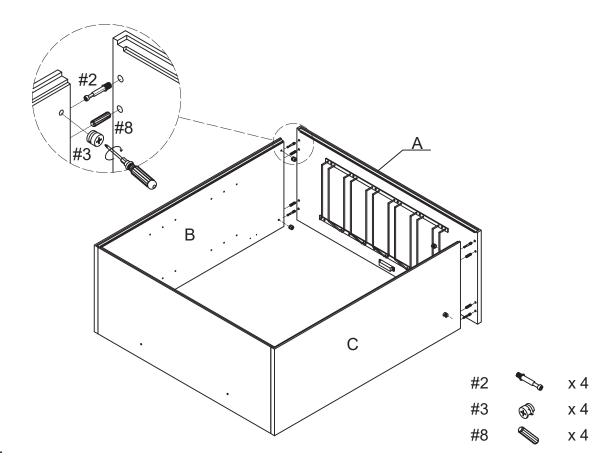


Step 4.

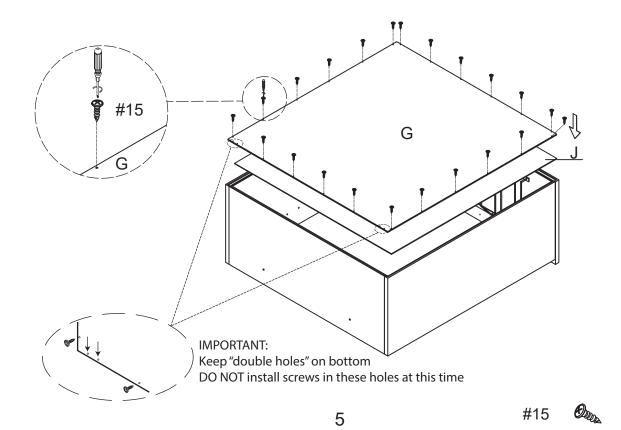



x 22

Step 5.

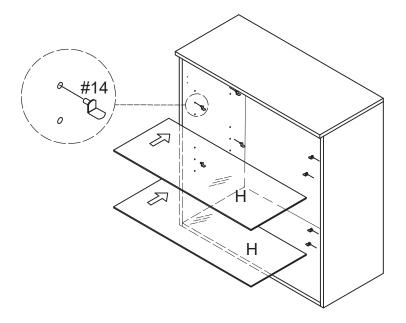

Step 6. #14 🖔 x 8

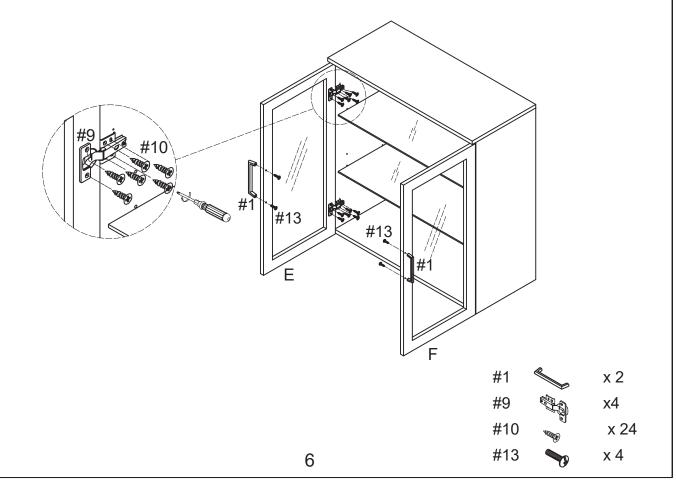

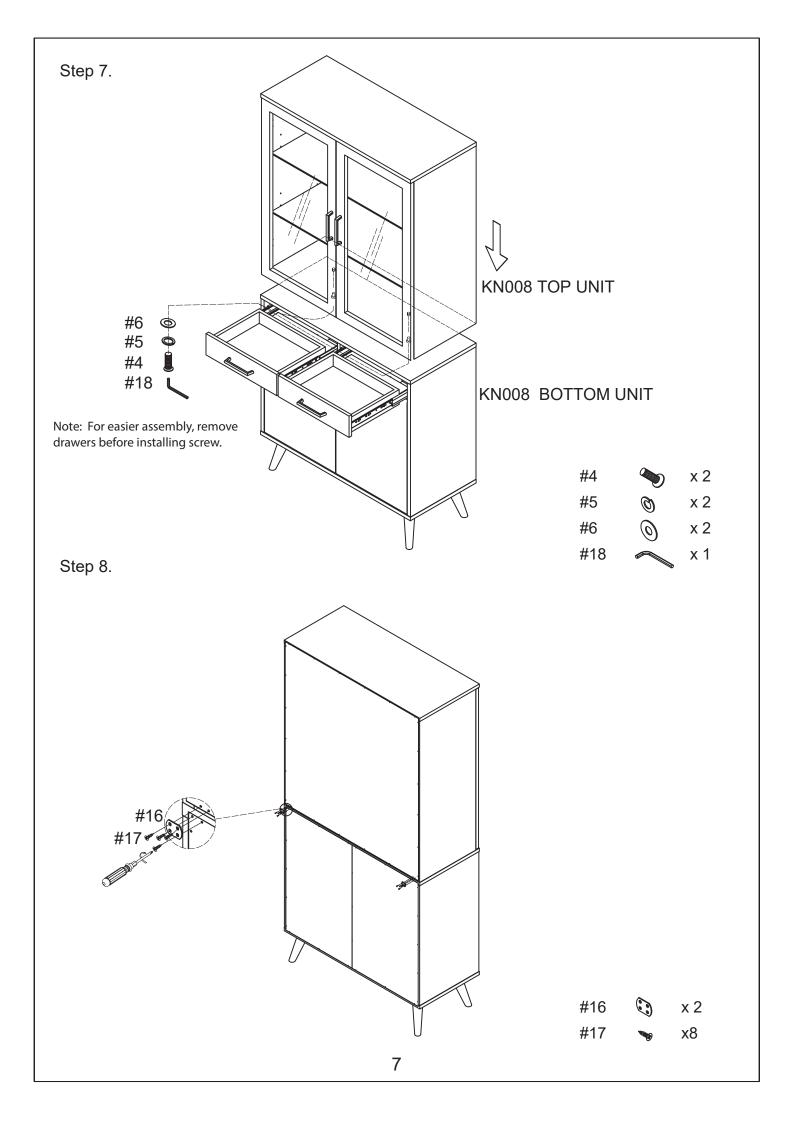


#19	Safety Strap Kit Includes:						
2 8	Α	В	С	D	E		
a de la companya de l		0	8x15mm	8x35mm			
Safety Strap Kit	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall Strap		
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PĊ		

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

- 1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
- 2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
- 3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

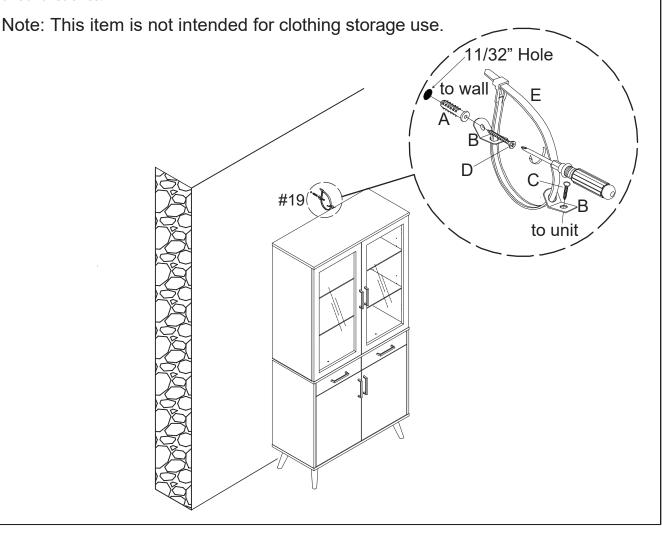



Hinge Adjustment Instructions

For Proper Door Alignment (optional)

Left - Right Adjustment

Tightening/Loosening the center screw in the hinge will move the door to the left and right

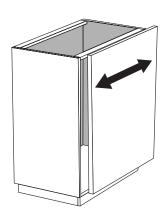


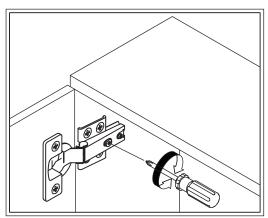


Up - Down Adjustment

Loosen the screws attaching both hinges to the inner wall of the side panel.

Shift the door and hinges up and down for best alignment.

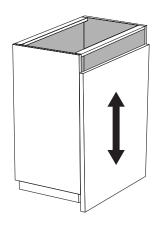

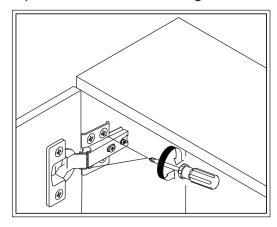

In - Out Adjustment

Loosen the screw on the end of both hinges. Shift the door in and out for best alignment.

