

# Mid-Century Collection












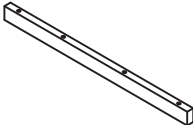
## Media Console

**Assembly Instructions for:**  
**KN007 - Walnut/White**












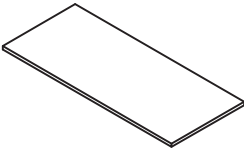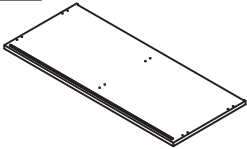


**⚠️ WARNING:**

**ADULT ASSEMBLY REQUIRED** - This product contains hardware that, before being assembled, can pose a choking hazard to children under the age of 3 years. Care should be taken when unpacking and assembling this product.

PARTS LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Partition Panel 1 PC	Right Panel 1 PC	Bottom Panel 1PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>J</div> 	<div>K</div> 
Left Shelf 1PC	Adjustable Shelf 1 PC	Left Back Panel 1 PC	Right Back Panel 1 PC	Door Panel 1 PC
<div>L</div> 	<div>M</div> 			
Leg 4 PCS	Metal Bar 1 PC			

## HARDWARE LIST

#1		#2	 1/4"x50mm	#3	 1/4"x42mm	#4	 1/4"x11mm	#5	 1/4"x13mm
Leg Attachment Plates 4 PCS		Long Bolt 6 PCS (+1 Extra)		Short Bolt 4 PCS (+1 Extra)		Spring Washer 10 PCS (+1 Extra)		Flat Washer 10 PCS (+1 Extra)	
#6	 1/4"x20mm	#7	 8x30mm	#8	 Cam Bolt 10 PCS (+1 Extra)	#9	 Cam Lock 10 PCS (+1 Extra)	#10	 Barrel Nut 6 PCS (+1 Extra)
Short Bolt 24 PCS (+1 Extra)		Wood Dowel 16 PCS (+1 Extra)		Cam Bolt 10 PCS (+1 Extra)		Cam Lock 10 PCS (+1 Extra)		Barrel Nut 6 PCS (+1 Extra)	
#11		#12	 8x12mm	#13	 M4	#14			
Shelf Holder 4 PCS (+1 Extra)		Short Screw 28 PCS (+1 Extra)		Allen Wrench 1 PC		Safety Strap Kit 1 SET			

## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.







Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1.

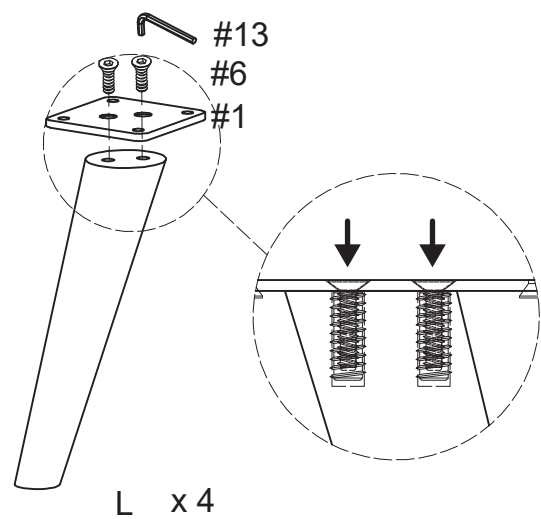Note: Bolts to be fully seated and flush with the plate





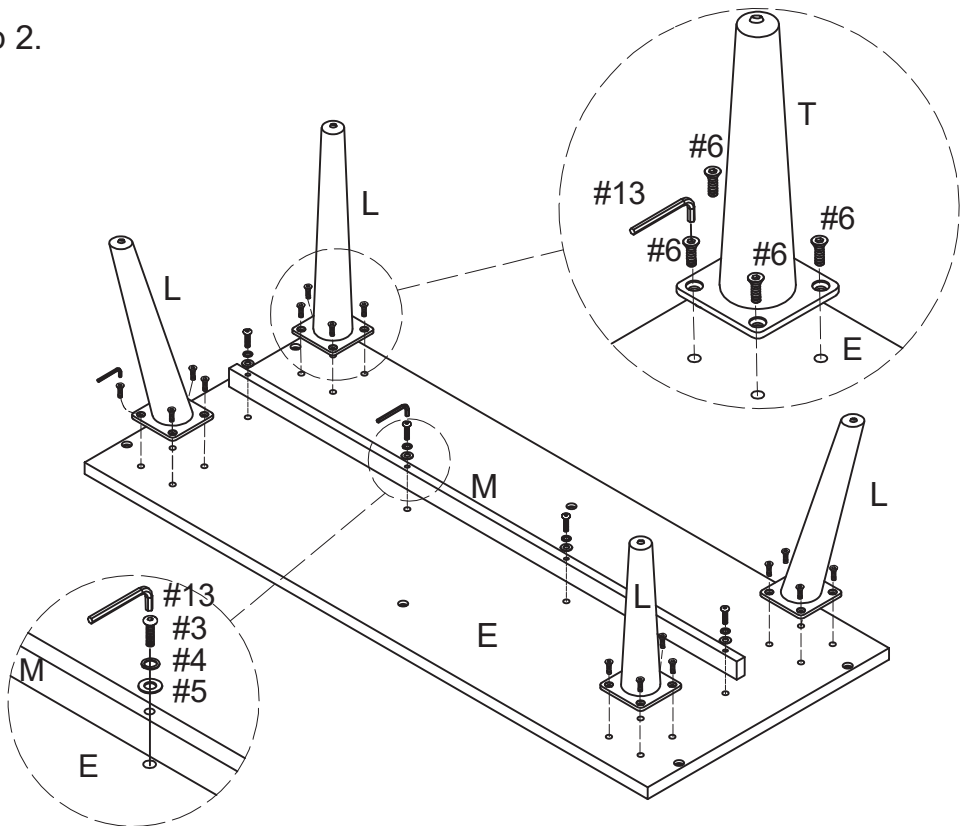


#1		x 4
#6		x 8
#13		x 1


Step 2.




Note: Position legs so they are all pointing outward to the corners of the panel.


#3		x 4
#4		x 4
#5		x 4
#6		x 16
#13		x 1



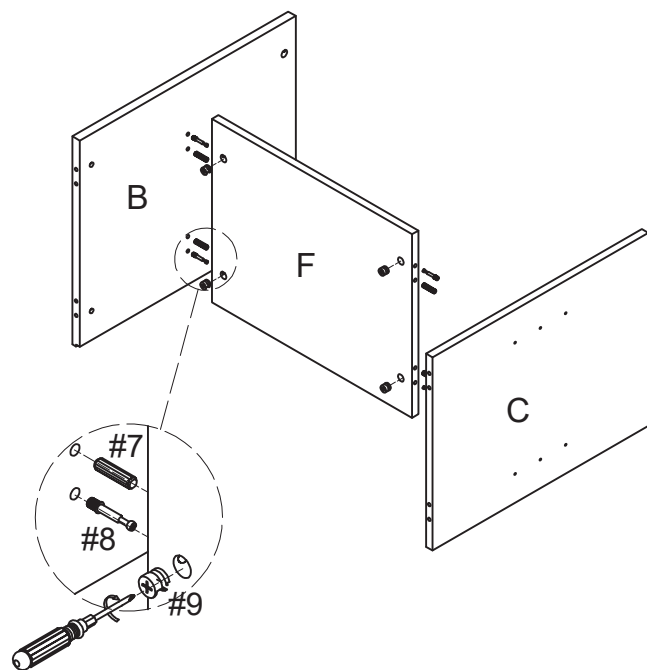



Step 3.

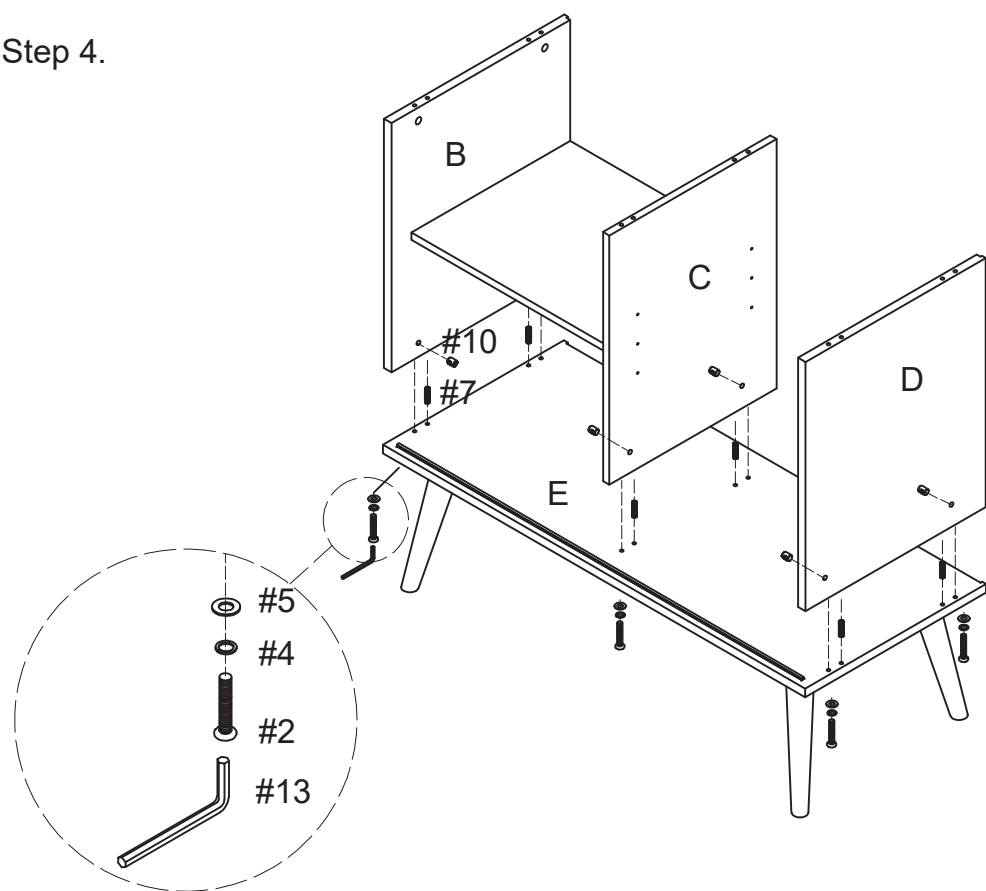


#7		x 4
#8		x 4
#9		x 4

Step 4.




#2		x 6
#4		x 6
#5		x 6
#7		x 6
#10		x 6
#13		x 1

Step 5.

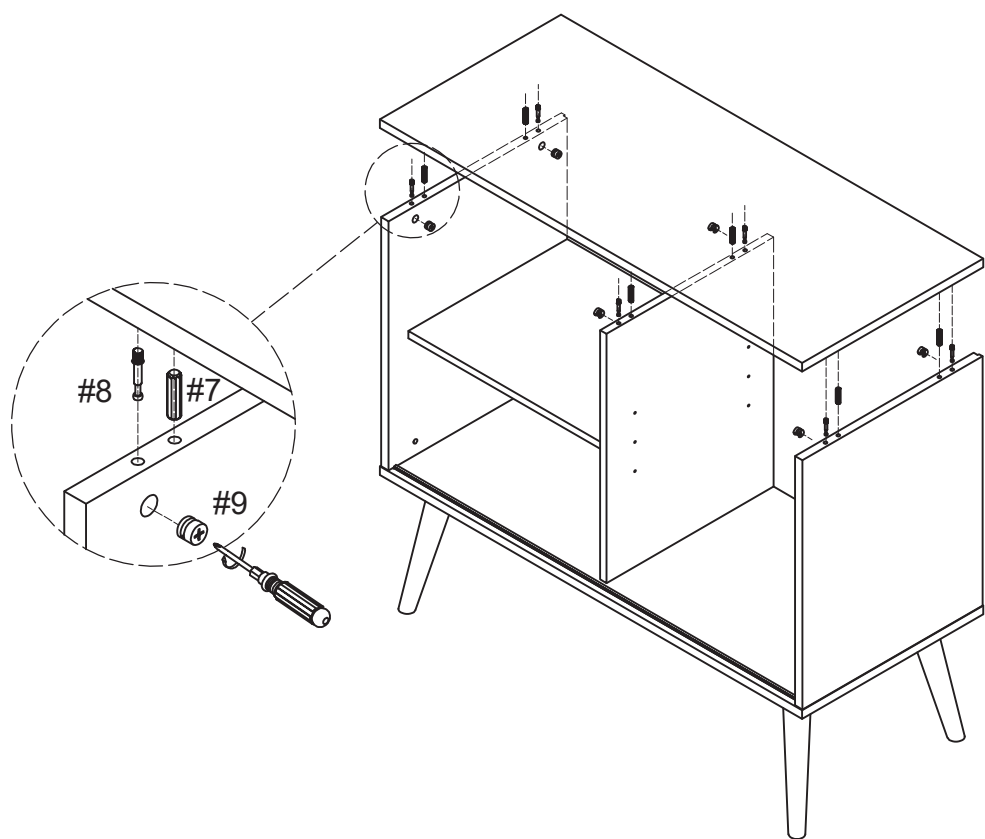


- |    |   |     |
|----|---|-----|
| #7 |   | x 6 |
| #8 |  | x 6 |
| #9 |  | x 6 |

Step 6.

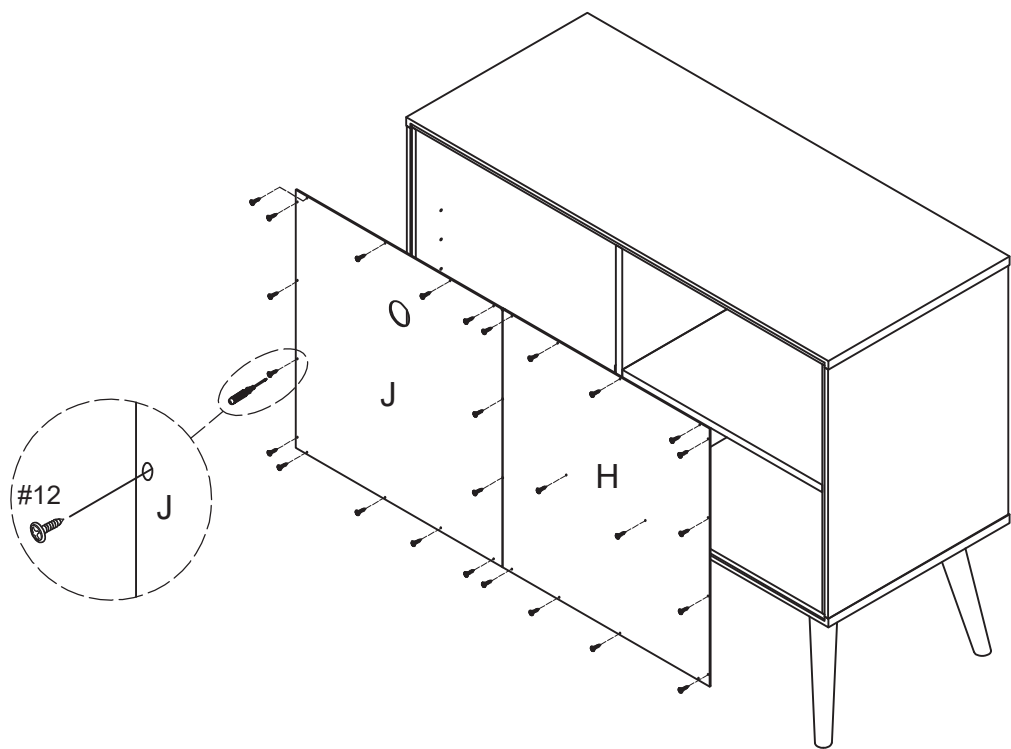

- |     |   |      |
|-----|---|------|
| #12 |  | x 28 |
|-----|---|------|

Step 7.

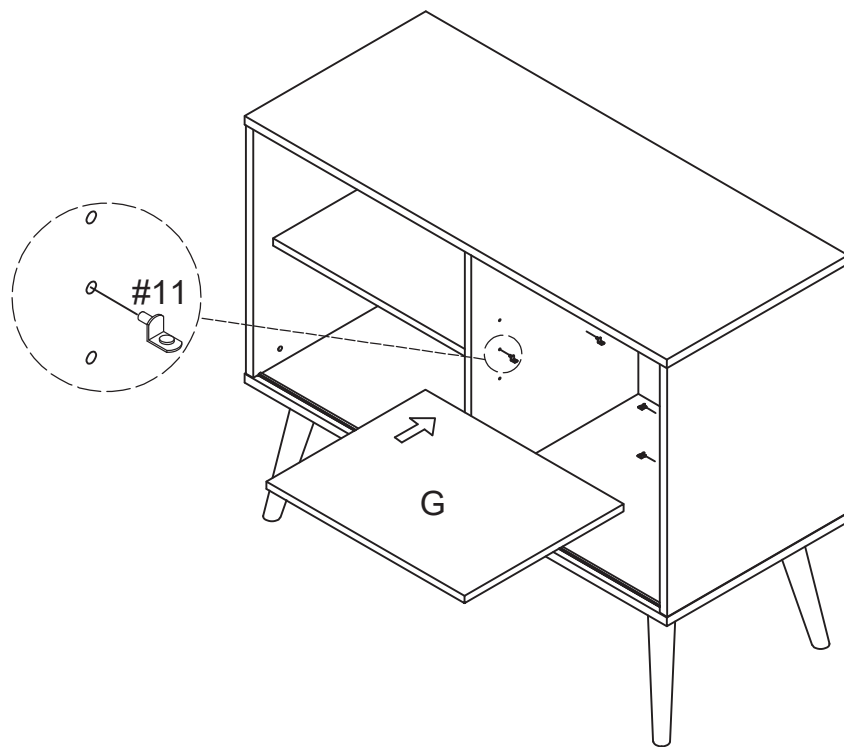


#11









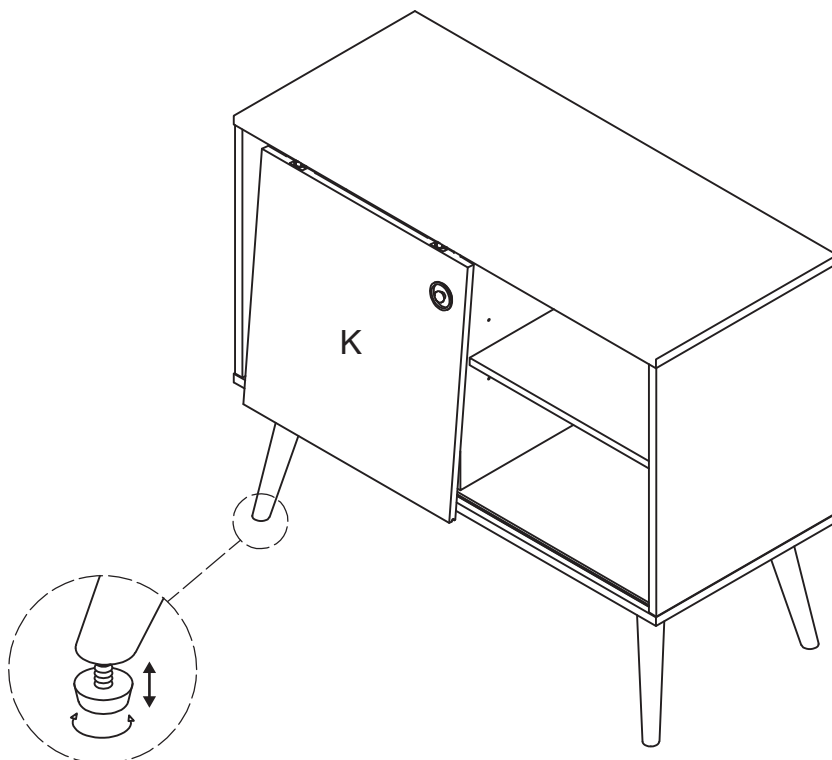x 4

Step 8.



NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable levelers until all four levelers are firmly in contact with the floor.

#14	Safety Strap Kit Includes:				
	A 	B 	C  8x15mm	D  8x35mm	E 
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

Note: This item is not intended for clothing storage use.

