


Mid-Century Collection 2-Drawer Sideboard

Assembly Instructions for: KN009 - Walnut/White

△WARNING:

ADULT ASSEMBLY REQUIRED - This product contains hardware that, before being assembled, can pose a chocking hazard to children under the age of 3 years. Care should be taken when unpacking and assembling this product.

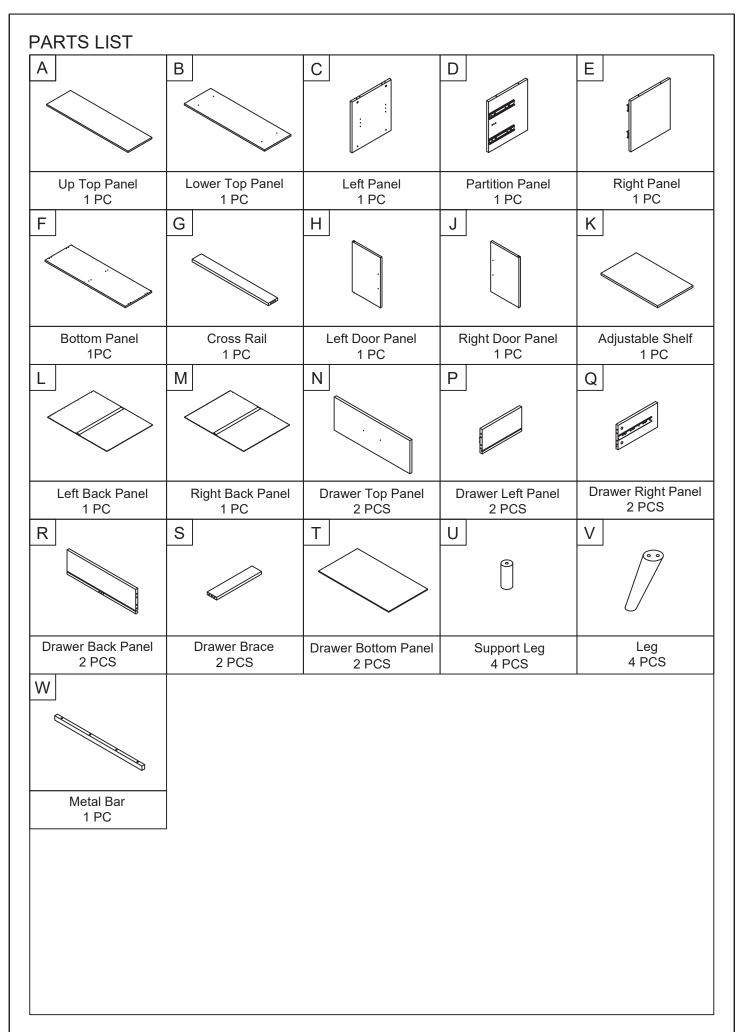

HARDWARE LIST

#1	#2	#3	#4	#5
			1/4"x50mm	1/4"x42mm
Handle 4 PCS	Riser Plate 4 PCS	Leg Attachment Plates 4 PCS	Long Bolt 6 PCS (+1 Extra)	Medium Bolt 8 PCS (+1 Extra)
#6	#7	#8	#9	#10
	<u> </u>			
1/4"x11mm	1/4"x13mm	1/4"x20mm	8x30mm	
Spring Washer 14 PCS (+1 Extra)	Flat Washer 14 PCS (+1 Extra)	Short Bolt 40 PCS (+1 Extra)	Wood Dowel 40 PCS (+1 Extra)	Cam Bolt 26 PCS (+1 Extra)
#11	#12	#13	#14	#15
			- Own	- Own
	4x22mm	*	6x15mm	8x12mm
Cam Lock 26 PCS (+1 Extra)	Round Head Bolt 8 PCS (+1 Extra)	Double Magnet 1 PC	Round Head Screw 2 PCS (+1 Extra)	Short Screw 34 PCS(+1 Extra)
#16	#17	#18	#19	#20
		4x32mm	M4	
Barrel Nut 6 PCS (+1 Extra)	Shelf Holder 4 PCS (+1 Extra)	Round Screw 2 PCS (+1 Extra)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1.

Note: Bolts to be fully seated and flush with the plate

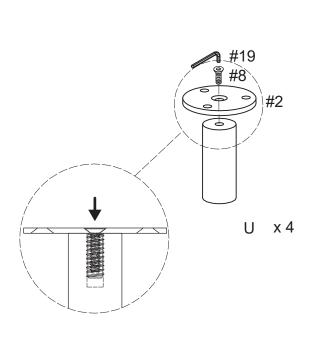


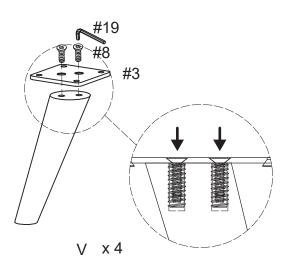

#19

x 1

Step 2.

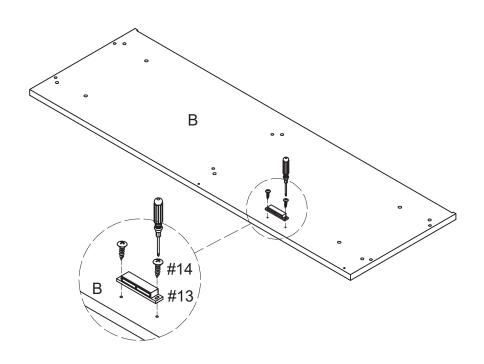


#13


#14


Q

x 1 x 2

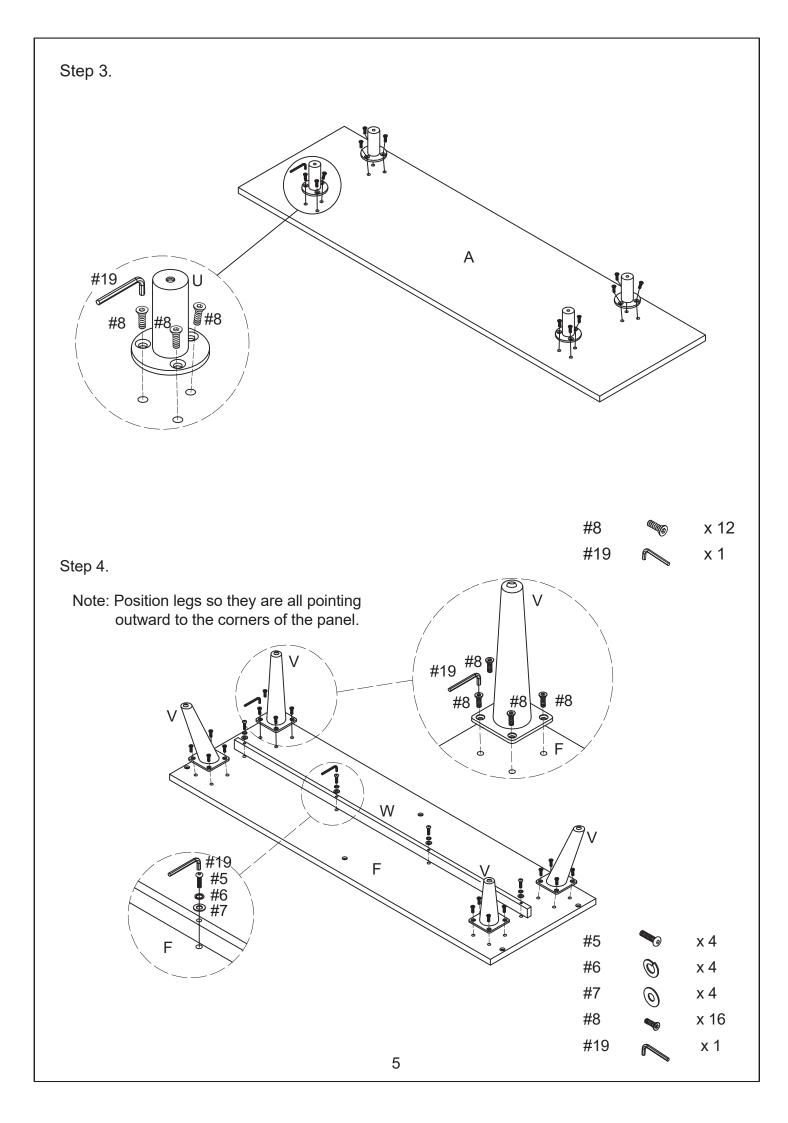


Step 5.

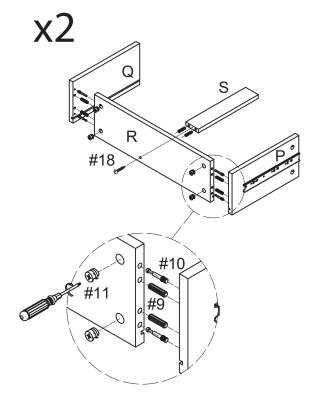

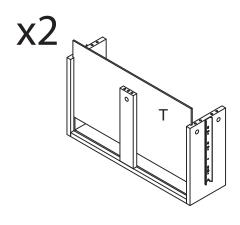


Step 6.

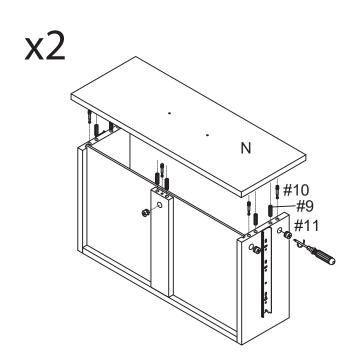


#9		x 12
#10		x 8
#11	Đ	x 8
#1 8		x 2


Step 7.

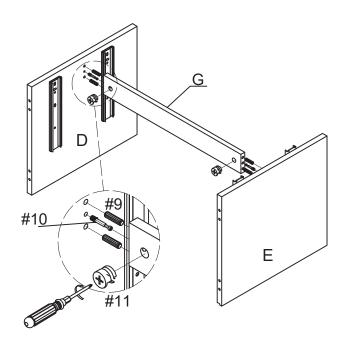


Step 8.

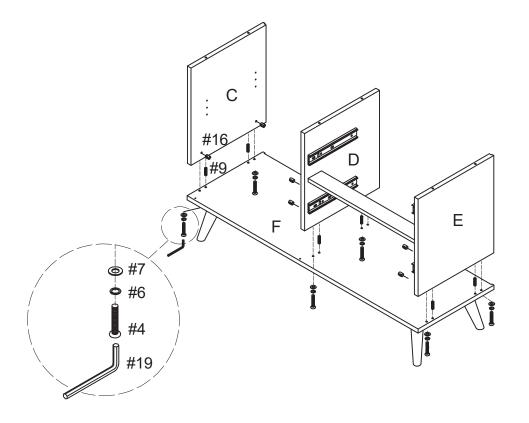

Step 9.

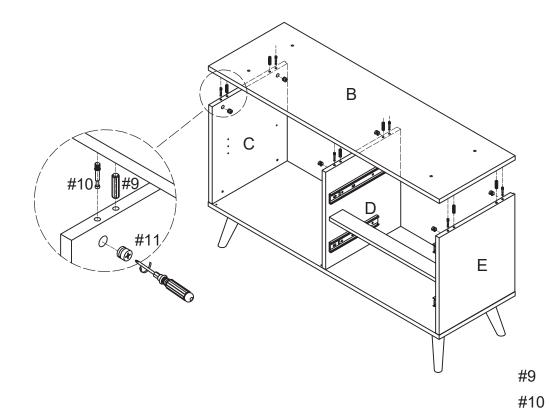

Step 10.

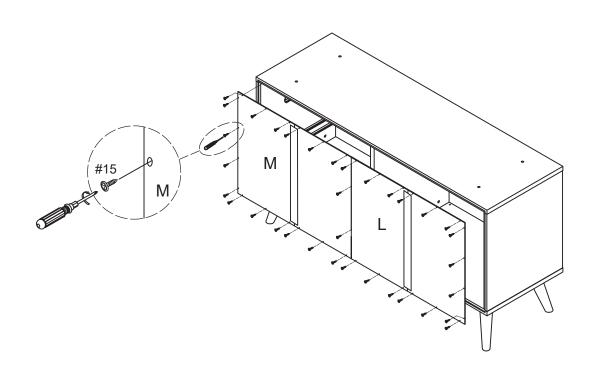

#15




x 6

x 6

x 6

#11


Step 11.

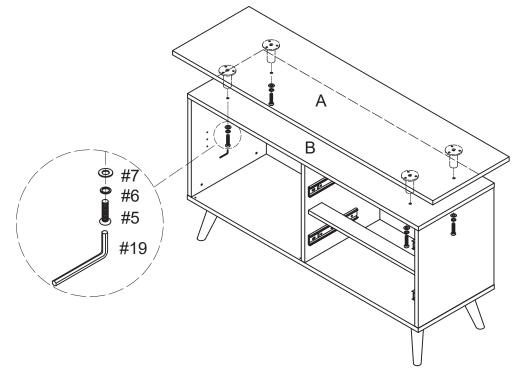

#19


x 1

Step 12.

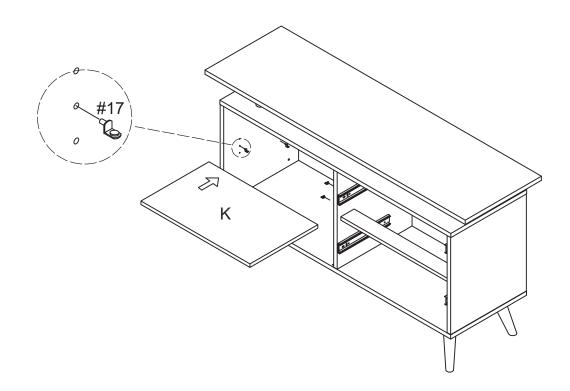


Step 13.

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

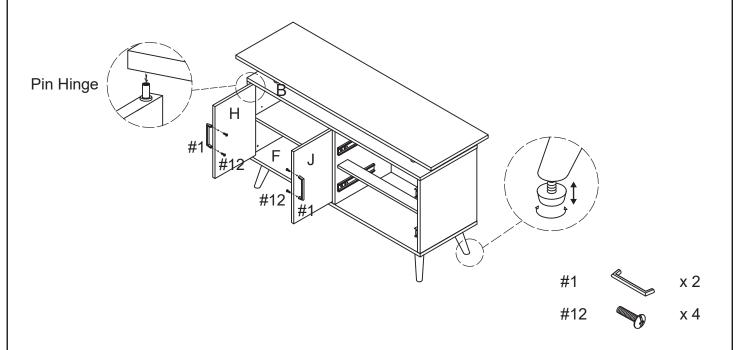


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable levelers until all four levelers are firmly in contact with the floor.

Step 14.

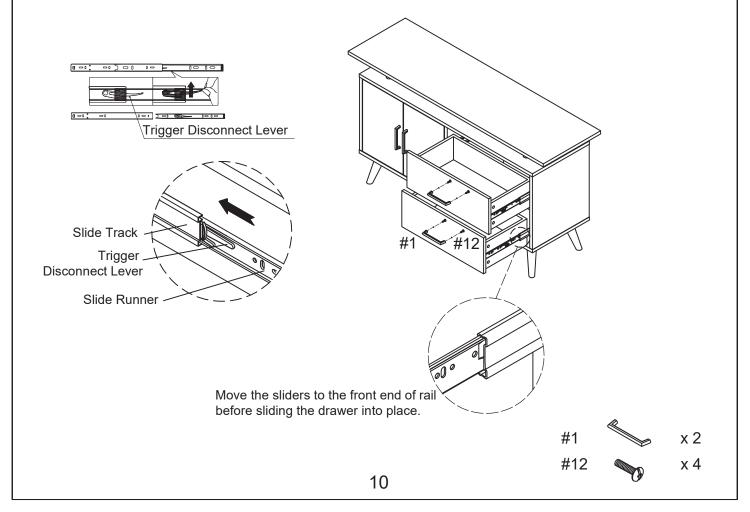

#20	Safety Strap Kit Includes:						
2 8	Α	В	С	D	E		
		0	8x15mm	8x35mm			
Safety Strap	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall		
Kit 1 SET	1 PC	2 PCS	1 PC	1 PC	Strap 1 PC		

- 1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
- 2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
- 3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

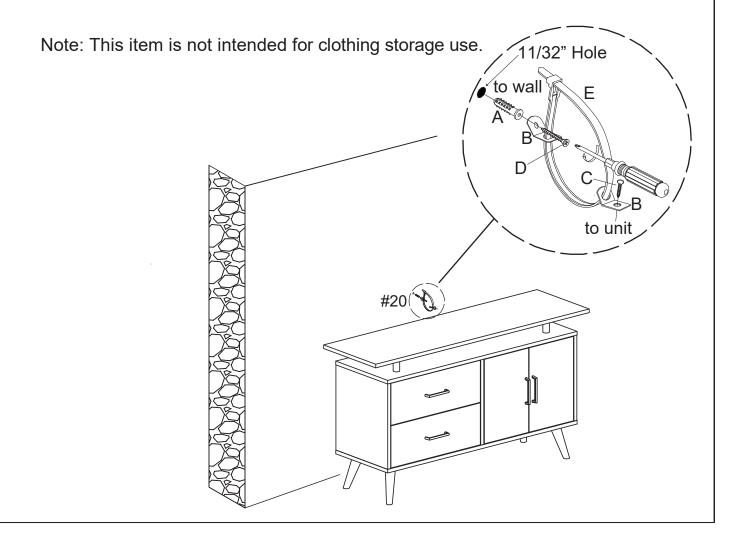



Hinge Adjustment Instructions

For Proper Door Alignment (optional)

Left - Right Adjustment

Tightening/Loosening the center screw in the hinge will move the door to the left and right

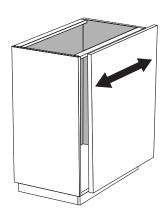


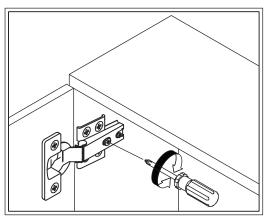


Up - Down Adjustment

Loosen the screws attaching both hinges to the inner wall of the side panel.


Shift the door and hinges up and down for best alignment.

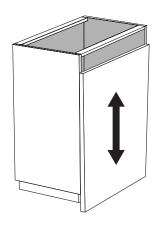


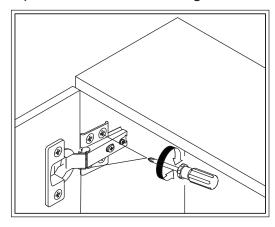

In - Out Adjustment


Loosen the screw on the end of both hinges. Shift the door in and out for best alignment.

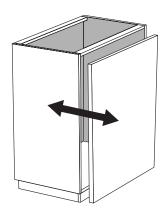

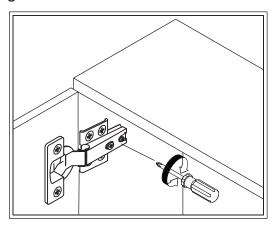


#20	Safety Strap Kit Includes:						
2 8	Α	В	С	D	E		
		0	8x15mm	8x35mm			
Safety Strap	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall		
Kit 1 SET	1 PC	2 PCS	1 PC	1 PC	Strap 1 PC		

- 1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
- 2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
- 3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

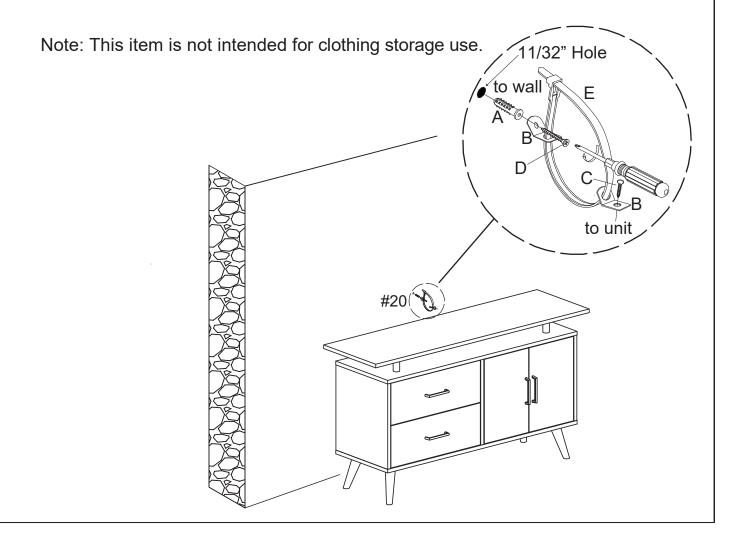


#20	Safety Strap Kit Includes:						
2 8	Α	В	С	D	E		
		0	8x15mm	8x35mm			
Safety Strap	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall		
Kit 1 SET	1 PC	2 PCS	1 PC	1 PC	Strap 1 PC		

- 1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
- 2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
- 3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

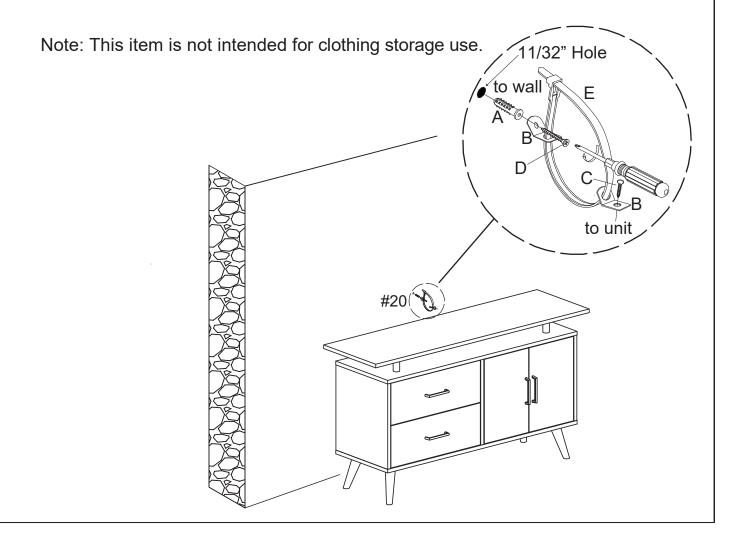

#20	Safety Strap Kit Includes:						
2 8	Α	В	С	D	E		
		0	8x15mm	8x35mm			
Safety Strap	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall		
Kit 1 SET	1 PC	2 PCS	1 PC	1 PC	Strap 1 PC		

- 1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
- 2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
- 3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

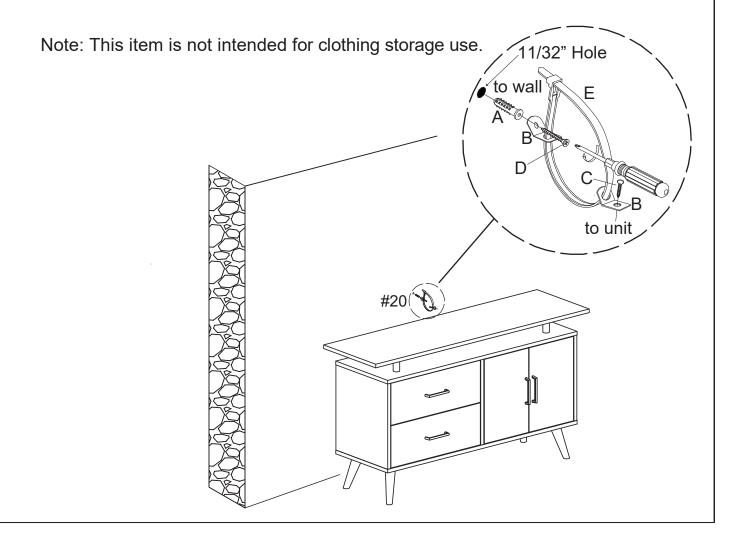

#20	Safety Strap Kit Includes:						
2 8	Α	В	С	D	E		
		0	8x15mm	8x35mm			
Safety Strap	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall		
Kit 1 SET	1 PC	2 PCS	1 PC	1 PC	Strap 1 PC		

- 1. Attach the 1st bracket (B) to the unit with a short screw (C). Bracket should be centered along a top edge of the unit, parallel to the wall. Position the bracket as high as possible on the unit, but without interfering with the function of the unit.
- 2. Place the unit against the wall where it is going to be. Note the location of the 1st bracket (B) on the unit, and mark the wall near the bracket where you want to place the 2nd bracket (B). To attach the 2nd bracket to the wall, drill a 11/32" hole into the wall where you want to secure the unit. Tap wall anchor (A) into the hole. Using long screw (D), secure the 2nd bracket (B) to the wall.
- 3. Insert the safety wall strap (E) through both bracket (B) and tighten. If the strap is not long enough to pass through both brackets and tighten, you will have to reposition the unit, or the wall anchor so it reaches.

