



FLOATING MOUNT

INSTALLATION INSTRUCTIONS


1. MOUNT BRACKET (B) TO WALL STUD, NOTE PLACEMENT OF BRACKET MUST BE 1"-1 1/4" FROM INTENDED FINISH END OF SINK. MOUNT 33" ABOVE FINISHED FLOOR. INSTALLATION OF WALL STUD MAY NEED TO BE COORDINATED TO ALIGN WITH BRACKET (B).
2. MOUNT BRACKET (A) TO INSIDE OF BRACKET (B) WITH BOLTS PROVIDED.
3. SET BRACKETS (D) INTO BRACKETS (A).
4. APPLY 1/2" DABS OF SILICONE SEALANT ON TOP OF BRACKETS (D)
5. SET SINK ON TOP OF BRACKETS (D).
6. USE LEVELING BOLT ON BRACKETS (A) AND LEVEL PROVIDED TO LEVEL SINK. ADJUST LEVELING BOLTS TO ENSURE SINK IS 34" MAX AND 29" MIN ABOVE FINISHED FLOOR.
7. USE BRACKET TIGHTING BOLT TO SECURE BRACKET (D).
8. ADD BRACKET (E) WITH SINKS EXCEEDING 96" IN LENGTH.

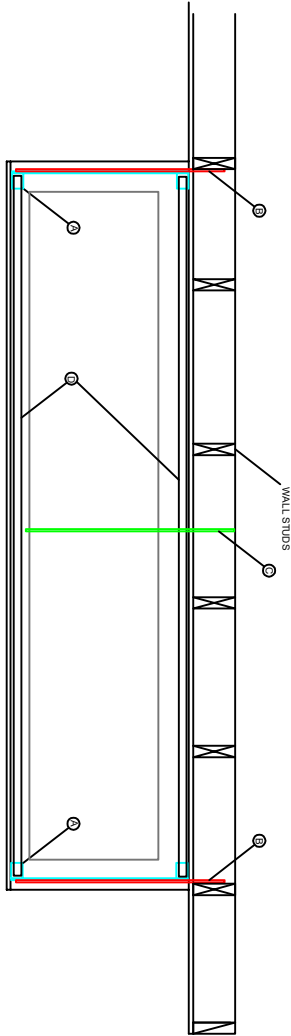

TOP VIEW

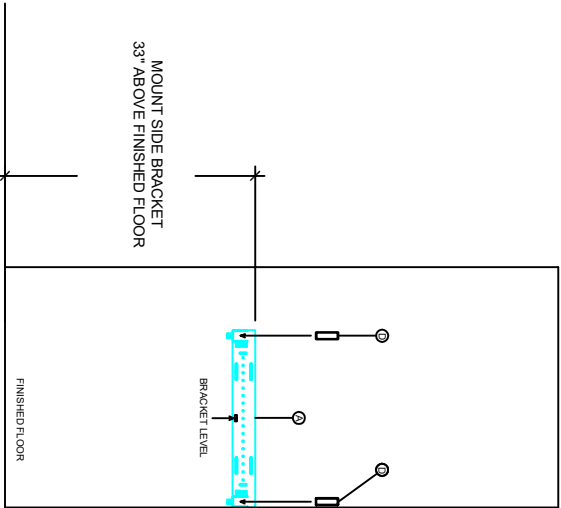

SIDE VIEW

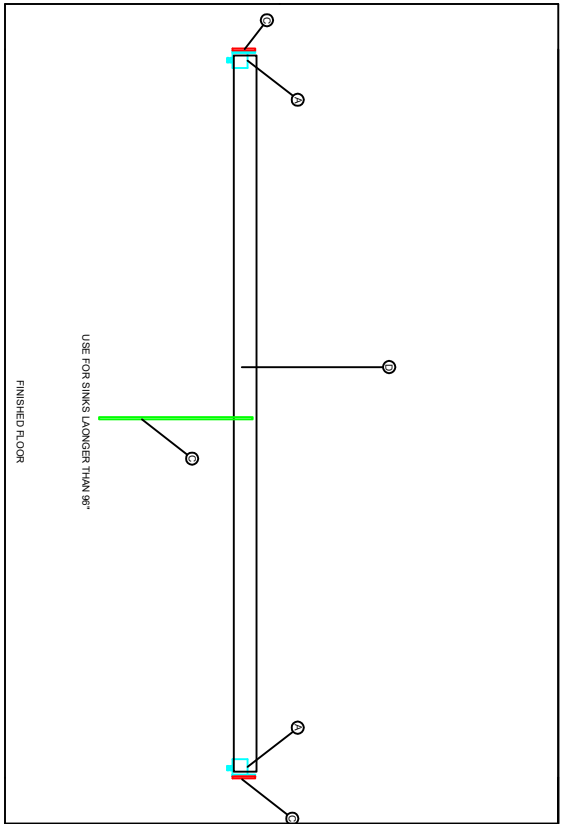

FRONT VIEW