



WALL TO WALL MOUNT

INSTALLATION INSTRUCTIONS


1. MOUNT BRACKET (A) AT 33" ABOVE FINISHED FLOOR. REAR OF BRACKET SHOULD BE WITHIN 1/8" FROM REAR WALL.
2. USE SELF TAPPING SCREWS IF SCREWING INTO STUDS OR STEEL BACKER PLATE. USE ANCHORS AND SCREWS WHEN MOUNTING TO FINISH TILE.
3. SET BRACKETS (D) INTO BRACKETS (A).
4. APPLY 1/2" DABS OF SILICONE SEALANT ON TOP OF BRACKETS (D)
5. SET SINK ON TOP OF BRACKETS (D).
6. USE LEVELING BOLT ON BRACKETS (A) AND LEVEL PROVIDED TO LEVEL SINK. ADJUST LEVELING BOLT TO ENSURE SINK IS 34" MAX AND 29" MIN ABOVE FINISHED FLOOR.
7. USE BRACKET TIGHTING BOLT TO SECURE BRACKET (D).
8. NOTE: SINKS LONGER THAN 96" REQUIRE MOUNTING BRACKET (E) TO IN WALL STUDS AFTER SINK HAS BEEN LEVELED ON BRACKETS (D).

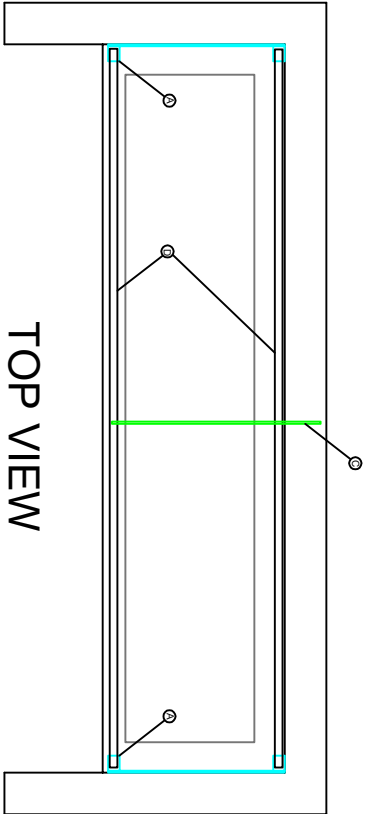

TOP VIEW

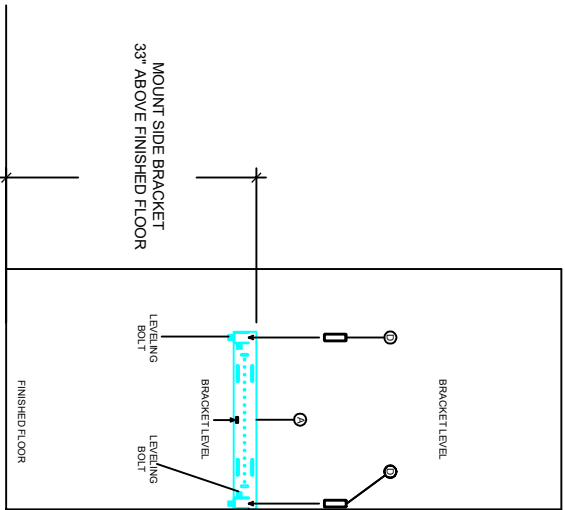

SIDE VIEW

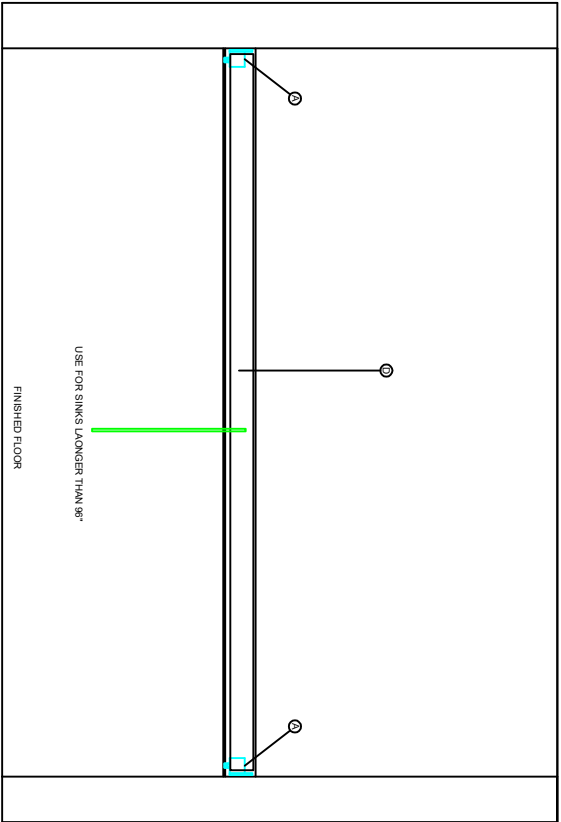

FRONT VIEW