



RECOMMENDED MEASURING GUIDELINE

**** Accurate measurements will ensure your system fits/operates properly ****

Bed length (Inches):

- 1) Place a block of wood against the closed tailgate. (Right)
- 2) Open the tailgate without moving the wood. (Below)
- 3) Measure from the bulkhead to the back of wood that touched tailgate. Make sure the tape does not sit in between the ribs at the bulkhead. (Below right)
- 4) Record this measurement.



Tailgate length (Inches):

- 1) Measure from the front bulkhead to the edge of the opened tailgate. Make sure that the tape measure does not sit in between any ribs at front, which lengthens this measurement.
- 2) Record this measurement.




Bed Height (Inches):

- 1) On level ground, tailgate open, measure from the edge of the tailgate down to the ground.
- 2) Record this measurement.



Tonneau Covers (Inches):

Tonneau covers can/will limit the forward position of the motorcycle, so determine the bed length which the tonneau cover takes away. Using a square, hold it against the back edge of the cover and measure the distance to the front bulkhead.

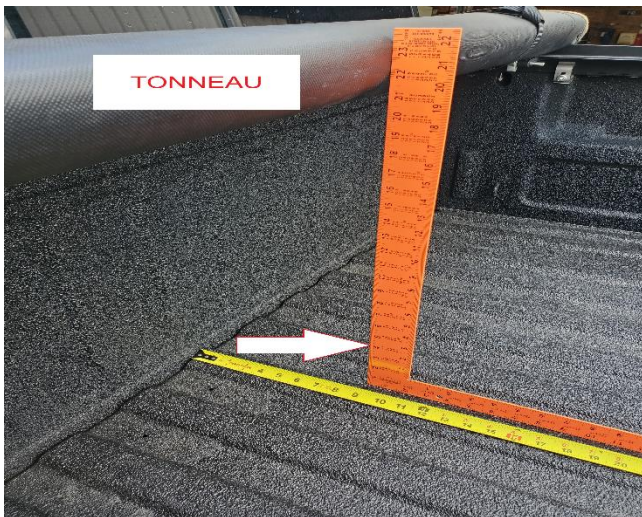

Self-contained tonneau cover storage box: Include the measurement of the height available under the box.

Note: Manufacturers are now producing bulkheads that do not always sit in a vertical orientation, which can change the true bed length. Please make sure to inform UPR if your truck has anything other than a vertical bulkhead.

NOTES:

- ** Measurements need to be accurate to within ¼” (0.25”)
- ** Manufacturer specs will not be accepted (measurements to a 1/10” (0.2, 0.7, etc) as they tend to be inaccurate
- ** Accurate quotes require accurate measurements and UPR will not be responsible for any system which does not fit/operate as expected due to inaccurate measurements