

Imaging Light Use Instructions


The company reserves the right to change product design and specifications, without prior notice



LED Profile Light200W

Monochrome liquid crystal display (LCD) imaging light instructions

1. schematics section

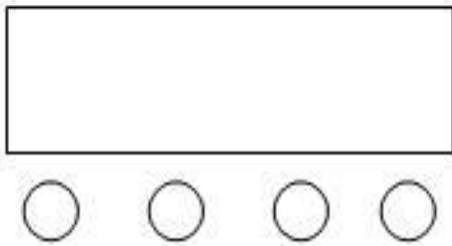

A. MENU

B. DOWN

C. UP

D. ENTER

A B C D

Instructions: according to the function keys A cycle of different function, press B or C can modify the parameter values. Press the D key to confirm.

1、 LCD keypad operation instructions

serial number	MENU	The menu features	Introductions
1	DMX-ADDR	DMX512 address code	Press the up and down key to adjust address

	001	setting 001	code, according to determine the key.
2	R-DIMMER 255	LED brightness control 255	According to the up and down keys to adjust the LED brightness, save according to determine the key.
3	P_STROBE 255	Stroboscopic speed regulation 255	According to up and down keys to adjust stroboscopic speed, according to determine the key
4	DMX-KEEP ON/OFF	DMX signal choice	According to choose whether to keep up and down key, according to determine the key to save.

2. The DMX512 channel

serial number	Function	Introductions
1 channel	Dimmer	(0—255) LED dimming, linear dimming, from dark to bright
2 channel	Strobe	(0—255) Stroboscopic speed adjustment.

In address code state, multimachine connection, without control table, which can realize the master-slave online features, operation of a device, the rest in address d001 state of the host device synchronized with the running program. Through to control if receives the control table, behind the podium display X become V, the address in the state of equipment can be controlled to control.