

# BULLETIN #B034

## Opening the CPA-2 and CPP-2 Motor Unit

*The purpose of this bulletin is to enable you to open the motor unit of your CPA-2 or CPP-2 in order to perform a variety of repair procedures.*


### You will need:

- 1 x Bulletin B009: Removal of the CPA-2 and CPP-2 Motor Unit
- 1 x standard blade screwdriver
- 1 x Phillips® head screwdriver
- 1 x *JOBO Part # 70238 Seal Tape*


### Procedure:

#### 1.0 Removing the Top cover of the Motor Unit

1.1 Remove the 6 screws located around the outer edge of the Motor Unit. If these screws are corroded, replacements can be obtained by ordering part #34116.

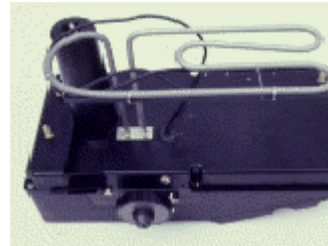

1.2 Remove the sealing tape on the right side of the unit by the rotation motor's cog gear.

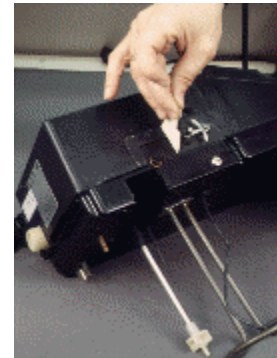


1.3 Stand the unit up so it is sitting on the rear of the Motor Unit and resting on the heating element.

1.4 Remove the switch knobs by pulling them off the Motor Unit.



1.5 If you have a CPP-2 or a CPA-2 and are not using a JOBO Lift, you will need to remove the uppermost screw by the rotation motor shaft.

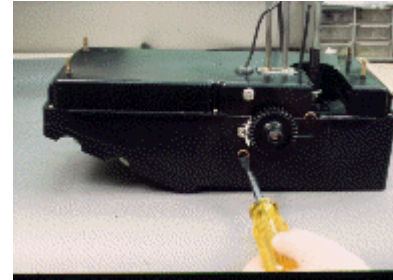

1.6 If you have a CPA-2, there is a long wire that runs from the lower half of the Motor Unit to the lamp located inside the top cover. There is no need to disconnect it.


1.7 **Carefully lift** off the top cover. Be sure you avoid breaking the switches by not putting any stress on any of the switches as you remove the top cover.

## 2.0 Closing the Motor Unit

2.1 Replace the top cover on the Motor Unit being careful not to pinch any wires or break the switches.

2.2 Turn motor unit upside down. Replace the 6 screws to secure the top cover.

2.2 Turn motor unit upside down. Replace the 6 screws to secure the top cover.

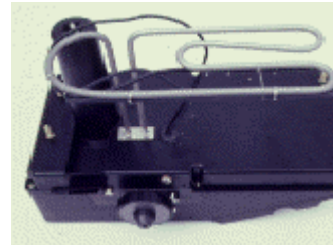

2.3 Put the new sealing tape (*JOBO Part #70232*) on the rotation motor side of the unit.

