

### SWITCHING MOTOR ON/OFF:

#### To switch off:

1. Press and hold the Set button on the motor until the red light flashes 3 times *(please note motor will jog after approx. 2s while holding the set button)*, motor is now switched off

#### To switch on:

1. Press the Set button on the motor until the red light flashes, motor is now switched on

### SETTING MULTIPLE BLINDS ON ONE CHANNEL:

#### If blinds have been pre-programmed already follow these steps:





1. Select the desired channel on the remote
2. Press the set button on the motor until the motor jogs
3. Press the up button on the remote, motor will jog
4. Repeat steps 2 & 3 for all other blinds to be set on this channel  
*(Please note: blinds already set on this channel may react to the press of the up button during step 3)*

#### If blinds are being programmed for the first time follow these steps:

1. Using instructions above switch off all motors that are to be programmed on the same channel, leave just one motor to be programmed switched on
2. Select the desired channel on the remote
3. Follow basic programming instructions for linking remote, checking direction & setting limits
4. On completion of programming, switch blind off as per instruction above
5. Switch on next blind to be set on this channel
6. Repeat steps 3-5, repeat this process for all other blinds to be set on this channel  
*(Please note: Once all blinds have been individually programmed ensure that all motors are switched back on)*

### SWITCHING BETWEEN DOT MOVEMENT AND CONTINUOUS MOVEMENT:

1. Press the Set button on the motor until the motor jogs once
2. Press the stop button on the remote, the motor will jog once
3. Switch between Dot & Continuous movement is complete

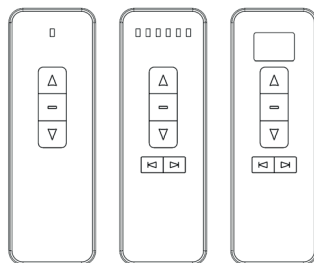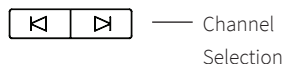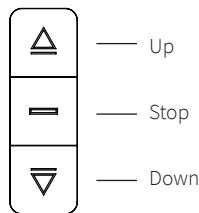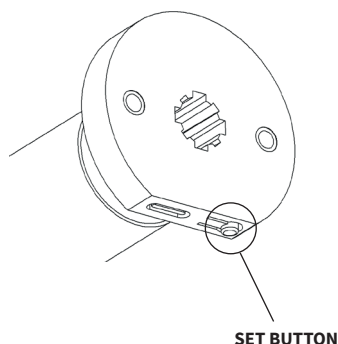

Single  
Channel

Six  
Channel

Sixteen  
Channel

### SETTING ADDITIONAL LIMIT POSITION(S):

*(up to 4 mid limit positions can be set)*

1. Use the Up/Down buttons on the remote to move the blind to the required position
2. Press the Program/Learn button on the back of the remote until the motor jogs
3. Press the Program/Learn button on the back of the remote until the motor jogs, limit position is now set
4. Repeat steps 1-3 for all desired positions

### FINE TUNING PRE-SET LIMIT POSITION(S):

1. Use the remote to move the blind to the pre-set limit position that is to be tuned
2. Press the Program/Learn button on the back of the remote until the motor jogs
3. Use the Up/Down buttons on the remote to fine tune the position
4. With blind in the new desired position, press the Program/Learn button on the back of the remote until the motor jogs. New limit position is now set

### DELETING AN ADDITIONAL LIMIT POSITION(S):

1. Use the remote to move the blind to the limit position that is to be deleted
2. Press and hold the Program/Learn button on the back of the remote for approx. 7s until the motor jogs (please note motor will jog after approx. 1-2s after button is pressed and then jog again after approx. 7s), limit position is deleted

### DELETING A SINGLE CHANNEL FROM MOTOR MEMORY:



*(Please note this will only delete a single pre-programmed channel, this does not remove any limits)*

1. Select the channel on the remote that is to be deleted
2. Press the Set button on the motor until the motor jogs once
3. Press the Program/Learn button on the back of the remote until the motor jogs, channel is now deleted from motor

### ALTERNATIVE MOTOR RESET:

1. Press and hold the Stop button for approx 5s, motor will jog
2. Press and hold the Program/Learn button on the back of the remote for approx. 7s until the motor jogs twice (please note motor will jog after approx. 1-2s after button is pressed and then will jog twice after approx. 7s)

PROGRAM BUTTON

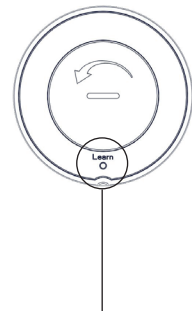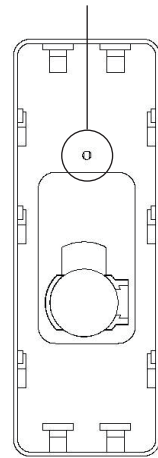

LEARN BUTTON

P  W E R S H A D E

**eclipse®**

Eclipse Blinds Systems Inchinnan Business Park Renfrew Scotland PA4 9RE

**Customer Support: +44 (0)141 814 3500**

**[customerservice@eclipseblinds.co.uk](mailto:customerservice@eclipseblinds.co.uk)**