



2384-B 12 VOLT LOCKOFF FILTER REPLACEMENT INSTRUCTIONS

REPAIR KIT P/N C-286-1794A

All installations, conversions and repairs of LPG equipment must conform to guidelines in NFPA #58, Code of Federal Regulation #40-CFR-86 and Canada CGA-B-149.2 M86, Propane Installation Code.


INSTRUCTIONS

1. Turn off service valve on LPG fuel tank.
2. Start engine and idle until it depletes all fuel in hoses. When engine stalls, try to restart to ensure depletion of fuel.
3. Disconnect Battery.
4. Carefully relieve fuel pressure in the LP Fuel line leading to and from the lockoff filter.
5. Remove lockoff filter from the vehicle.
6. Scribe or pencil in alignment marks from the inlet cover to the outlet cover.
7. Remove the six inlet cover screws. Hold the cover down while removing the last screw and remove the cover slowly.
8. Discard the filter and o-ring.
9. Clean and inspect the o-ring groove and inlet cover mating surface.
10. Lightly Lubricate the new o-ring and install into inlet body groove.
11. Install the filter into outlet cover. Be certain the o-ring is not folded over, cut or pinched before proceeding to the next step.
12. Align top cover and outlet cover scribe marks and secure with screws. PLEASE NOTE: When tightening screws, use a cross pattern sequence (tighten screws 1+7, 9+3, 5+11) and torque to 25-35 inch pounds.
13. Install lockoff filter on vehicle. Torque mounting nut to 38-42 foot pounds.
14. Connect inlet and outlet hoses. Be sure to use pipe sealant or Teflon tape on all pipe threads.
15. Slowly turn on LPG tank service valve.
16. Leak test all connections and screws.
17. Connect battery and start engine.

****Included in Repair Kit
P/N C-286-1794A***

C-44-253 (O-Ring)

C-44-504 (Filter)

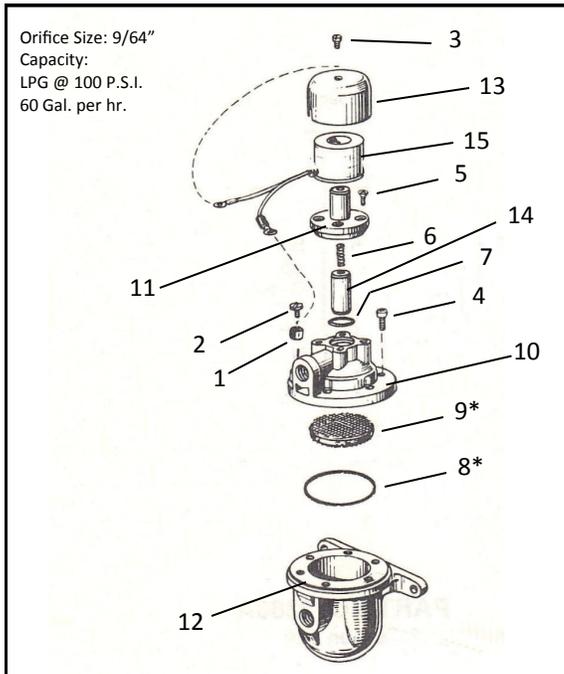

Orifice Size: 9/64"
Capacity:
LPG @ 100 P.S.I.
60 Gal. per hr.

1.	C-11-66	Insert-Terminal
2.	C-15-285	Screw- 8-32 x 5/16"
3.	C-15A-349	Screw- 10-24 x 1/4"
4.	C-15B-443	Screw- 10-24 x 9/16" (6)
5.	C-15A-351	Screw- 10-24 x 1/2" (4)
6.	C-24A-215	Spring- Plunger
7.	C-44-147	O-Ring- Plunger Housing
8.	C-44-253	*O-Ring- Filter Bowl
9.	C-44-504	*Filter Pack Assy.
10.	C-91B-53-MA	Cover Assy.
11.	C-154-526A	Plunger Housing Assembly
12.	C-159-85-MA	Bowl
13.	C-184-79	Cap- Fuellock
14.	C-194-728	Plunger Assembly
15.	C-323-526	Coil Assy., 12 Volt