



WARNING:
DO NOT connect earth ground to any of the battery terminals. Doing so will damage the potentiometer. Connect ground only as shown.

Top View

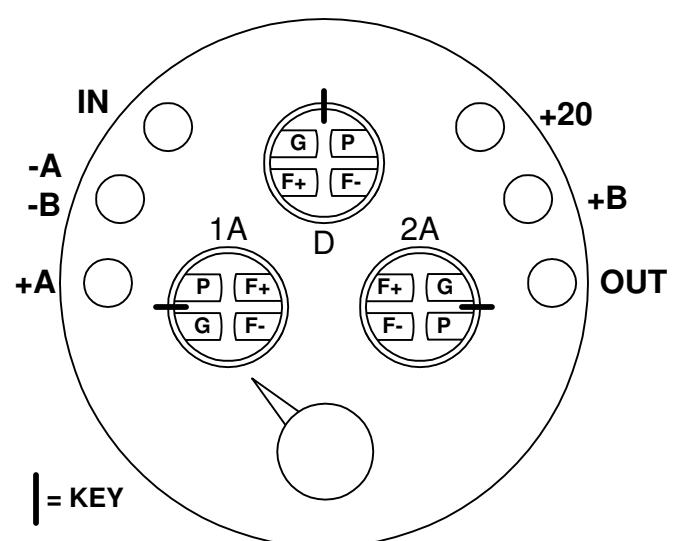

NOTE: The black & red wires are heavier gauge than the others.

Battery Connections

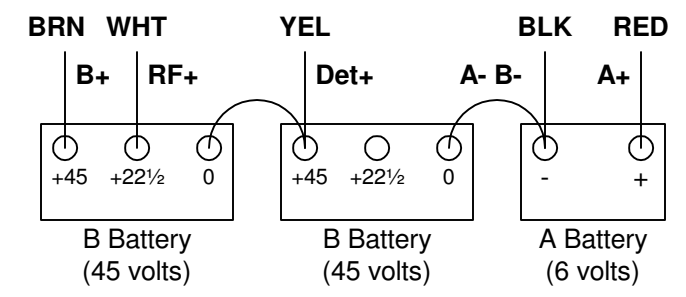

Notes:
 1) A 200A may be used for the Detector (D).
 2) This radio uses 201A tubes with 5 volt 1/4 amp filaments. Non-suffix 201 tubes cannot be used.

This schematic is 11" x 17".

PRELIMINARY
 The information presented is believed to be correct. However, it is subject to revision at any time.

REV	DATE	DESCRIPTION
REVISIONS		

This schematic covers models: 10B 4550 (brown paint) 10B 4560 (black paint)		W3NLB		(c) 2005-2011 W3NLB All Rights Reserved	
Atwater Kent Model 10B 4550 & 4560					
Schematic and Wiring Diagram					
Drawn by: Leigh Bassett W3NLB	FSCM NO	DWG NO AK04552SCH	REV O		
Date: 15 Feb 2011	SCALE	SHEET		1 OF 1	