

Make it E

1-877-433-5733 www.ezspotur.com





DOUBLE CLAMP POLE JACK EZ-DCPJ-001





SAFETY FEATURES



DECAL SAFETY
All units have pictorial and written caution decals





HOSE SAFETY


CONNECTION SAFETY


Quick attach plate has gusset on top for extra support

Quick attach plate has doublers at the pin holes to insure they will not tear out.

QUICK ATTACH GUSSET

DOUBLERS

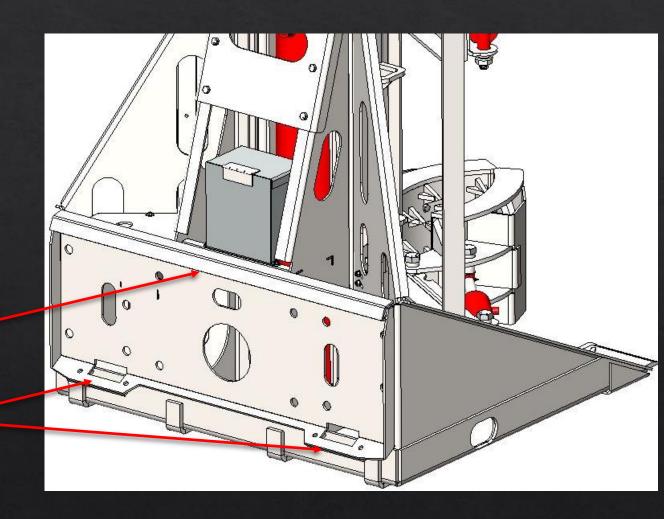

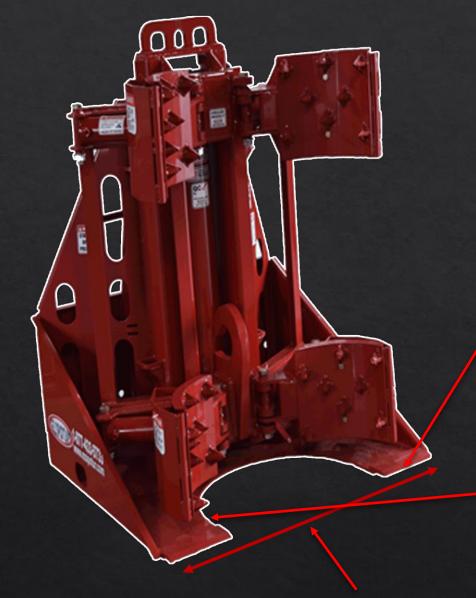



<u>Cutting Edge</u> on the Bottom of the Pole Jack cuts through dirt mound at base of pole to ensure access to the pole


Reinforced Opening in base adds extraintegrity to attachment

Width of base is 48.75 inches which provides a stable platform for pulling poles


DOUBLE CLAMP POLE JACK

- Pull Utility Poles Up to 100 Feet in Length
- Pull Poles from the Ground in Minutes
- One man operation allows for Smaller Crew



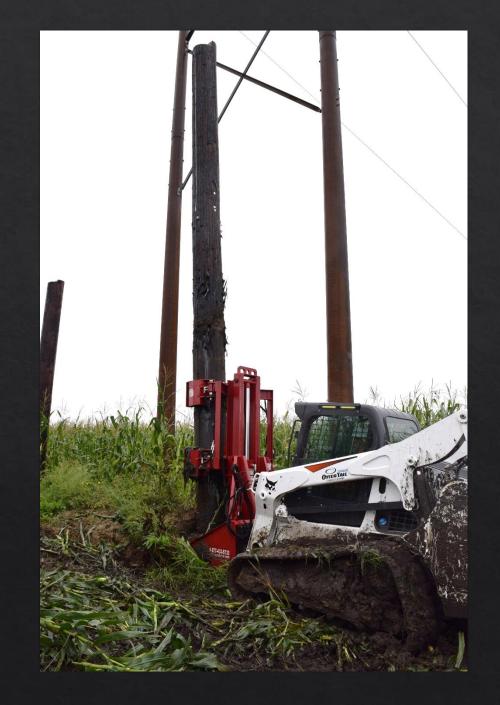



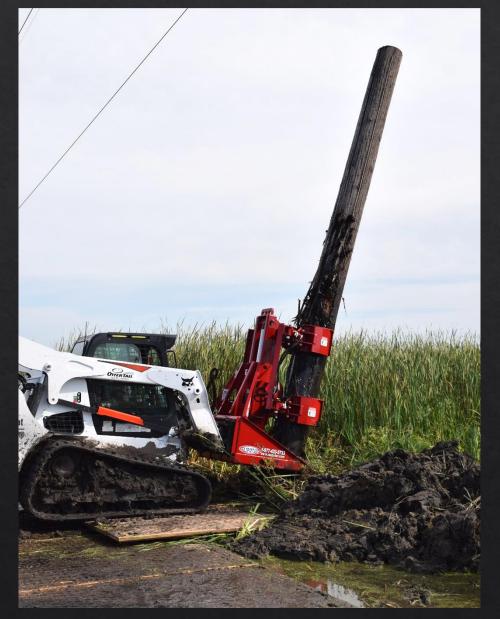


CHAIN HOOK

CHAIN HOOK

- Allows for chain to be wrapped around the pole for added grip
- Use a 3/4" Grade 100 Chain




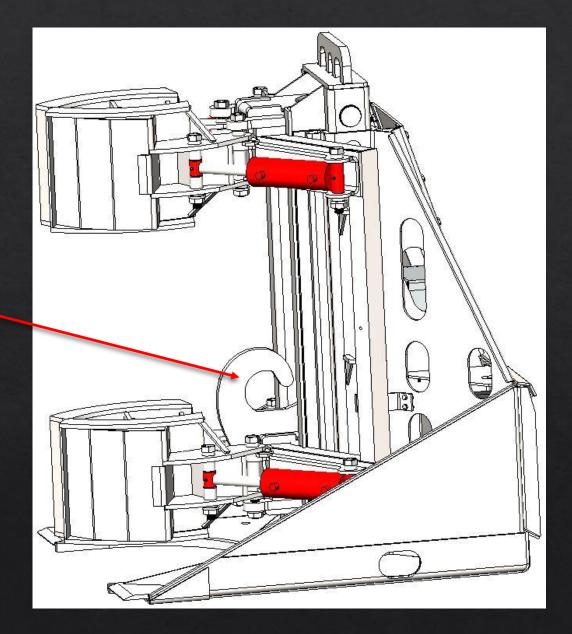


Clamp Specifications

1. CLAMP CYLINDERS

- 3"x6" CLAMP CYLINDERS
- Break out force of 21,206 lbs
- Grips pole securely

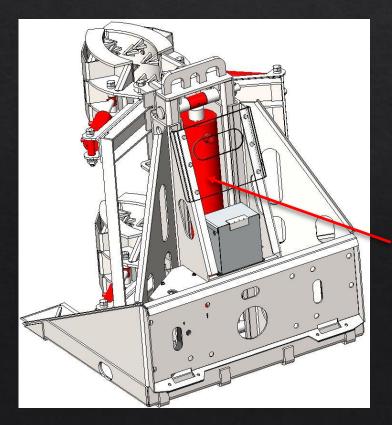


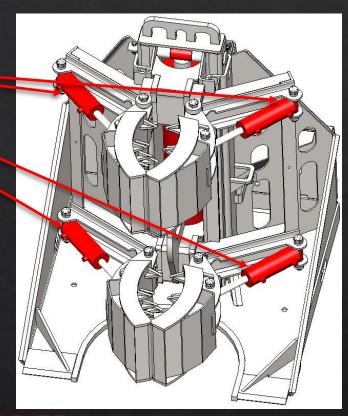

2. EXTRACTION CYLINDER

- 7"X36" EXTRACTION CYLINDER
- Break out force of 115,453 lbs
- Extracts pole from the ground



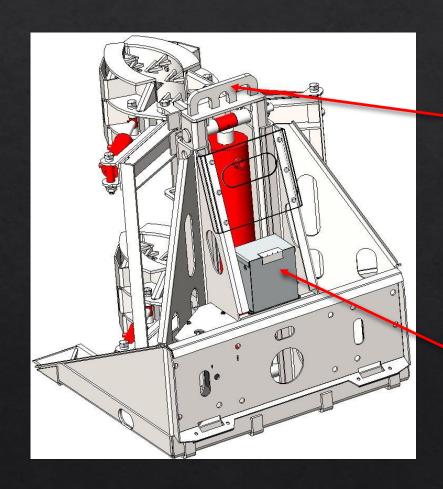

LIFTING POINT FOR PLACING POLE JACK WITH A DIGGER DERRICK TRUCK

OPTIONAL BATTERY BOX WITH RADIO TRANSMITTER FOR USE WITH A DIGGER DERRICK TRUCK


Product Specifications

- Universal Quick Tach' mounting system.
- Can be adapted to fit excavators, wheel loaders, telehandlers, and backhoes.
- Extracts poles up to 100 feet in length with one man operation.
- 2,500 lbs. attachment weight.
- 7,000 weight capacity
- Jaws open from 31 inches down to 2.7 inches.





Product Specifications

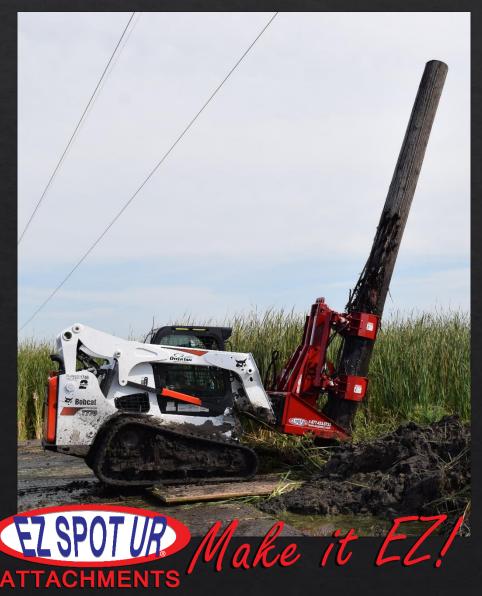


- 1 7/16" 4140 pins for extraction cylinder
- 60,200 psi yield strength
- Composed of Grade 80 material or higher
- Core welded to withstand years of wear and tear.
- Comes complete with ¾" flush face couplers
- Spring hose mount included.
- Wiring harness included.

Important Tips

- Pole Jack is strictly used for pulling poles and not handling poles.
- •A Digger Derrick or other equipment is required to handle and control the pole when it is out of the ground.
- •The base plate should never leave the ground when pulling poles
- The base of the Double Clamp Pole Jack needs to be as flat as possible on the ground
- •The jaws of the Double Clamp Pole Jack should be parallel to the pole



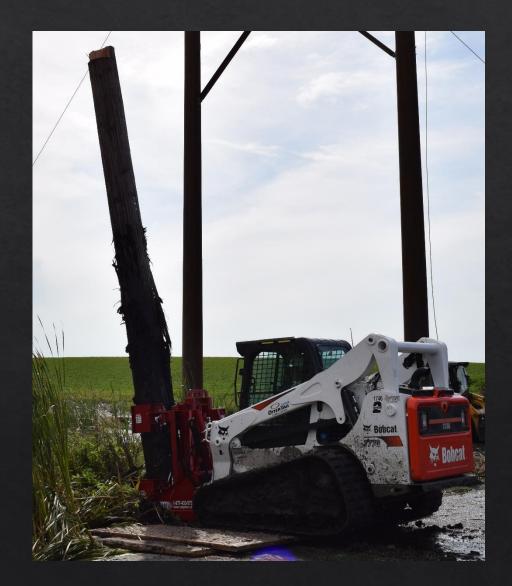

DOUBLE CLAMP POLE JACK VIDEO



