

KUKJE Branson 3520H(US)_EN Branson Tractor

Parts Catalogue



BRANSON TRACTOR

CONTENTS

GROUP NO	GROUP NAME	PAGE
C000	20H(US)_EN [2016~]	6
C001-1	LEVER ACCELERATOR	8
C001-2	LEVER ACCELERATOR	10
C002-1	STEERING COLUMN	12
C002-2	STEERING COLUMN	14
C004A-1	Front_Axle_Bracket	16
C004A-2	FRONT AXLE BRACKET	18
C009-1	Center_Pin_Support	20
C009-2	CENTER PIN SUPPORTER(2018.05)	22
C010A	Tie_Rod	24
C012A	Ring_Gear_Differential_Gear	26
C015	PROPELLER_SHAFT	28
C019-1	Gear_Case_Front_Axle	30
C019-2	GEAR CASE, FRONT AXLE	32
C020A-1	Spacer-20(DELETED PAGE)	34
C020T-2	Spacer	36
C024A	FRONT WHEEL & TIRE	38
C032	P.S.T_Cylinder	40
C034A-2	P.S.T PIPE	42
C036A	FLY WHEEL HOUSING	44
C038-1	PTO DAMPER	46
C038-2	PTO DAMPER	48
C039A-1	HYD SHIFT TRANSMISSION HOUSING	50
C039A-2	HST HOUSING	52
C039A-3	HST HOUSING	54
C040	HYD SHIFT TRANSMISSION GEAR	56
C041A-1	HST PEDAL	58
C043-1	FRONT DRIVE & RANGE SHIFT GEAR	60
C043-2	FRONT DRIVE & RANGE SHIFT GEAR	62
C044	FRONT_DRIVE_RANGE_SHIFT_LEVER	64
C045-1	GearINDPTOSpeedChange	66
C045-2	GEAR, IND PTO SPEED CHANGE	69
C046-1	Rear Axle Case PTO Shift	72
C046-2	REAR AXLE CASE, PTO SHIFT	74
C046-3	REAR AXLE CASE, PTO SHIFT(2019.12~)	76

GROUP NO	GROUP NAME	PAGE
C047	LeverAss'yPTOSpeedChange	78
C048-1	HousingRearAxle	80
C048-2	HOUSING, REAR AXLE	82
C049	DRIVING PART, REAR AXLE	84
C049-2	DRIVING PART, REAR AXLE(2016.06.08)	87
C049-3	DRIVING PART, REAR AXLE(2016.10)	89
C049-4	DRIVING PART, REAR AXLE(2019.12~)	91
C050A-1	Brake	93
C050T-2	BRAKE	95
C053-1	BRAKE PEDAL	97
C053-2	BRAKE PEDAL(2019.12~)	99
C054	SUPPORT, BRAKE	101
C055	PARKING BRAKE	103
C099A	HYD PUMP	105
C101-1	CASE, HYD CYLINDER	107
C101-2	CASE, HYD CYLINDER(2016.10)	109
C101-3	CASE, HYD CYLINDER	111
C102-1	IND PTO SUPPPT(2016.10)	113
C102-2	IND PTO SUPPPT	115
C104-1	PistonAssembly	117
C104-2	PISTON ASS'Y	119
C108	SaftyValve	121
C109-1	STOP VALVE	123
C111.1	HYDControlPositionType	125
C111.2	HYD CONTROL POSITION TYPE	127
C113	DraftControl	129
C114A-1	HYD PIPING	131
C114A-2	HYD PIPING	133
C115-1	OIL COOLER	135
C115-2	OIL COOLER	137
C118-1	HYD FILTER	139
C118-2	HYD FILTER(16.04.06)	141
C119	ELE'C WIRING	143
C119-2	ELE'C WIRING(2015.06)_Tier 4	145
C124-2	BATTERY(2016.10)	147

GROUP NO	GROUP NAME	PAGE
C124-3	BATTERY(2019.12~)	149
C125-1	SWITCH	151
C125-2	SWITCH(2018~)	153
C131	Horn	155
C132-1	Lamp	157
C132-2	Lamp(2019.12~)	159
C134-1	Meter_Assembly	161
C134-2	Meter_Assembly(2019.12~)	163
C135-1	Bonnet	165
C135-2	BONNET(201806~)	167
C136A	Bonnet_Support	169
C137	Dash_Board	171
C138-1	FENDER	173
C138-2	FENDER(2016.10)	175
C139	FOOT_REST_ASSY	177
C140	Seat	179
C141-1	FUEL TANK	181
C141-2	FUEL TANK(2016.04.06)	183
C141A-3	FUEL TANK	185
C144A	NAME_PLATE-3520H_EN	187
C144B	NAME_PLATE-4020H_EN	189
C146-1	Top_Link_Lift_Link_	191
C146-2	TOP LINK, LIFT LINK	193
C150A	LOWER LINK	195
C152	DRAWBAR HITCH	197
C158	Safety_Frame_Assembly	199
C160	Front_Weight	201
C161A-1	ENGINE SUB-3520H	203
C161A-2	ENGINE SUB(2016.10)-3520H	205
C161A-3	ENGINE SUB	207
C191-1	4PORT ASS'Y	209
E001	CYLINDER BLOCK	211
E002	GEAR CASE	213
E003	MOUNTING FLANGE & OIL PAN	215
E004	CYLINDER HEAD & HEAD COVER	217

[illegible]

FIG C000 Branson 3520H(US) _EN	20H(US)_EN [2016~]	Year/Month 2020/02
 CHASSIS  ENGINE		

FIG C001-1

Branson 3520H(US)
_EN

LEVER ACCELERATOR

Year/Month

2020/02

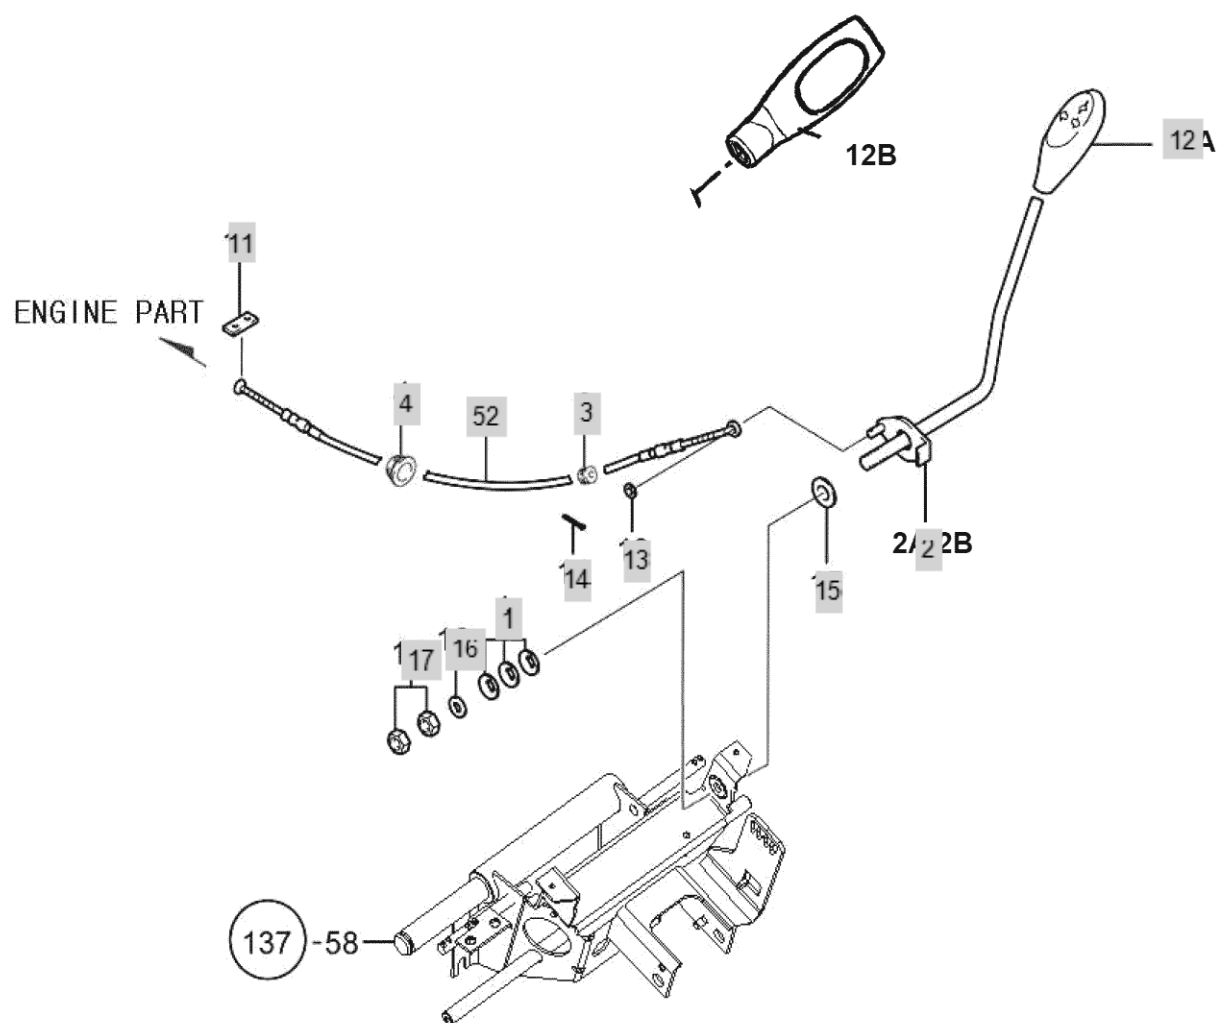



FIG C001-2

Branson 3520H(US)
_EN

LEVER ACCELERATOR

Year/Month

2020/02

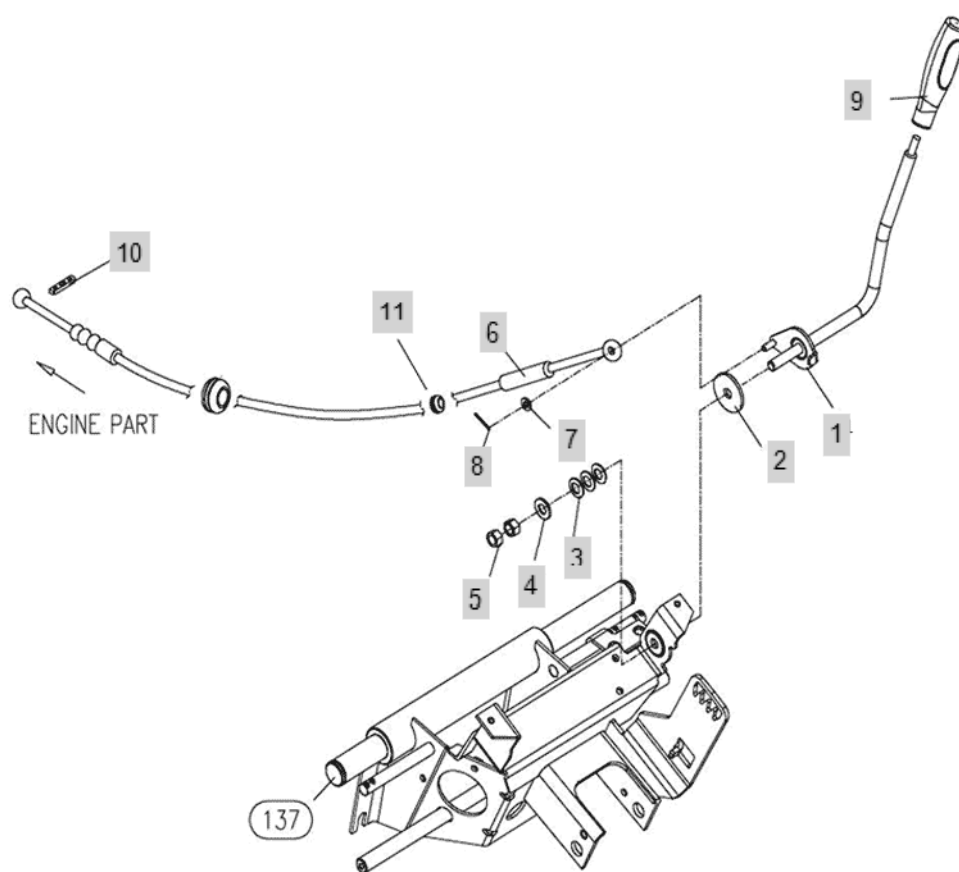

[illegible]

FIG C002-1

Branson 3520H(US)
_EN

STEERING COLUMN

Year/Month

2020/02

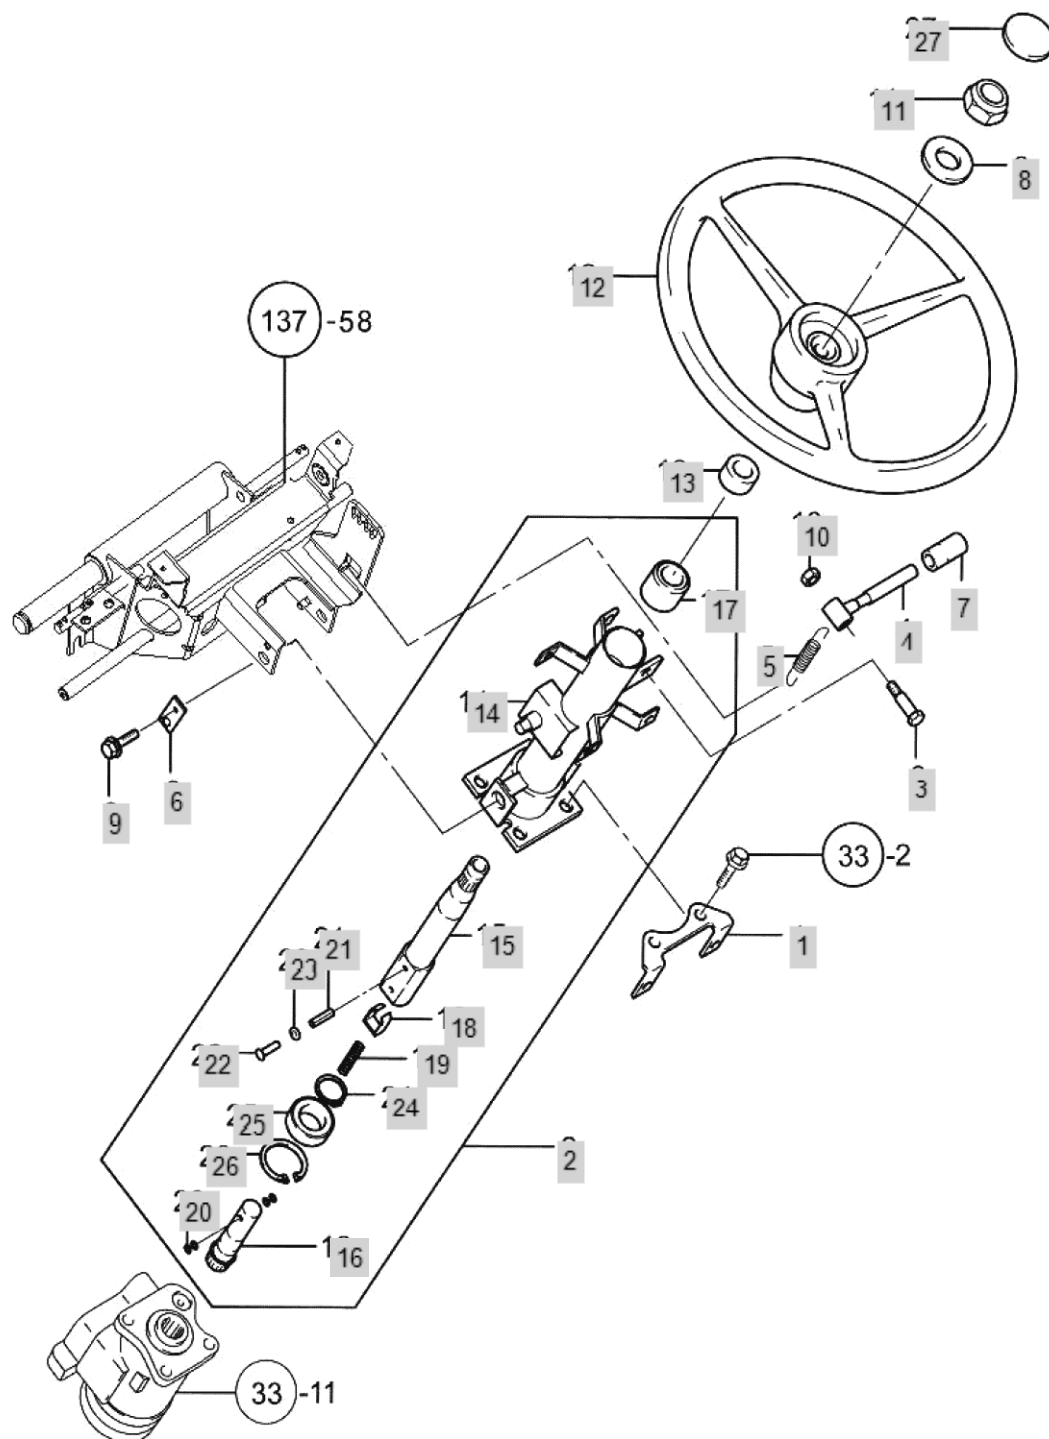



FIG C002-2

Branson 3520H(US)
_EN

STEERING COLUMN

Year/Month

2020/02

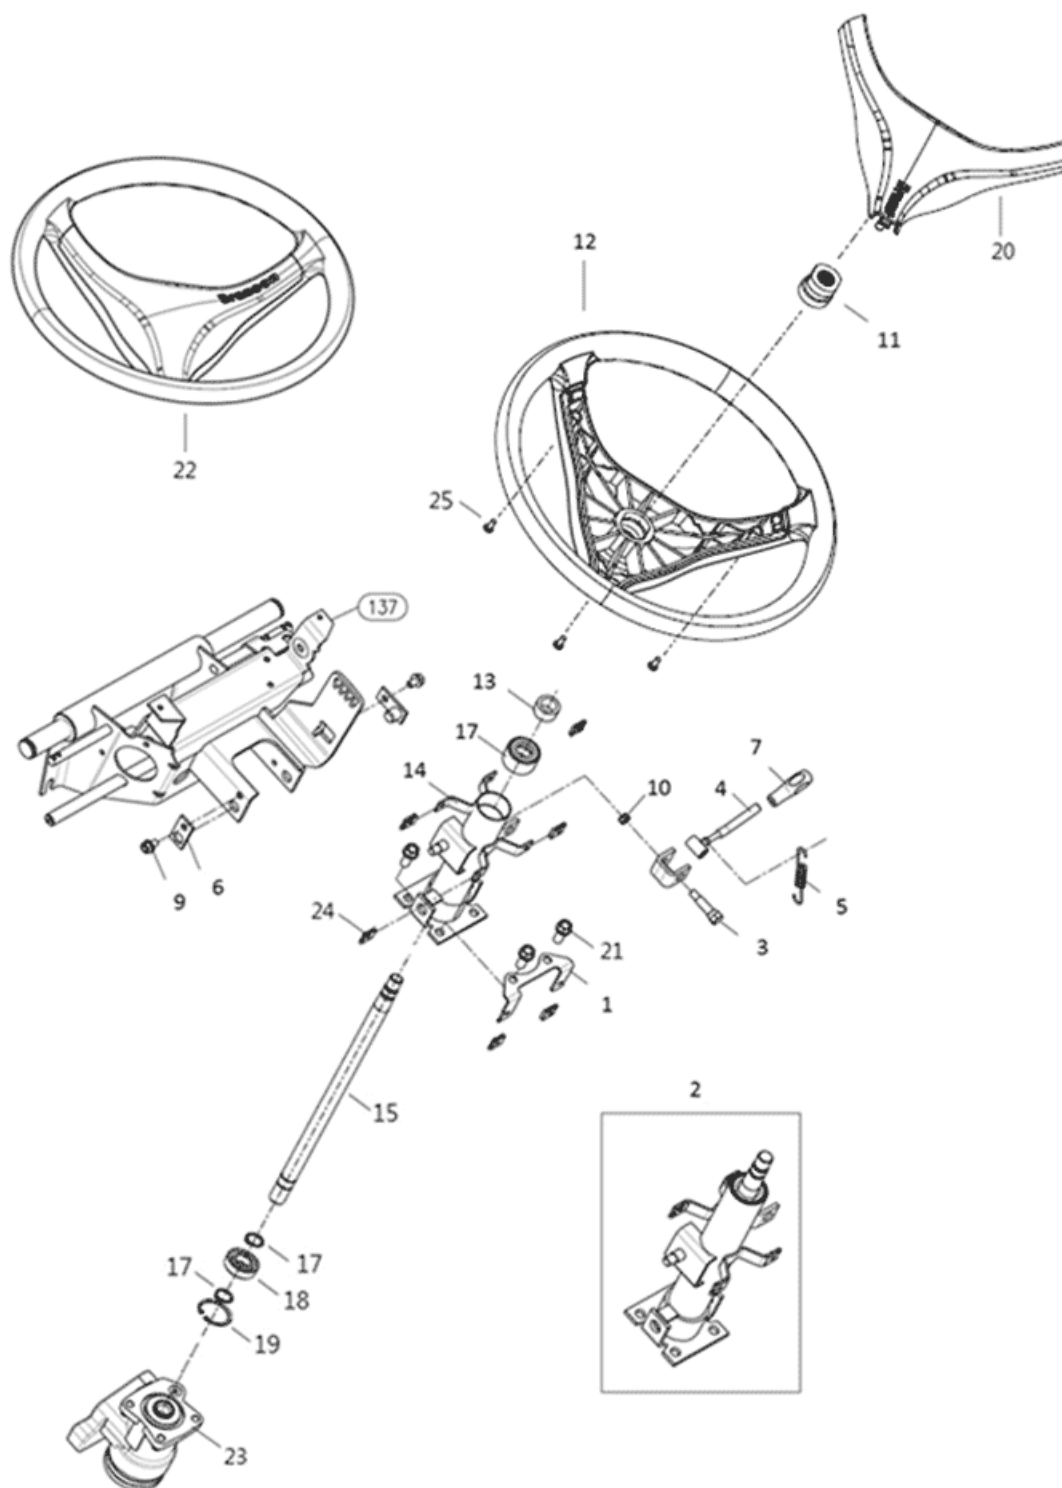

[illegible]


FIG C004A-1

Branson 3520H(US)
_EN

Front_Axle_Bracket

Year/Month

2020/02

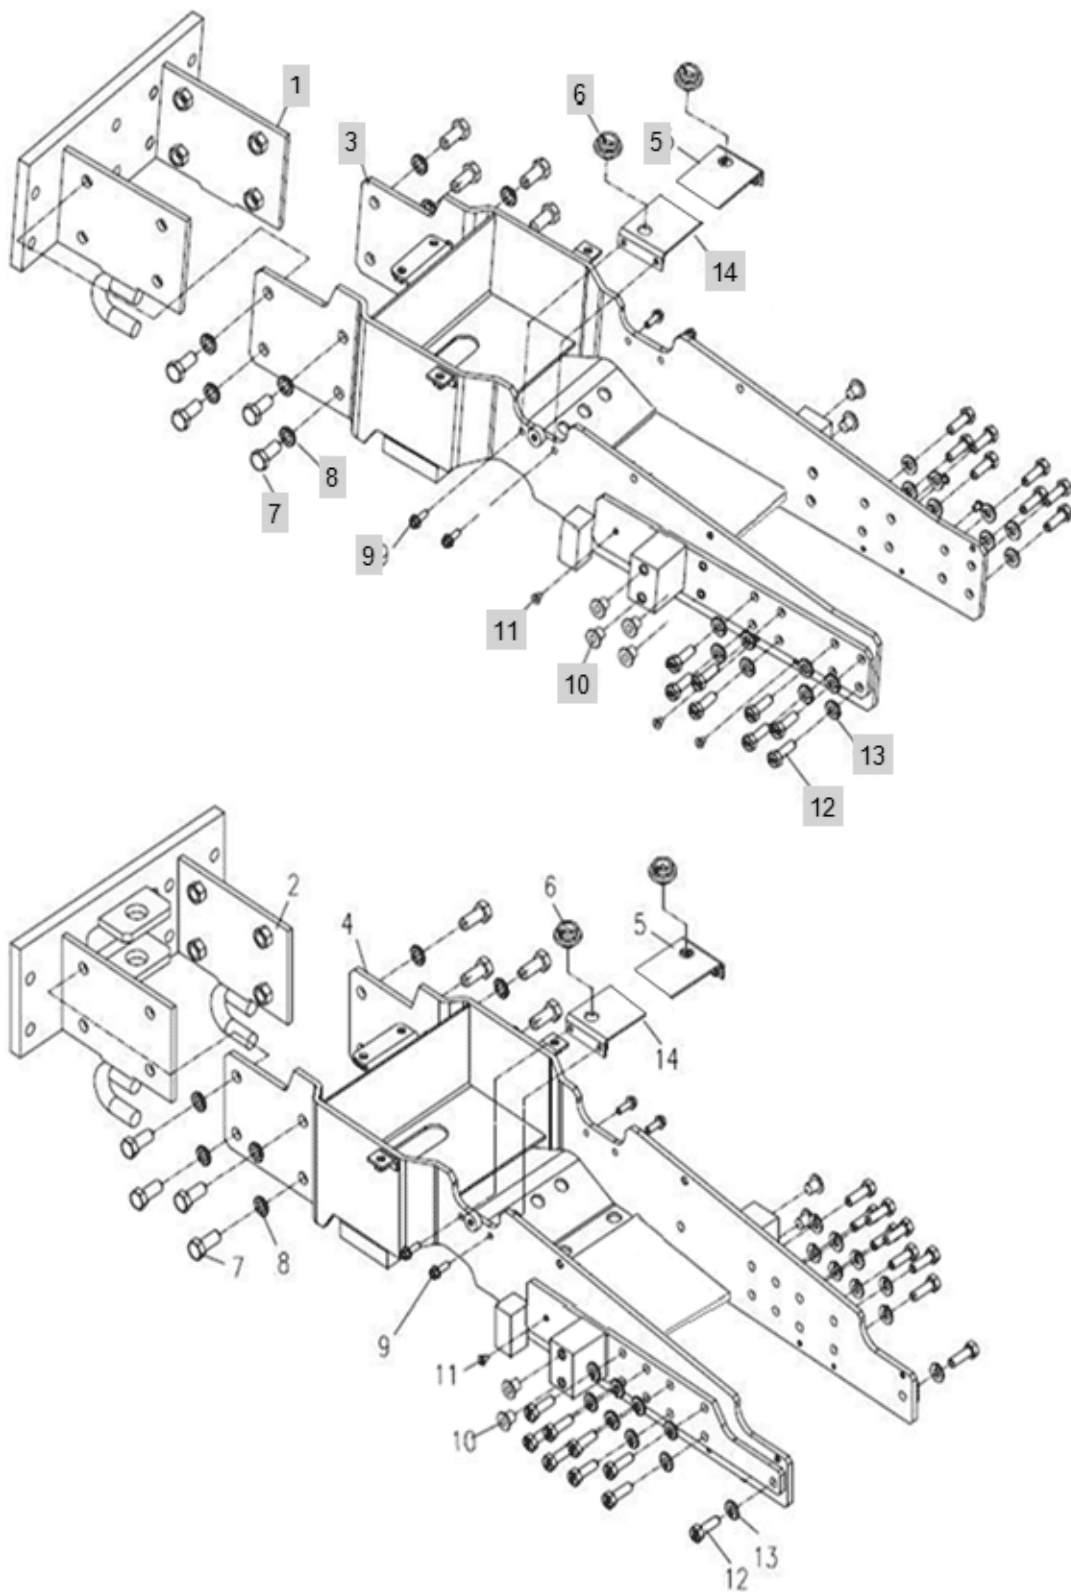

[illegible]


FIG C004A-2

Branson 3520H(US)
_EN

FRONT AXLE BRACKET

Year/Month

2020/02

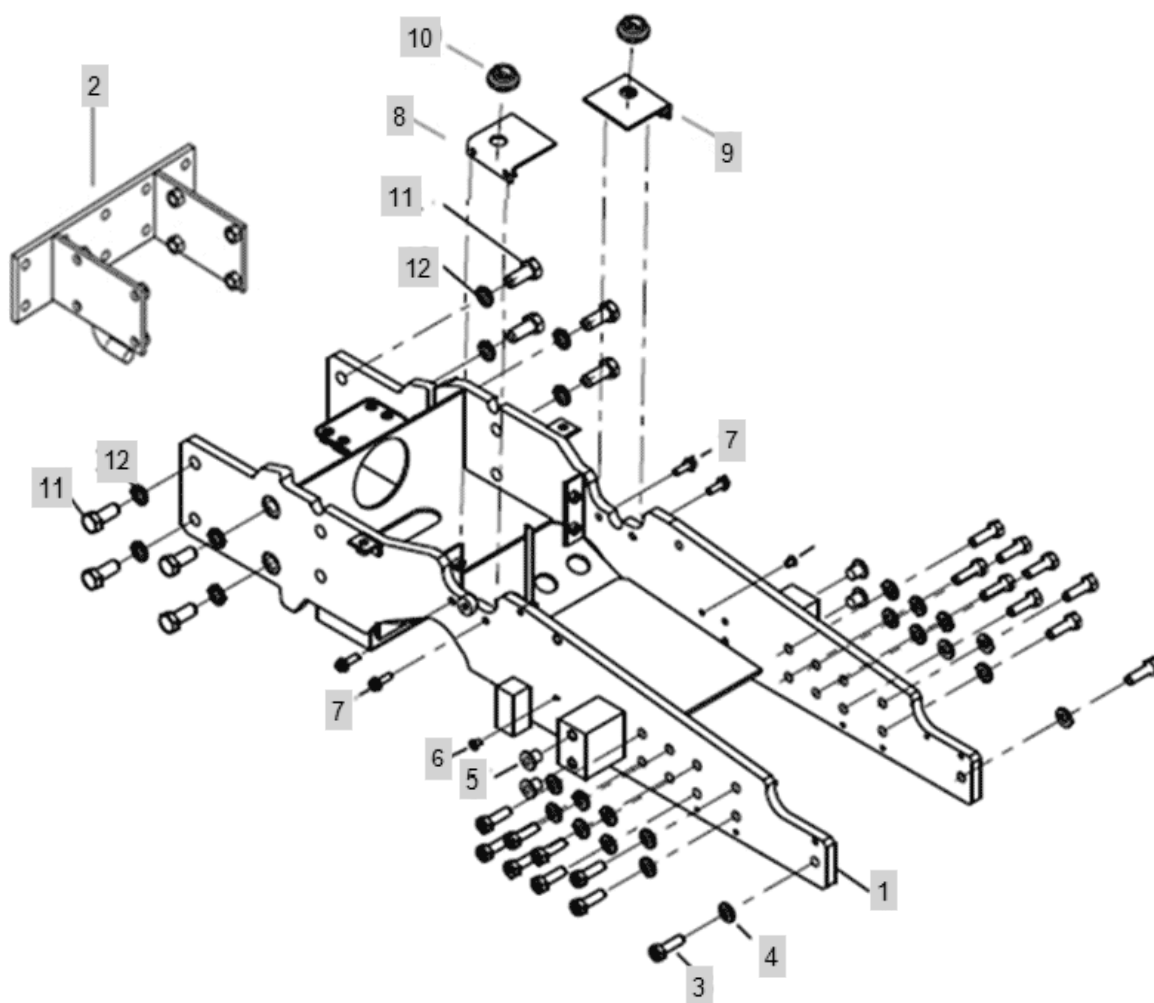

[illegible]

FIG C009-1

Branson 3520H(US)
_EN

Center_Pin_Support

Year/Month

2020/02

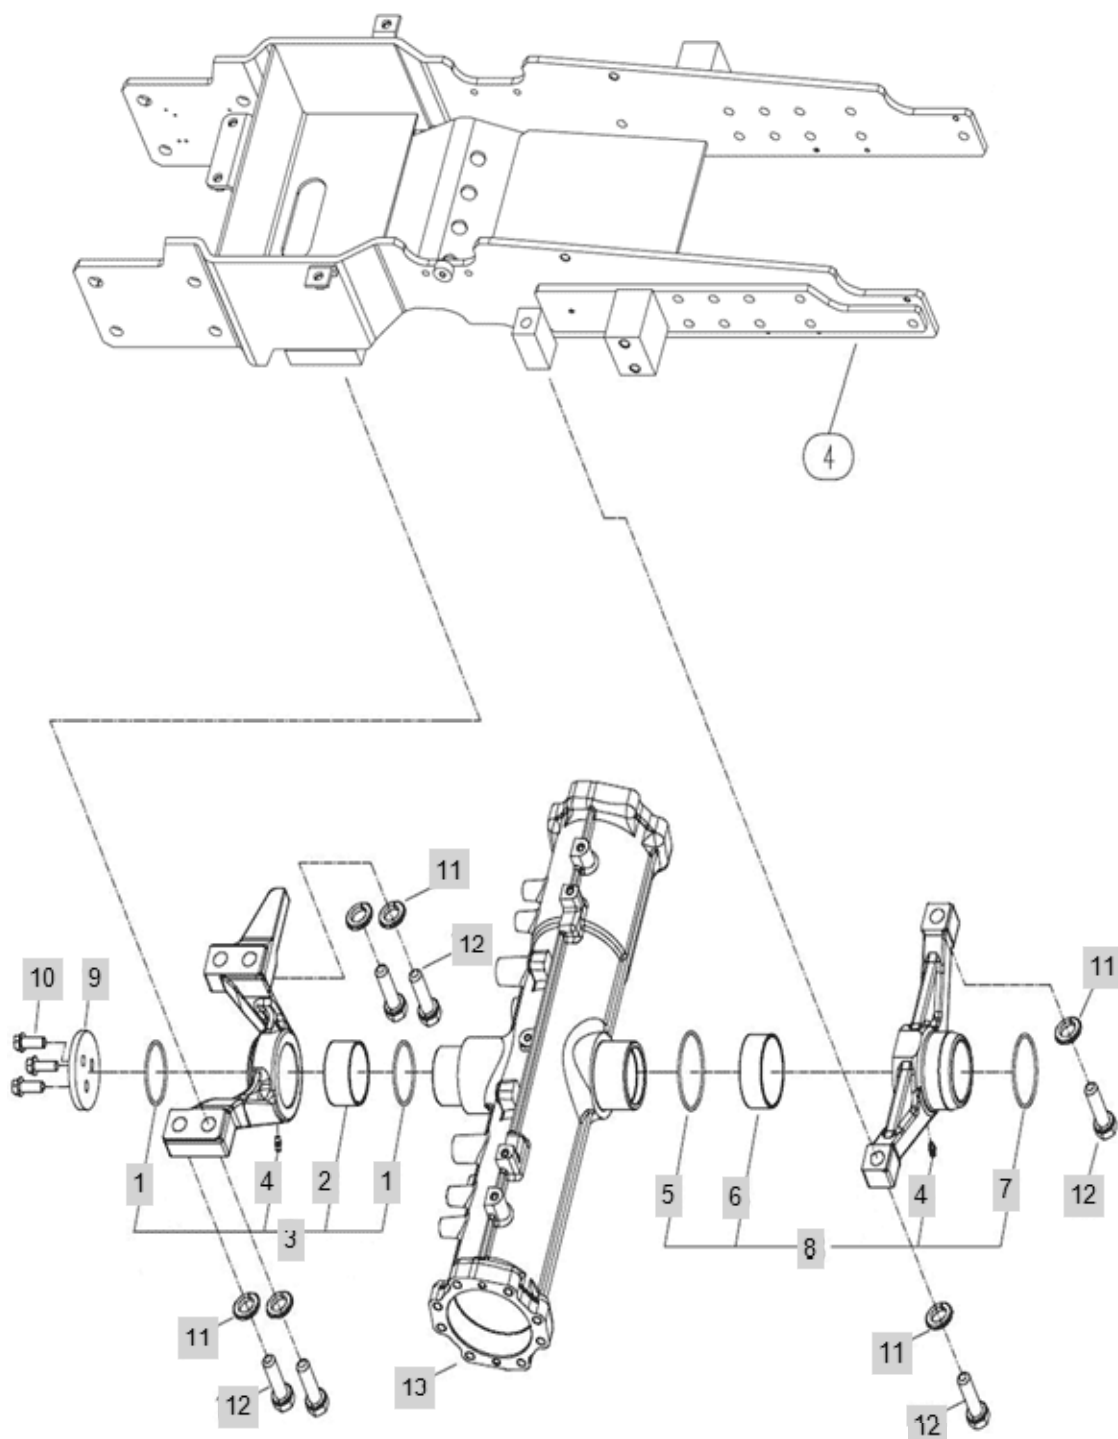


FIG C009-2

Branson 3520H(US)
_EN

CENTER PIN SUPPORTER(2018.05)

Year/Month

2020/02

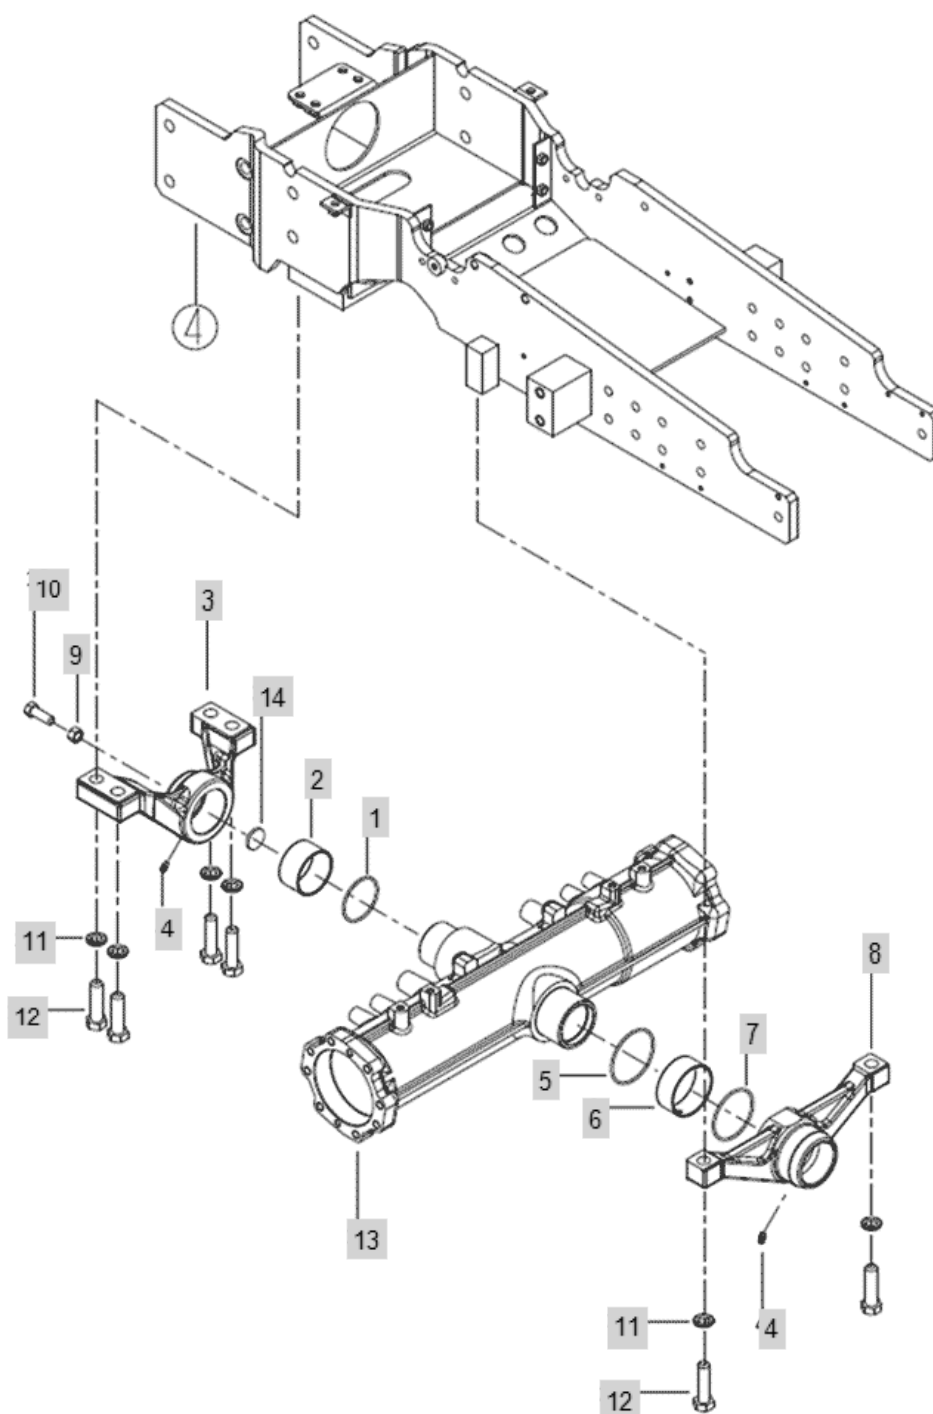


FIG C010A

Branson 3520H(US)
_EN

Tie_Rod

Year/Month

2020/02

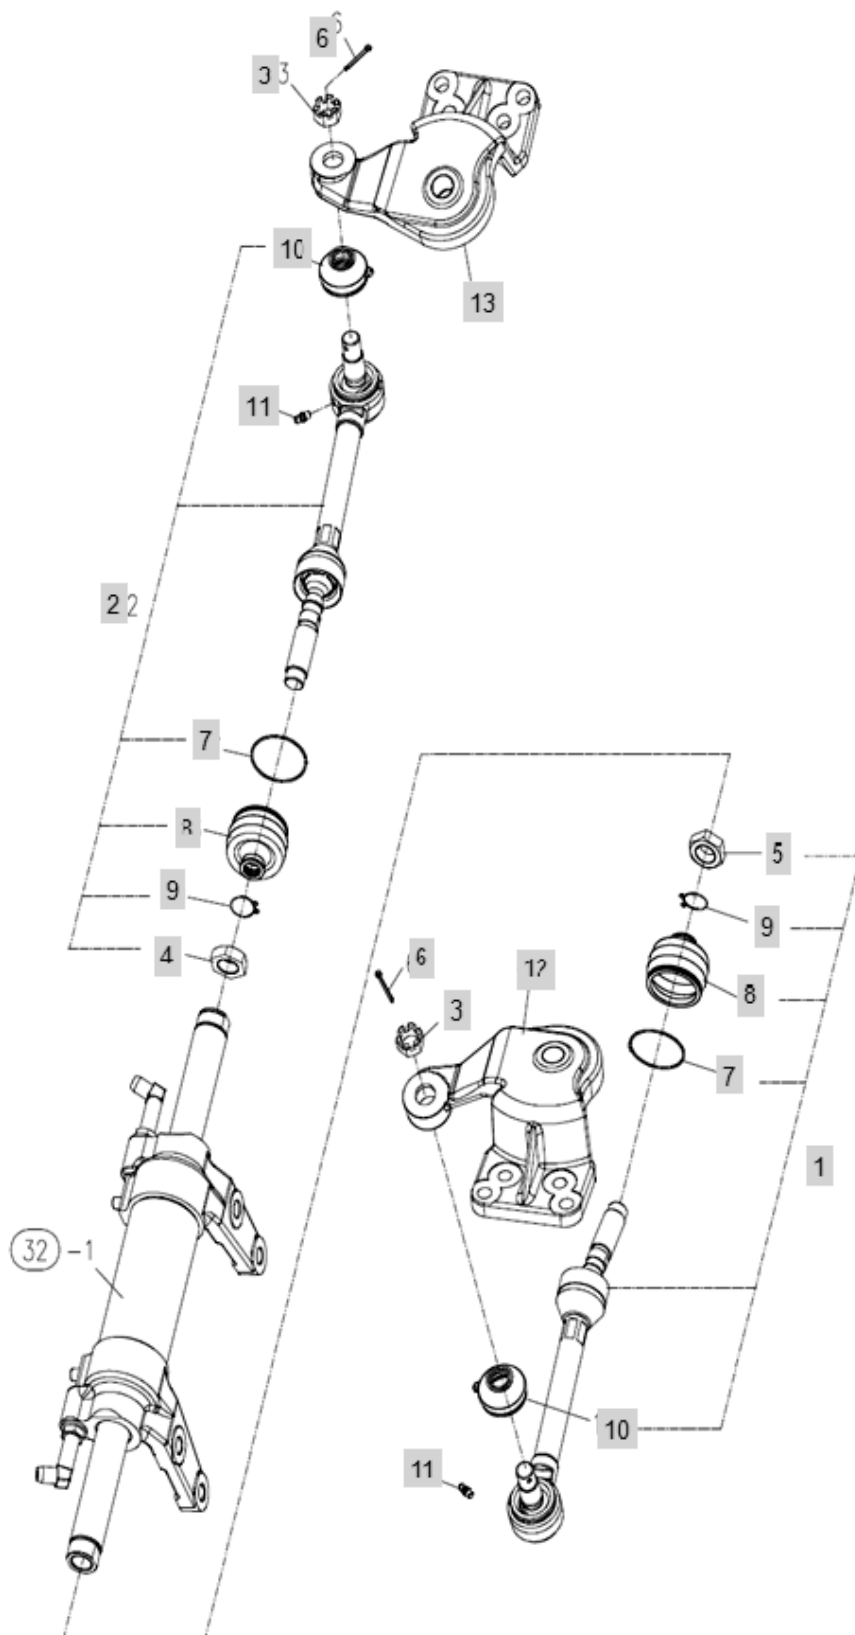


FIG C012A

Branson 3520H(US)
_EN

Ring_Gear_Differential_Gear

Year/Month

2020/02

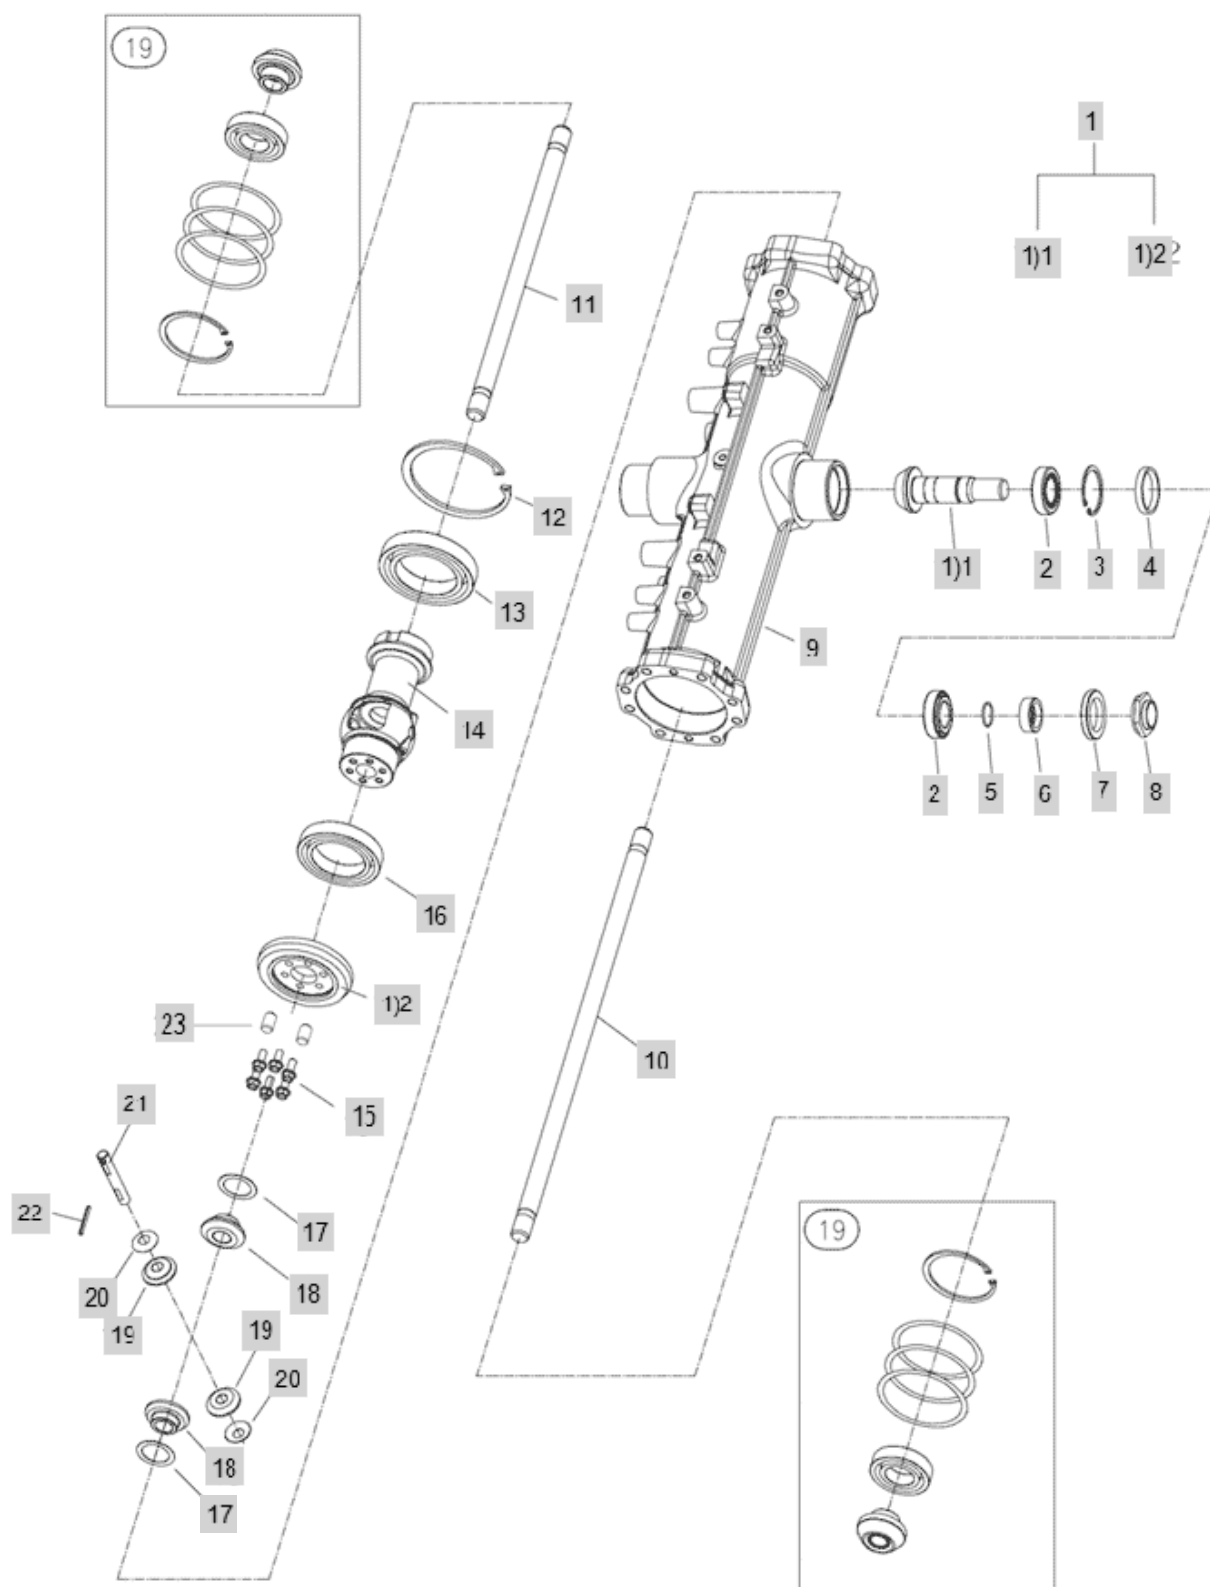



FIG C015

Branson 3520H(US)
_EN

PROPELLER_SHAFT

Year/Month

2020/02

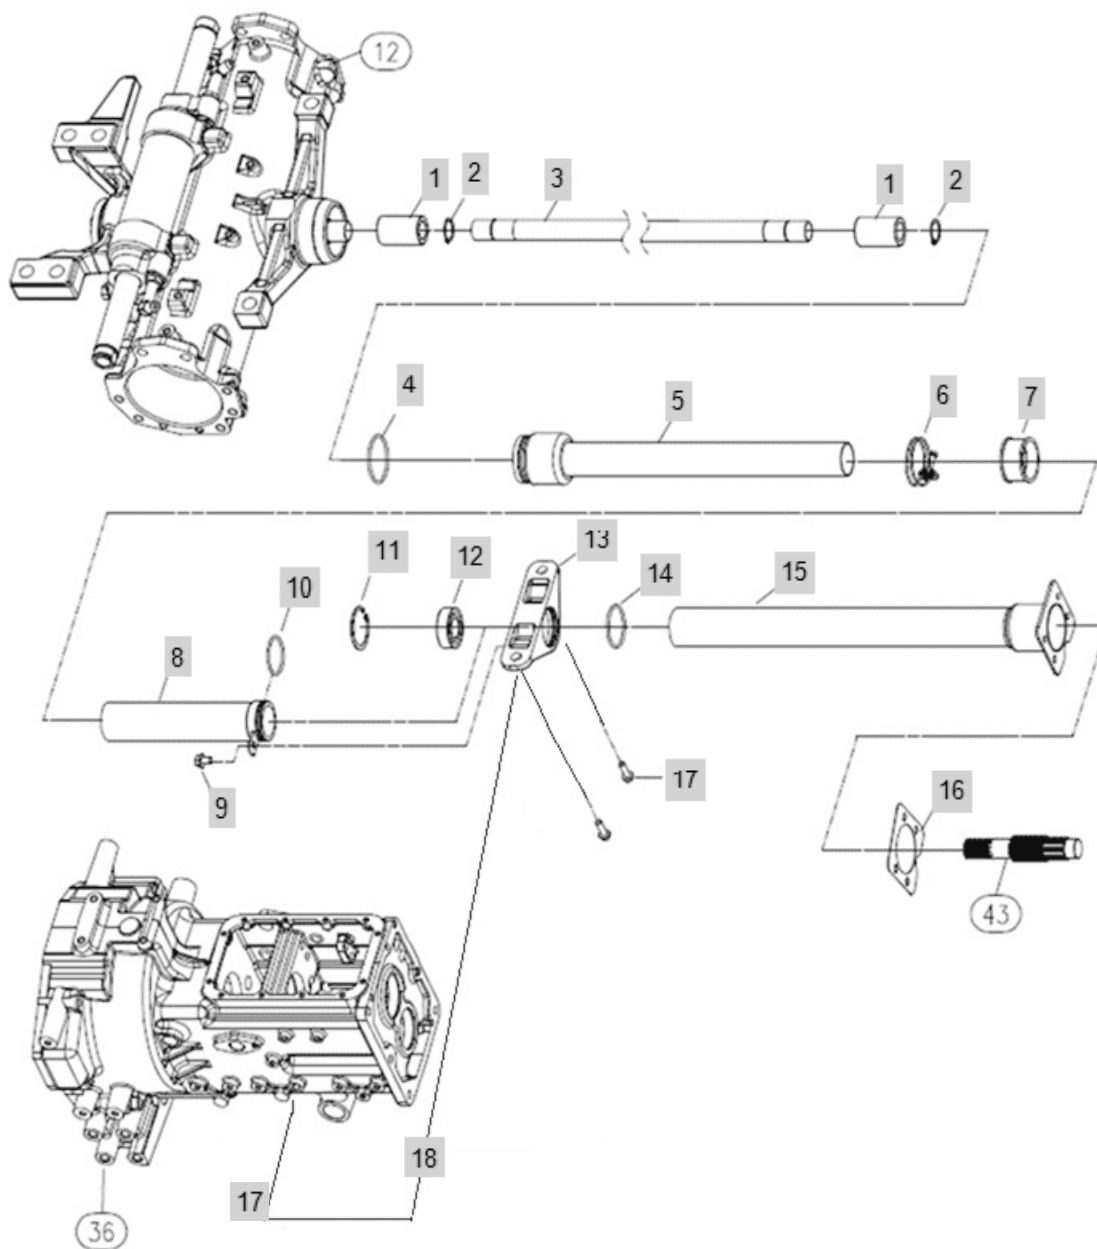

[illegible]

FIG C019-1

Branson 3520H(US)
_EN

Gear_Case_Front_Axle

Year/Month

2020/02

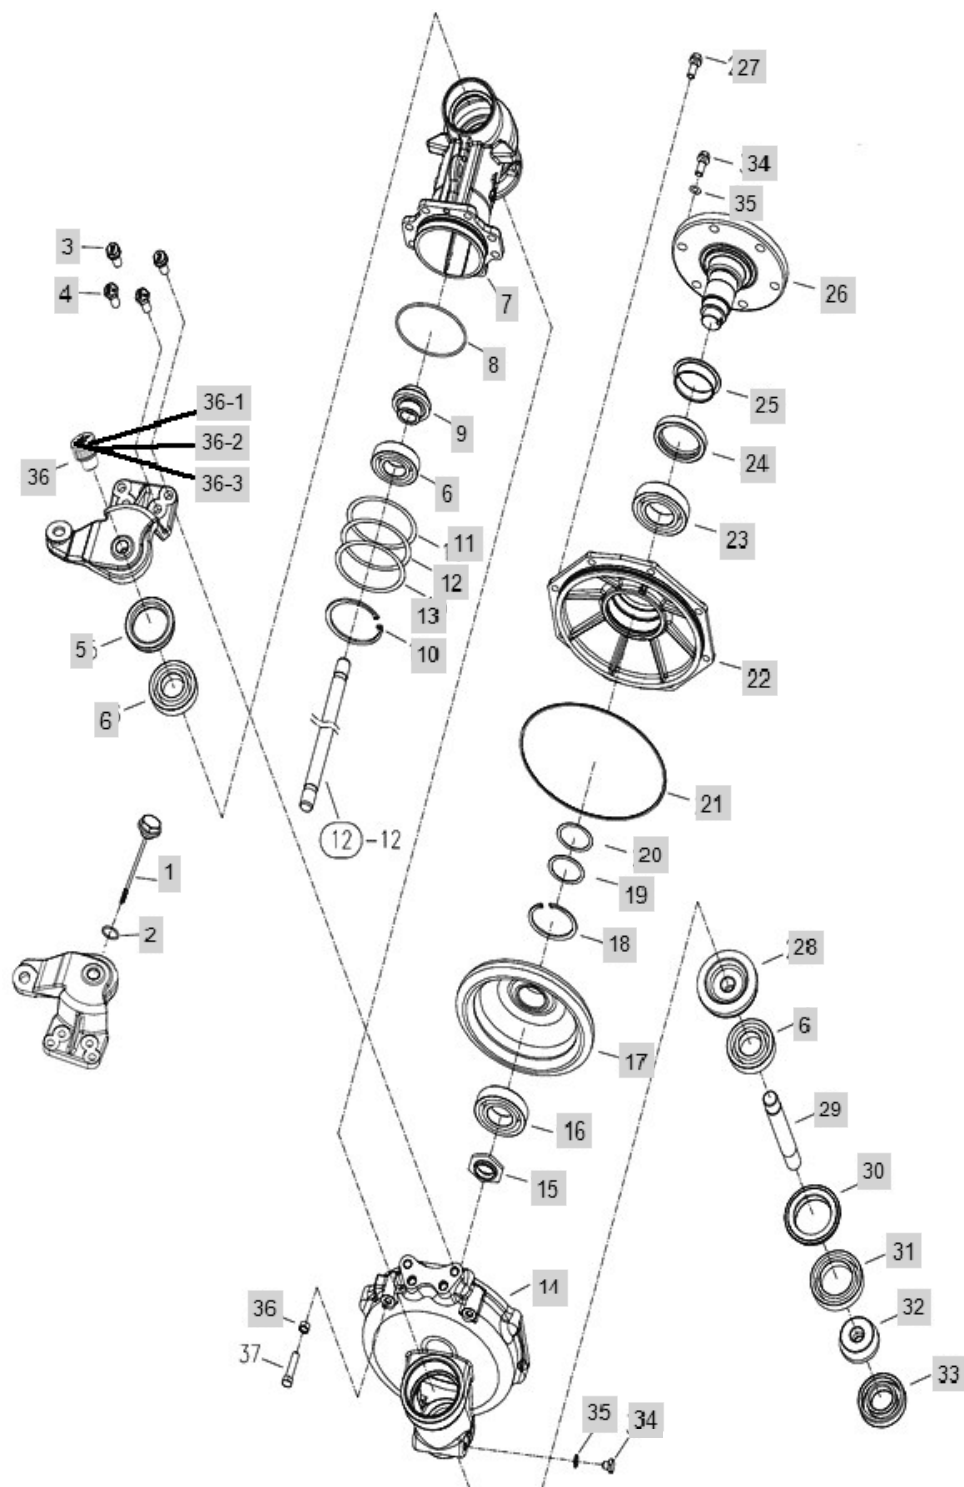


FIG C019-2

Branson 3520H(US)
_EN

GEAR CASE, FRONT AXLE

Year/Month

2020/02

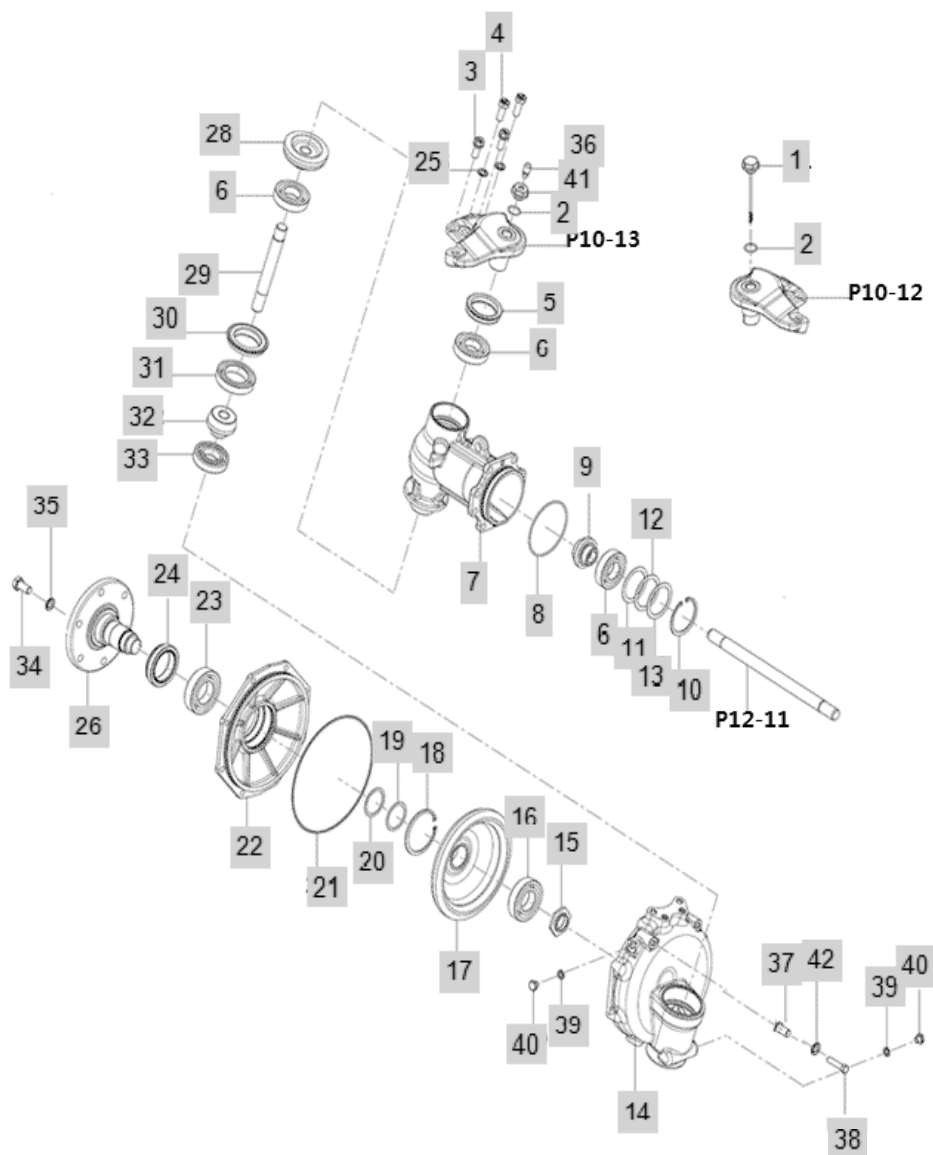


FIG C019-2 Branson 3520H(US) _EN		GEAR CASE, FRONT AXLE			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	TA00033805A	OIL GUAGE	1		
2	24311-000220	O-RING, DYNAMIC (Φ22)	2		
3	TA00033468A	BOLT W/ WASHER	4		
4	TA00033475A	RIMER BOLT	4		
5	FE78010000A	SEAL,OIL -> FE78010000B	2		
6	24101-062074	BALL BEARING (#6207)	6		
7	TA00048728A	CASE, FRONT GEAR	2		
8	24321-001050	O-RING	2		
9	TA00033461A	PINION, FRONT 1ST SHAFT	2		
10	22252-000720	RING, CIRCLIP (Φ 72)	2		
11	TA00033489A	SHIM 0.2T	2		
12	TA00033488A	SHIM 0.3T	2		
13	TA00033487A	SHIM 0.5T	2		
14	TA00033458A	GEAR BOX, FRONT	2		
15	TA00033481A	LOCK NUT	2		
16	24101-062084	Bearing, Ball (#6208)	2		
17	TA00033474A	GEAR, BEVEL 49T	2		
18	22252-000850	RING, CIRCLIP (Φ 85)	2		
19	TA00033486A	SHIM 0.2T	1		
20	TA00033485A	SHIM 0.5T	1		
21	TA00033939A	O RING	2		
22	TA00033459A	BEARING CASE, FRONT	1		
23	24101-062094	BALL BEARING (#6209)	2		
24	TA00041359A	OILSEAL	2		
25	22217-120000	WASHER, SPRING (Φ 12)	2		
26	TA00033460A	SPINDLE, FRONT	2		
27	TA00033469A	BOLT W/ WASHER	16		
28	TA00033463A	FRONT 2ND AXLE LH	2		
29	TA00033464A	FRONT 2ND SHAFT	2		
30	TC60110000A3	SEAL	2		
31	24101-060104	Bearing, Ball (#6010)	2		
32	TA00033473A	GEAR, BEVEL 11T	2		
33	TC60340000A4	BEARING(TM207C3)	2		
34	TD23120000A4	BOLT	12		
35	22217-140000	WASHER, SPRING (Φ 14)	12		
36	TA00049842A	AIR BREATHER	12		
37	TA00058614A	STOPER	2		
38	26112-100502		2		
38-1	26112-100452	BOLT	2		
39	22190-100000	WASHER	4		
40	23887-100002	SCREW,HEXAGONHEADCAP	4		
41	TA00049843A	ADAPTHER	1		
42	22217-100000	WASHER, SPRING (Φ 10)	2		
42-1	26716-100001	NUT	2		


FIG C020A-1

Branson 3520H(US)
_EN

Spacer-20(DELETED PAGE)

Year/Month

2020/02

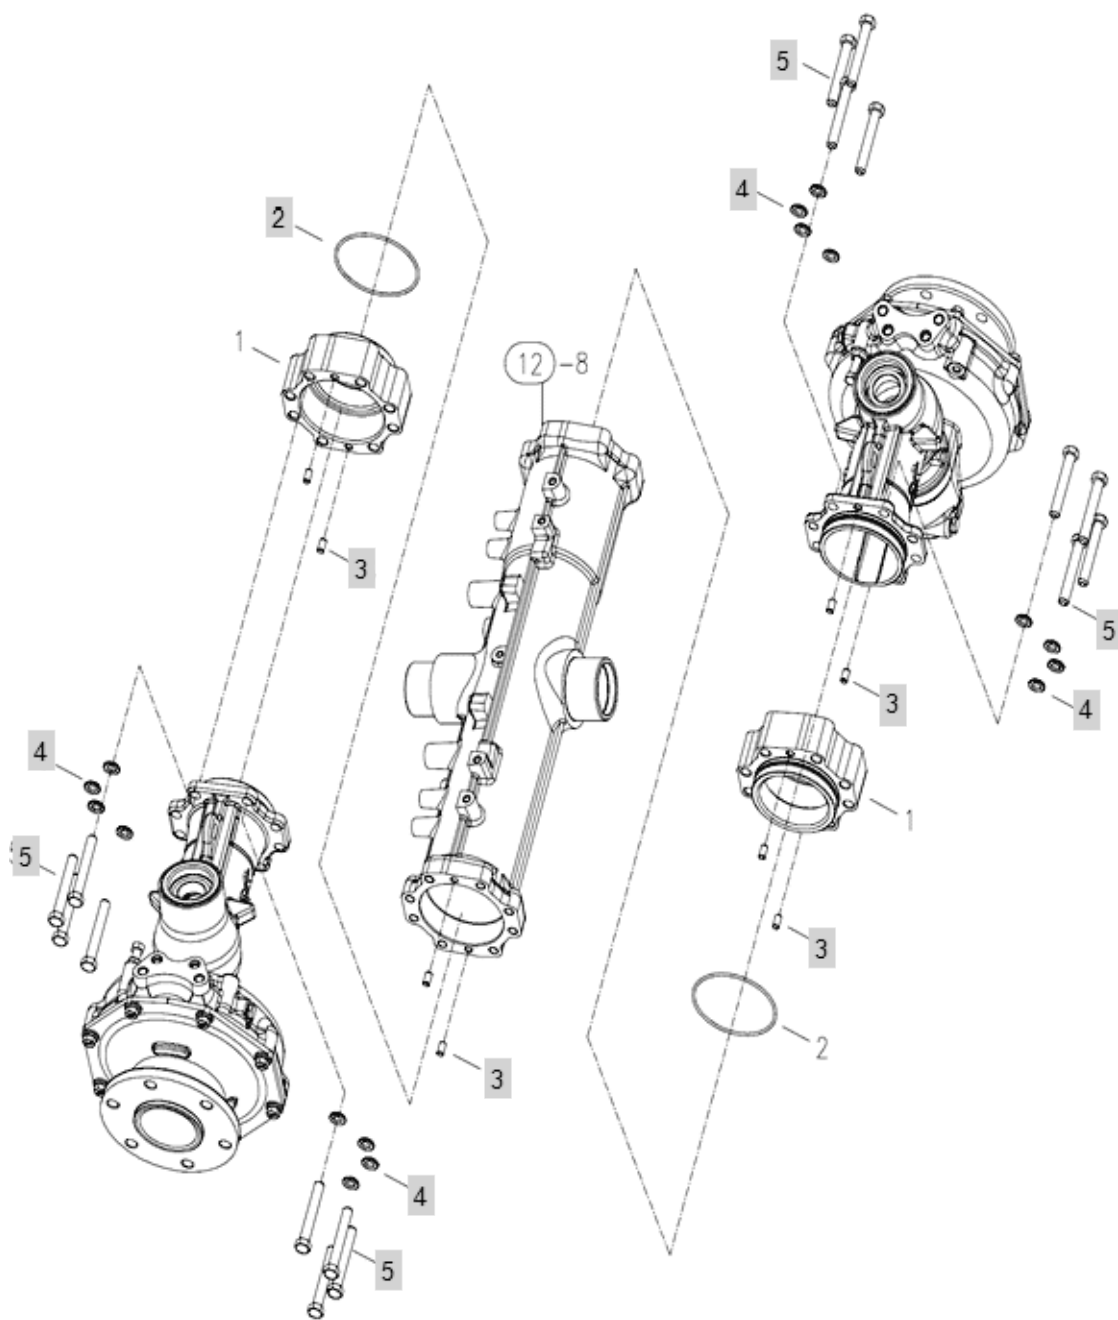

[illegible]

FIG C020T-2

Branson 3520H(US)
_EN

Spacer

Year/Month

2020/02

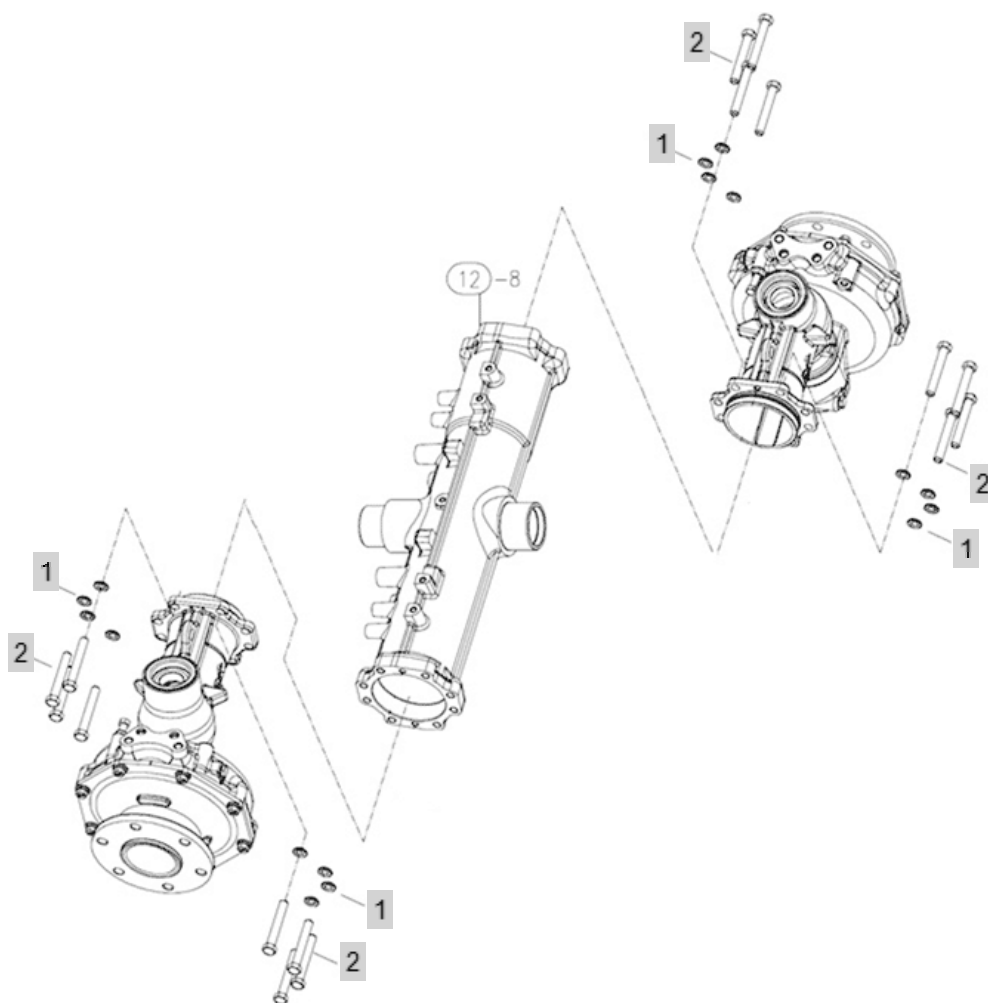


FIG C024A

Branson 3520H(US)
_EN

FRONT WHEEL & TIRE

Year/Month

2020/02

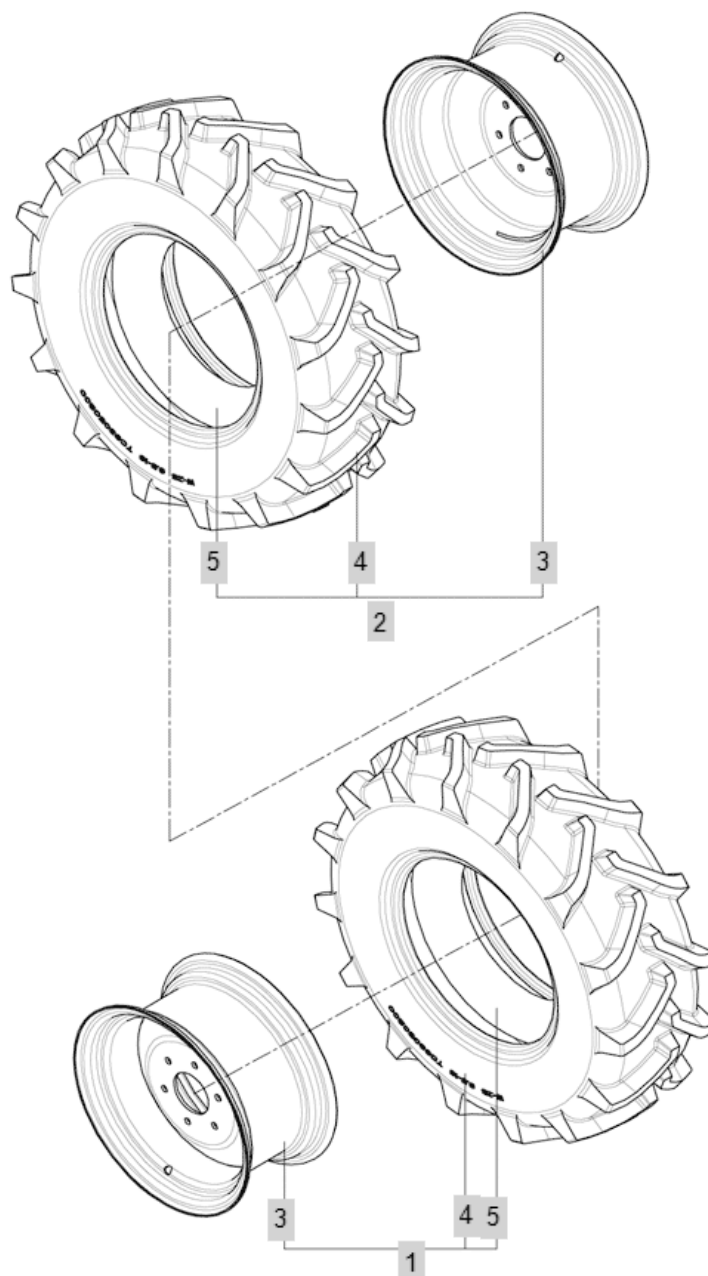


FIG C032

Branson 3520H(US)
_EN

P.S.T_Cylinder

Year/Month

2020/02

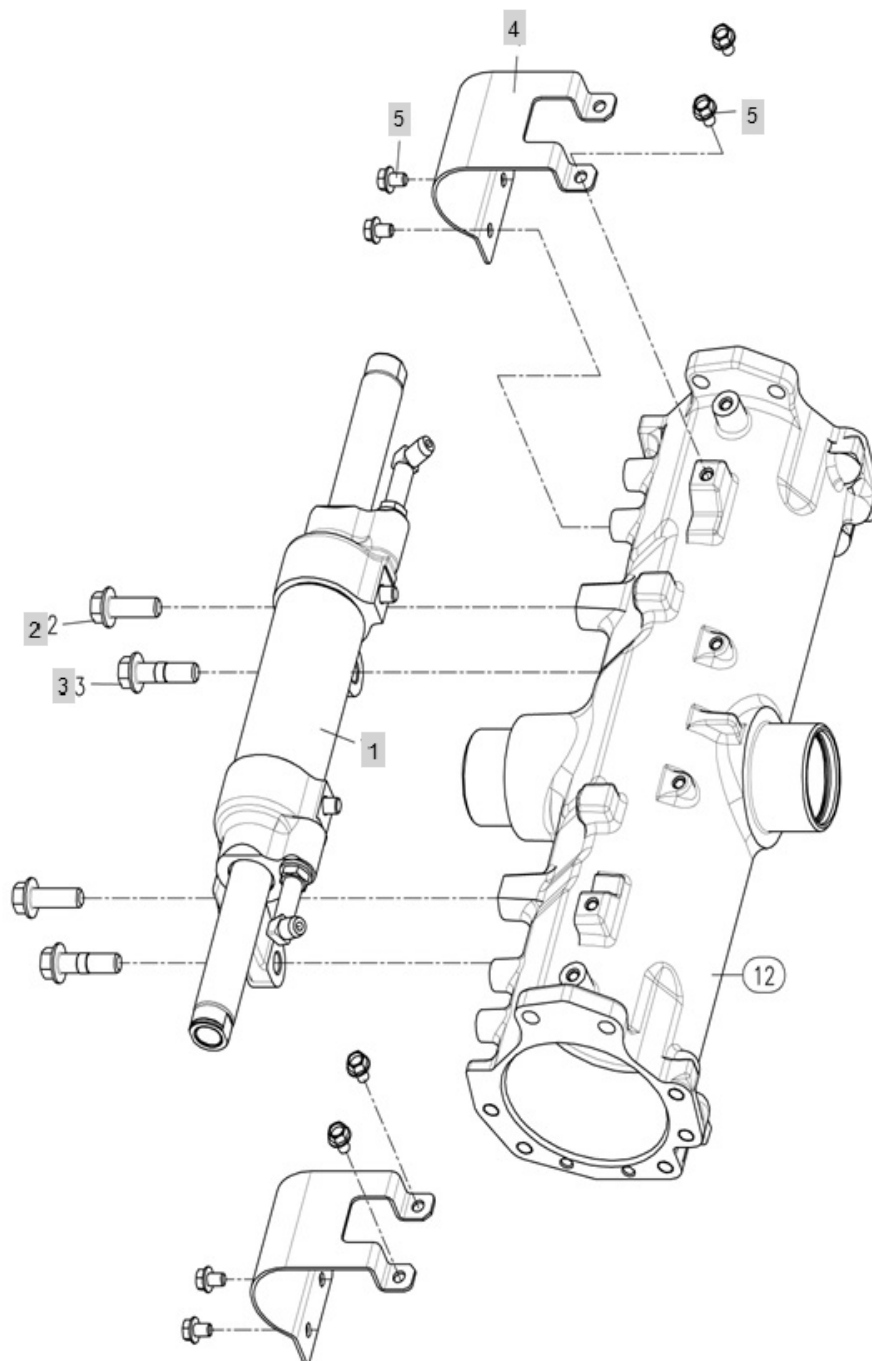


FIG C034A-2

Branson 3520H(US)
_EN

P.S.T PIPE

Year/Month

2020/02

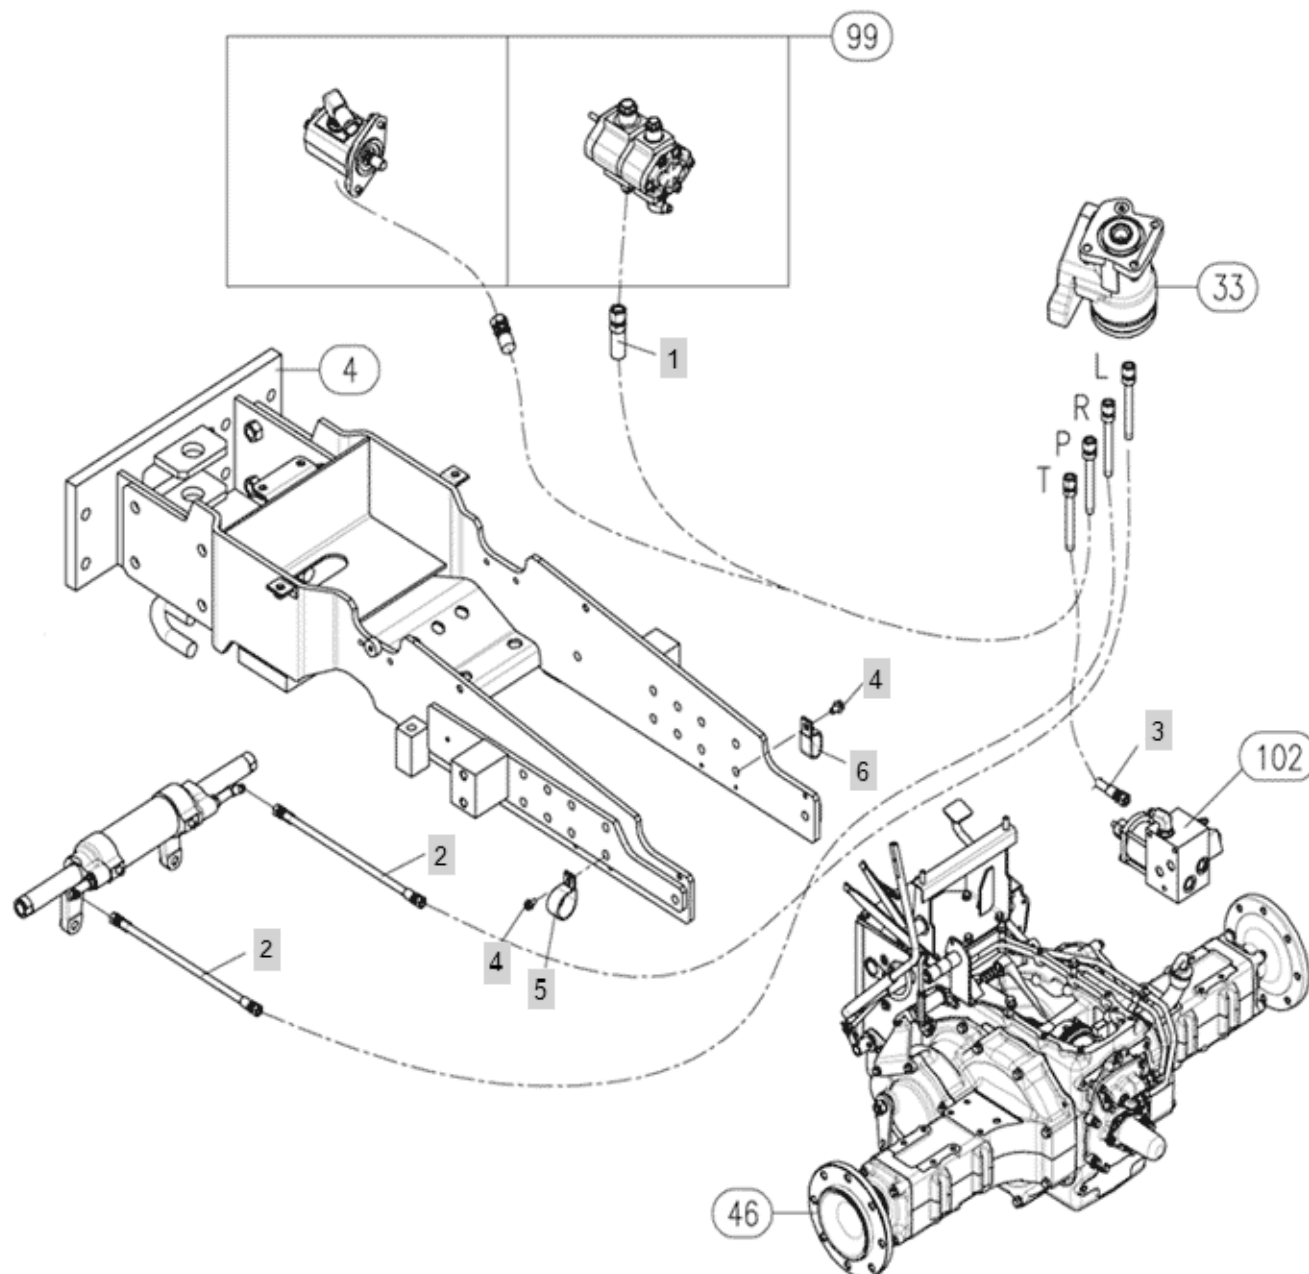


FIG C036A

Branson 3520H(US)
_EN

FLY WHEEL HOUSING

Year/Month

2020/02

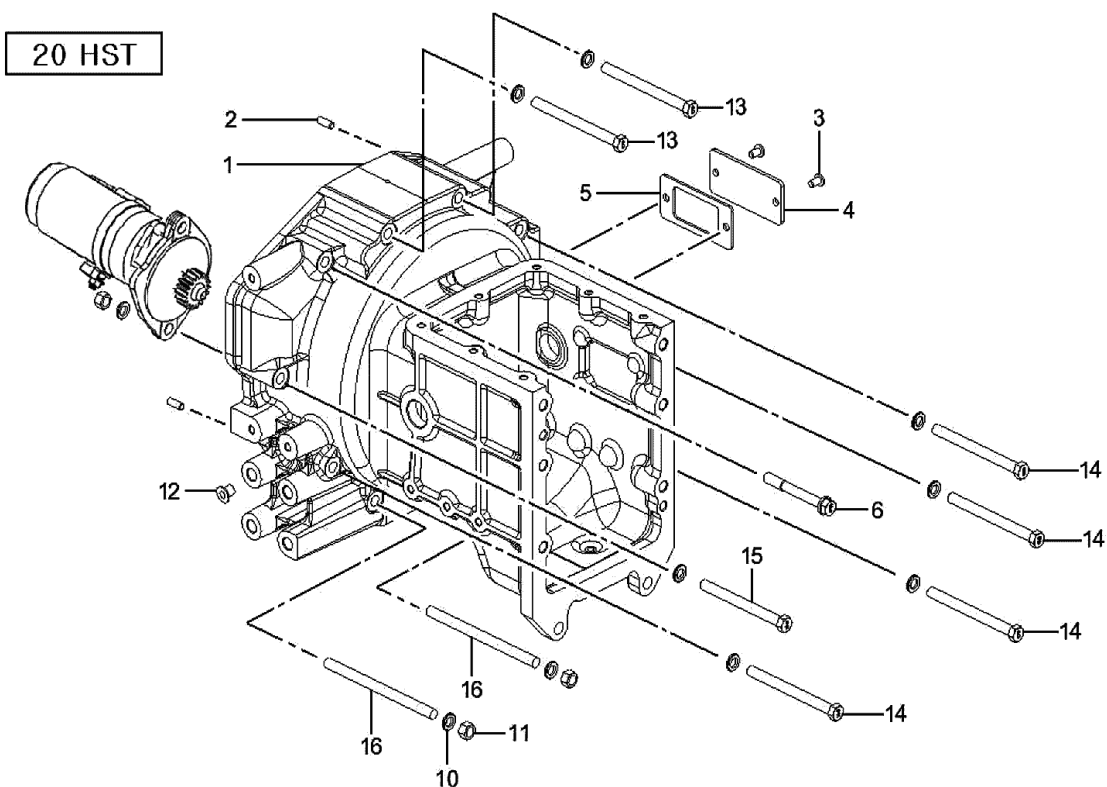
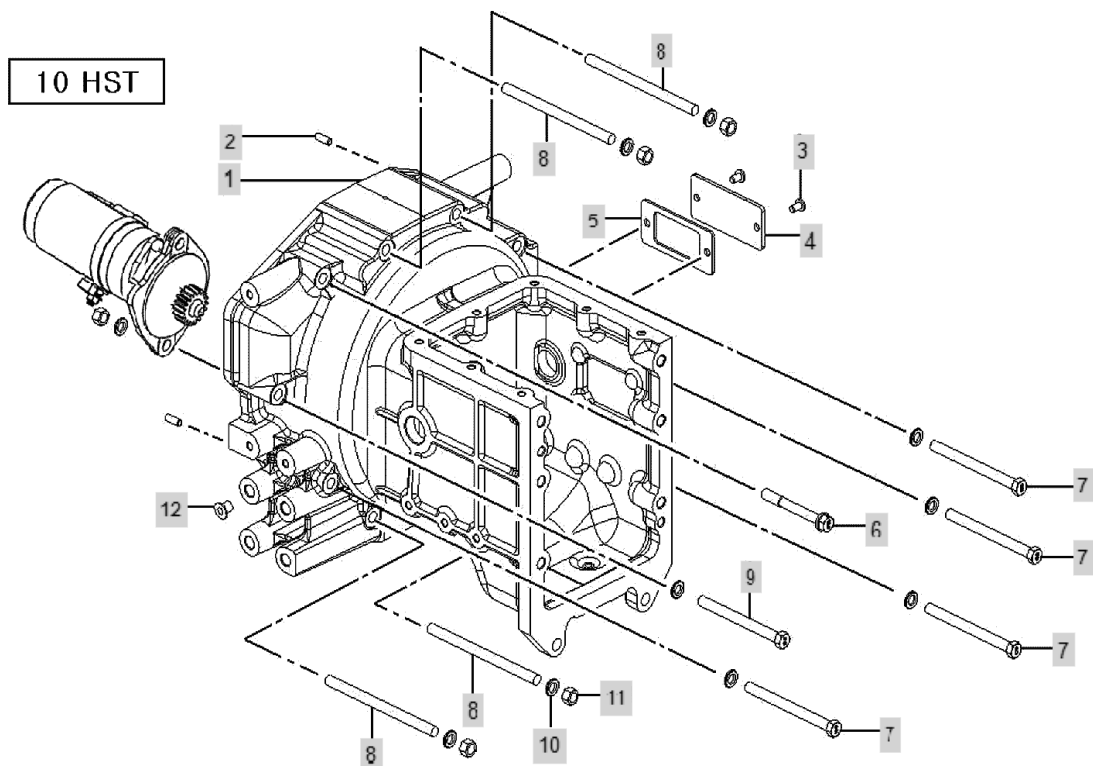


FIG C038-1

Branson 3520H(US)
_EN

PTO DAMPER

Year/Month

2020/02

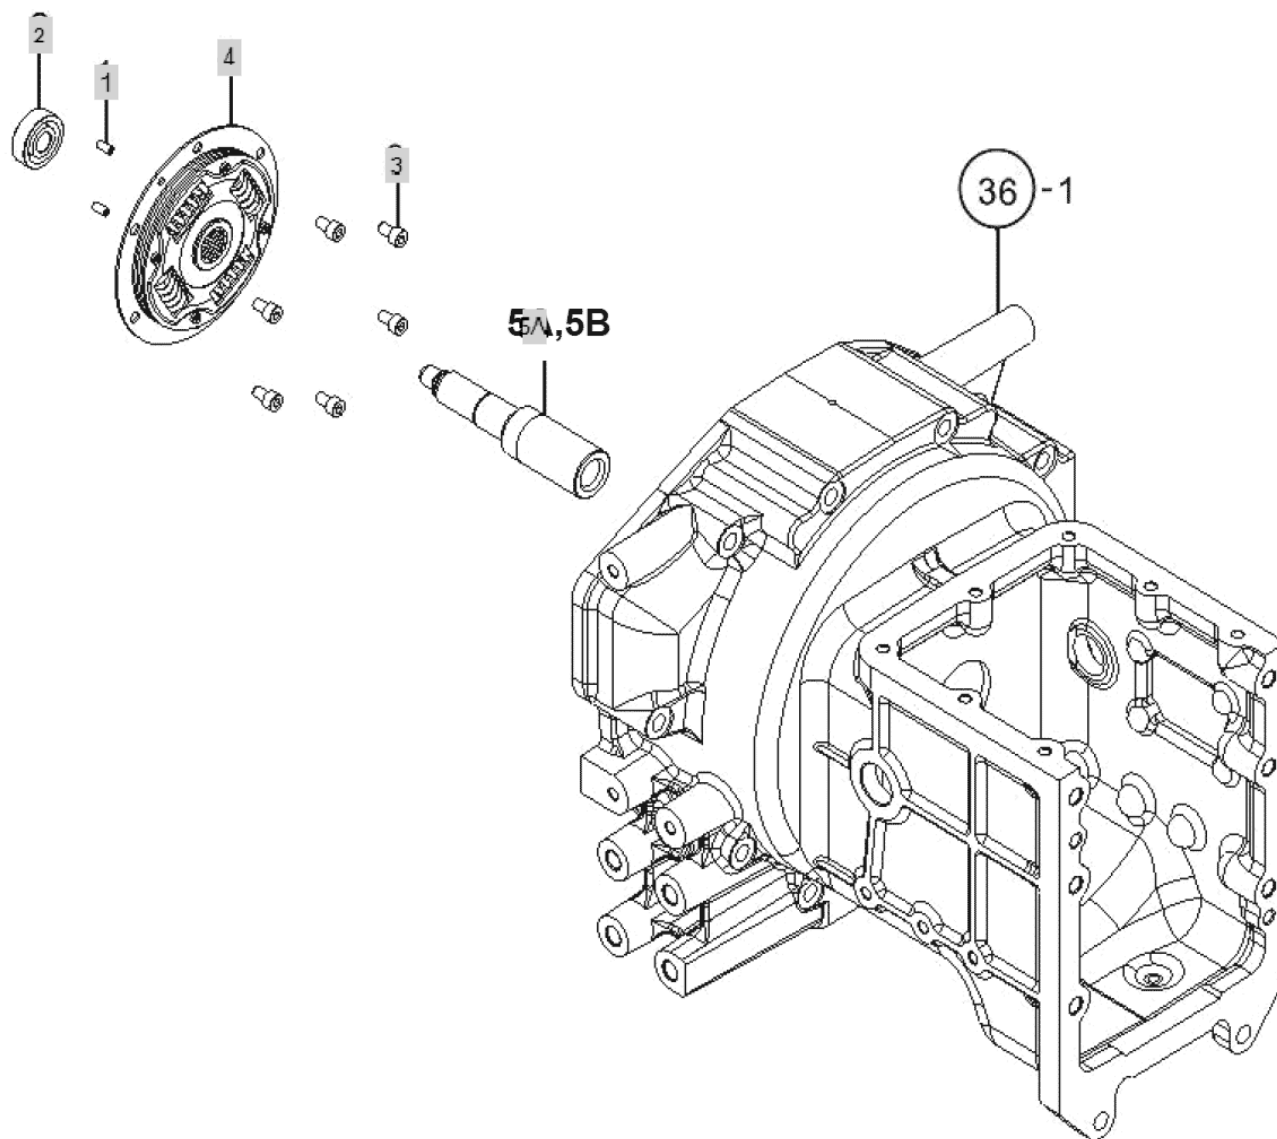


FIG C038-2

Branson 3520H(US)
_EN

PTO DAMPER

Year/Month

2020/02

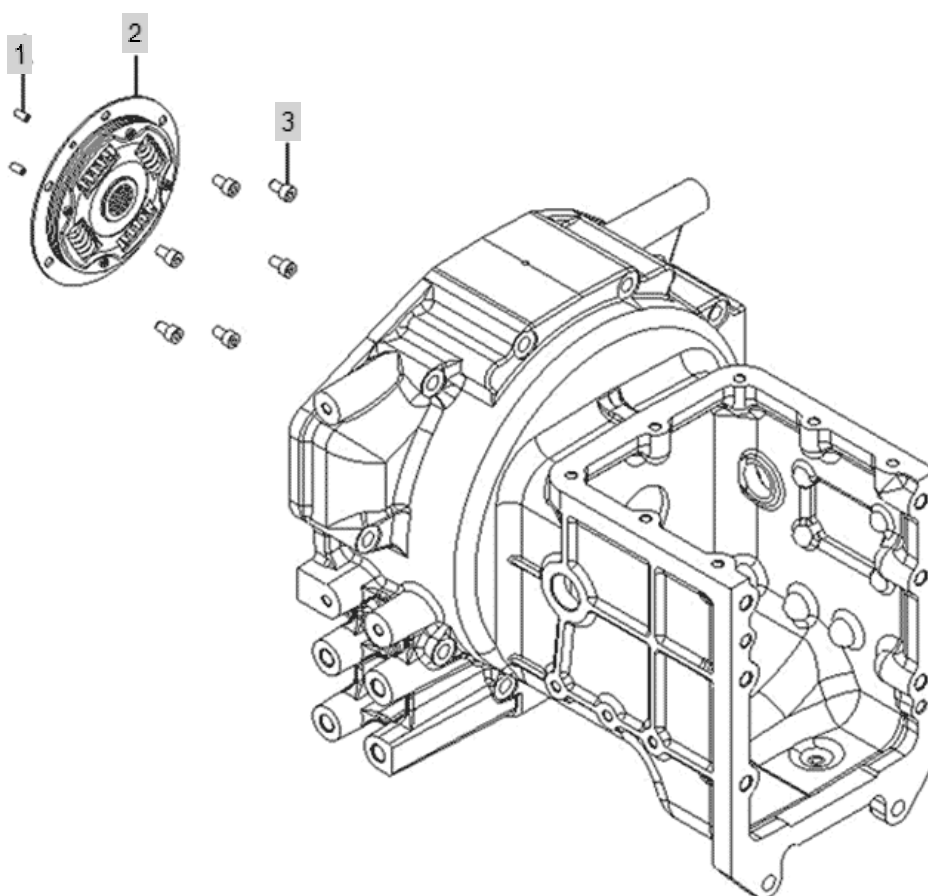




FIG C039A-1

Branson 3520H(US)
_EN

HYD SHIFT TRANSMISSION HOUSING

Year/Month

2020/02

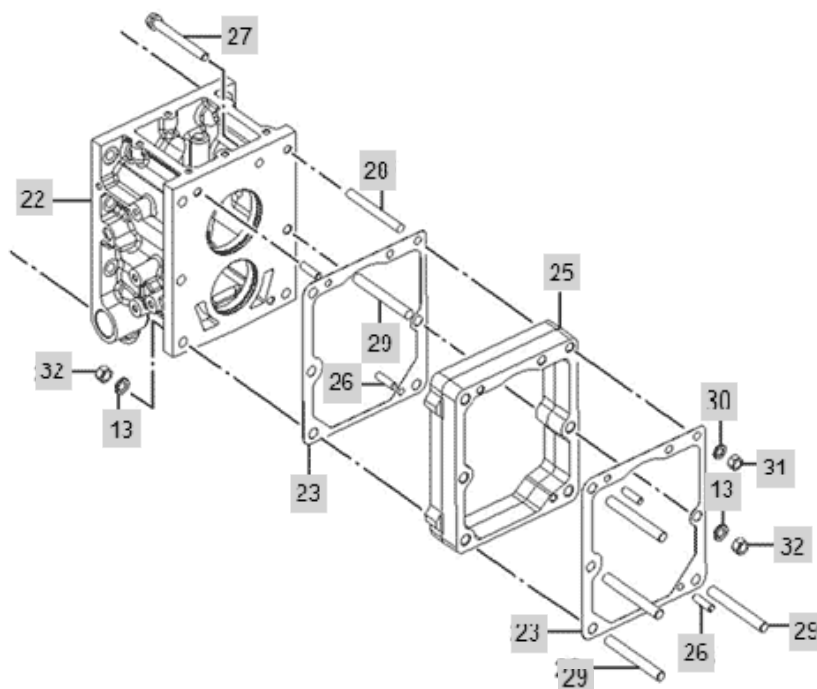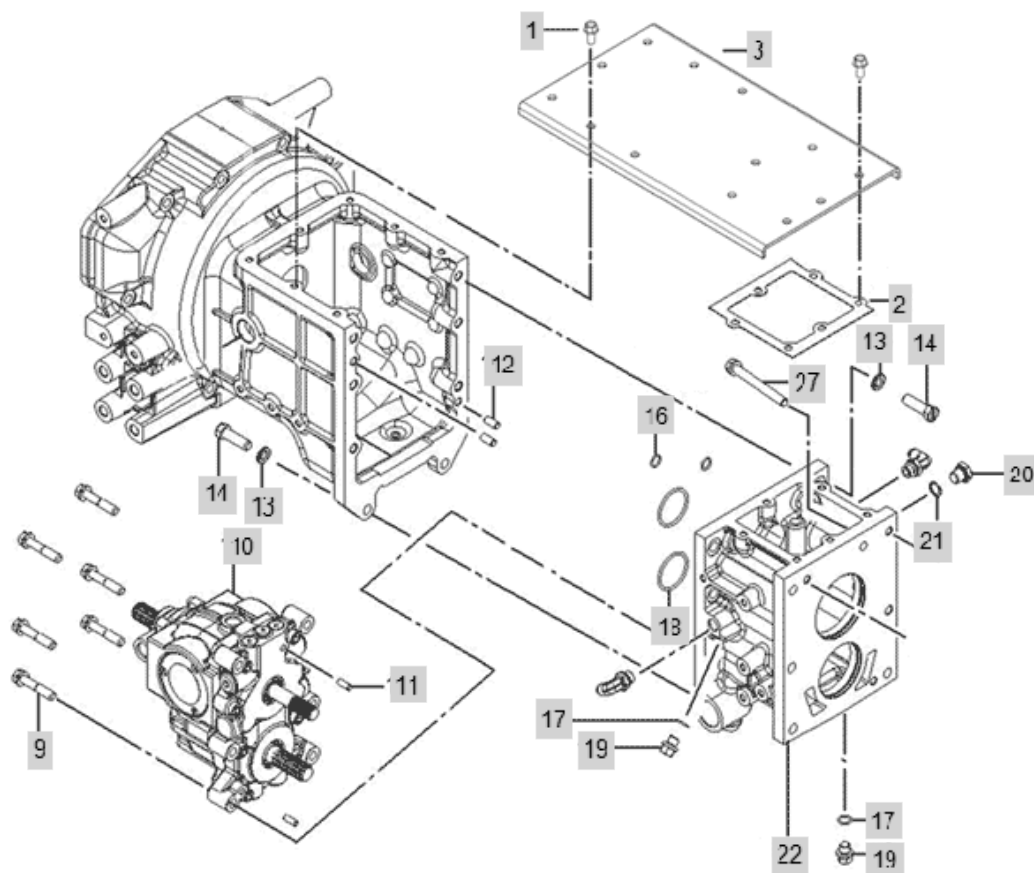

[illegible]

FIG C039A-2

Branson 3520H(US)
_EN

HST HOUSING

Year/Month

2020/02

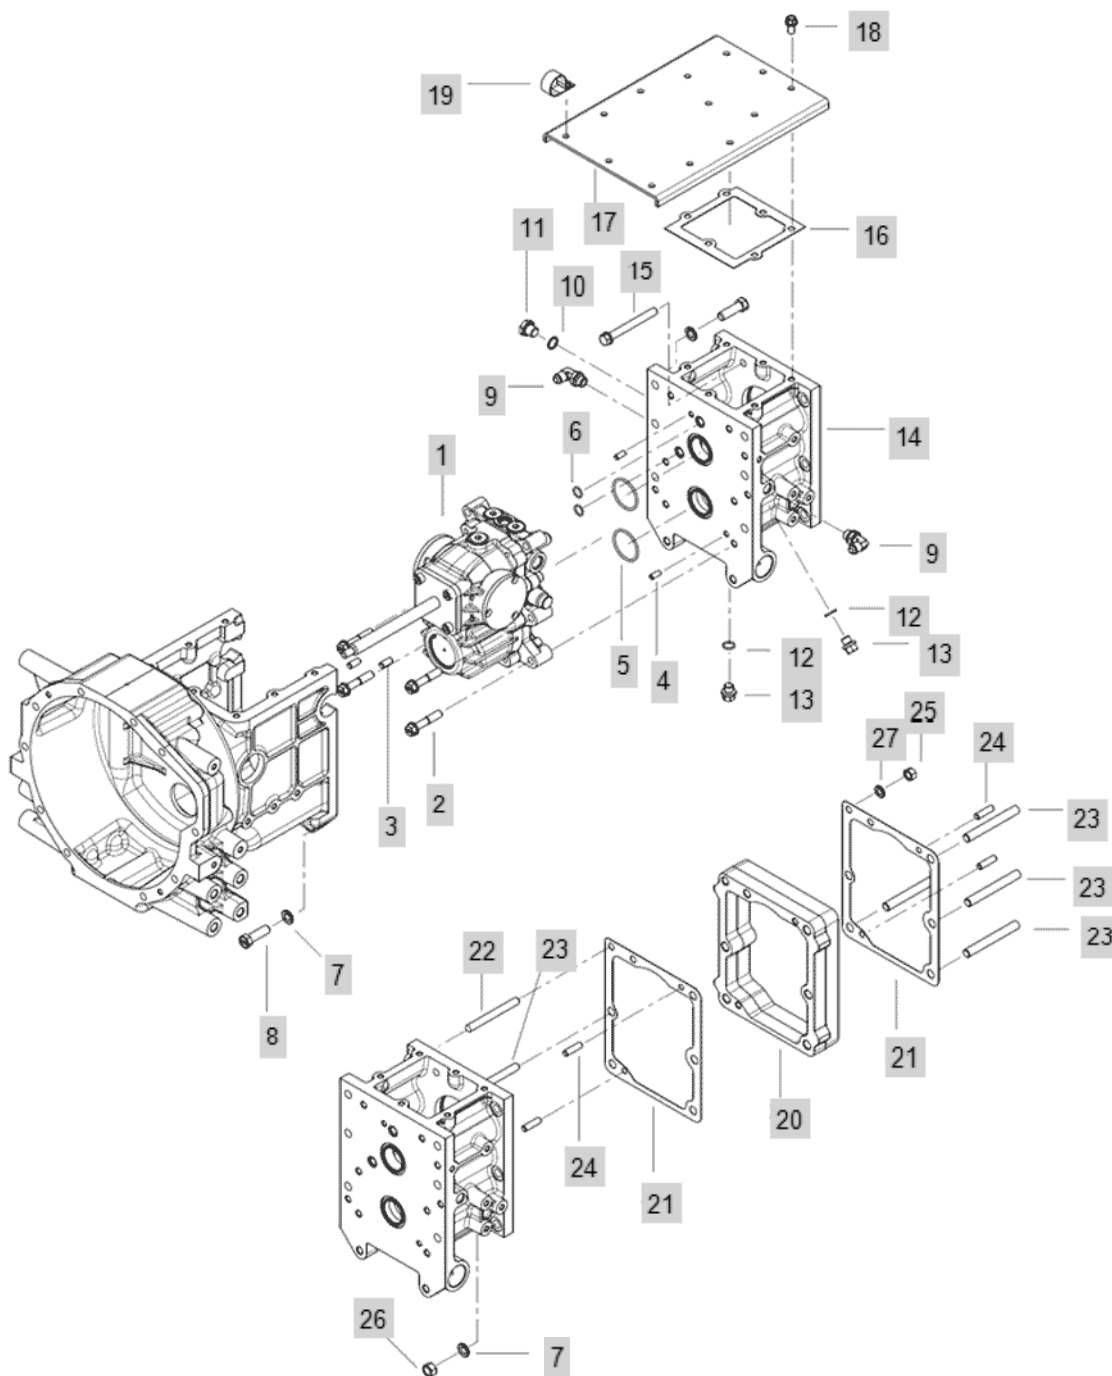



FIG C039A-3

Branson 3520H(US)
_EN

HST HOUSING

Year/Month

2020/02

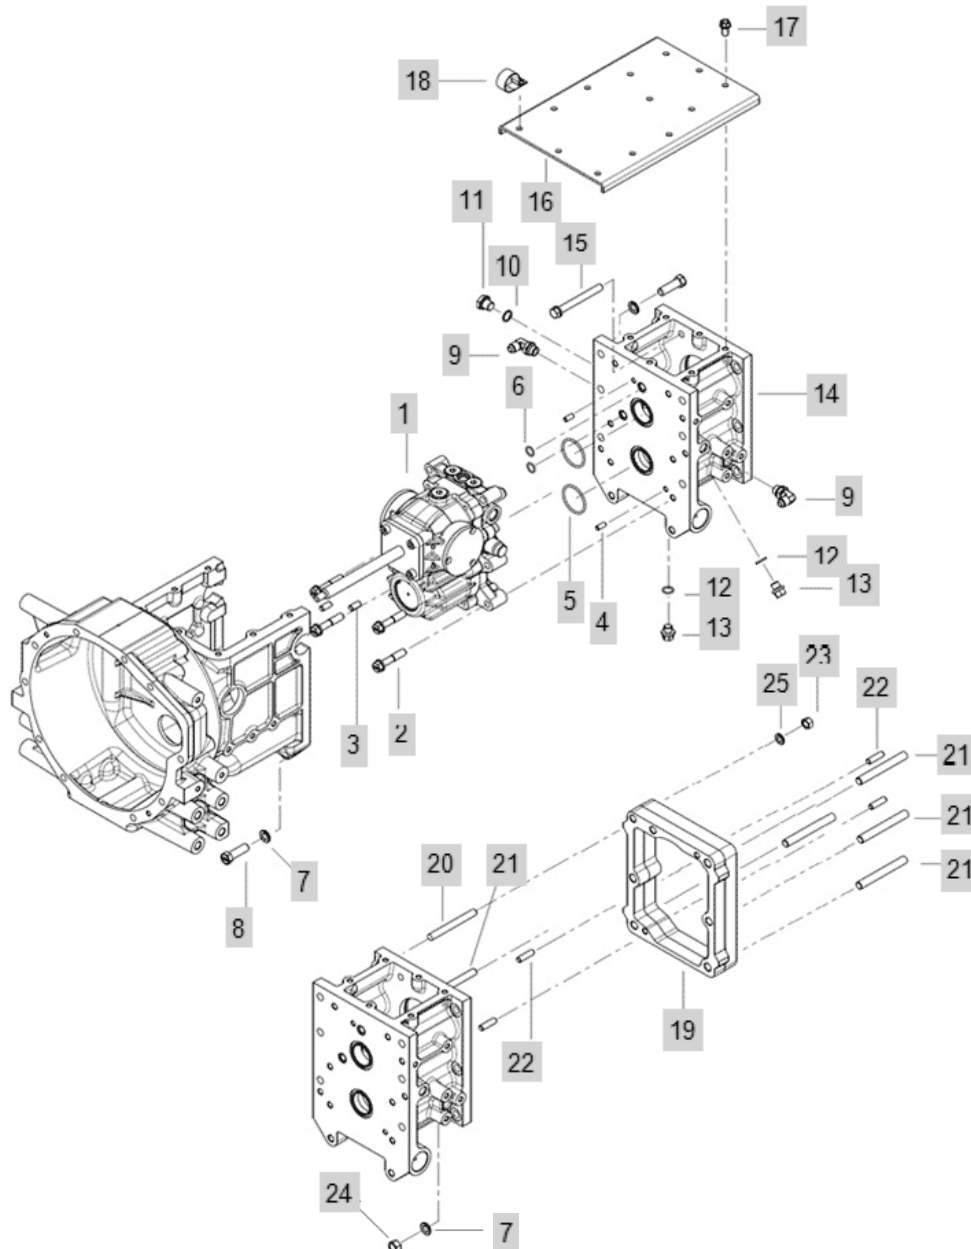

[illegible]

FIG C040

Branson 3520H(US)
_EN

HYD SHIFT TRANSMISSION GEAR

Year/Month

2020/02

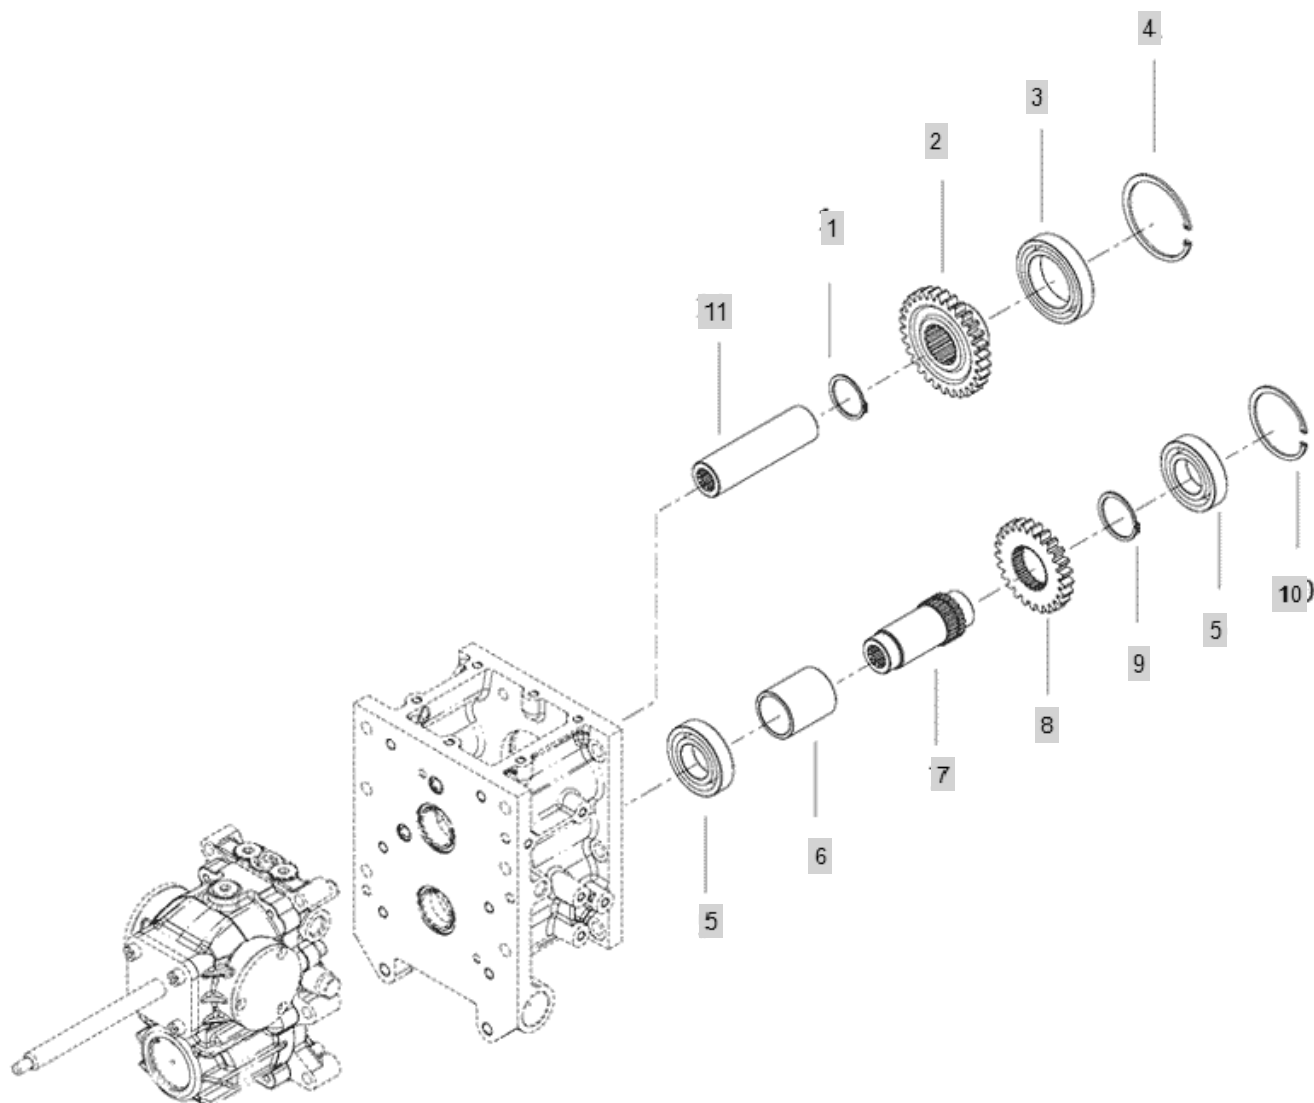


FIG C041A-1

Branson 3520H(US)
_EN

HST PEDAL

Year/Month

2020/02

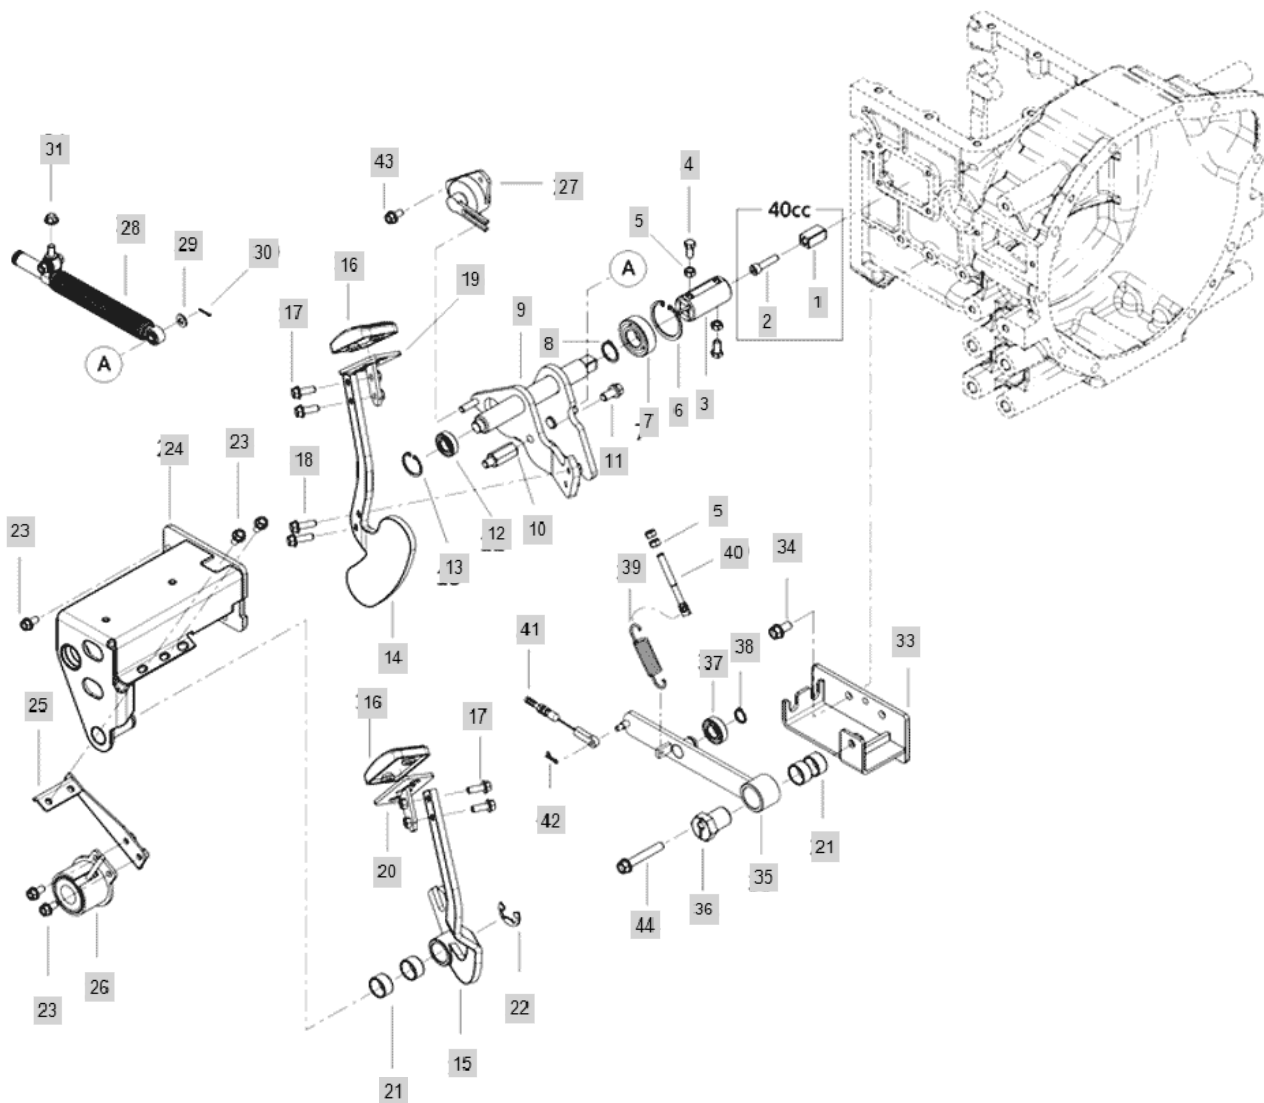


FIG C041A-1 Branson 3520H(US) _EN		HST PEDAL			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
3	TA00015683F	SHAFT	1		
4	26116-080182	CAPSCREW(19M7139)	2		
5	26716-080002	NUT,HEX (D8)	4		
6	22252-000520	RING, CIRCLIP (Φ 52)	1		
7	24104-062054	BALL BEARING (#6205UU)	1		
8	22242-000250	SNAP RING, SHAFT (Φ 25)	1		
9	TA00015682E	CAM SHAFT ASS'Y	1		
10	TA00001502A	SHAFT, BLOT	1		
11	26013-100222	HEXA BOLT	1		
12	24104-060024	Bearing, Ball (#6002) Dubble Cap	1		
13	22252-000320	RING, CIRCLIP (Φ 32)	1		
14	TA00041385B	HST PEDAL ARM	1		
15	TA00040950A	PEDAL(R) ASSY	1		
16	TA00001508A	PEDAL COVER	2		
17	26106-080222	SCREW, HEX FLANGE HEAD CAP	4		
18	26106-080252	SCREW,HEXFLANGEHEADCAP	4		
19	TA00001865C	PEDAL ASS'Y	1		
20	TA00001873C	REVERSE PEDAL ASS'Y	1		
21	24550-025150	BUSH 25X15	4		
22	22272-000190	RING, CIRCLIP (Φ 19)	1		
23	26106-080162	SCREW,HEXFLANGEHEADCAP	8		
24	TA00040631C	BRACKET ASSY	1		
25	TA00001957D	MAGNET BRACKET ASS'Y	1		
26	HA00000037A	CRUISE MAGNET	1		
27	TCD9110000B2	SWITCH ASS'Y	1		
28	TA00001909A	DAMPER	1		
29	22137-080000	WASHER, PLAIN (Φ 08)	1		
30	22417-200140	PIN , COTTER (2-14)	1		
31	26367-080002	HEX FLANGE NUT (Φ8)	1		
33	TA00044076B	BRACKET ASSY	1		
34	26106-100202	HEX BOLT, (10-20)	2		
35	TA00044088A	ARM ASSY	1		
36	TA00001830C	SHAFT	1		
37	24104-060034	Bearing, Ball (#6003) Dubble Cap	1		
38	22242-000170	SNAP RING, SHAFT (Φ 17)	1		
39	FEB0150000B	SPRING	1		
40	CA00009062A	BOLT	1		
41	TA00044972A	HST WIRE ASSY(3cylinder)	1		
42	RR47070000B4	PIN 6, COME-OFF SNAP	1		
43	26106-060162	HEXFLANGEBOLT	2		
44	26106-100602	BOLT	1		


FIG C043-1

Branson 3520H(US)
_EN

FRONT DRIVE & RANGE SHIFT GEAR

Year/Month

2020/02

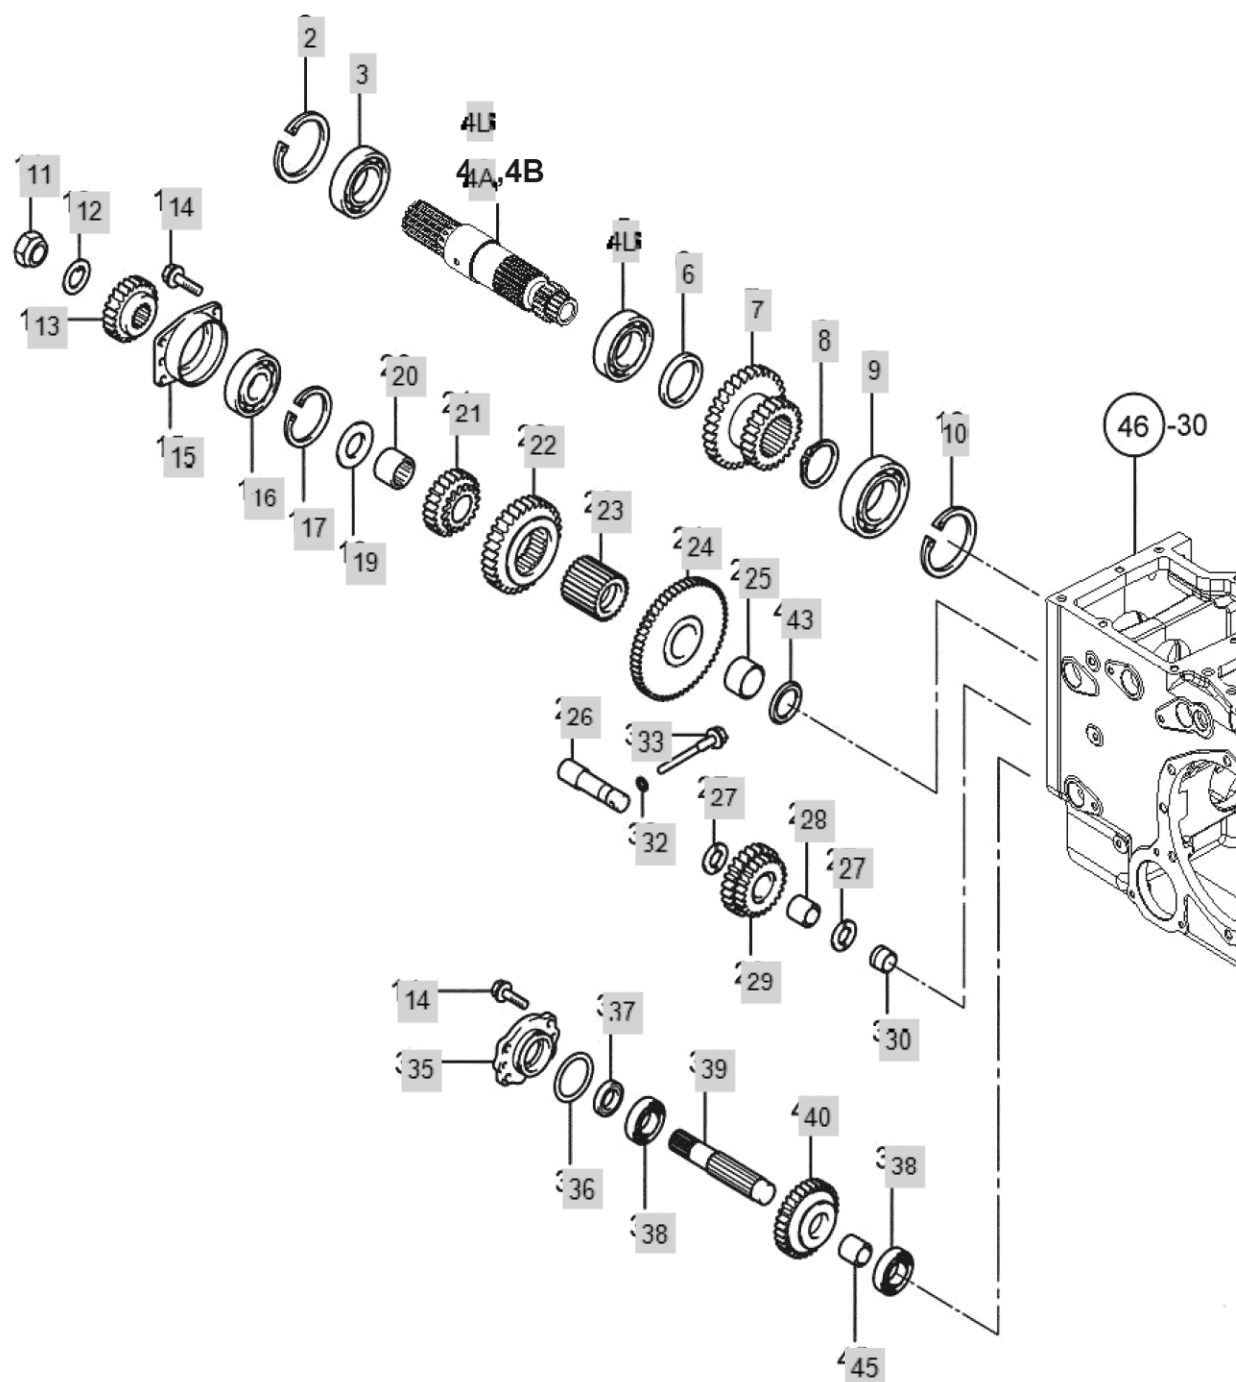

[illegible]

FIG C043-2

Branson 3520H(US)
_EN

FRONT DRIVE & RANGE SHIFT GEAR

Year/Month

2020/02

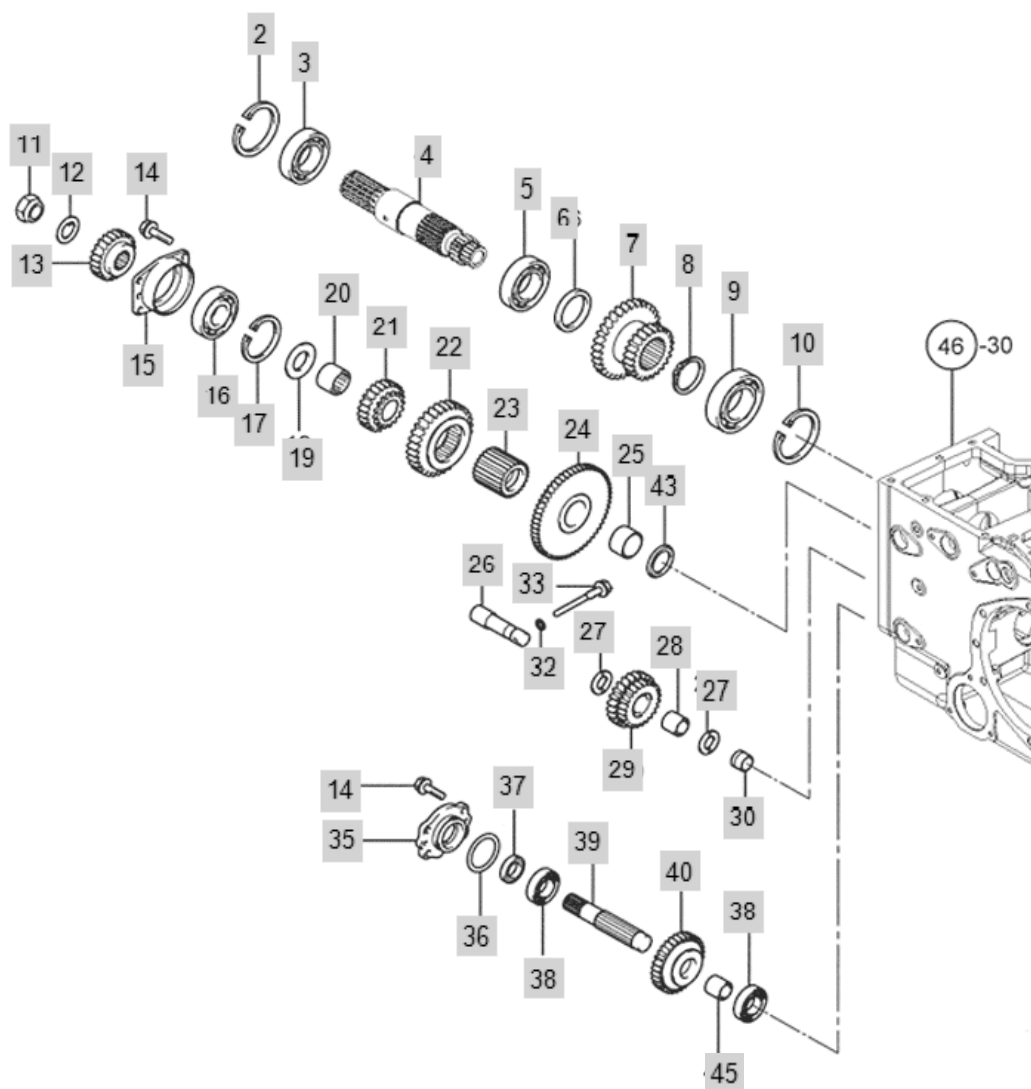



FIG C044

Branson 3520H(US)
_EN

FRONT_DRIVE_RANGE_SHIFT_LEVER

Year/Month

2020/02

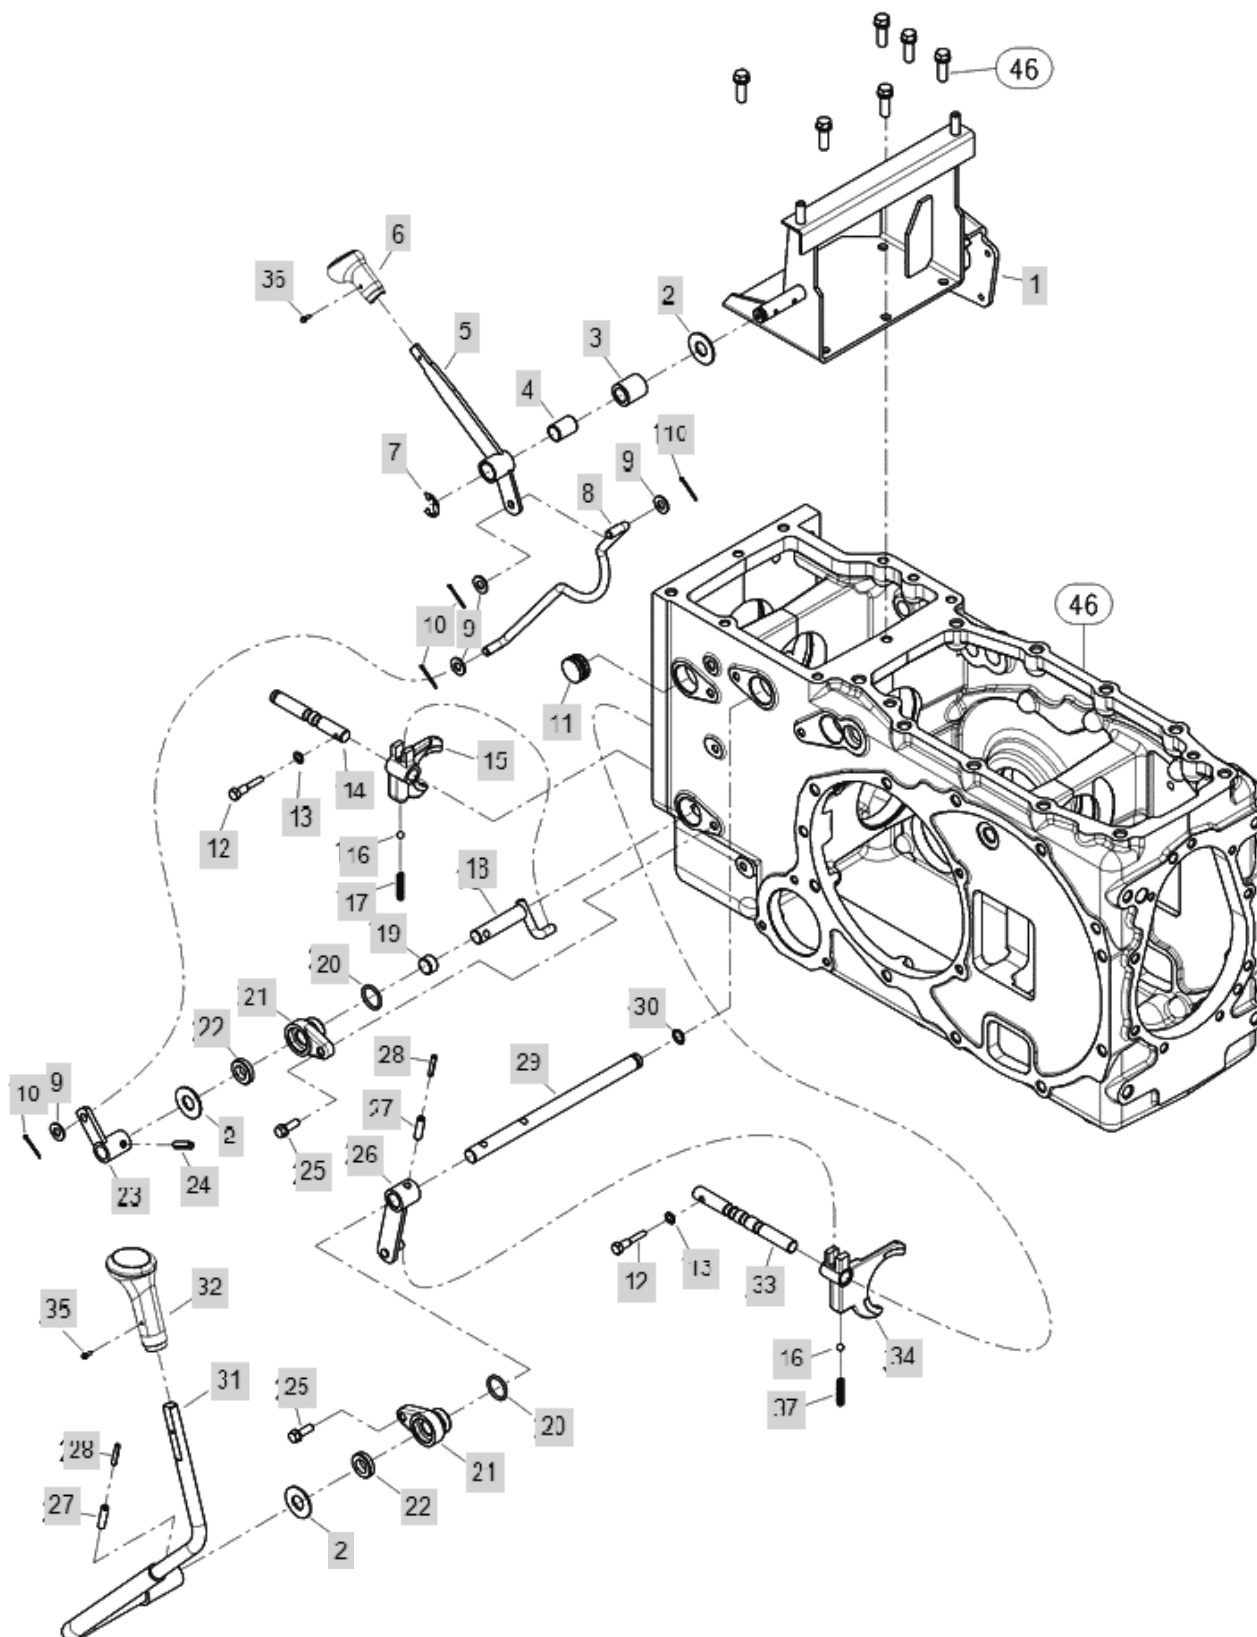

[illegible]

FIG C045-1

Branson 3520H(US)
_EN

GearINDPTOSpeedChange

Year/Month

2020/02

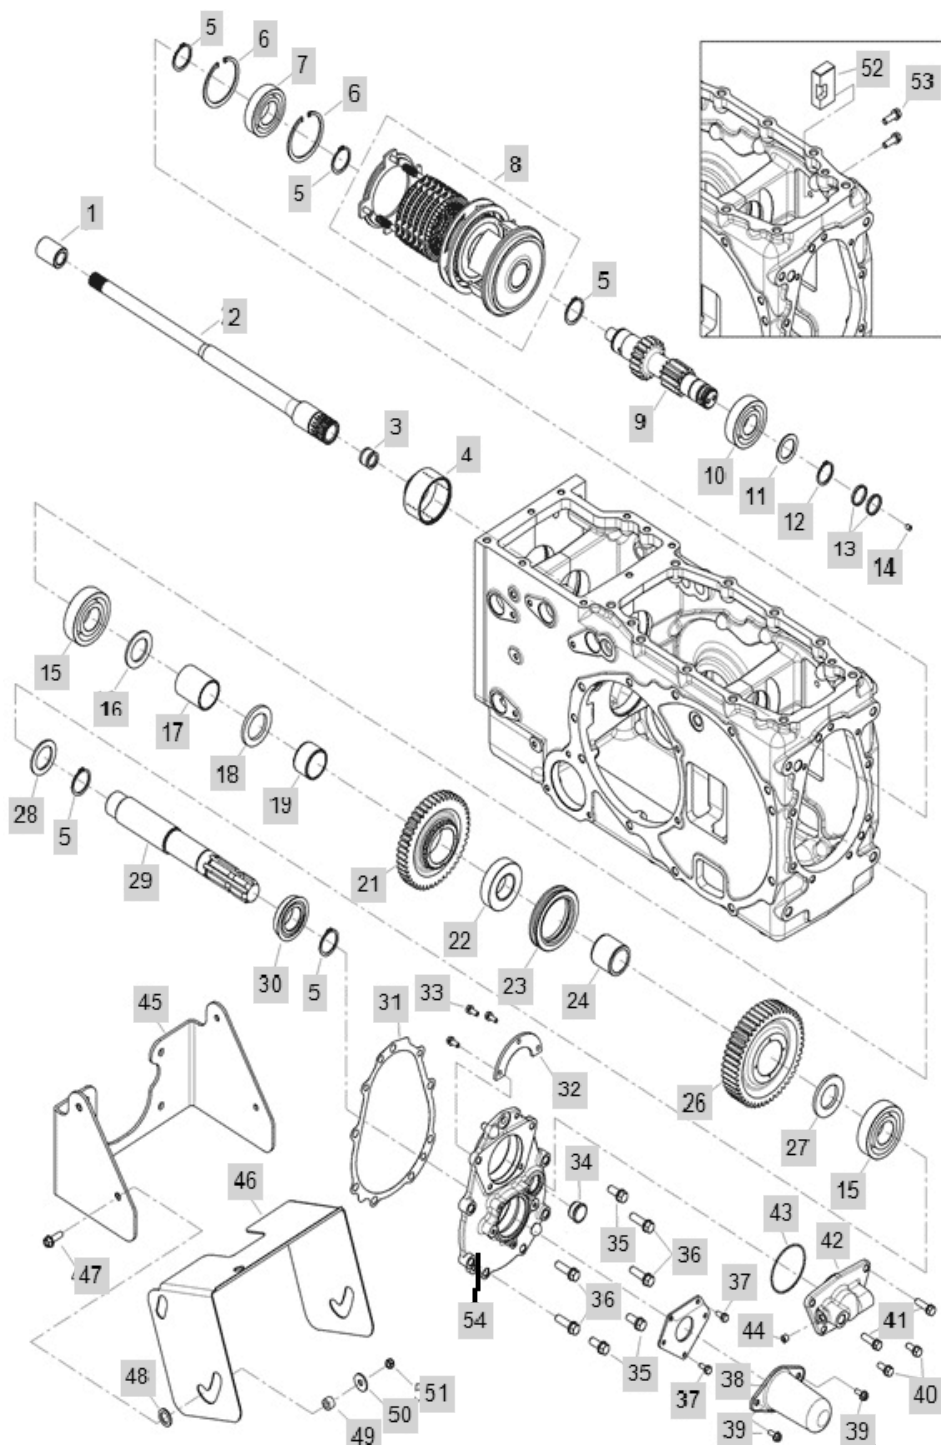


FIG C045-1 Branson 3520H(US) _EN		GearINDPTOSpeedChange			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	TN4520000A4	JOINT	1		
2	TA00015848A	PTO SHAFT(HST)	1		
3	24161-182417	Bearing, Needle (#18-24-17)	1		
4	NT45480000A3	PTO COUPLING	1		
5	22242-000350	SNAP RING, SHAFT (Φ 35)	5		
6	22252-000720	RING, CIRCLIP (Φ 72)	2		
7	24101-062074	BALL BEARING (#6207)	1		
8	TA00026514A	PTO CLUTCH PACK	1		
9	NT45920000A2	SHAFT, PTO SHIFT	1		
10	24101-063064	Bearing, Ball (#6306)	1		
11	TN45520000A4	COLLAR	1		
12	22242-000300	SNAP RING, SHAFT (Φ 30)	1		
13	TT64070000A4	SEAL RING	2		
14	TT64080000A4	RETAININGSCREWM7X1	1		
15	24101-063074	Bearing, Ball (#6307)	2		
16	NT45670000A4	Thrust Washer	1		
17	NT45680000A4	Spacer	1		
18	NT45440000A4	COLLAR	1		
19	TA00033210A	NEEDLE BUSH D	2		
21	TA00033211A	GEAR 46T, PTO	1		
22	TZ45100000A3	HUB,P.T.O	2		
23	TZ45110000B4	SLEEVE,P.T.O	2		
24	TA00033209A	NEEDLE BUSH B	1		
26	TA00033212A	GEAR 49T, PTO	1		
27	TZ45140000A4	COLLAR	1		
28	TN45120000A4	WASHER	1		
29	NT45130000B		1		
29-1	NT45130000B3	shaft, PTO	1		
30	TT62040000A3	PTO OIL SEAL QLF35X60X19	1		
31	NT45740000A3	PACKING, PTO SHAFT HOUSING	1		
32	NT45640000A4	Bearing Cover	1		
33	26013-060162	Bolt, Hexa (6-16)	3		
34	TCA8130000A4	SIGHTGLASS -> NT45690000A4	1		
35	26013-100252	SCREW,CAPTIVEWASHERCAP	3		
36	26013-100352	Bolt, Hexa (10-35)	4		
37	26013-060162	Bolt, Hexa (6-16)	3		
38	TT80030000A3	P.T.O COVER	1		
39	26106-060162	HEXFLANGE BOLT	2		
40	26013-080202	Bolt, Hexa (8-20)	2		
41	26013-080302	HEX BOLT W/WASHER	2		
42	NT45620000A3	Seal Case	1		
43	24341-000700	O-RING, FIX (Φ70)	1		
44	23871-010000	PLUG	1		
45	TA00000738B	BRACKET, PTO SHAFT COVER	1		
46	TA00000739A	COVER, PTO SHAFT	1		

[illegible]

FIG C045-2

Branson 3520H(US)
_EN

GEAR, IND PTO SPEED CHANGE

Year/Month

2020/02

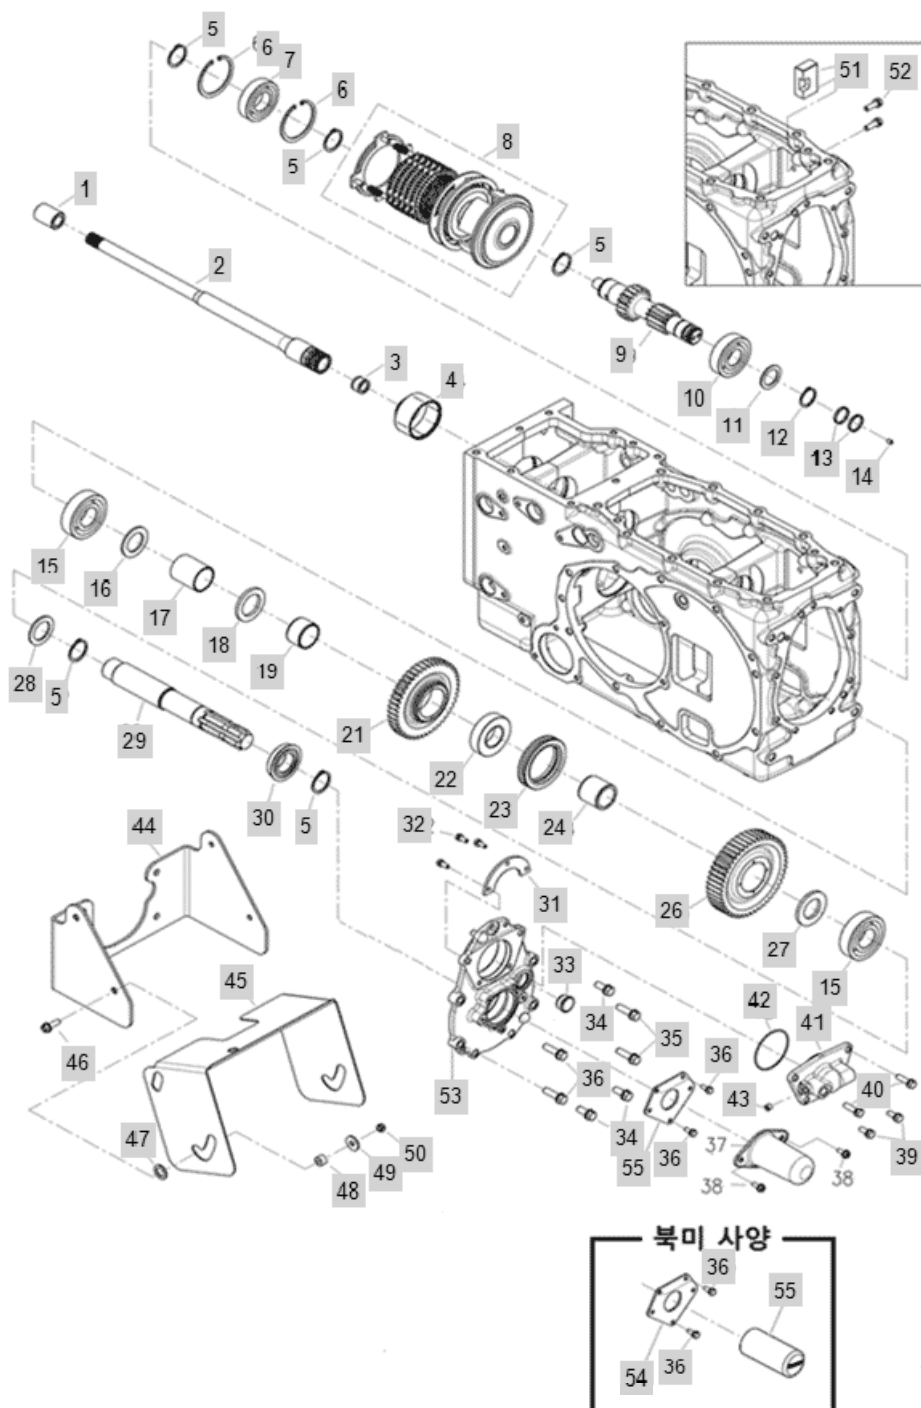


FIG C045-2 Branson 3520H(US) _EN		GEAR, IND PTO SPEED CHANGE			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	TN45200000A4	JOINT	1		
2	TA00015484A	FLOODLAMP	1		
3	24161-182417	Bearing, Needle (#18-24-17)	1		
4	NT45480000A3	PTO COUPLING	1		
5	22242-000350	SNAP RING, SHAFT (Φ 35)	5		
6	22252-000720	RING, CIRCLIP (Φ 72)	2		
7	24101-062074	BALL BEARING (#6207)	1		
8	TA00026514D	PTO CLUTCH PACK	1		
9	NT45920000A2	SHAFT, PTO SHIFT	1		
10	24101-063064	Bearing, Ball (#6306)	1		
11	TN45520000A4	COLLAR	1		
12	22242-000300	SNAP RING, SHAFT (Φ 30)	1		
13	TT64070000B		2		
14	TT64080000A4	RETAININGSCREWM7X1	1		
15	24101-063074	Bearing, Ball (#6307)	2		
16	NT45670000B4	THRUST WASHER	1		
17	NT45680000B4	SPACER	1		
18	NT45440000B4	COLLAR	1		
19	TA00033210A	NEEDLE BUSH D	2		
21	TA00033211B	GEAR 46T, PTO	1		
22	TZ45100000A3	HUB,P.T.O	2		
23	TZ45110000C4	SLEEVE,P.T.O	2		
24	TA00033209A	NEEDLE BUSH B	1		
26	TA00033212B	GEAR 49T, PTO	1		
27	TZ45140000A4	COLLAR	1		
28	TN45120000A4	WASHER	1		
29	NT45130000B3	shaft, PTO	1		
29-1	NT45130000B3	shaft, PTO	1		
30	TT62040000A3	PTO OIL SEAL QLF35X60X19	1		
31	NT45640000A4	Bearing Cover	1		
32	26013-060162	Bolt, Hexa (6-16)	3		
33	TCA8130000A4	SIGHTGLASS -> NT45690000A4	1		
34	26013-100252	SCREW,CAPTIVEWASHERCAP	3		
35	26013-100352	Bolt, Hexa (10-35)	4		
36	26013-060162	Bolt, Hexa (6-16)	3		
39	26013-080202	Bolt, Hexa (8-20)	2		
40	26013-080302	HEX BOLT W/WASHER	2		
41	NT45620000A3	Seal Case	1		
42	24341-000700	O-RING, FIX (Φ70)	1		
43	23871-010000	PLUG	1		
44	TA00000738D	BRACKET, PTO SHAFT COVER	1		
45	TA00000739F	COVER, PTO SHAFT	1		
46	26106-080252	SCREW,HEXFLANGEHEADCAP	4		
47	FB80520000A4	RUBBER	8		
48	FB80550000A4	BUSH	4		

[illegible]


FIG C046-1

Branson 3520H(US)
_EN

Rear Axle Case PTO Shift

Year/Month

2020/02

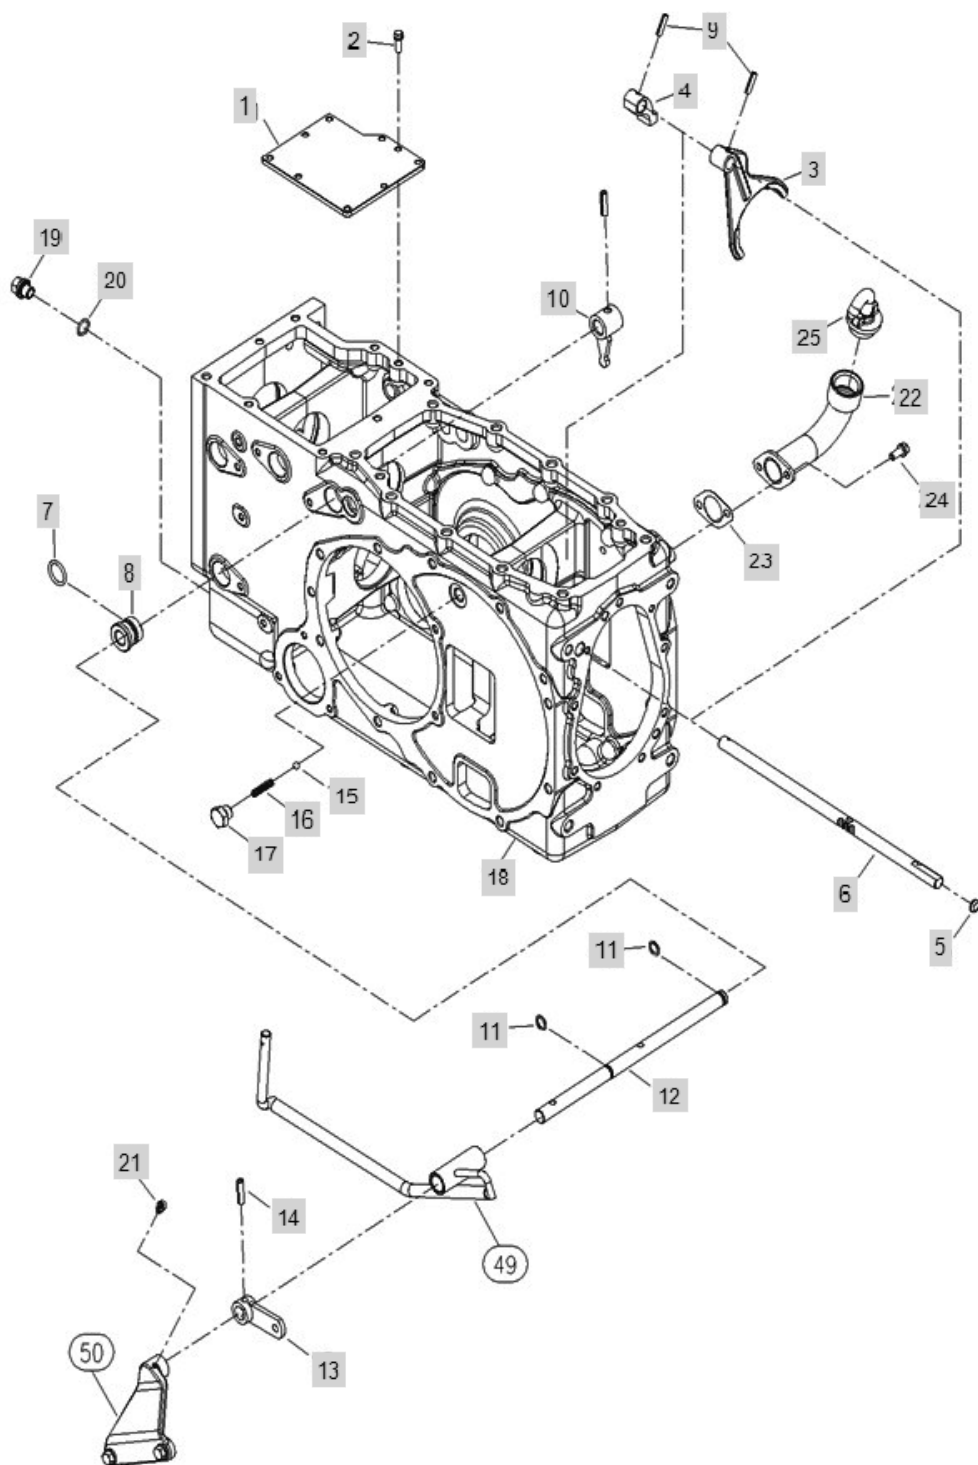

[illegible]


FIG C046-2

Branson 3520H(US)
_EN

REAR AXLE CASE, PTO SHIFT

Year/Month

2020/02

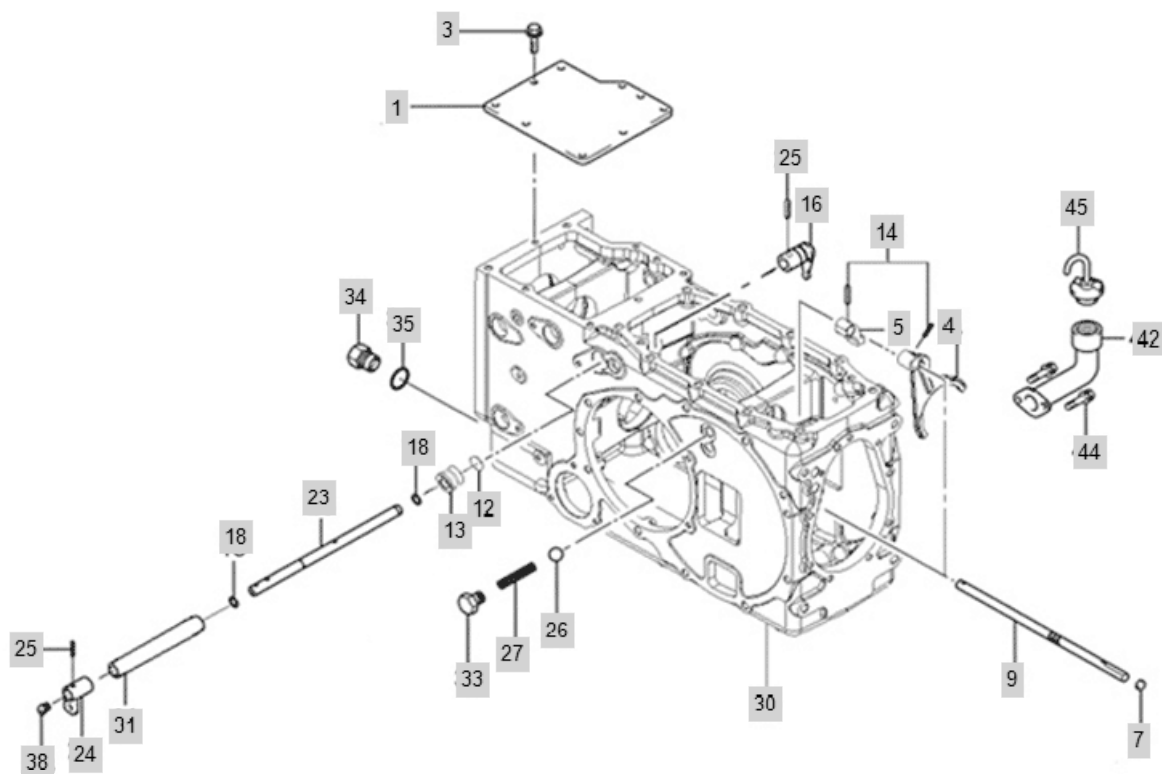

[illegible]


FIG C046-3

Branson 3520H(US)
_EN

REAR AXLE CASE, PTO SHIFT(2019.12~)

Year/Month

2020/02

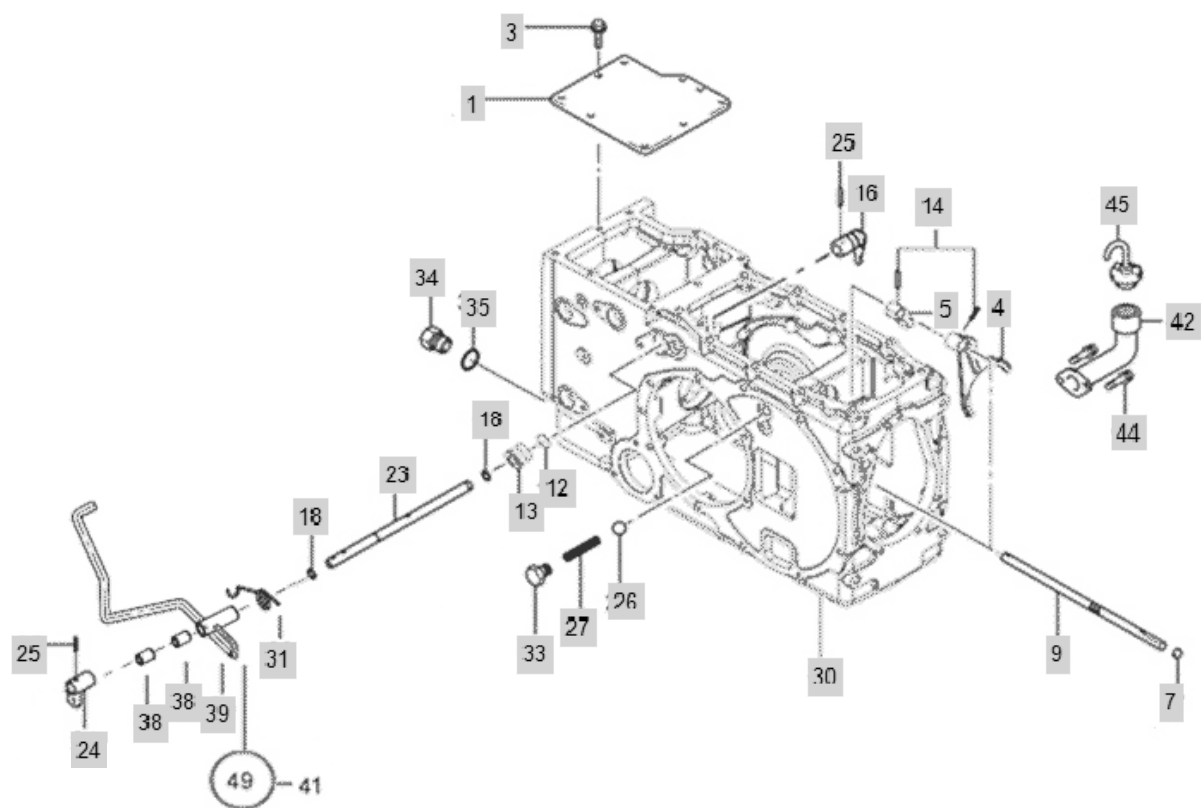

[illegible]

FIG C047

Branson 3520H(US)
_EN

LeverAss'yPTOSpeedChange

Year/Month

2020/02

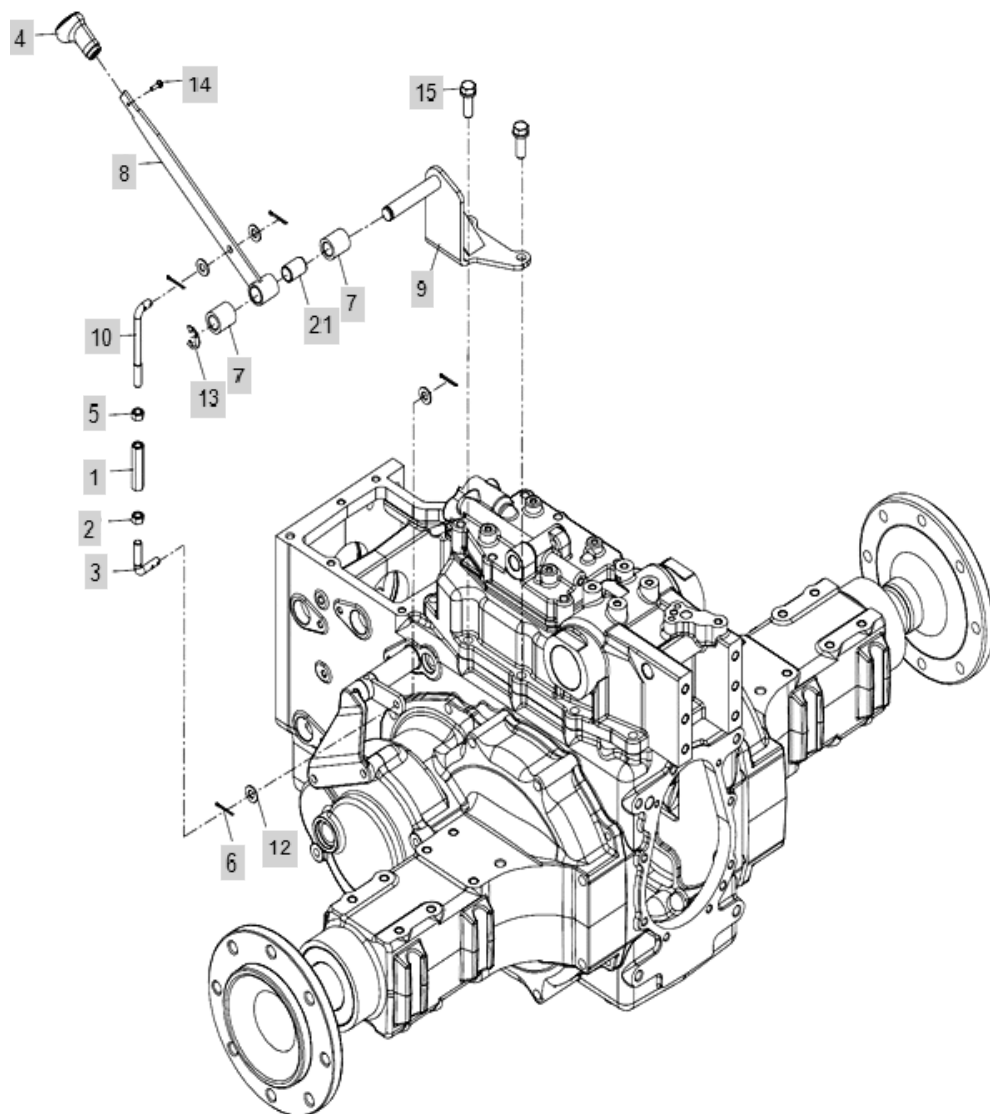


FIG C048-1

Branson 3520H(US)
_EN

HousingRearAxle

Year/Month

2020/02

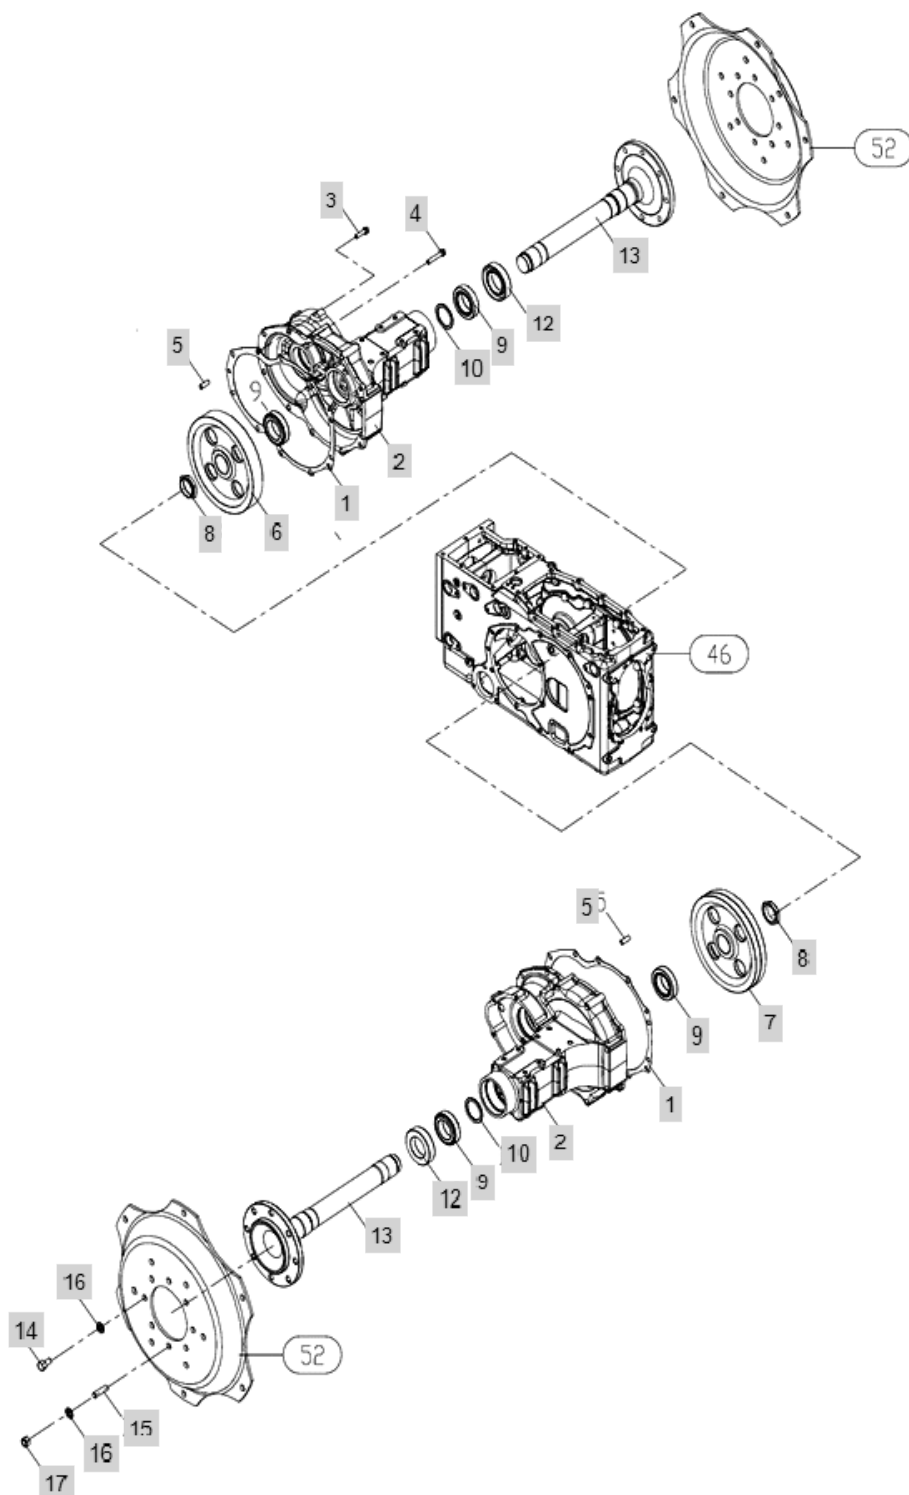



FIG C048-2

Branson 3520H(US)
_EN

HOUSING, REAR AXLE

Year/Month

2020/02

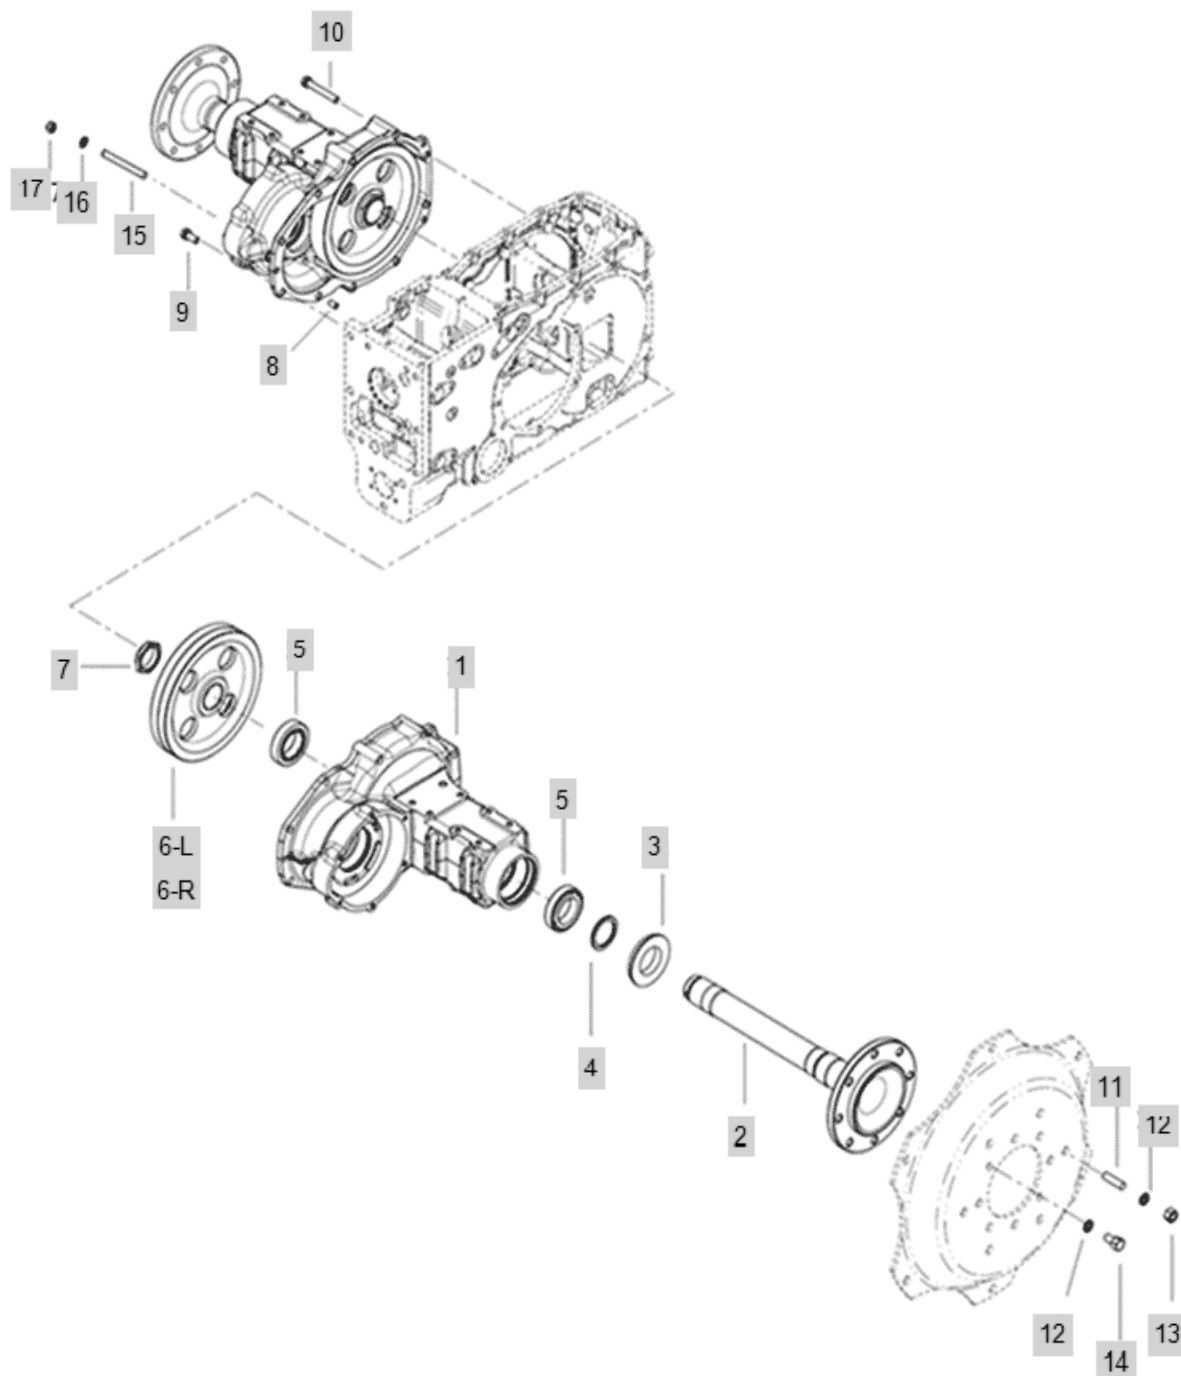

[illegible]

FIG C049

Branson 3520H(US)
_EN

DRIVING PART, REAR AXLE

Year/Month

2020/02

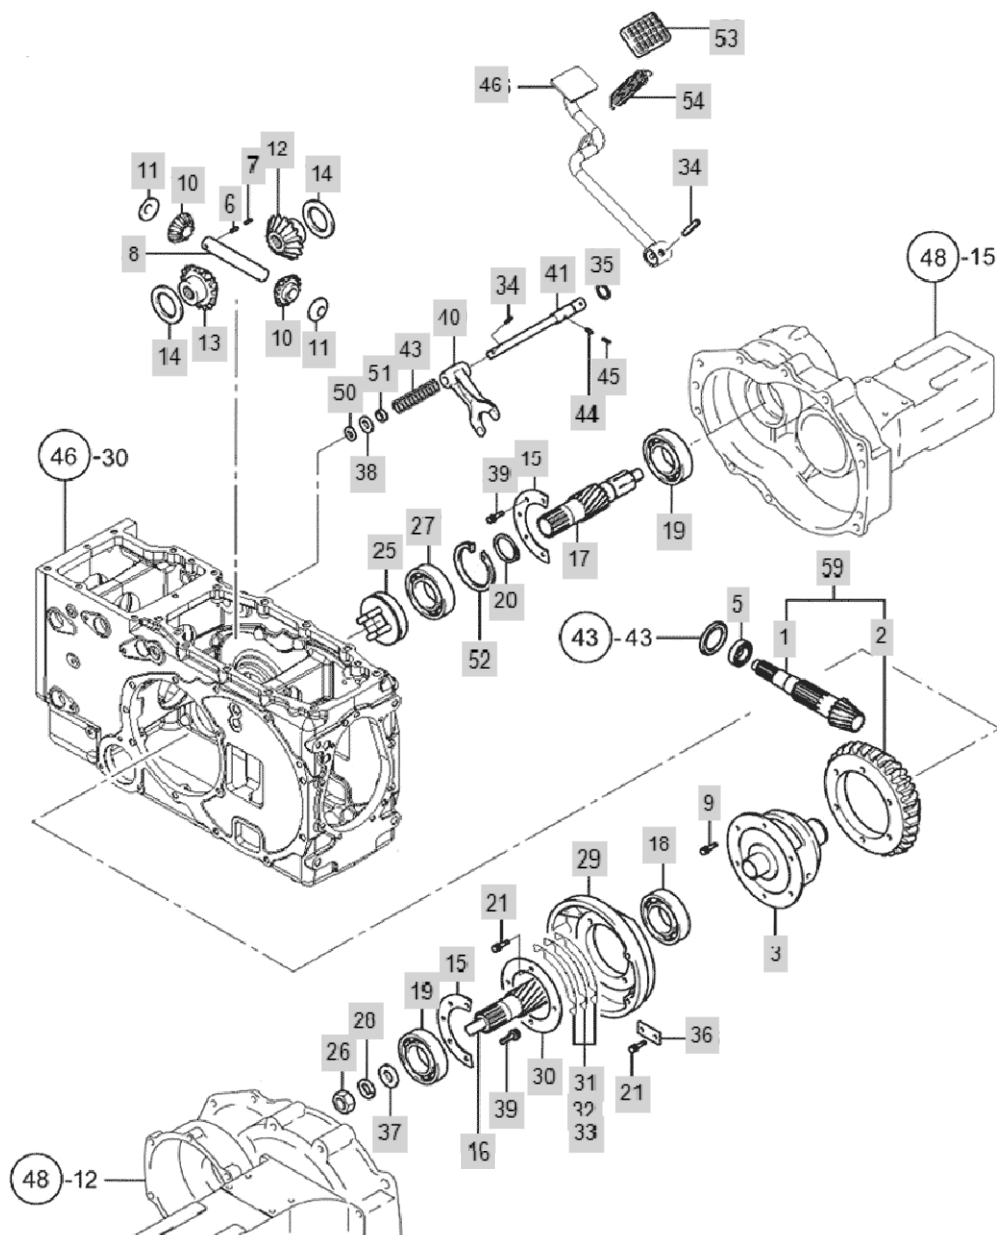


FIG C049 Branson 3520H(US) _EN		DRIVING PART, REAR AXLE			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	TN49510000A2	COUNTERSAHFT	1		
2	TN49520000C2	RINGGEAR	1		
3	TN49030000D2	CASE,DIFFERENTIAL -> TA00022799A	1		
5	TT78020000A3	BEARINGNJ307R	1		
6	22312-060360	PIN, DOWEL (6-36)	1		
7	22351-060032	PIN, SPRING (6-32)	1		
8	TF64080000A4	PINIONSHAFT	1		
9	TF64090000A4	BOLT	6		
10	TF64100000A3	PINION	2		
11	TF64110000A4	PINIONLINER	2		
12	TF64120000A3	DIFF.SIDEGEAR(A)	1		
13	TF64130000A3	DIFF.SIDEGEAR(B)	1		
14	TF64140000B4	SIDEGEARLINER	2		
15	TB32150000A4	RETAINER	2		
16	TN49160000A3	PINIONL,FINAL	1		
17	TN49170000A3	FINAL PINION (R)	1		
18	24101-062114	Bearing, Ball (#6211)	1		
19	TF64190000A4	BALL BEARING (#6308HL1) -> TF64190000A3	2		
20	22242-000500	SNAP RING, SHAFT (Φ50)	1		
21	26013-080202	Bolt, Hexa (8-20)	4		
25	TF64250000B3	THRUST, DIFF-LOCK ASSY	1		
26	26776-220002	NUT	2		
27	24101-060102	BALL BEARING (#6010)	1		
28	22217-220000	WASHER, SPRING (Φ 22)	2		
29	TN49550000B2	CARRIOR	1		
30	TN49590000A4	RETAINER	1		
31	TZ49560000A4	SHIMA	3		
32	TZ49570000A4	SHIMB	3		
33	TZ49580000A4	SHIMC	2		
34	22351-080032	PIN, SPRING (8-32)	2		
35	24311-000160	O-RING, DYNAMIC (Φ16)	1		
36	TB32360000A4	RETAINER	2		
37	TN49370000A4	WASHER	2		
38	TN49380000A4	WASHER	1		
39	26013-080202	Bolt, Hexa (8-20)	10		
40	TN49400000A2	FORK DIFFERENTIAL LOCK	1		
41	TN49410000B3		1		
43	TN49430000A4	SPRING	1		
44	22351-080040	PIN, SPRING (8-40)	1		
45	22351-050040	PIN, SPRING (5-04)	1		
46	TA00001510A	Pedal, Diff.Lock	1		
50	22121-140000	WASHER, PLAIN (Φ 14)	1		
51	24421-152507	Seal, Oil (#15-25-07)	1		
52	22252-000800	RING, CIRCLIP (Φ 80)	1		
53	TN01330000A4	RUBBERCOVER	1		

[illegible]

FIG C049-2

Branson 3520H(US)
_EN

DRIVING PART, REAR AXLE(2016.06.08)

Year/Month

2020/02

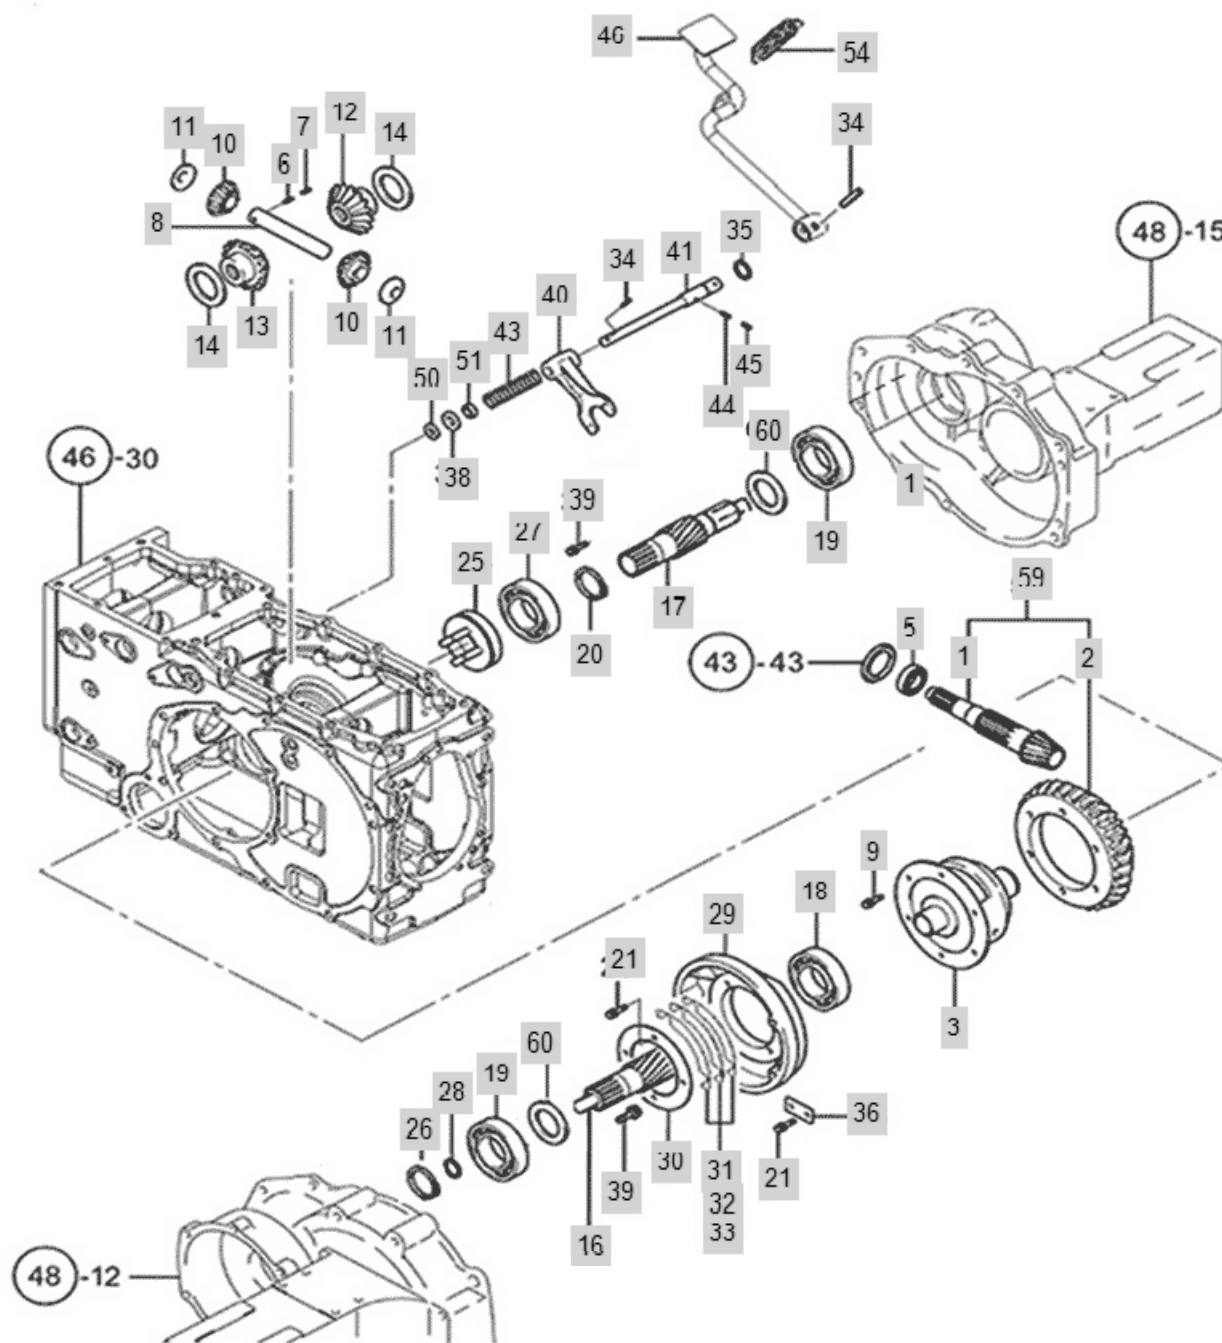


FIG C049-2 Branson 3520H(US) _EN		DRIVING PART, REAR AXLE(2016.06.08)		Year/Month
				2020/02
KeyNo.	Part Number	Part Name	Quantity	Other
1	TN49510000A2	COUNTERSAHFT	1	
2	TN49520000C2	RINGGEAR	1	
3	TN49030000D2	CASE,DIFFERENTIAL -> TA00022799A	1	
5	TT78020000A3	BEARINGNJ307R	1	
6	22312-060360	PIN, DOWEL (6-36)	1	
7	22351-060032	PIN, SPRING (6-32)	1	
8	TF64080000A4	PINIONSHAFT	1	
9	TF64090000A4	BOLT	6	
10	TF64100000A3	PINION	2	
11	TF64110000A4	PINIONLINER	2	
12	TF64120000A3	DIFF.SIDEGEAR(A)	1	
13	TF64130000A3	DIFF.SIDEGEAR(B)	1	
14	TF64140000B4	SIDEGEARLINER	2	
16	TA00032603C	FINAL PINION(L)	1	
17	TA00032596C	FINAL PINION(R)	1	
18	24101-062114	Bearing, Ball (#6211)	1	
19	TF64190000A4	BALL BEARING (#6308HL1) -> TF64190000A3	2	
20	22242-000500	SNAP RING, SHAFT (Φ50)	1	
21	26013-080202	Bolt, Hexa (8-20)	4	
25	TF64250000B3	THRUST, DIFF-LOCK ASSY	1	
26	22252-000900	RING, CIRCLIP (Φ 90)	1	
27	24101-060102	BALL BEARING (#6010)	1	
28	22242-000400	SNAP RING, SHAFT (Φ 40)	1	
29	TN49550000B2	CARRIOR	1	
30	TN49590000A4	RETAINER	1	
31	TZ49560000A4	SHIMA	3	
32	TZ49570000A4	SHIMB	3	
33	TZ49580000A4	SHIMC	2	
34	22351-080032	PIN, SPRING (8-32)	2	
35	24311-000160	O-RING, DYNAMIC (Φ16)	1	
36	TB32360000A4	RETAINER	2	
38	TN49380000A4	WASHER	1	
39	26013-080202	Bolt, Hexa (8-20)	10	
40	TN49400000A2	FORK DIFFERENTIAL LOCK	1	
41	TN49410000B3		1	
43	TN49430000A4	SPRING	1	
44	22351-080040	PIN, SPRING (8-40)	1	
45	22351-050040	PIN, SPRING (5-04)	1	
46	TA00001510A	Pedal, Diff.Lock	1	
50	22121-140000	WASHER, PLAIN (Φ 14)	1	
51	24421-152507	Seal, Oil (#15-25-07)	1	
54	TTB1300000A4	SPRING,RETURN	1	
59	TN49500000C9	RING GEAR ASSY	1	
60	FT63190000A4	SPACER	2	

FIG C049-3

Branson 3520H(US)
_EN

DRIVING PART, REAR AXLE(2016.10)

Year/Month

2020/02

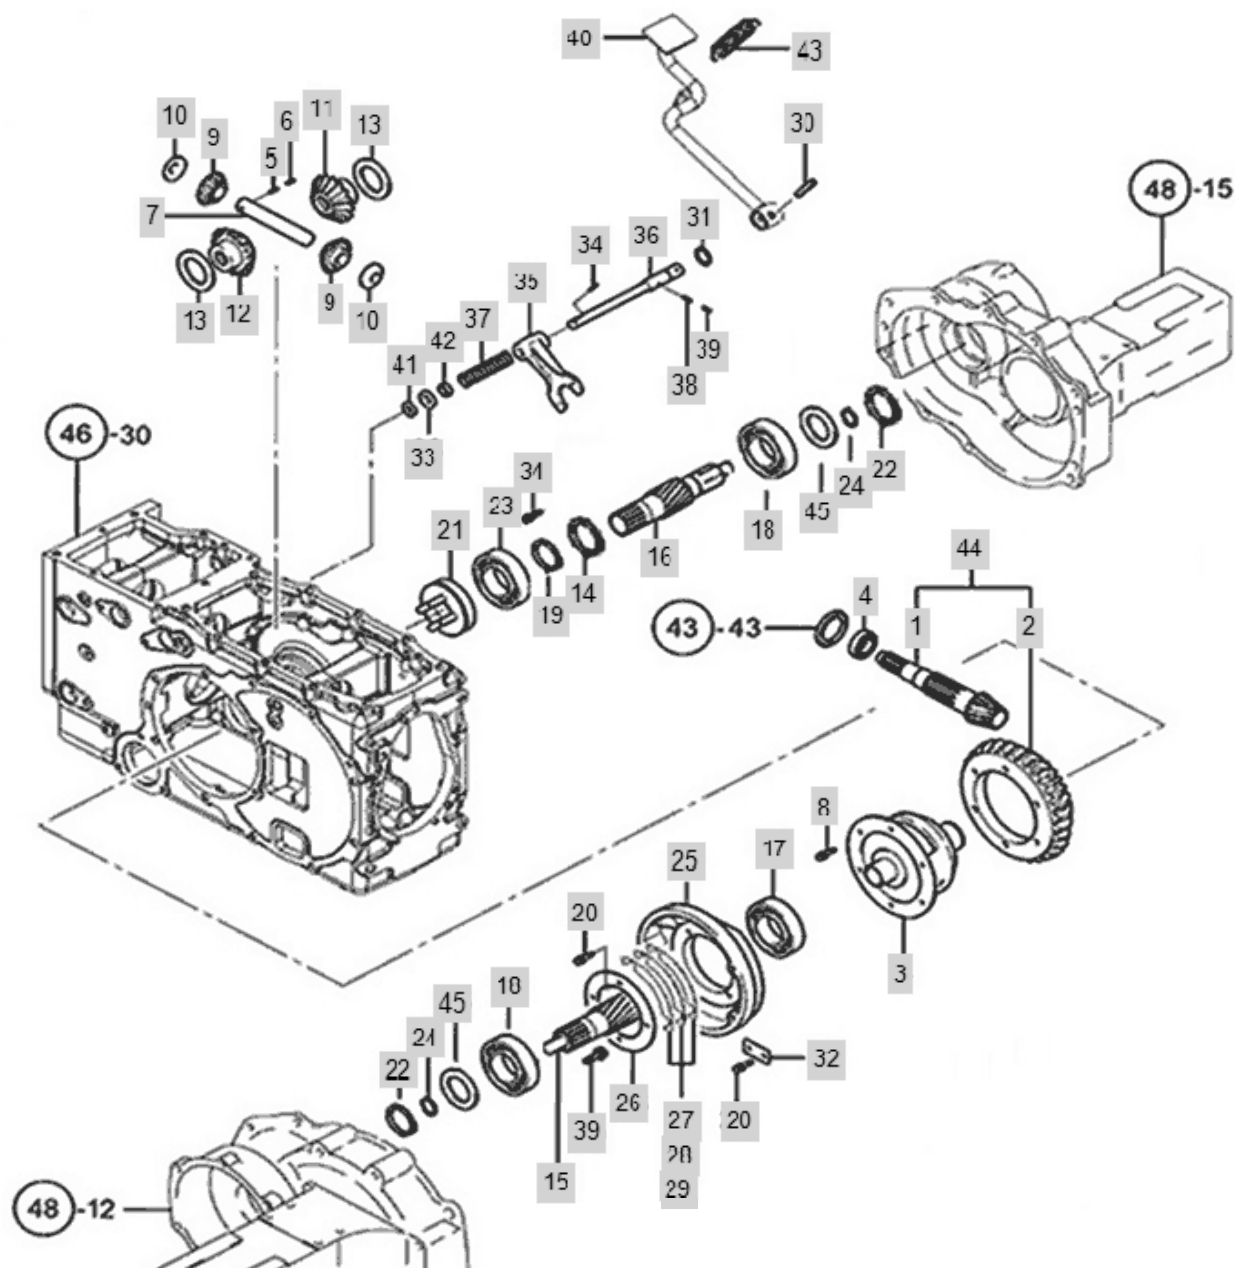


FIG C049-3 Branson 3520H(US) _EN		DRIVING PART, REAR AXLE(2016.10)		Year/Month
				2020/02
KeyNo.	Part Number	Part Name	Quantity	Other
1	TN49510000A2	COUNTERSAHFT	1	
2	TN49520000C2	RINGGEAR	1	
3	TN49030000D2	CASE,DIFFERENTIAL -> TA00022799A	1	
4	TT78020000A3	BEARINGNJ307R	1	
5	22312-060360	PIN, DOWEL (6-36)	1	
6	22351-060032	PIN, SPRING (6-32)	1	
7	TF64080000A4	PINIONSHAFT	1	
8	TF64090000A4	BOLT	6	
9	TF64100000A3	PINION	2	
10	TF64110000A4	PINIONLINER	2	
11	TF64120000A3	DIFF.SIDEGEAR(A)	1	
12	TF64130000A3	DIFF.SIDEGEAR(B)	1	
13	TF64140000B4	SIDEGEARLINER	2	
14	22252-000800	RING, CIRCLIP (Φ 80)	1	
15	TA00032603D	FINAL PINION(L)	1	
16	TA00032596D	FINAL PINION(R)	1	
17	24101-062114	Bearing, Ball (#6211)	1	
18	TF64190000A4	BALL BEARING (#6308HL1) -> TF64190000A3	2	
19	22242-000500	SNAP RING, SHAFT (Φ50)	1	
20	26013-080202	Bolt, Hexa (8-20)	4	
21	TF64250000B3	THRUST, DIFF-LOCK ASSY	1	
22	22252-000900	RING, CIRCLIP (Φ 90)	2	
23	24101-060102	BALL BEARING (#6010)	1	
24	22242-000400	SNAP RING, SHAFT (Φ 40)	2	
25	TN49550000B2	CARRIOR	1	
26	TN49590000A4	RETAINER	1	
27	TZ49560000A4	SHIMA	3	
28	TZ49570000A4	SHIMB	3	
29	TZ49580000A4	SHIMC	2	
30	22351-080032	PIN, SPRING (8-32)	2	
31	24311-000160	O-RING, DYNAMIC (Φ16)	1	
32	TB32360000A4	RETAINER	2	
33	TN49380000A4	WASHER	1	
34	26013-080202	Bolt, Hexa (8-20)	10	
35	TN49400000A2	FORK DIFFERENTIAL LOCK	1	
36	TN49410000B3		1	
37	TN49430000A4	SPRING	1	
38	22351-080040	PIN, SPRING (8-40)	1	
39	22351-050040	PIN, SPRING (5-04)	1	
40	TA00001510A	Pedal, Diff.Lock	1	
41	22121-140000	WASHER, PLAIN (Φ 14)	1	
42	24421-152507	Seal, Oil (#15-25-07)	1	
43	TTB1300000A4	SPRING,RETURN	1	
44	TN49500000C9	RING GEAR ASSY	1	
45	TA00044074A	SPACER (50x40x3T)	2	

FIG C049-4

Branson 3520H(US)
_EN

DRIVING PART, REAR AXLE(2019.12~)

Year/Month

2020/02

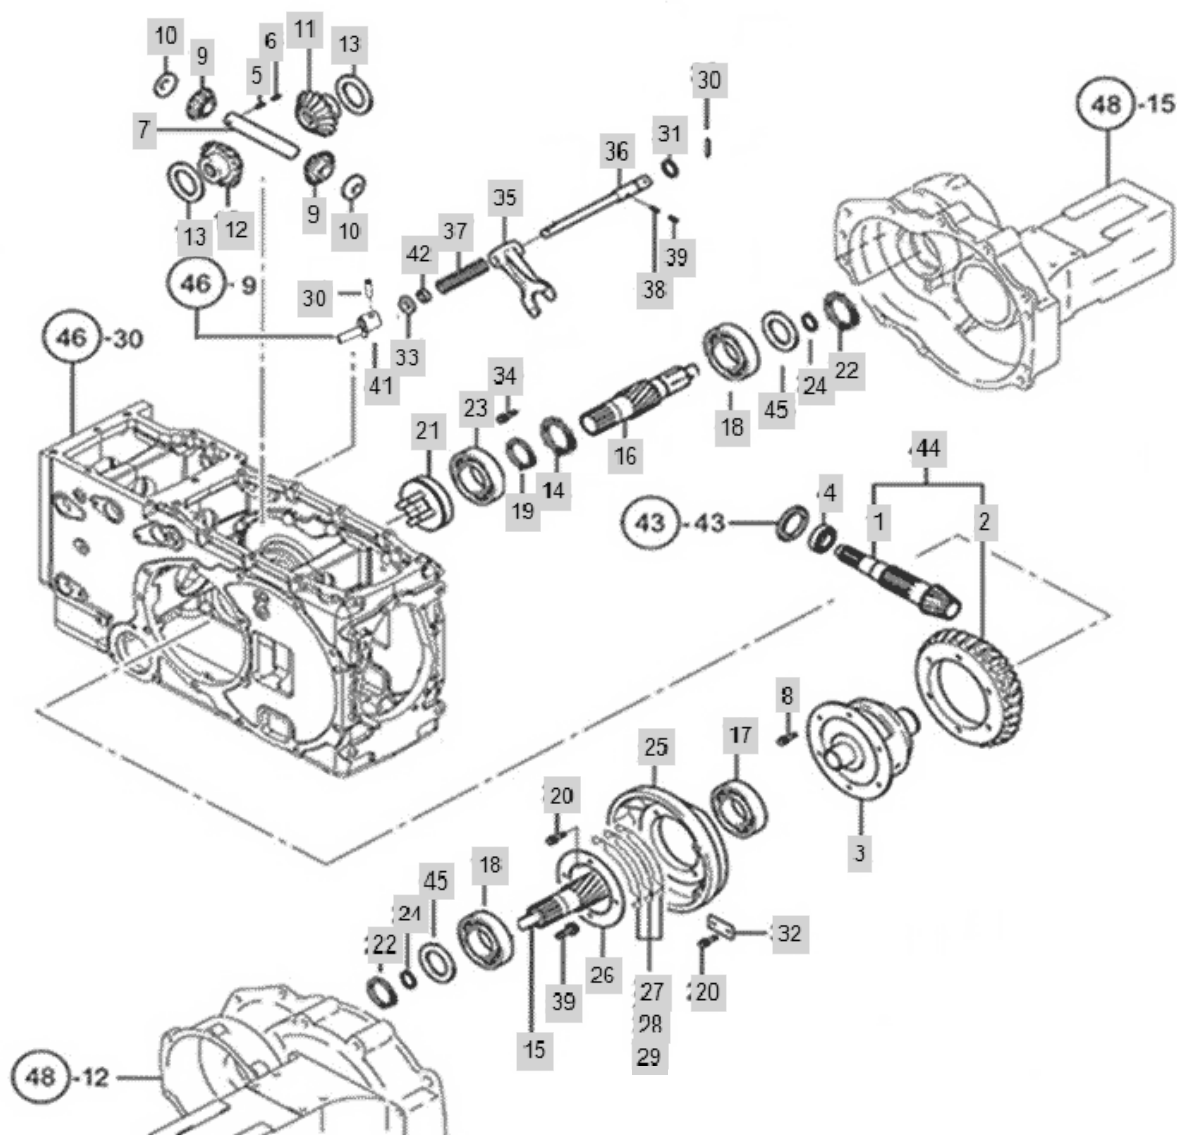


FIG C049-4 Branson 3520H(US) _EN		DRIVING PART, REAR AXLE(2019.12~)			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	TN49510000A2	COUNTERSAHFT	1		
2	TN49520000C2	RINGGEAR	1		
3	TN49030000D2	CASE,DIFFERENTIAL -> TA00022799A	1		
4	TT78020000A3	BEARINGNJ307R	1		
5	22312-060360	PIN, DOWEL (6-36)	1		
6	22351-060032	PIN, SPRING (6-32)	1		
7	TF64080000A4	PINIONSHAFT	1		
8	TF64090000A4	BOLT	6		
9	TF64100000A3	PINION	2		
10	TF64110000A4	PINIONLINER	2		
11	TF64120000A3	DIFF.SIDEGEAR(A)	1		
12	TF64130000A3	DIFF.SIDEGEAR(B)	1		
13	TF64140000B4	SIDEGEARLINER	2		
14	22252-000800	RING, CIRCLIP (Φ 80)	1		
15	TA00032603D	FINAL PINION(L)	1		
16	TA00032596D	FINAL PINION(R)	1		
17	24101-062114	Bearing, Ball (#6211)	1		
18	TF64190000A4	BALL BEARING (#6308HL1) -> TF64190000A3	2		
19	22242-000500	SNAP RING, SHAFT (Φ50)	1		
20	26013-080202	Bolt, Hexa (8-20)	4		
21	TF64250000B3	THRUST, DIFF-LOCK ASSY	1		
22	22252-000900	RING, CIRCLIP (Φ 90)	2		
23	24101-060104	Bearing, Ball (#6010)	1		
24	22242-000400	SNAP RING, SHAFT (Φ 40)	2		
25	TN49550000B2	CARRIOR	1		
26	TN49590000A4	RETAINER	1		
27	TZ49560000A4	SHIMA	3		
28	TZ49570000A4	SHIMB	3		
29	TZ49580000A4	SHIMC	2		
30	22351-080032	PIN, SPRING (8-32)	2		
31	24311-000160	O-RING, DYNAMIC (Φ16)	1		
32	TB32360000A4	RETAINER	2		
33	TN49380000A4	WASHER	1		
34	26013-080202	Bolt, Hexa (8-20)	10		
35	TN49400000A2	FORK DIFFERENTIAL LOCK	1		
36	TA00027271B	SHAFT	1		
37	TN49430000A4	SPRING	1		
38	22351-080040	PIN, SPRING (8-40)	1		
39	22351-050040	PIN, SPRING (5-04)	1		
41	TA00027987B	LINK	1		
42	24421-152507	Seal, Oil (#15-25-07)	1		
44	TN49500000C9	RING GEAR ASSY	1		
45	TA00044074A	SPACER (50x40x3T)	2		


FIG C050A-1

Branson 3520H(US)
_EN

Brake

Year/Month

2020/02

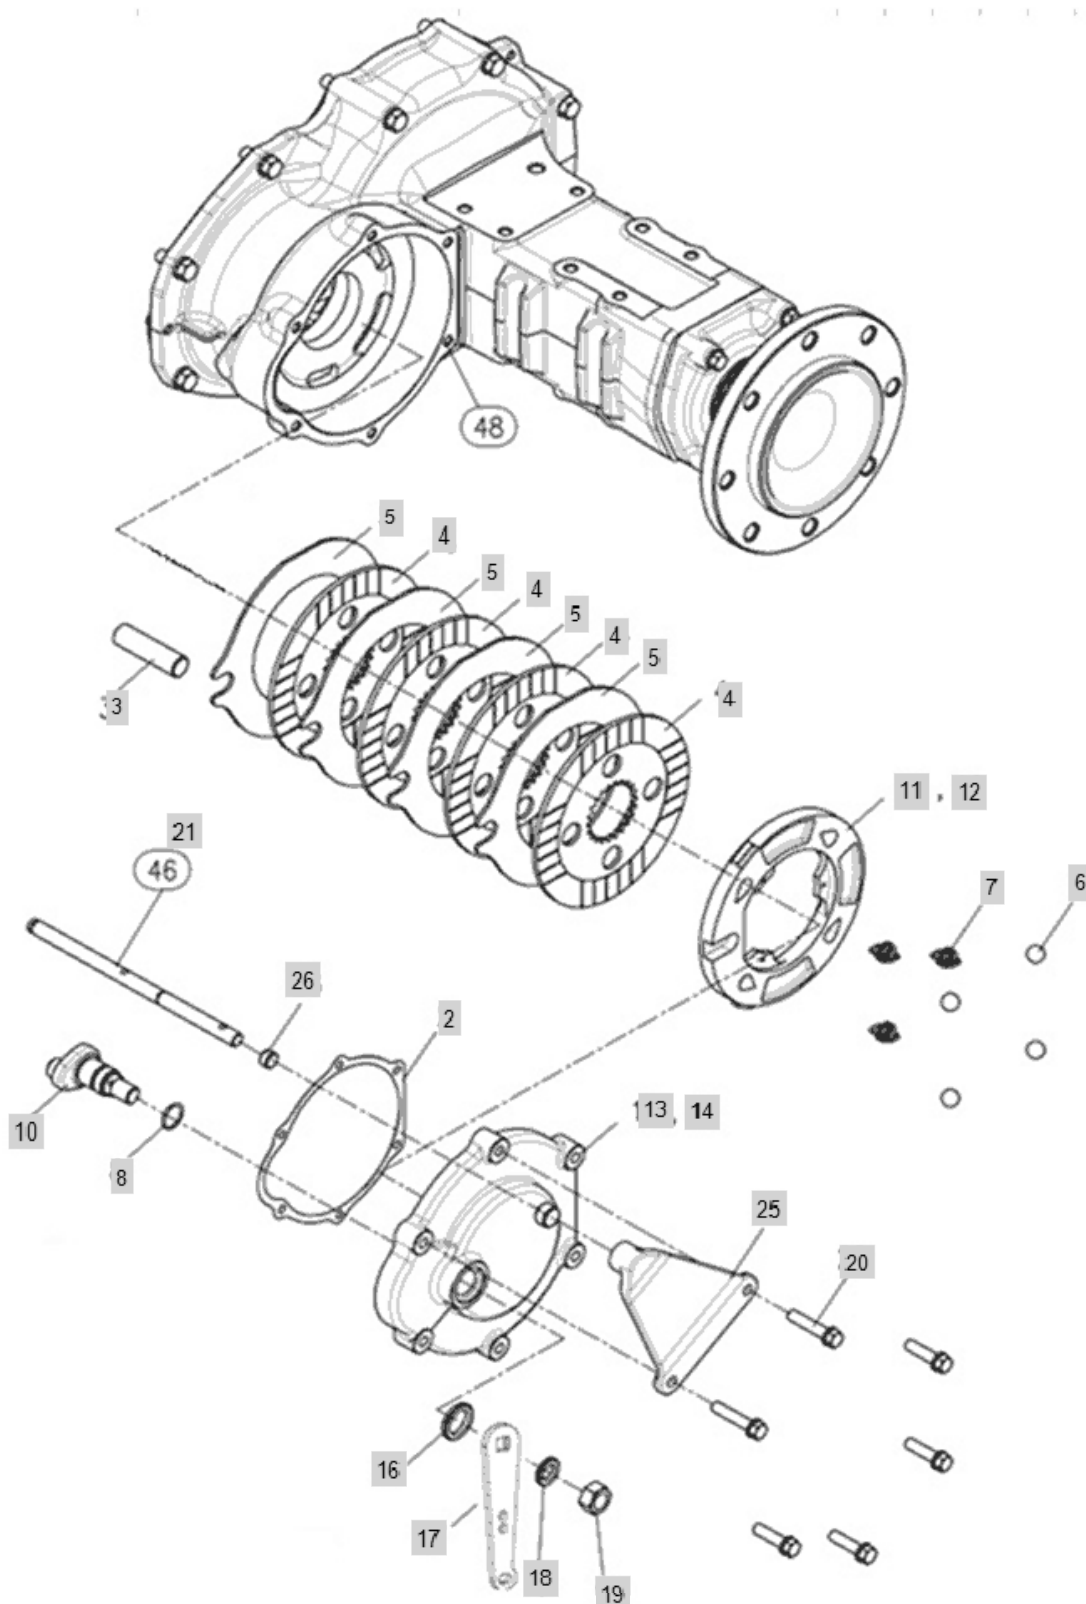

[illegible]

FIG C050T-2

Branson 3520H(US)
_EN

BRAKE

Year/Month

2020/02

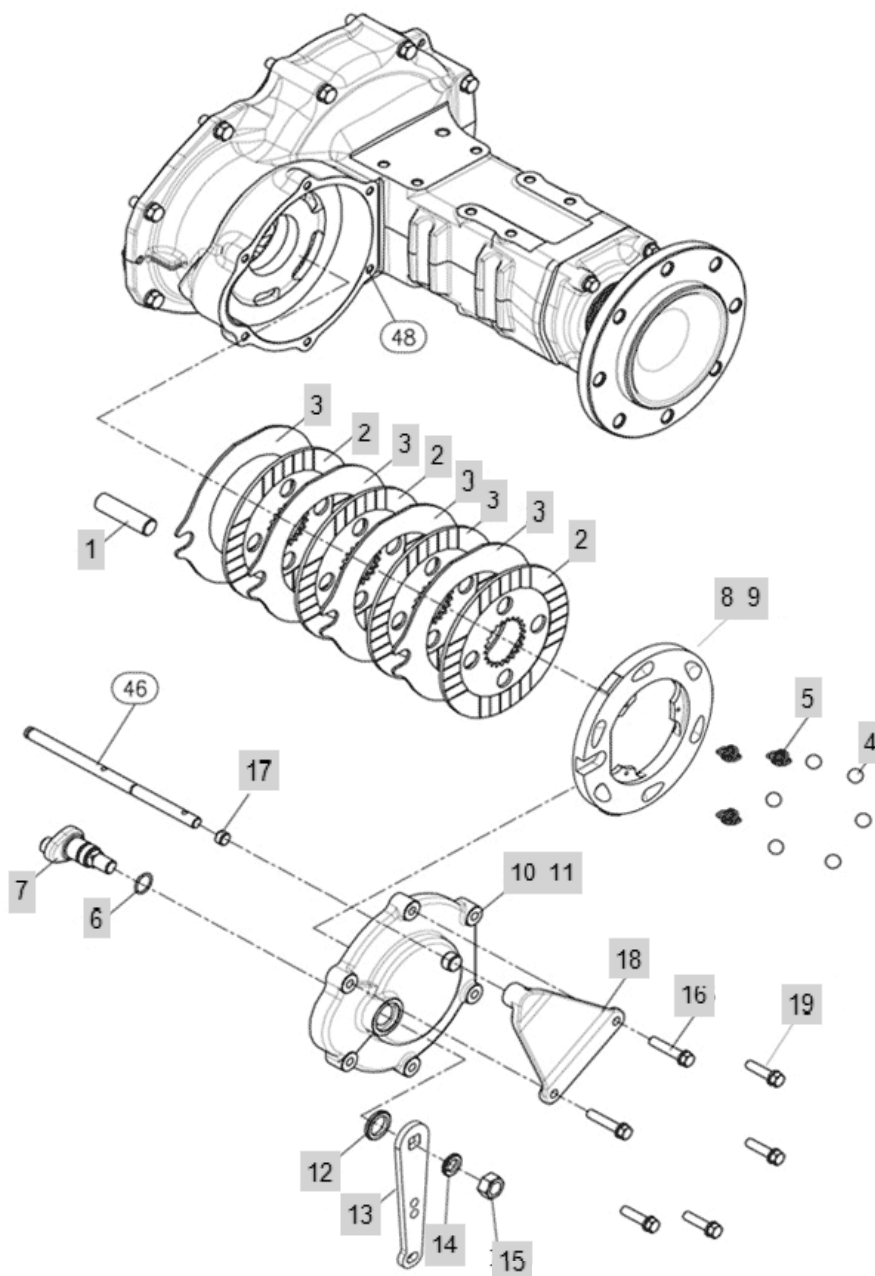


FIG C053-1

Branson 3520H(US)
_EN

BRAKE PEDAL

Year/Month

2020/02

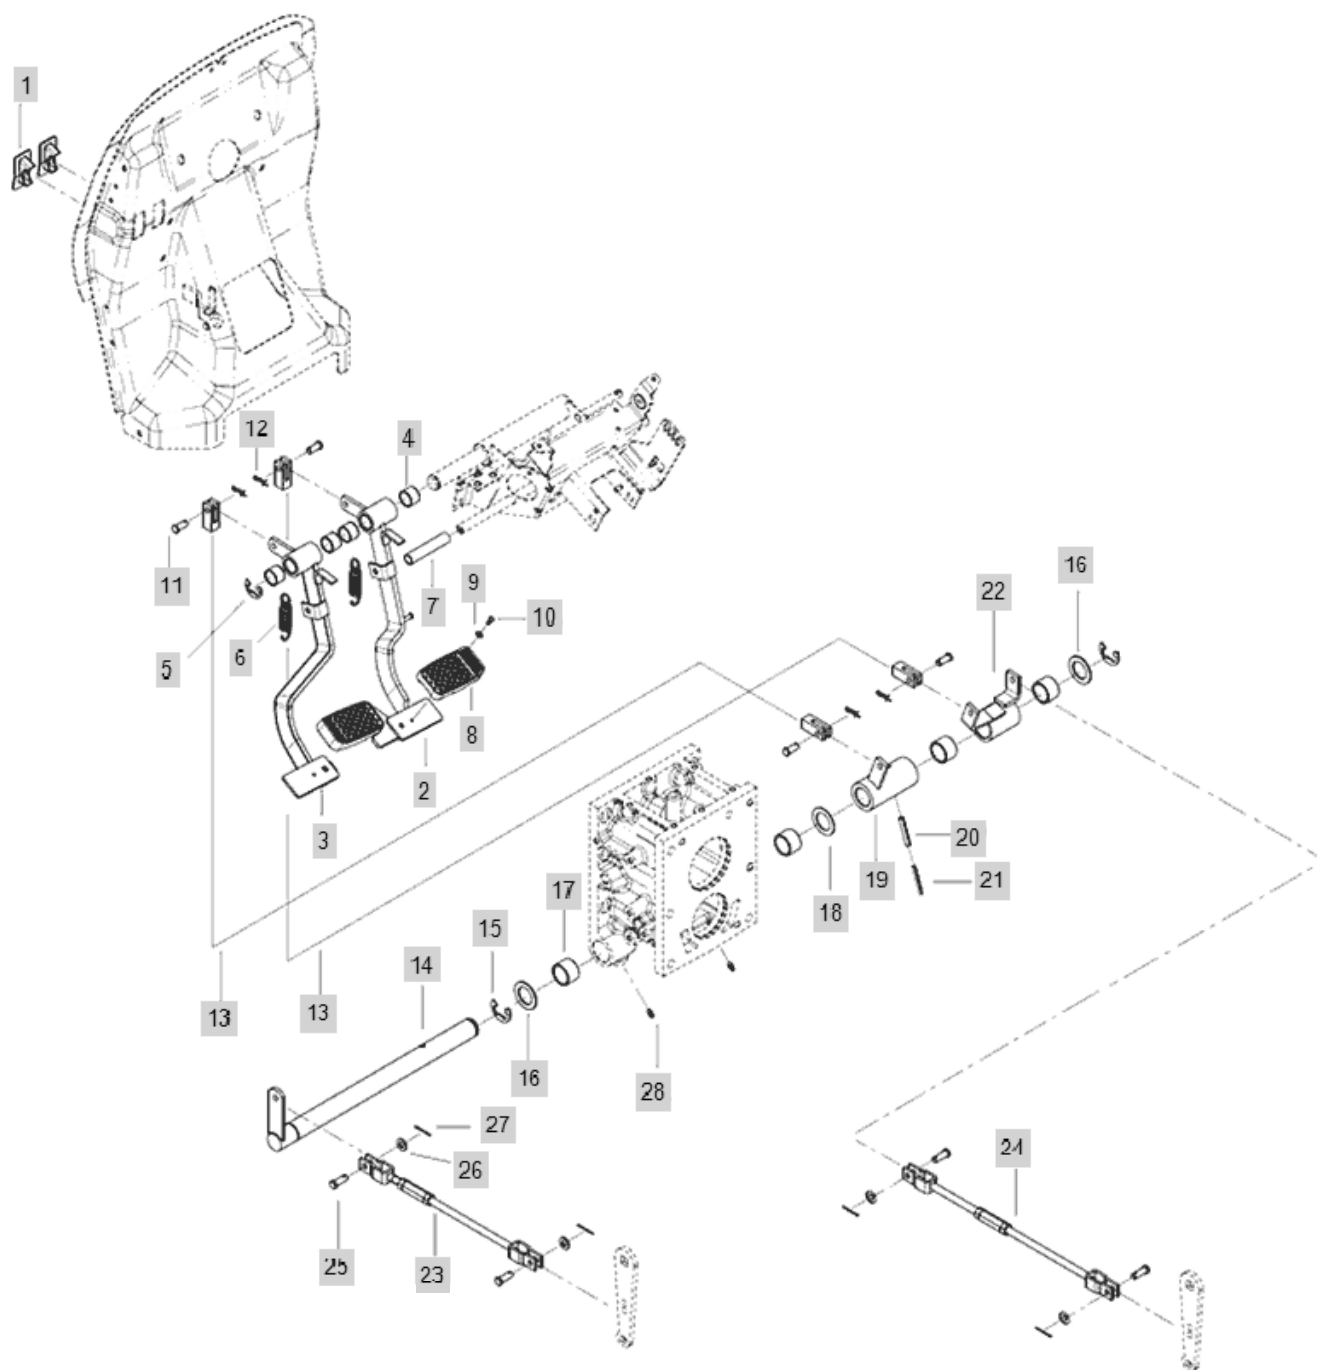



FIG C053-2

Branson 3520H(US)
_EN

BRAKE PEDAL(2019.12~)

Year/Month

2020/02

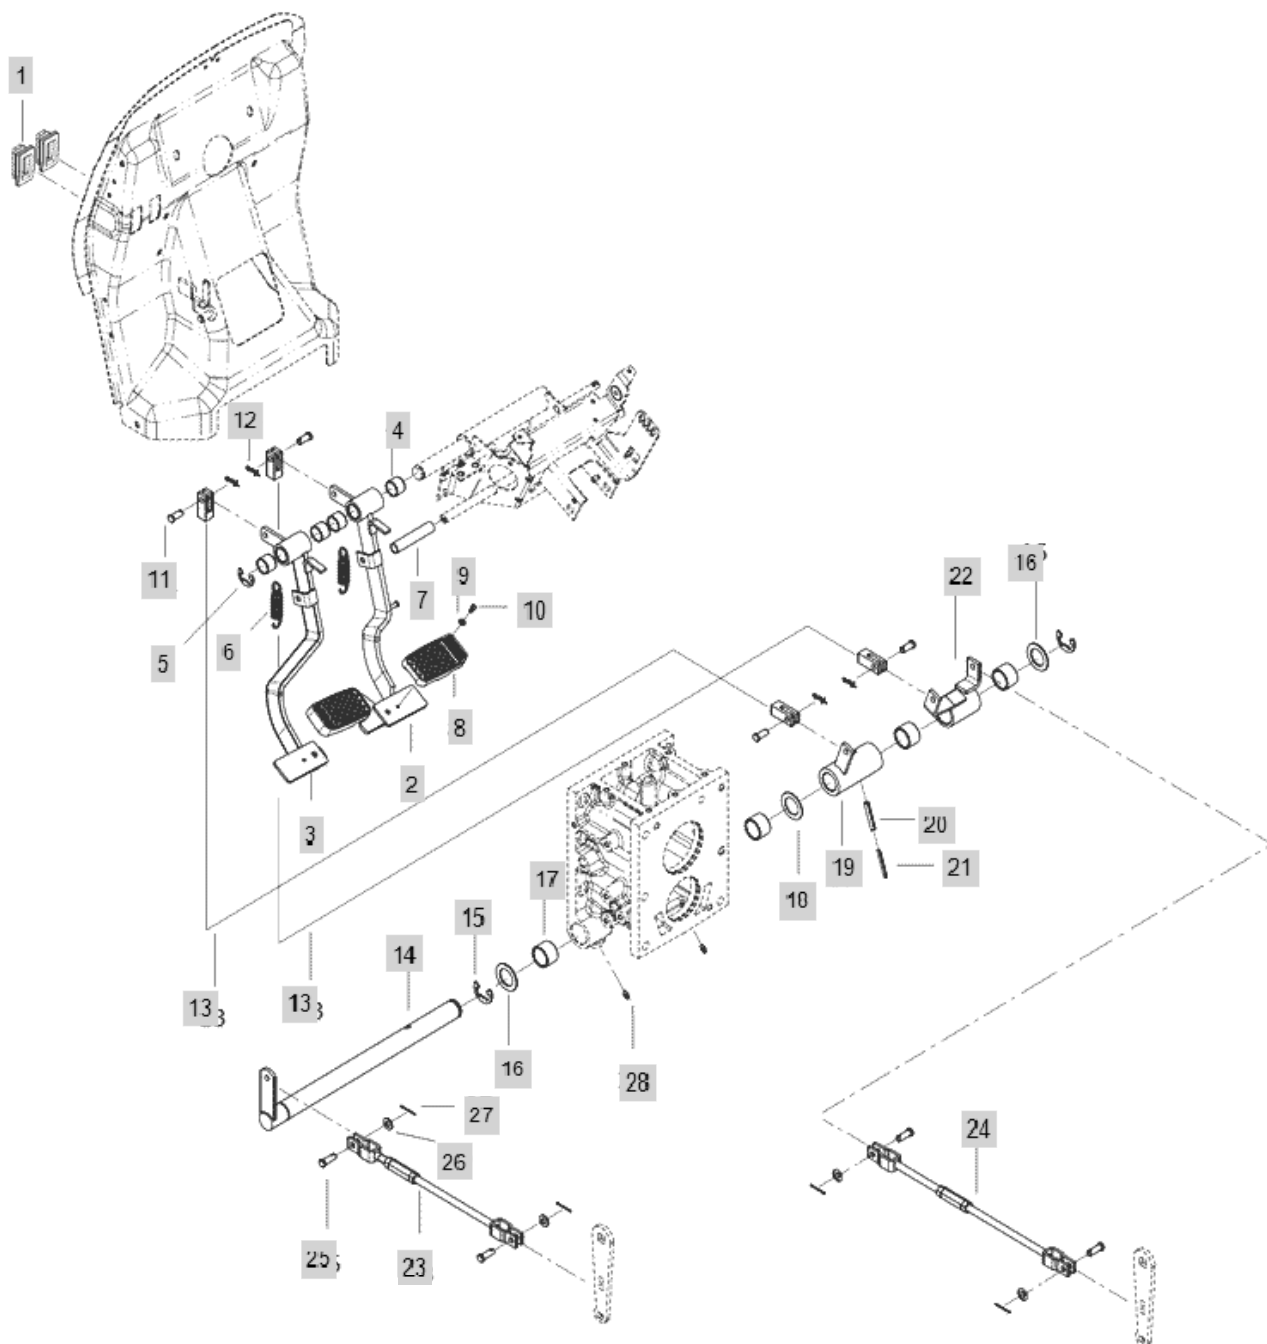

[illegible]


FIG C054

Branson 3520H(US)
_EN

SUPPORT, BRAKE

Year/Month

2020/02

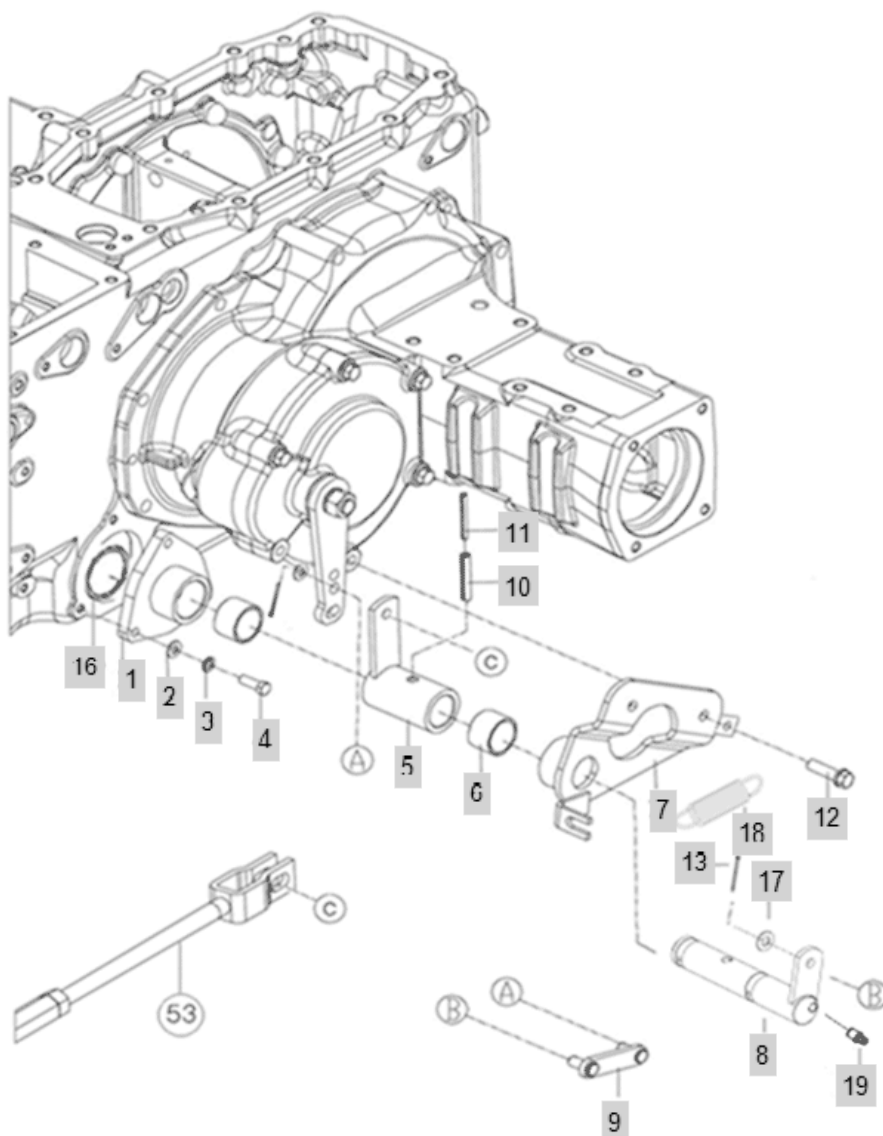

[illegible]


FIG C055

Branson 3520H(US)
_EN

PARKING BRAKE

Year/Month

2020/02

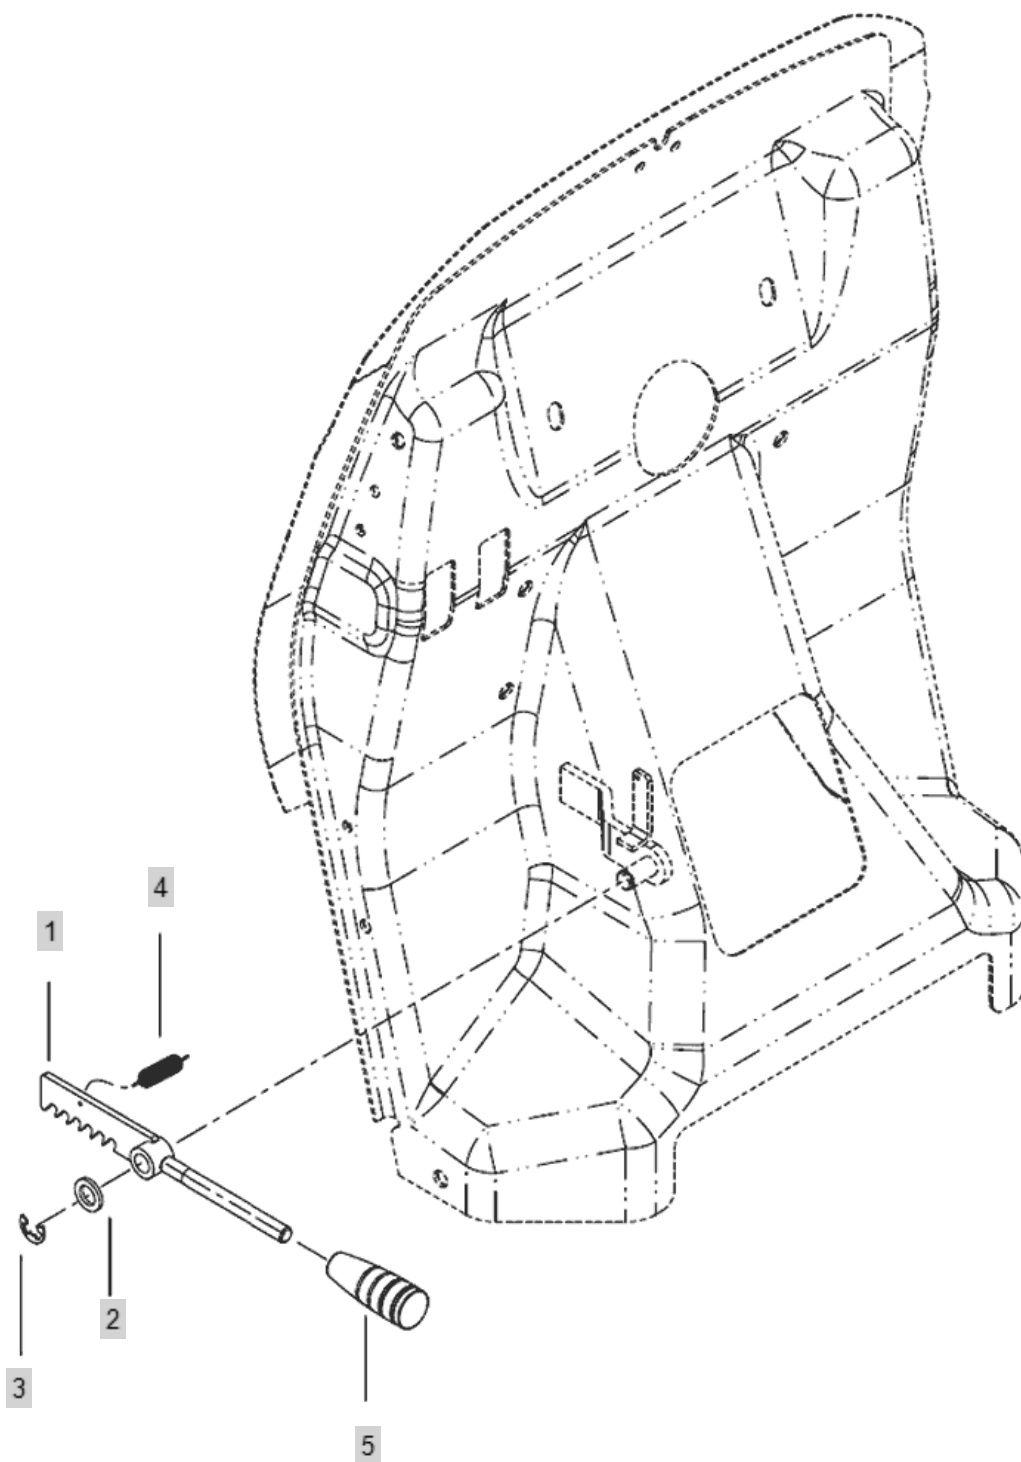

[illegible]

FIG C099A

Branson 3520H(US)
_EN

HYD PUMP

Year/Month

2020/02

3 Cylinder

ENGINE PART
(GEAR CASE ASS'Y)

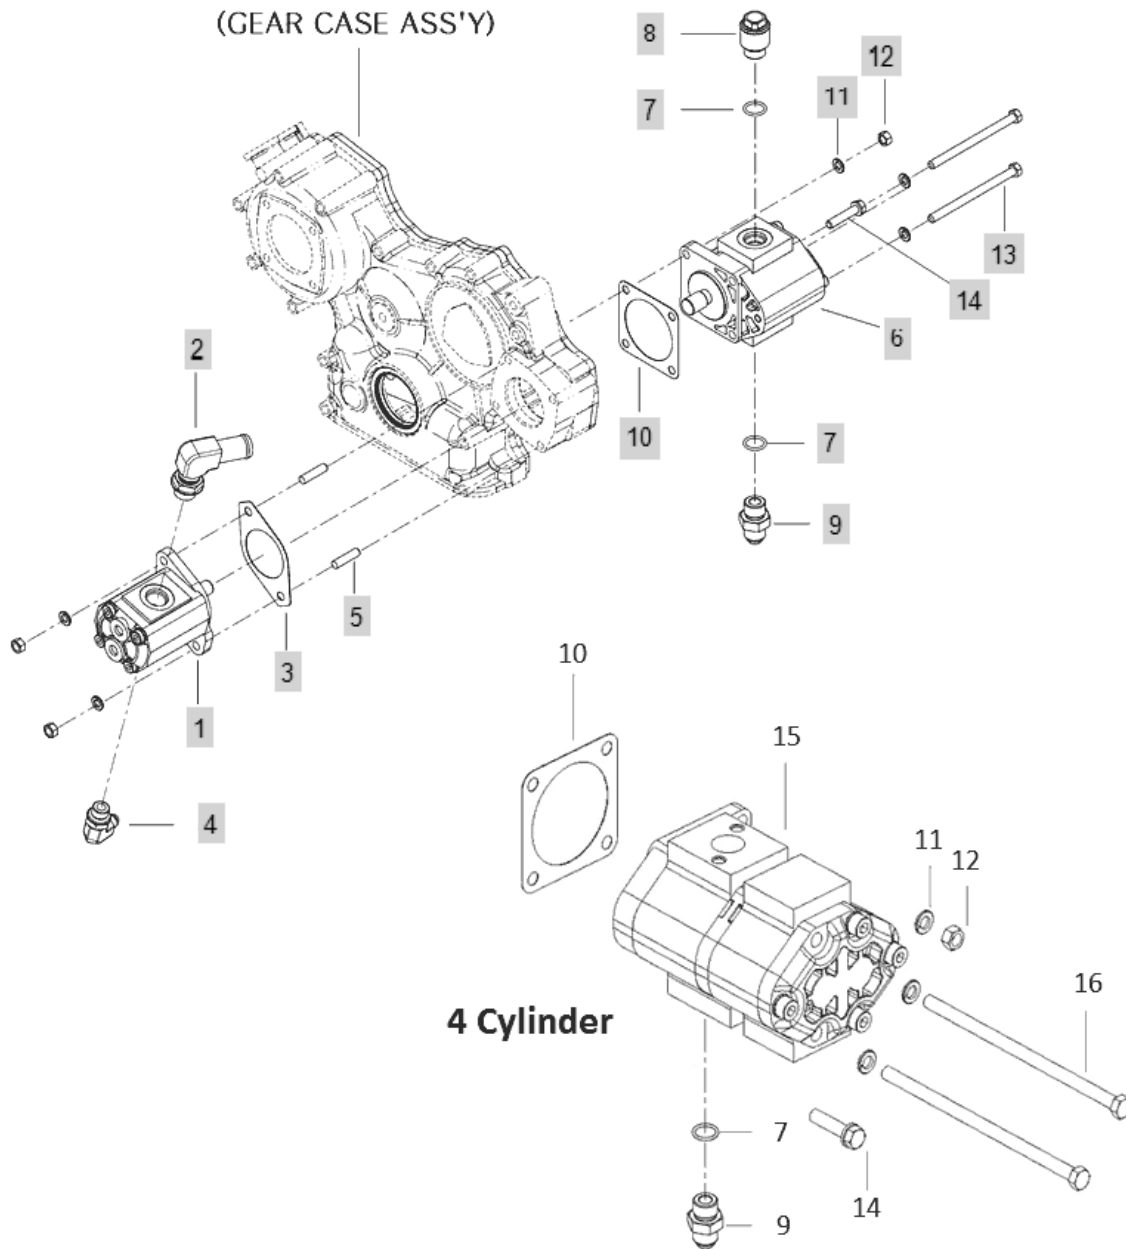



FIG C101-1

Branson 3520H(US)
_EN

CASE, HYD CYLINDER

Year/Month

2020/02

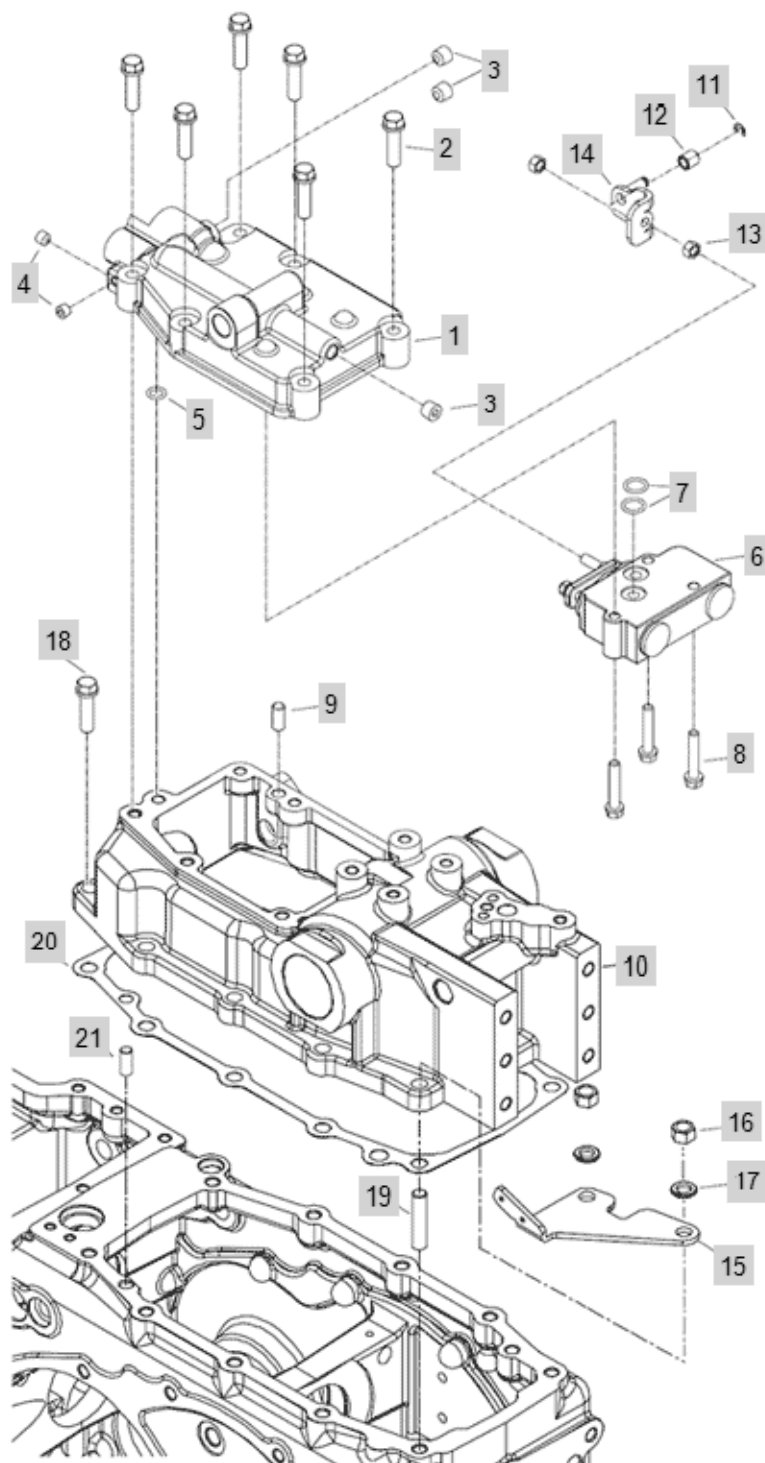

[illegible]


FIG C101-2

Branson 3520H(US)
_EN

CASE, HYD CYLINDER(2016.10)

Year/Month

2020/02

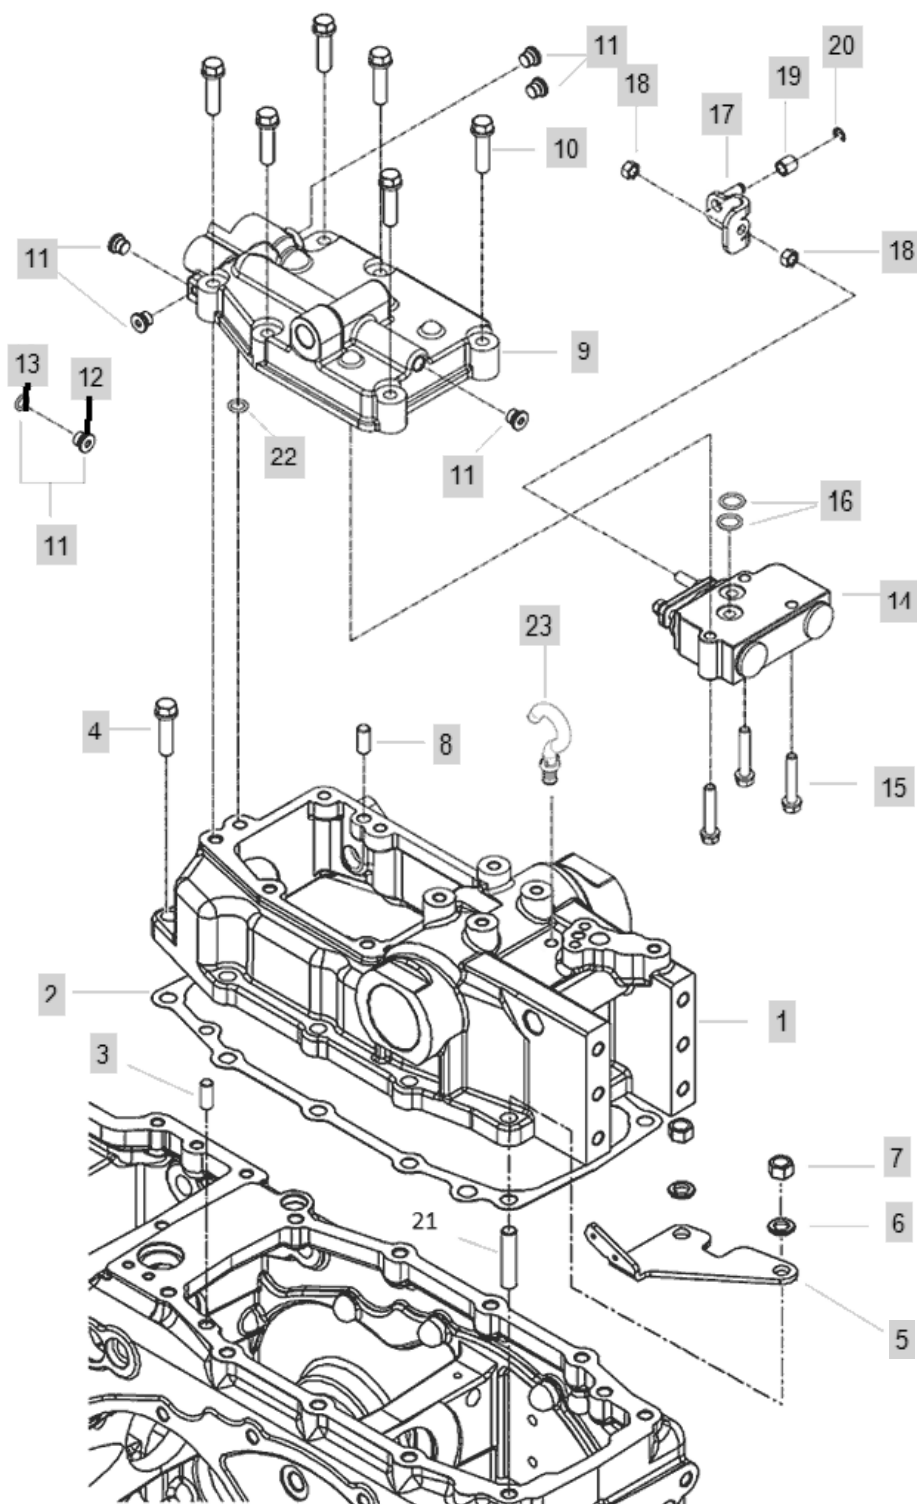

[illegible]


FIG C101-3

Branson 3520H(US)
_EN

CASE, HYD CYLINDER

Year/Month

2020/02

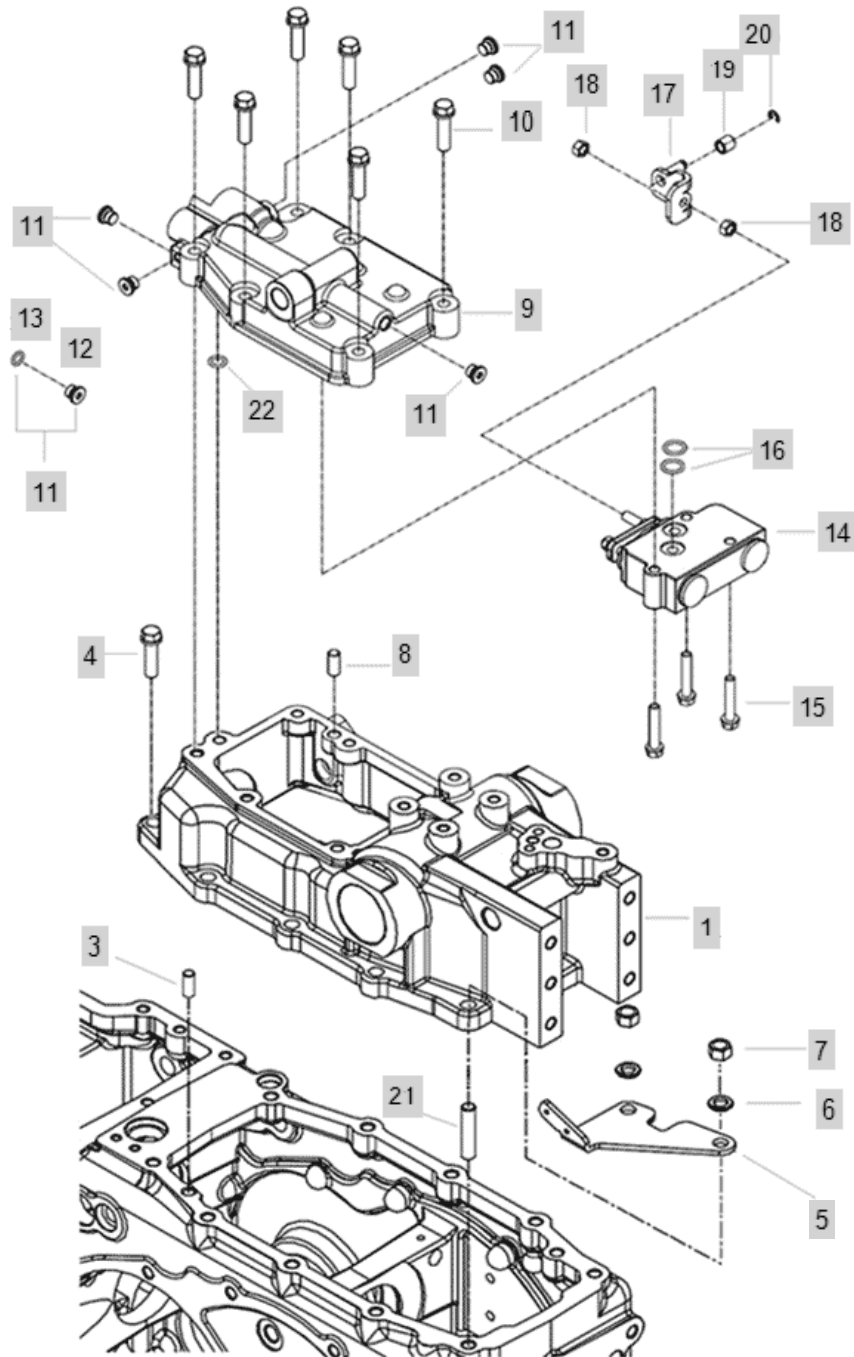

[illegible]


FIG C102-1

Branson 3520H(US)
_EN

IND PTO SUPPPT(2016.10)

Year/Month

2020/02

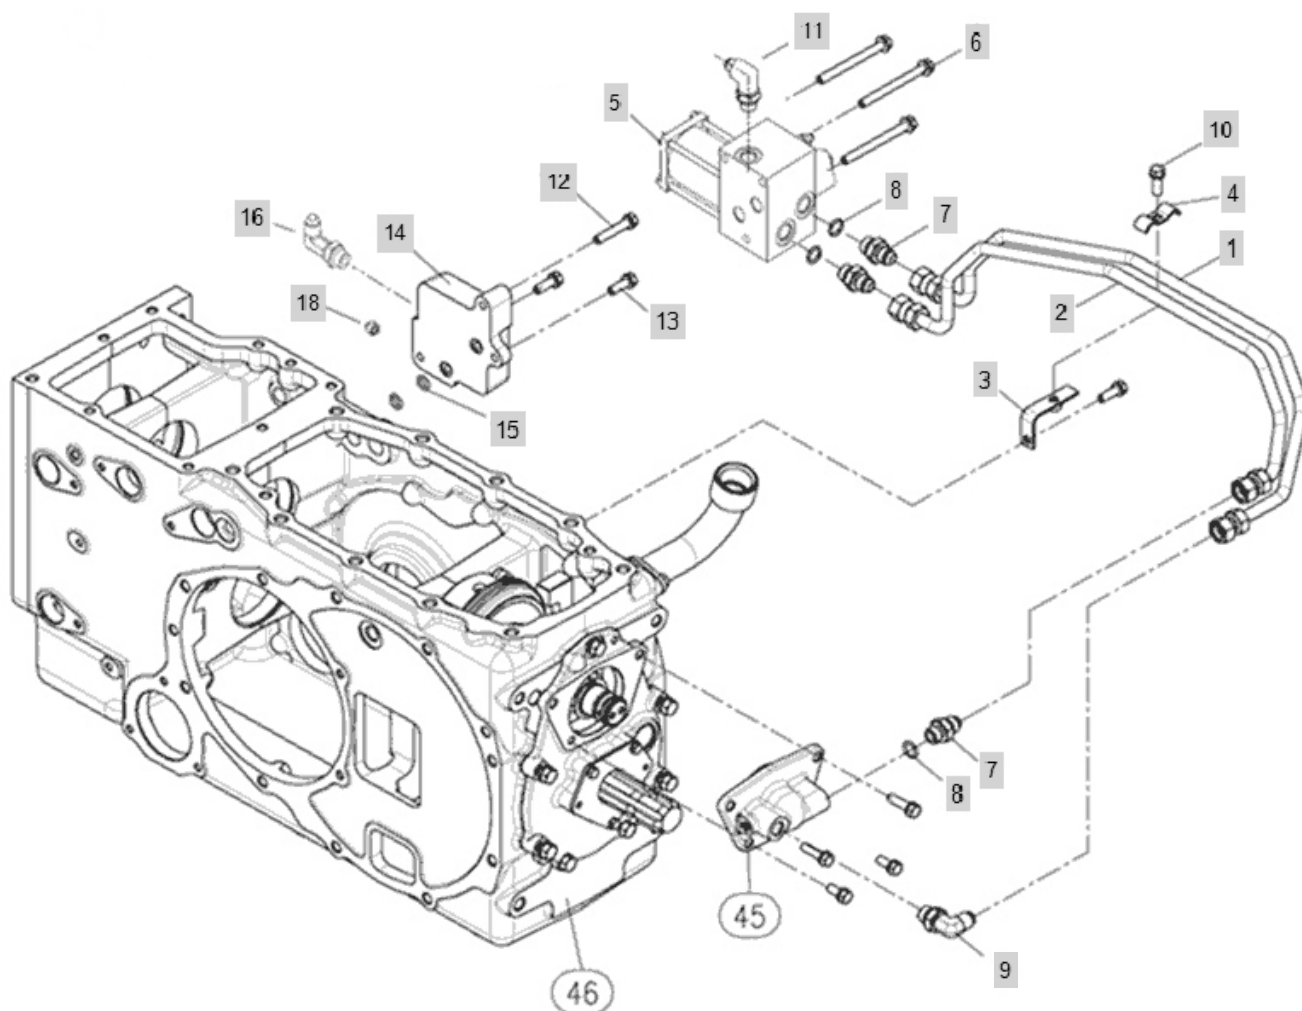

[illegible]


FIG C102-2

Branson 3520H(US)
_EN

IND PTO SUPPPT

Year/Month

2020/02

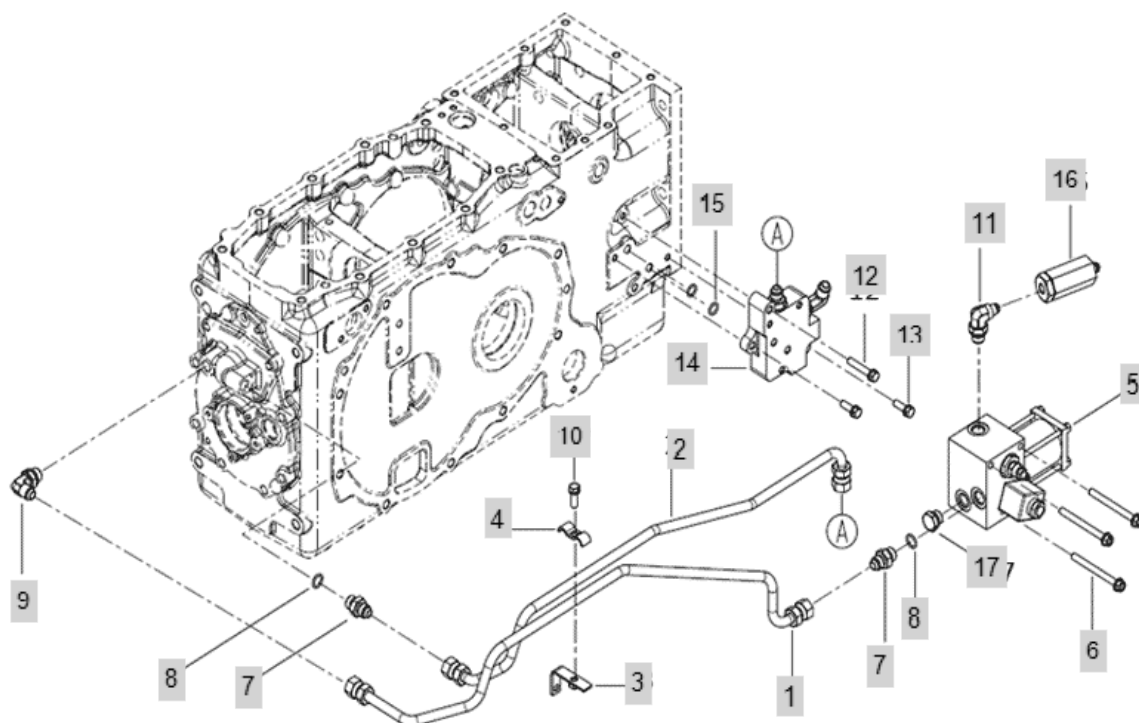

[illegible]


FIG C104-1

Branson 3520H(US)
_EN

PistonAssembly

Year/Month

2020/02

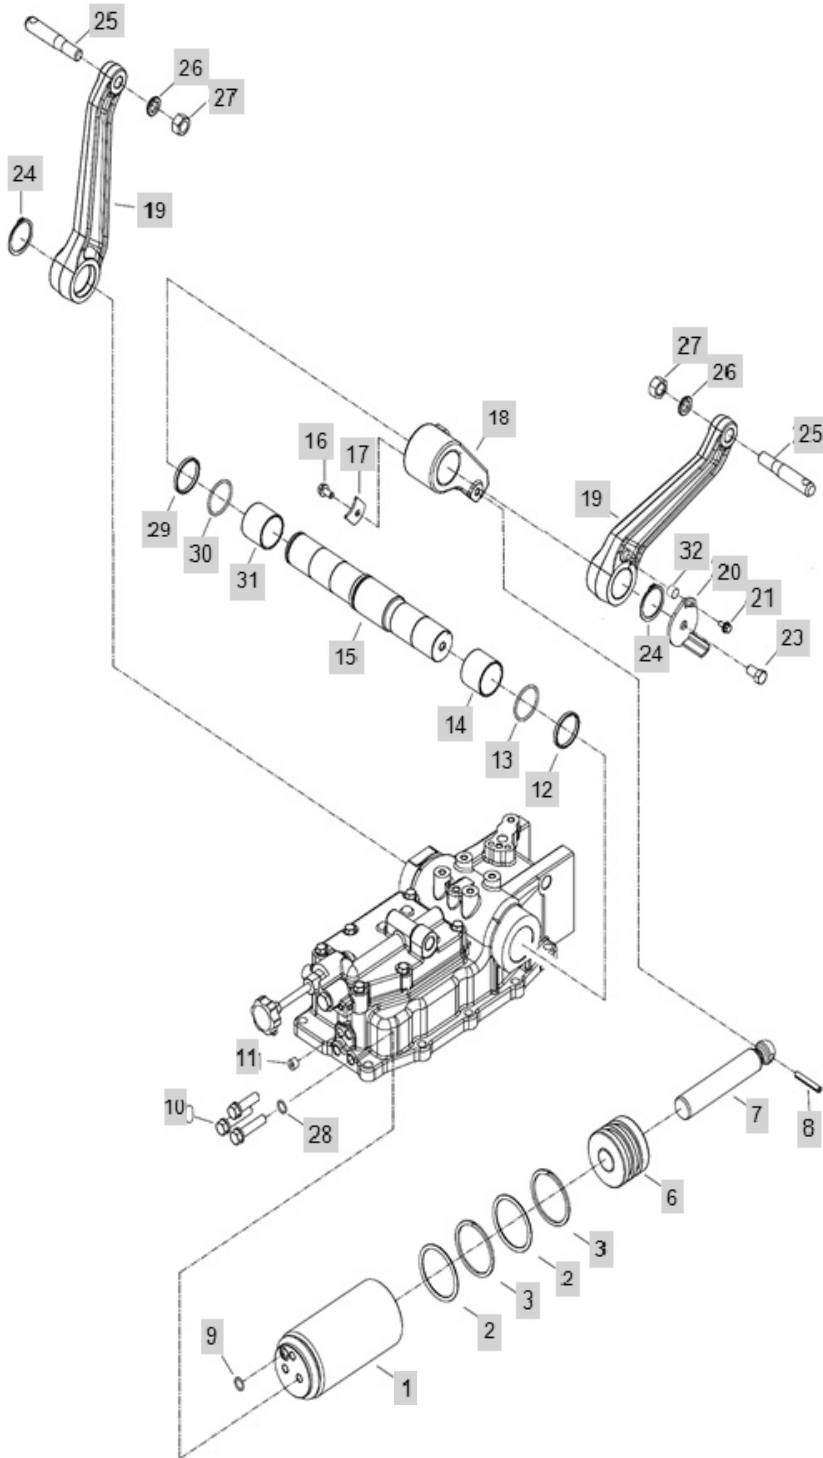

[illegible]


FIG C104-2

Branson 3520H(US)
_EN

PISTON ASS'Y

Year/Month

2020/02

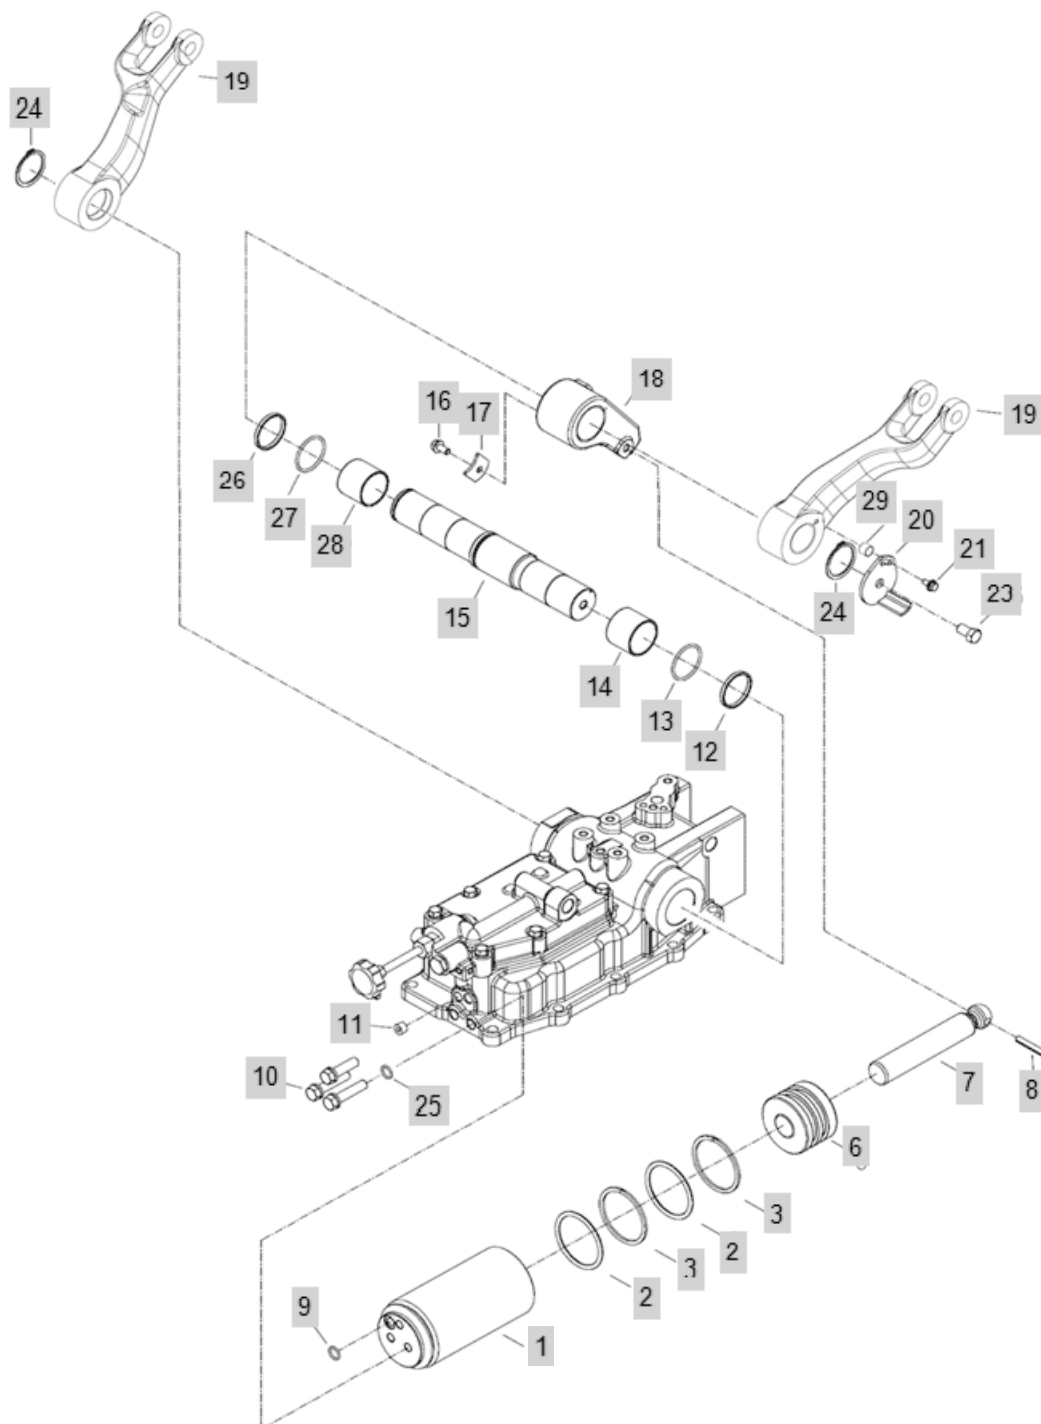

[illegible]


FIG C108

Branson 3520H(US)
_EN

SafetyValve

Year/Month

2020/02

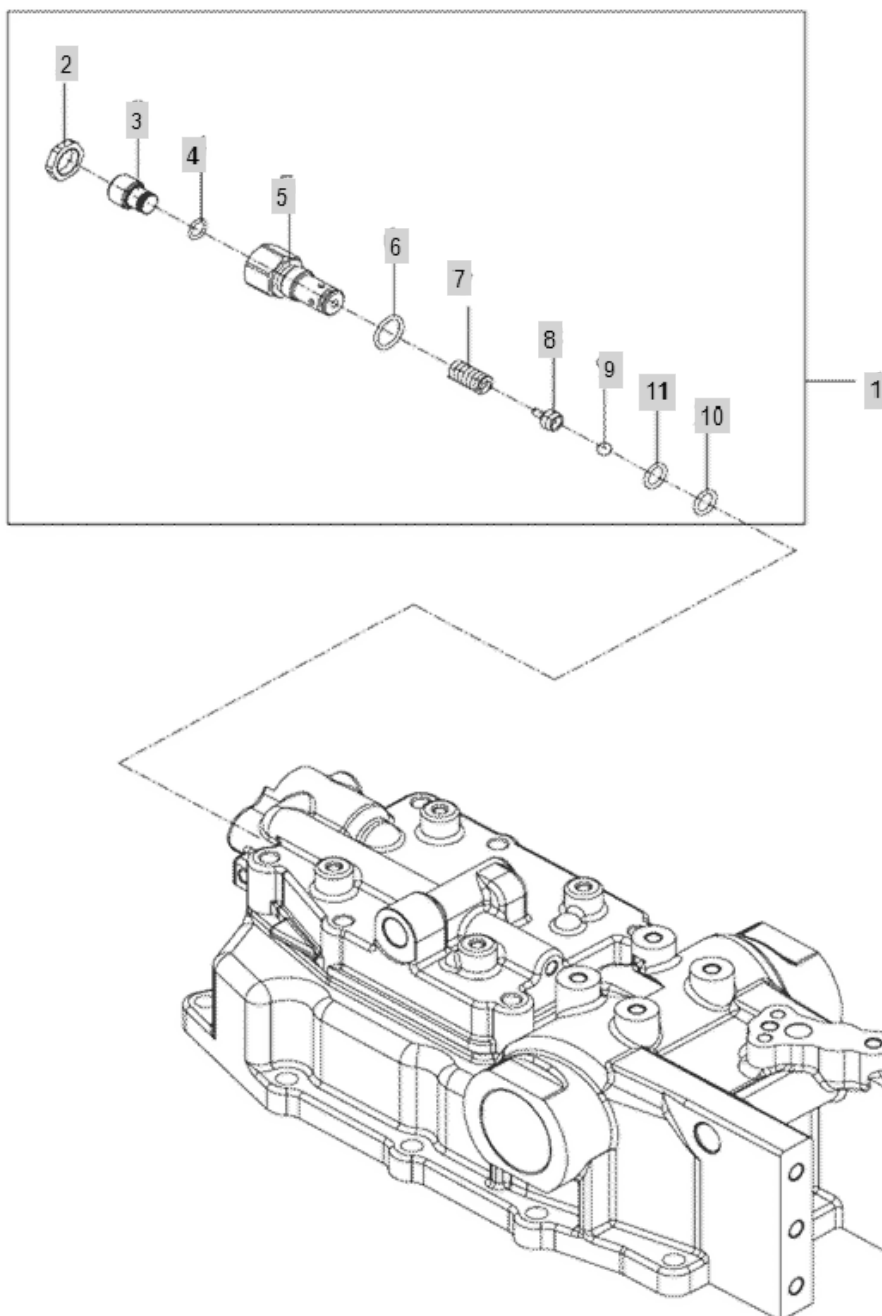

[illegible]

FIG C109-1

Branson 3520H(US)
_EN

STOP VALVE

Year/Month

2020/02

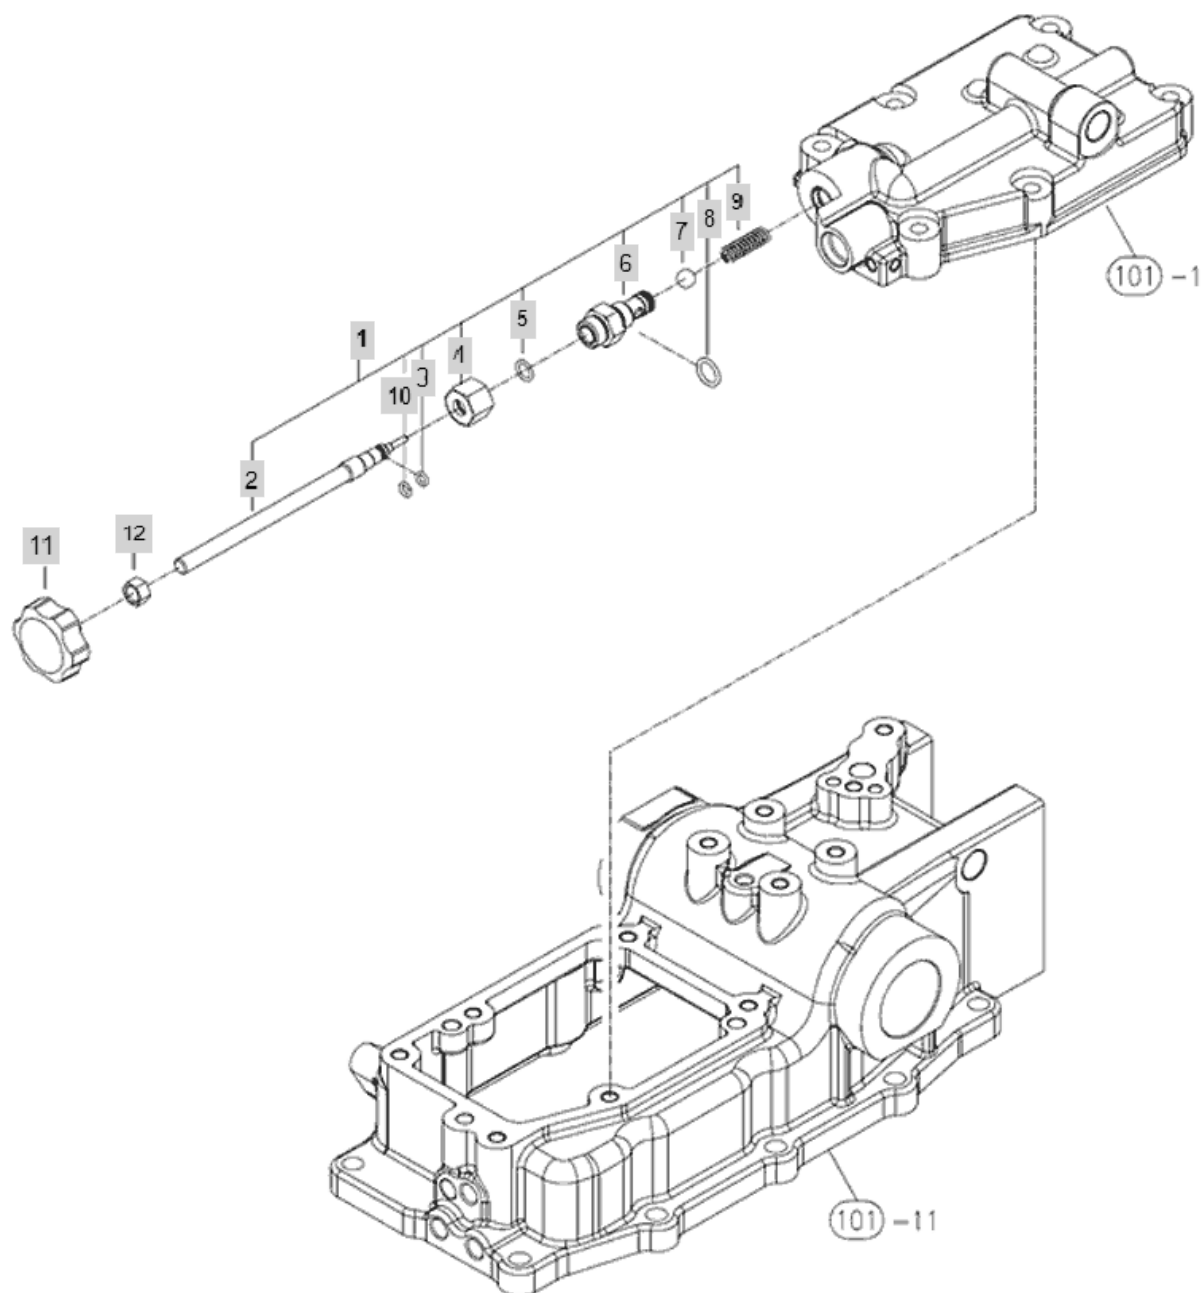


FIG C111.1

Branson 3520H(US)
_EN

HYDControlPositionType

Year/Month

2020/02

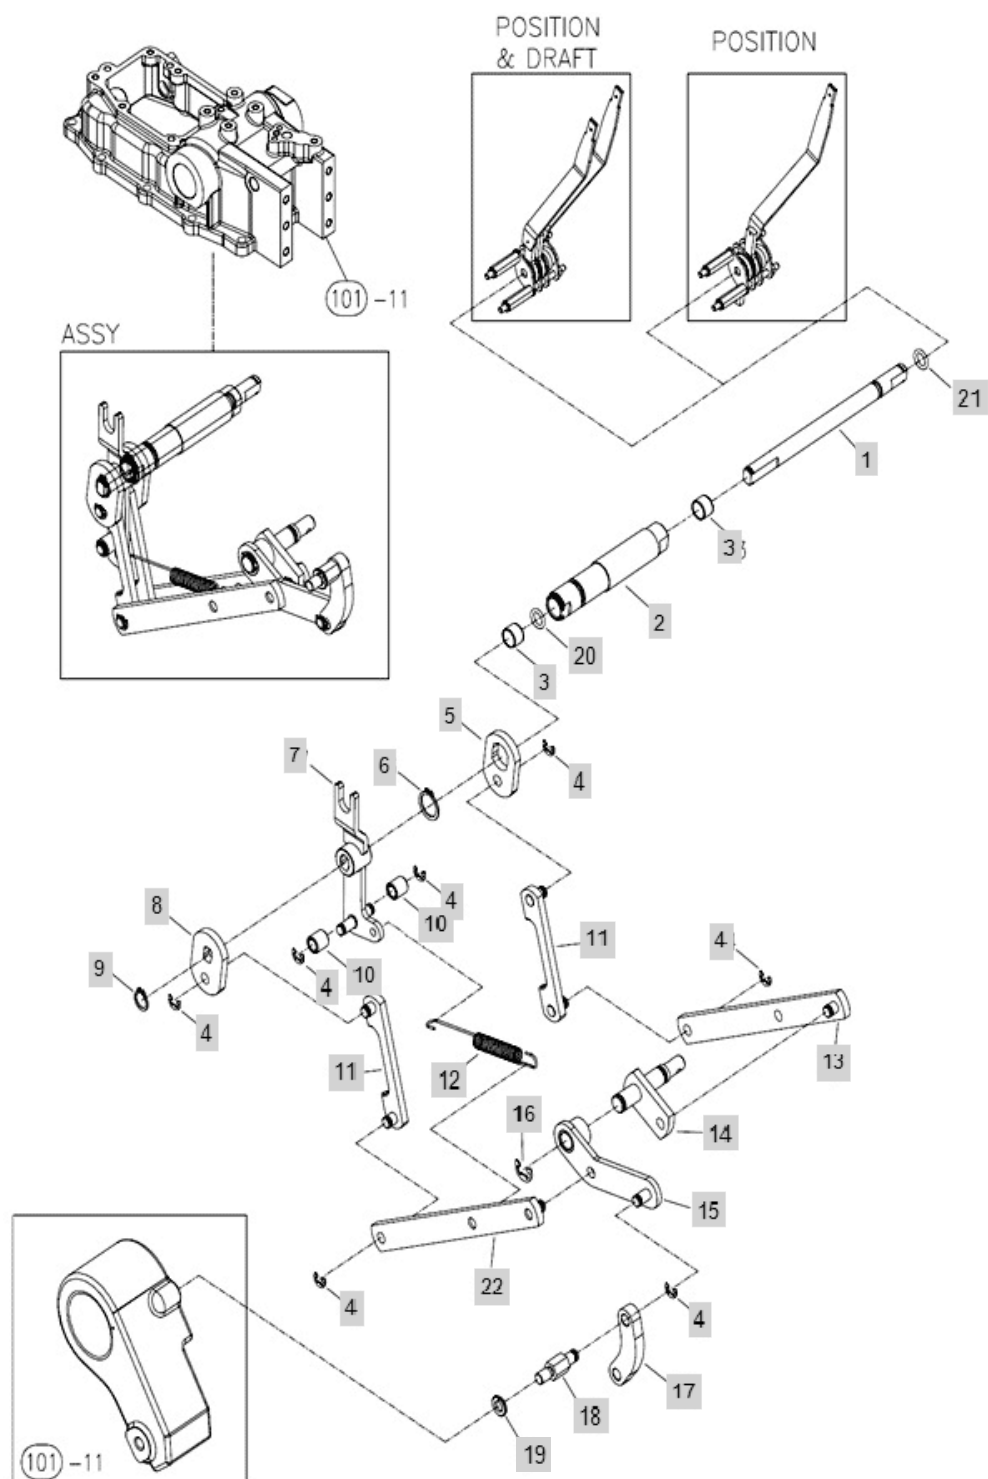


FIG C111.2

Branson 3520H(US)
_EN

HYD CONTROL POSITION TYPE

Year/Month

2020/02

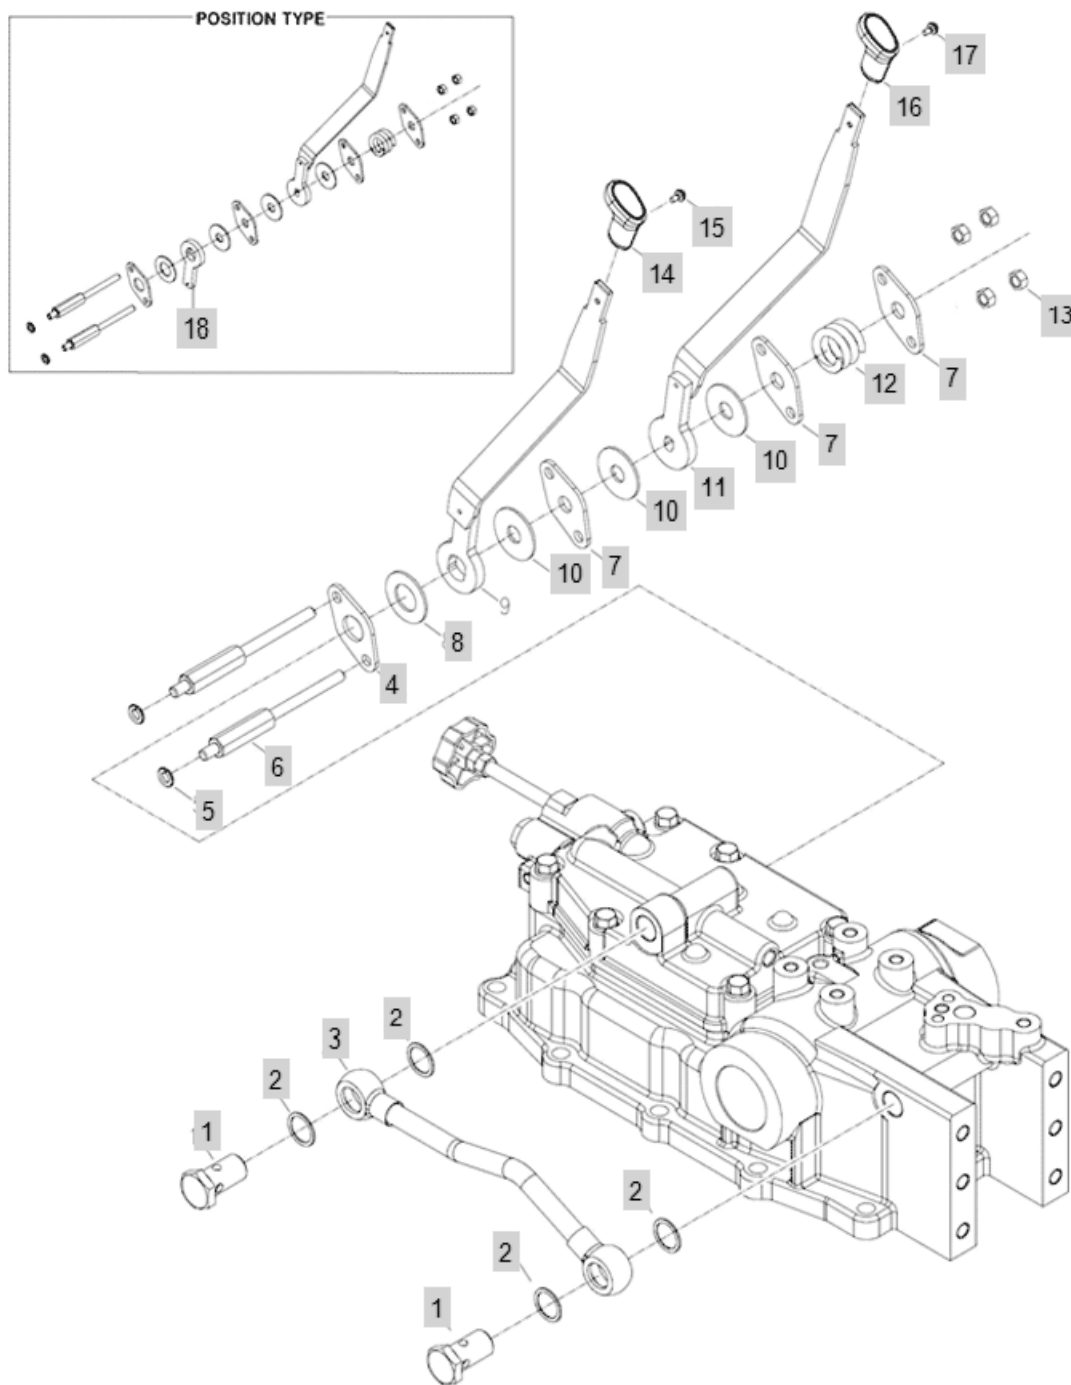


FIG C113

Branson 3520H(US)
_EN

DraftControl

Year/Month

2020/02

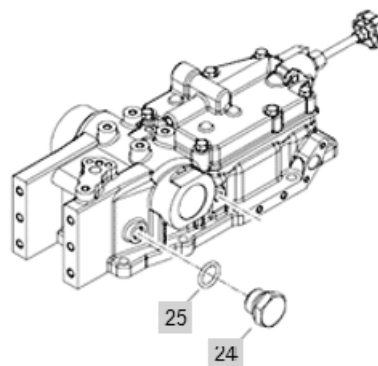
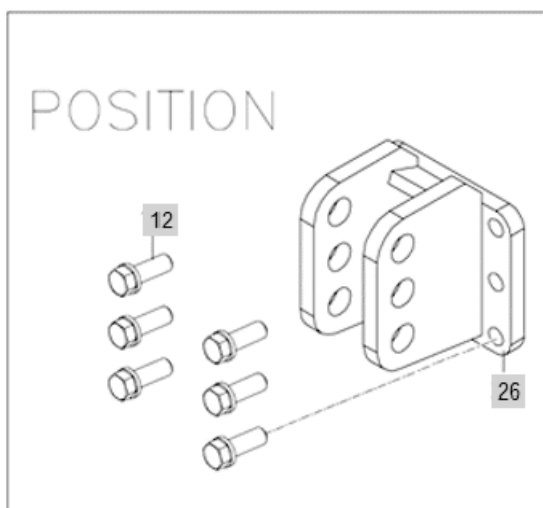


FIG C114A-1

Branson 3520H(US)
_EN

HYD PIPING

Year/Month

2020/02

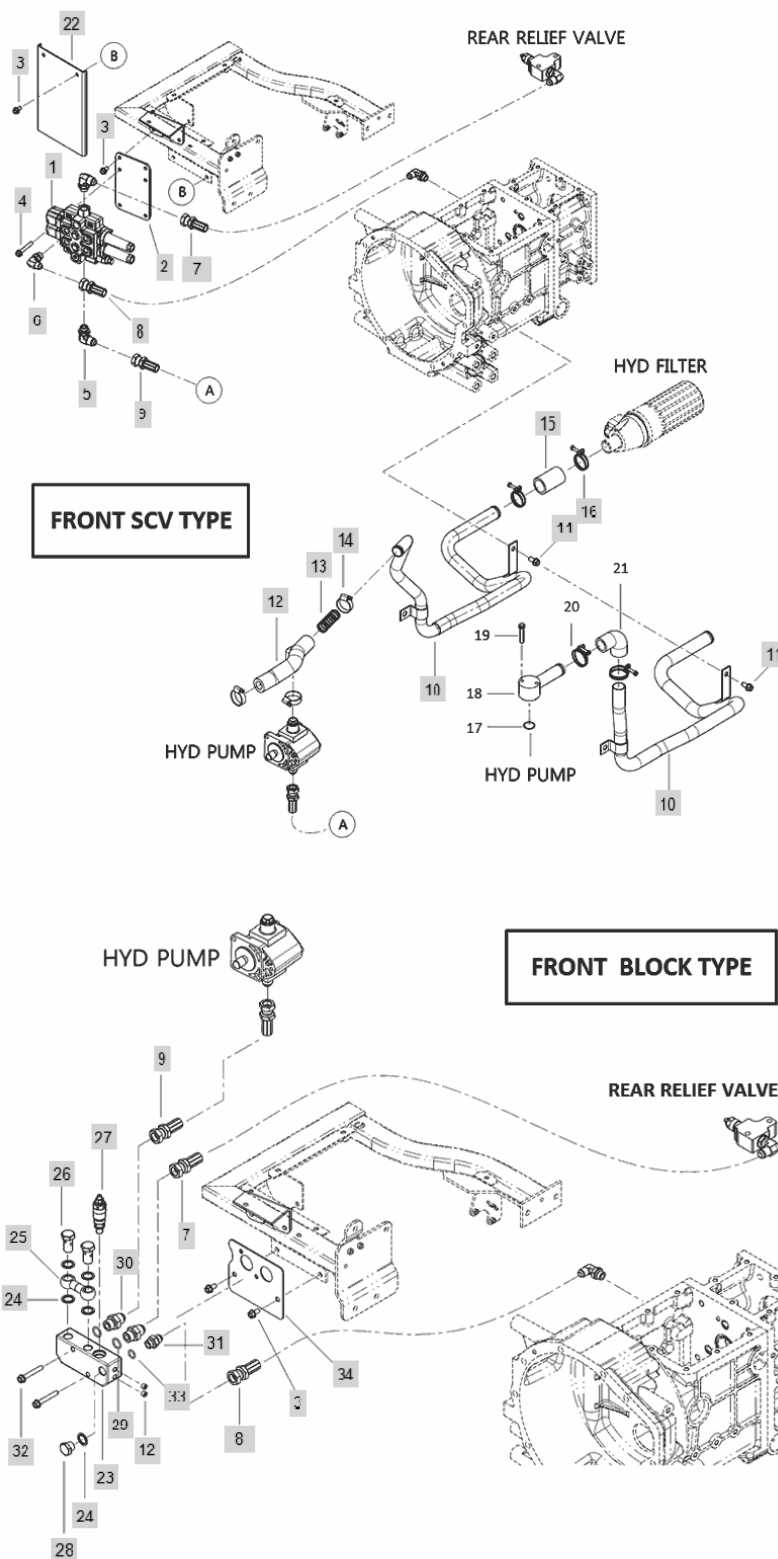


FIG C114A-2

Branson 3520H(US)
_EN

HYD PIPING

Year/Month

2020/02

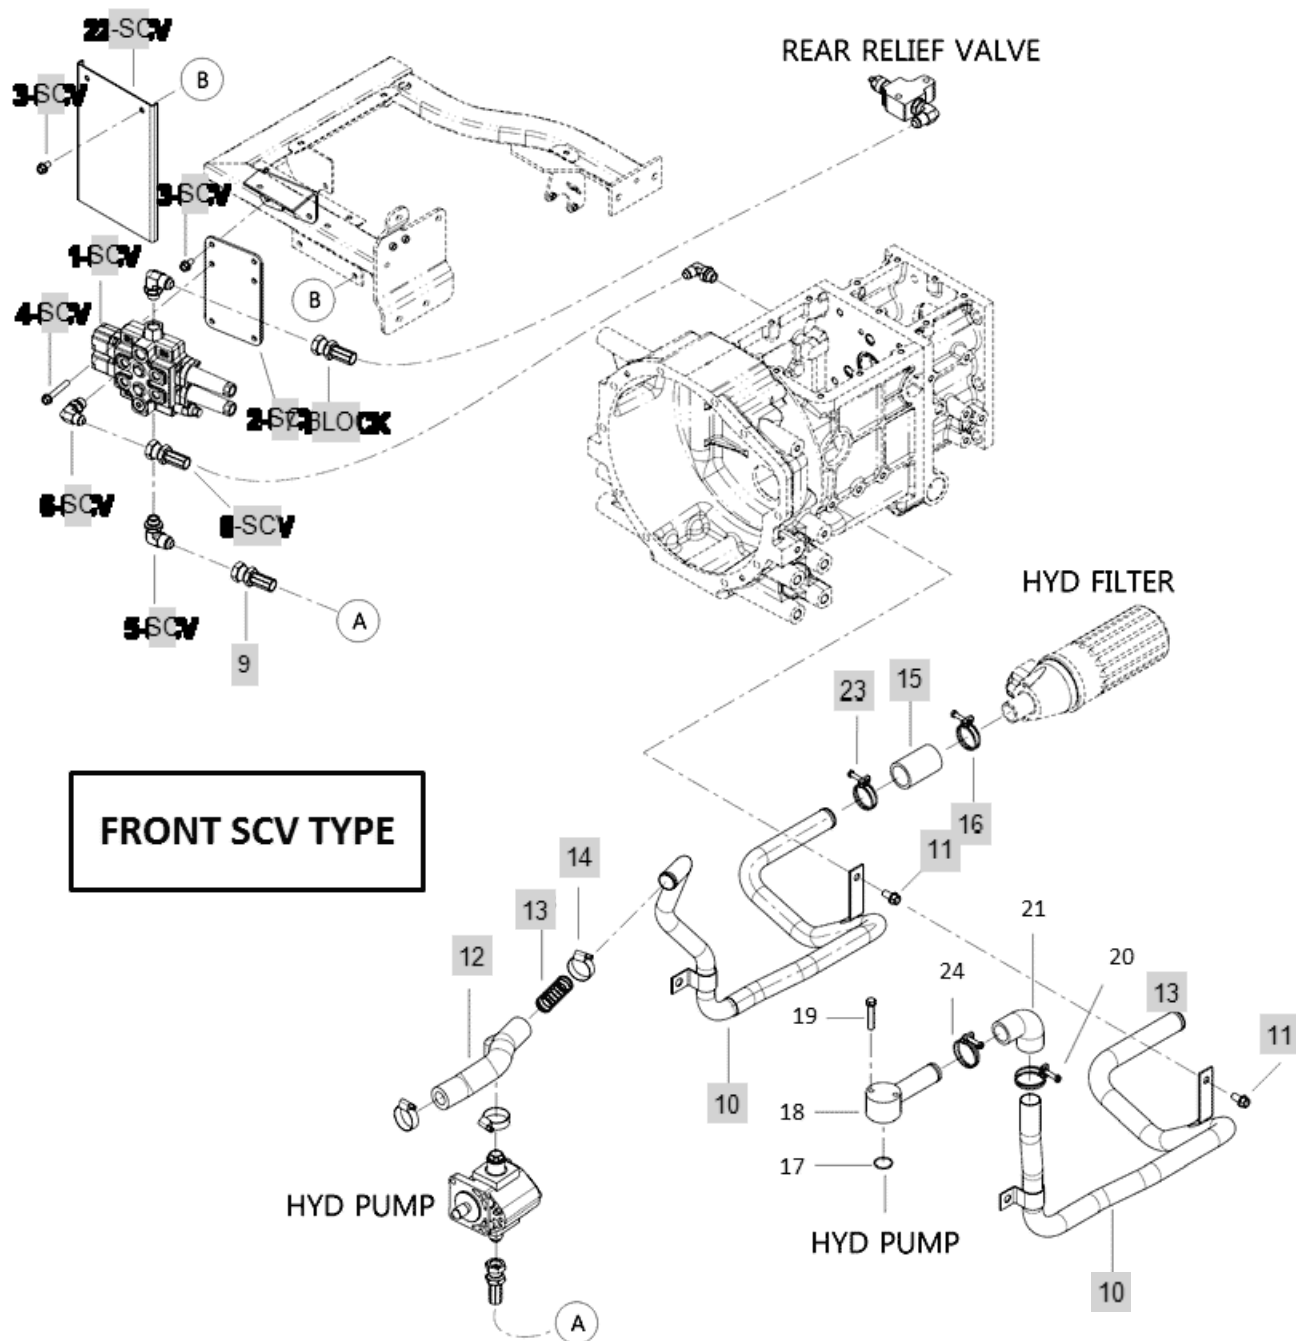


FIG C115-1

Branson 3520H(US)
_EN

OIL COOLER

Year/Month

2020/02

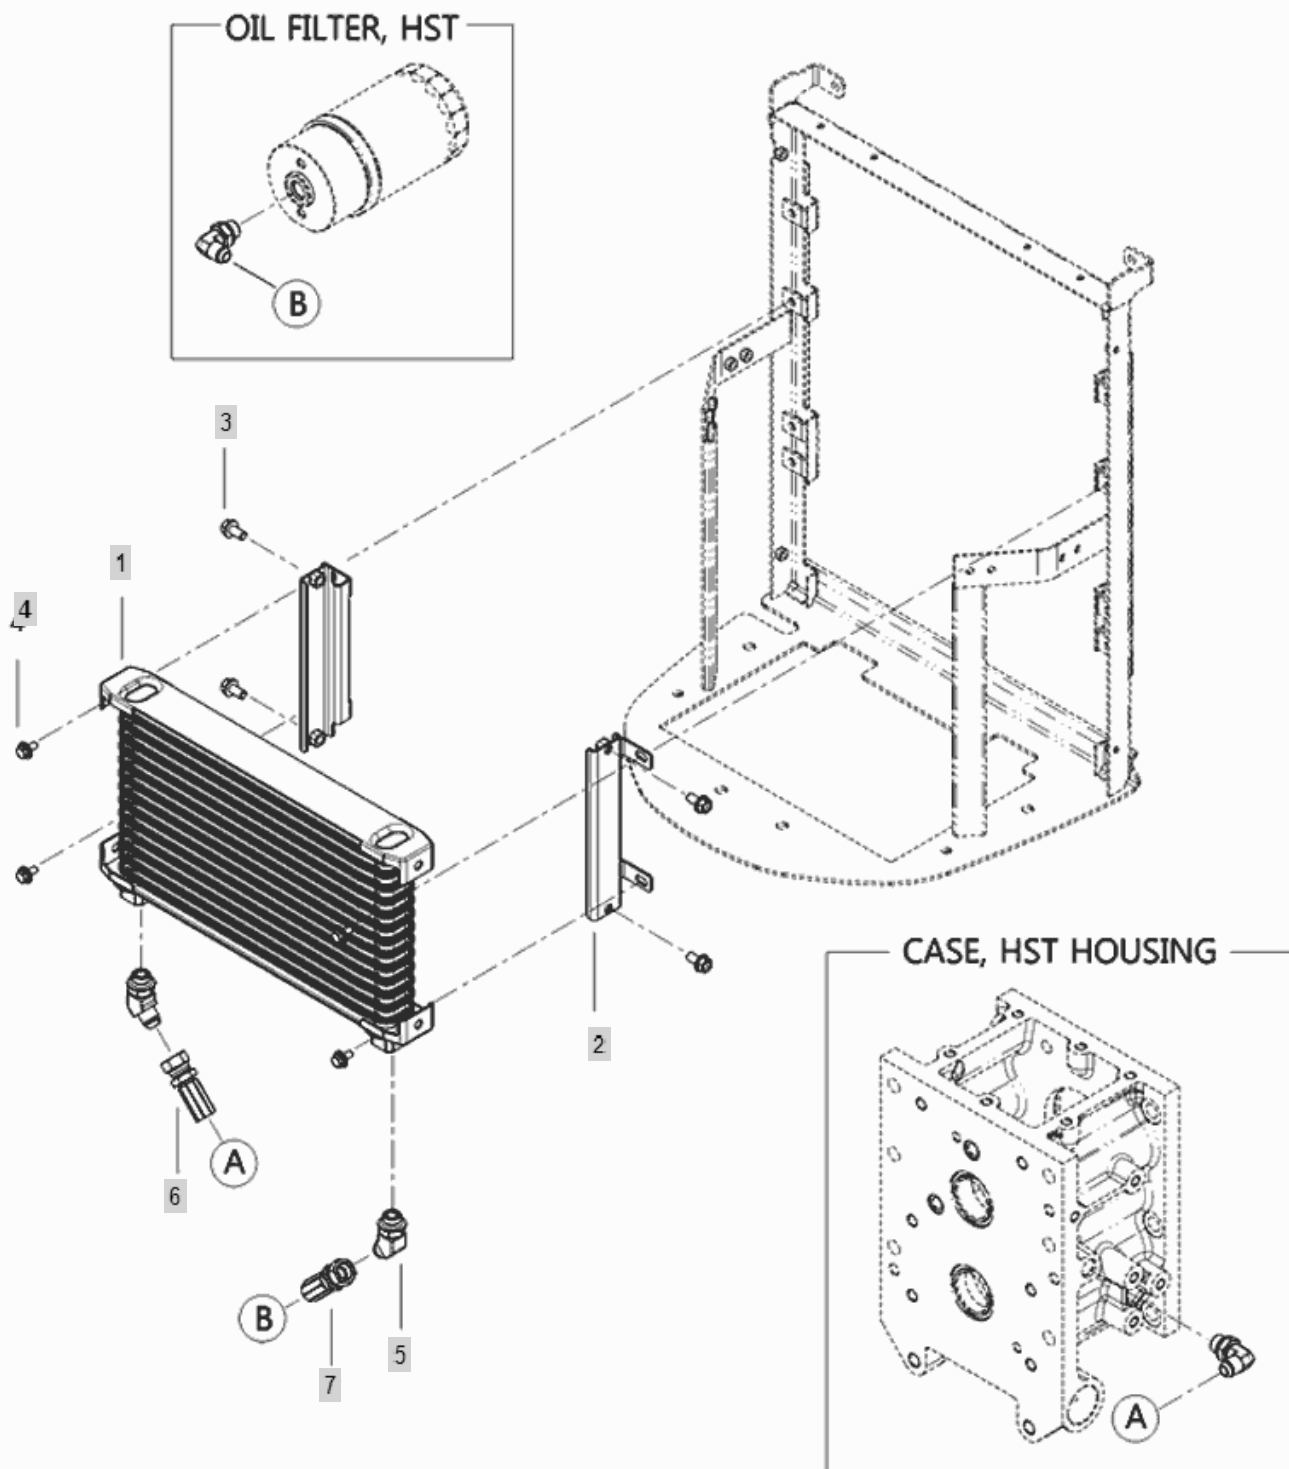


FIG C115-2

Branson 3520H(US)
_EN

OIL COOLER

Year/Month

2020/02

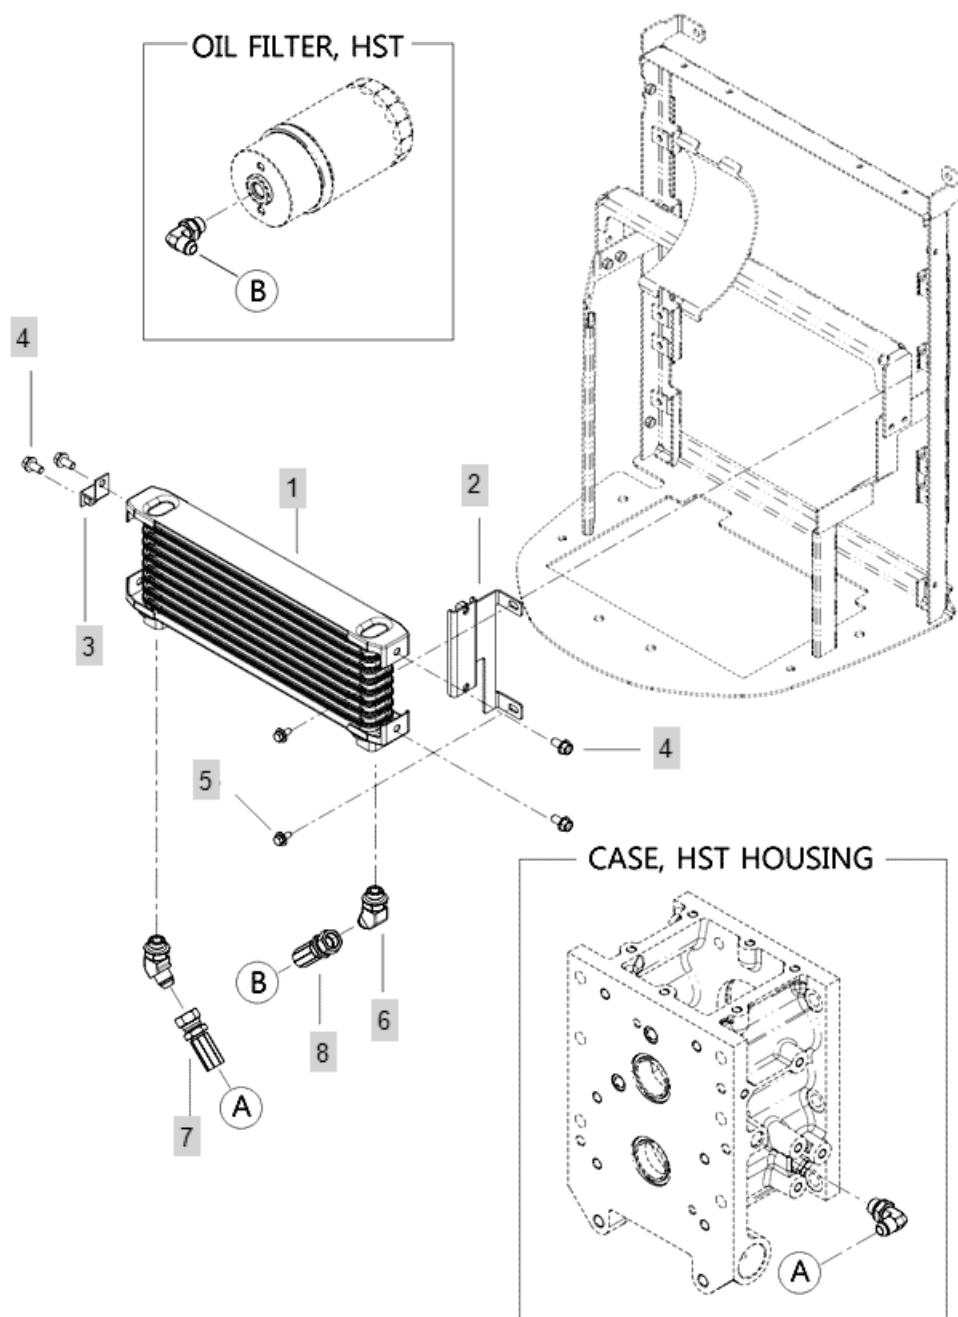


FIG C118-1

Branson 3520H(US)
_EN

HYD FILTER

Year/Month

2020/02

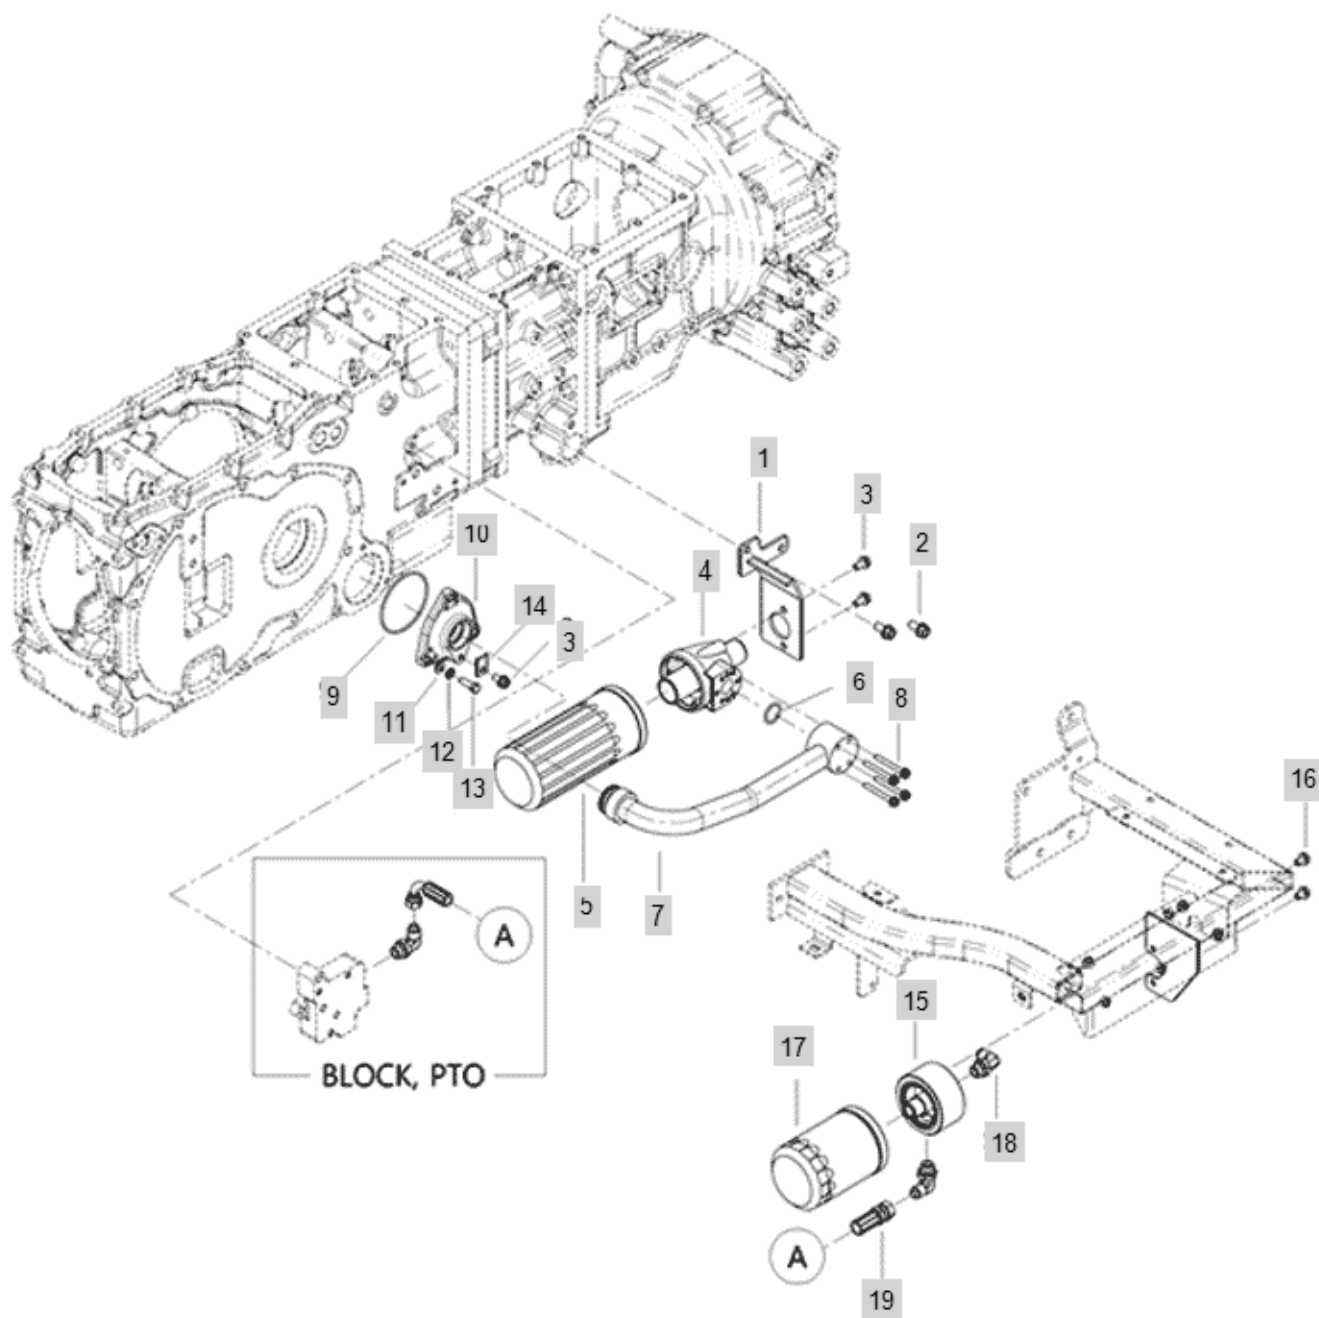


FIG C118-2

Branson 3520H(US)
_EN

HYD FILTER(16.04.06)

Year/Month

2020/02

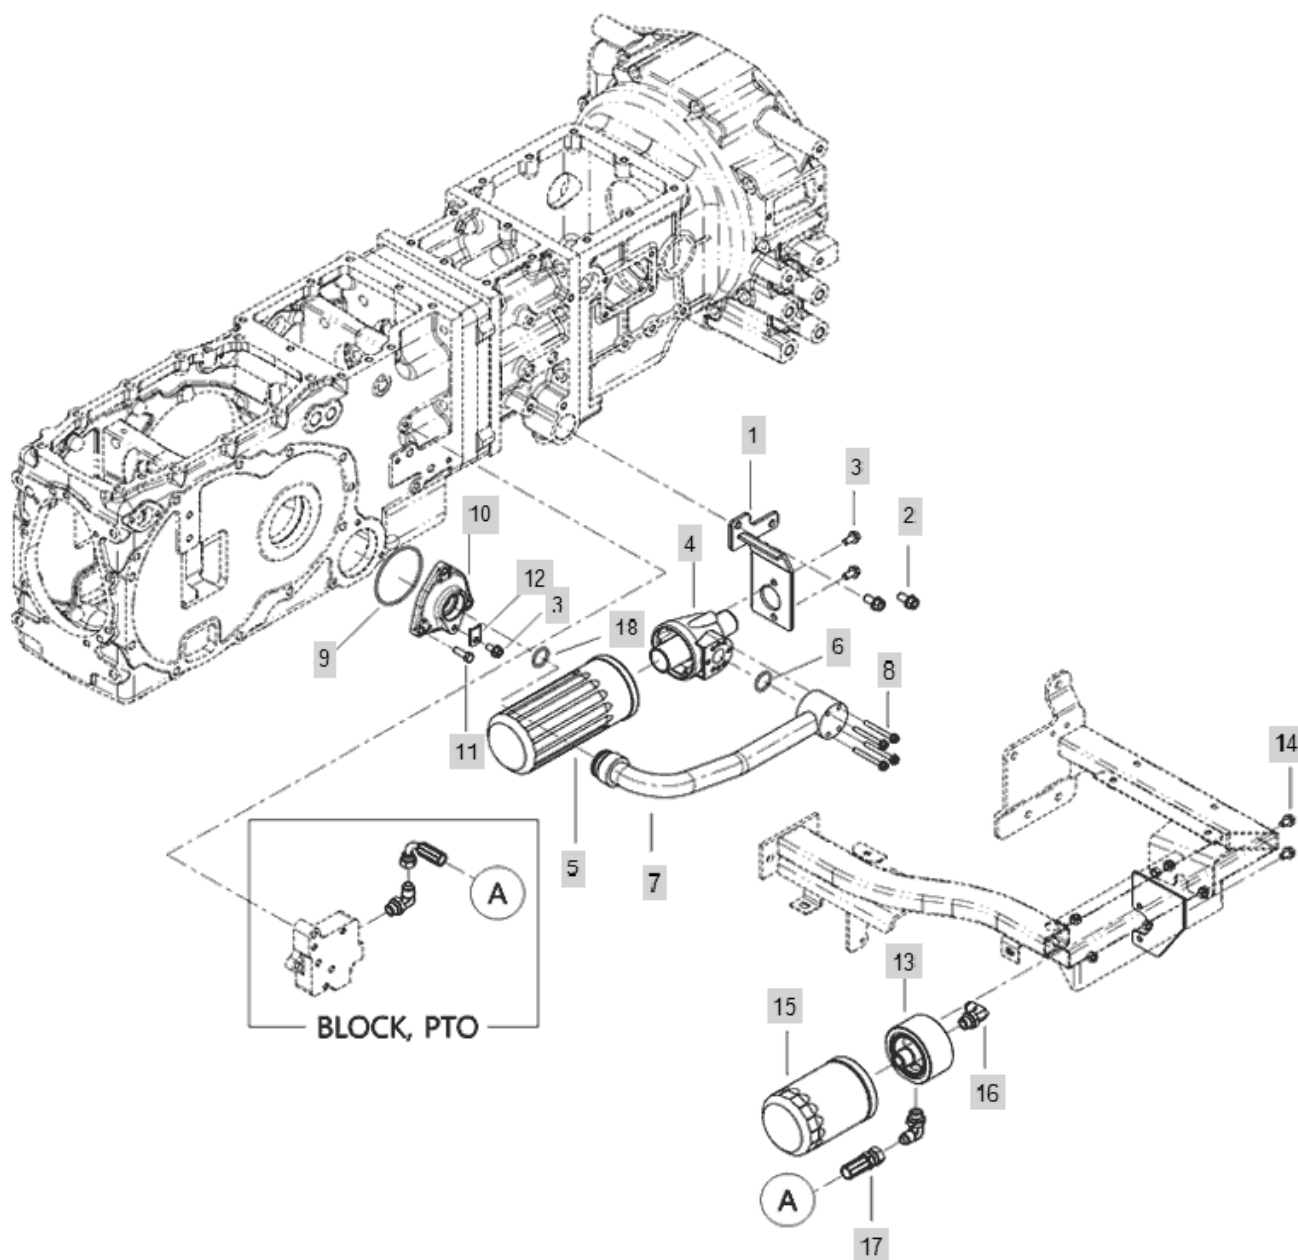


FIG C119

Branson 3520H(US)
_EN

ELE'C WIRING

Year/Month

2020/02

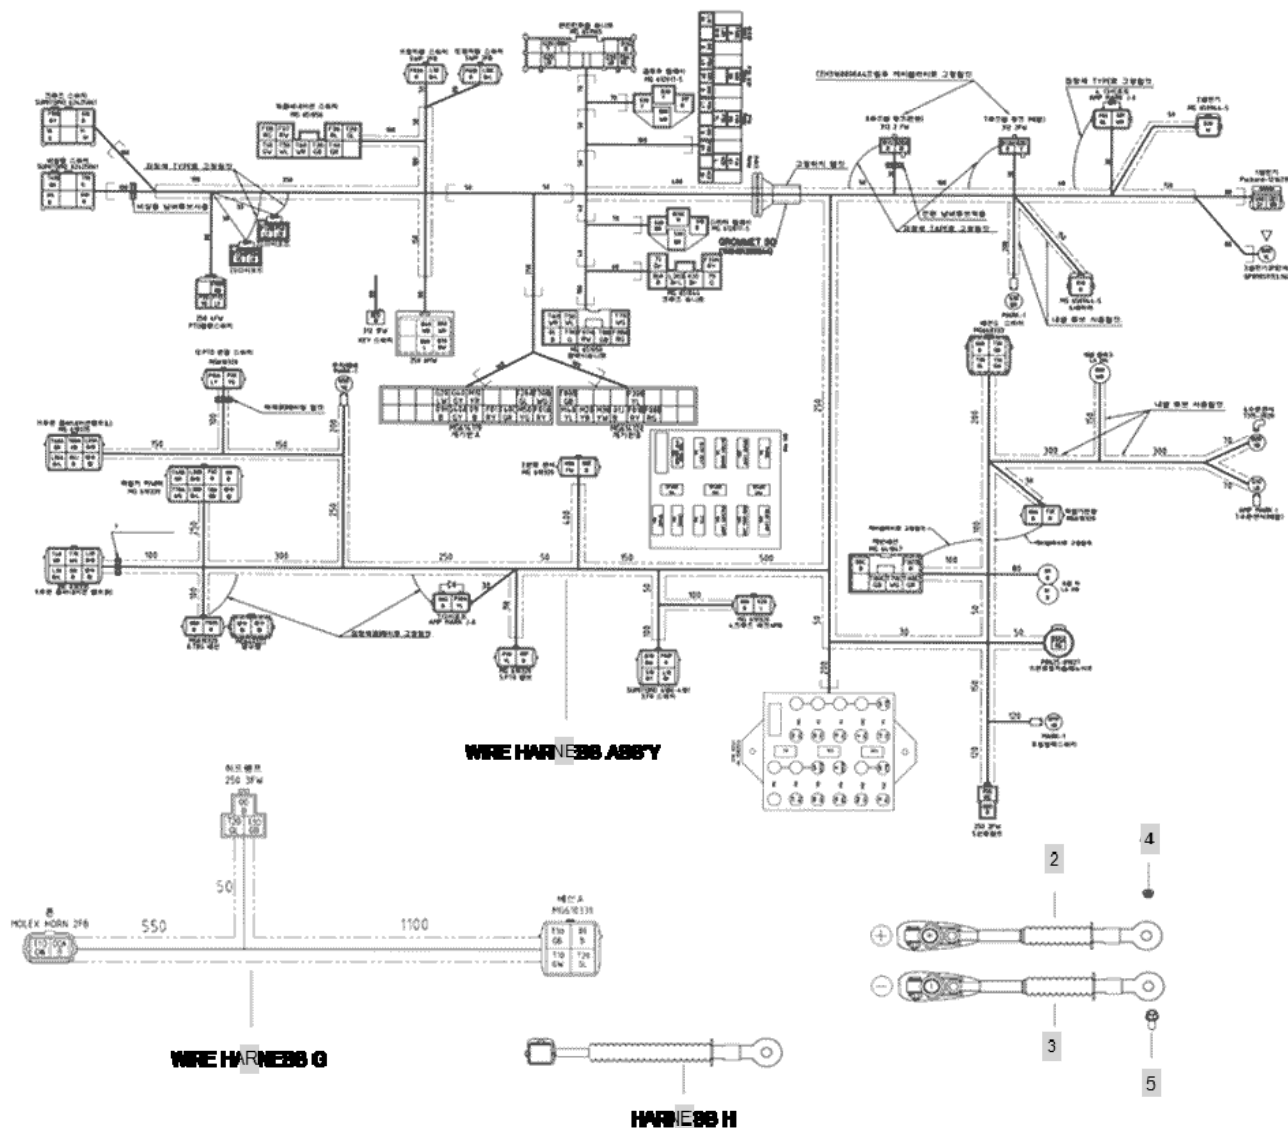


FIG C124-2

Branson 3520H(US)
_EN

BATTERY(2016.10)

Year/Month

2020/02

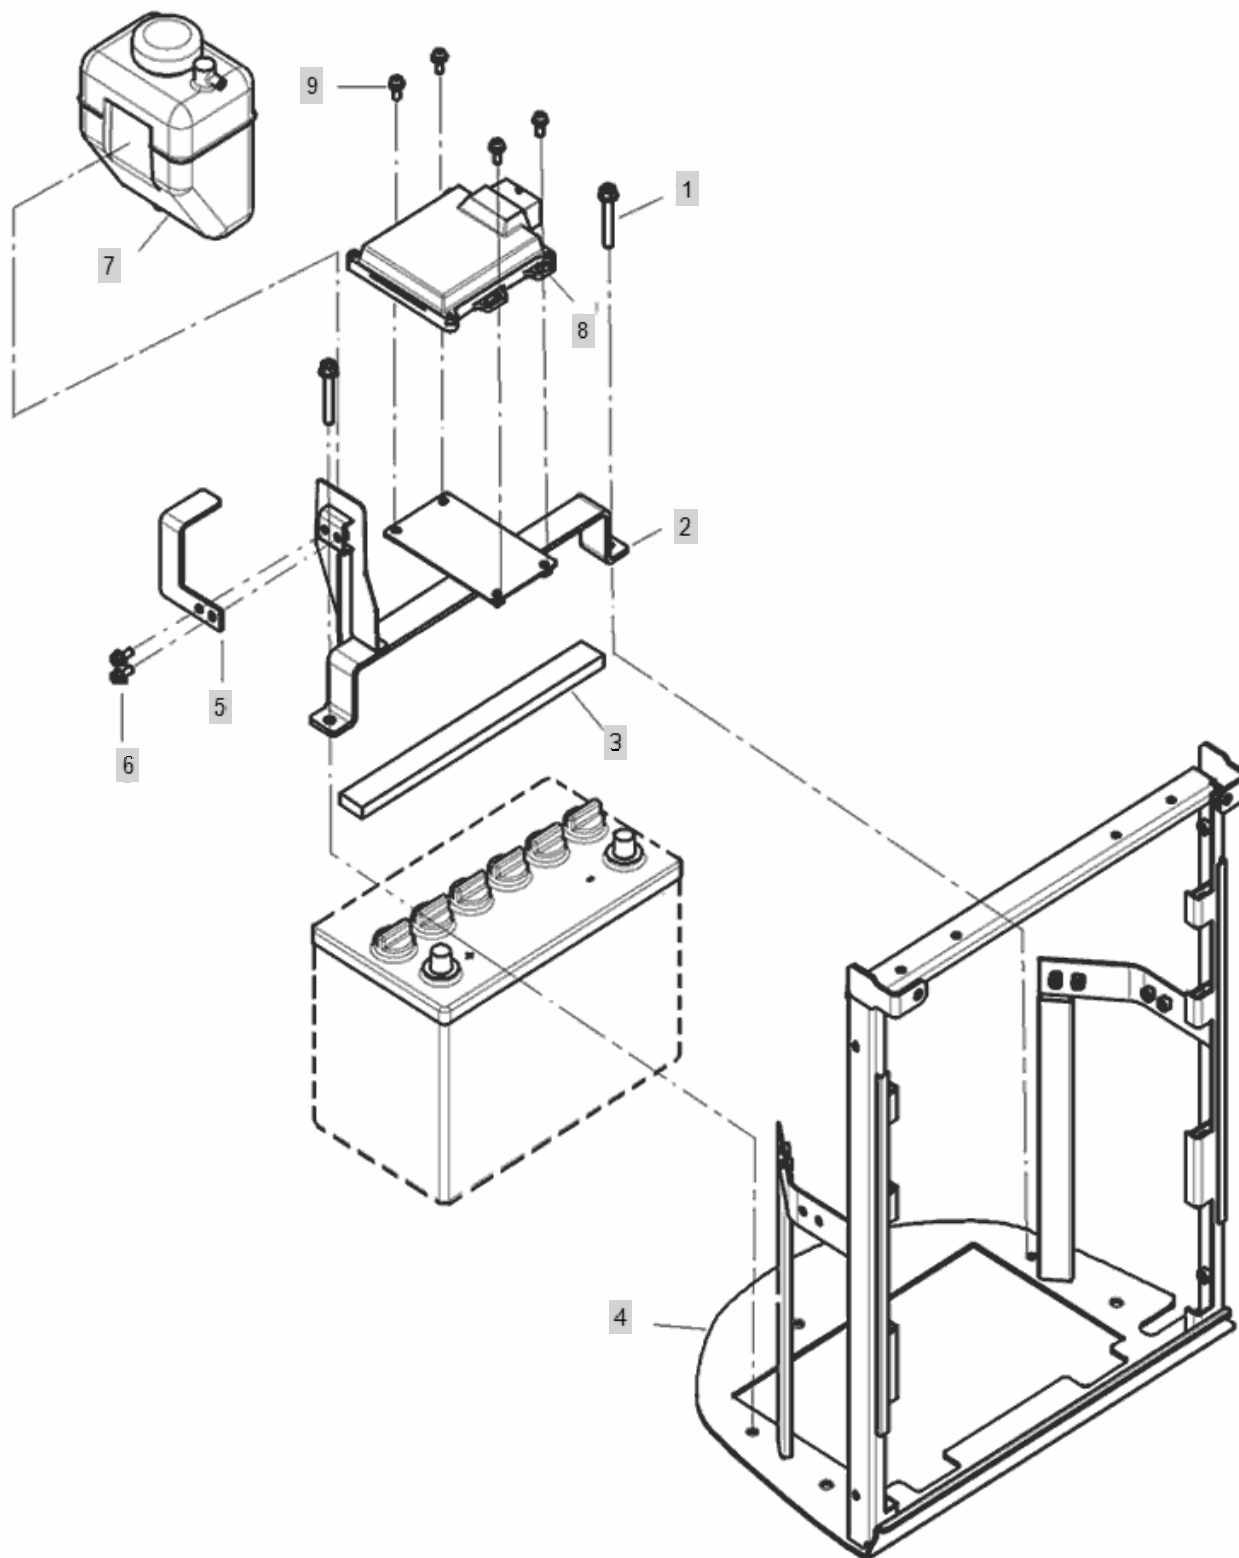


FIG C124-3

Branson 3520H(US)
_EN

BATTERY(2019.12~)

Year/Month

2020/02

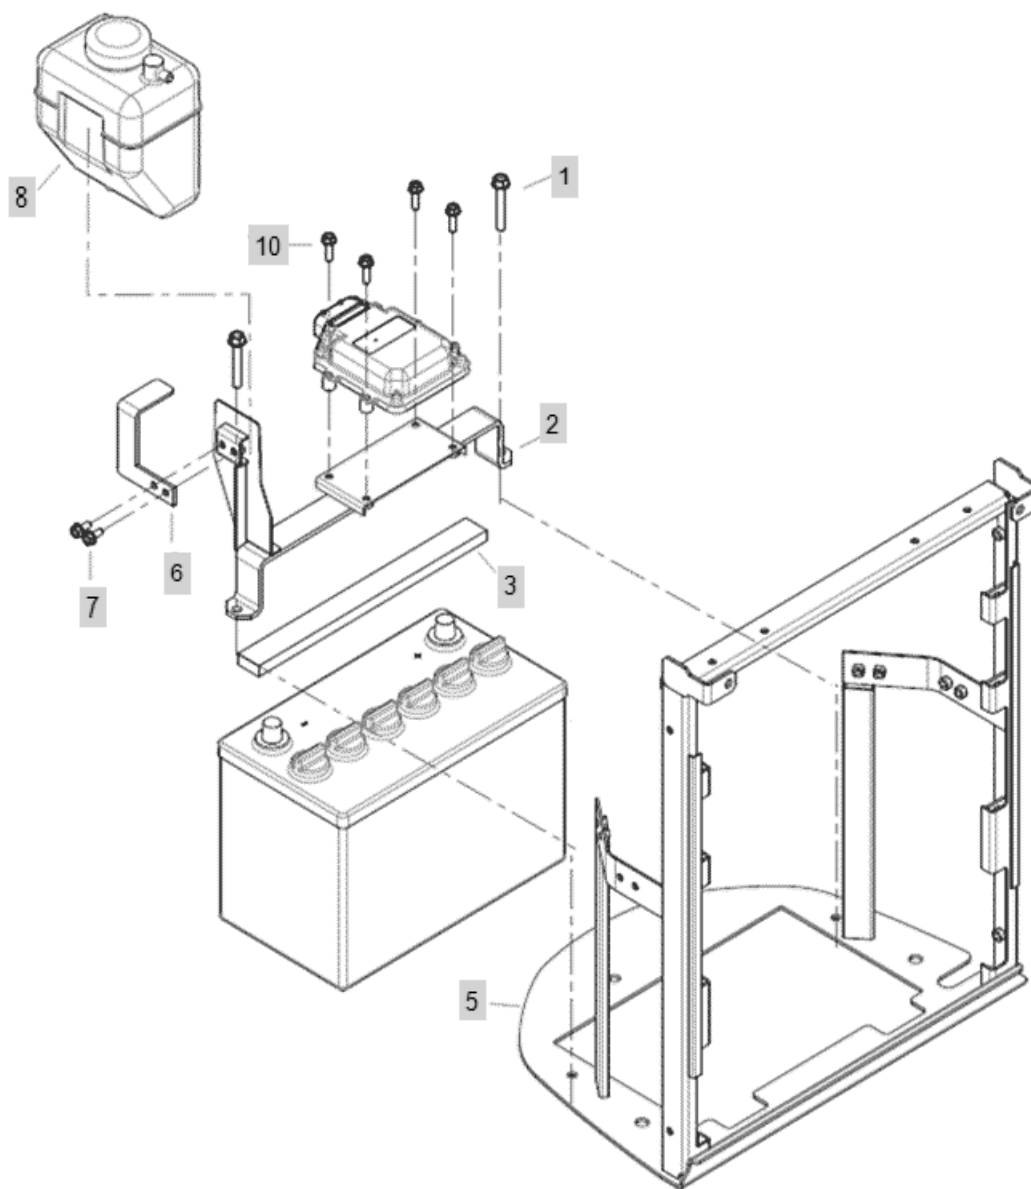


FIG C125-1

Branson 3520H(US)
_EN

SWITCH

Year/Month

2020/02

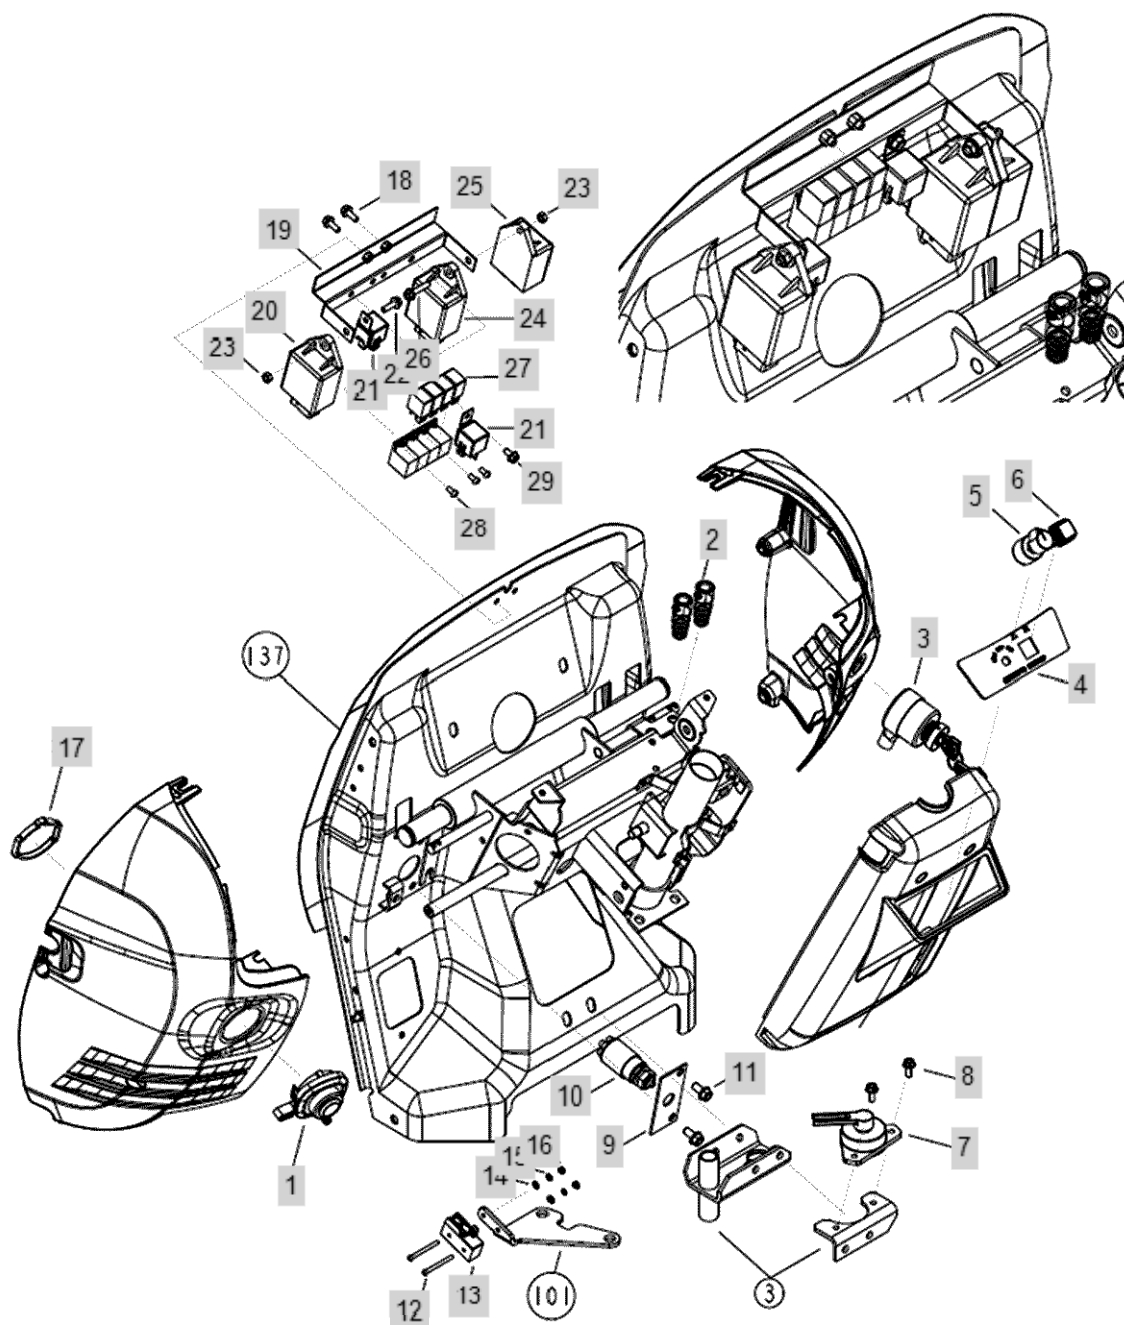



FIG C125-2

Branson 3520H(US)
_EN

SWITCH(2018~)

Year/Month

2020/02

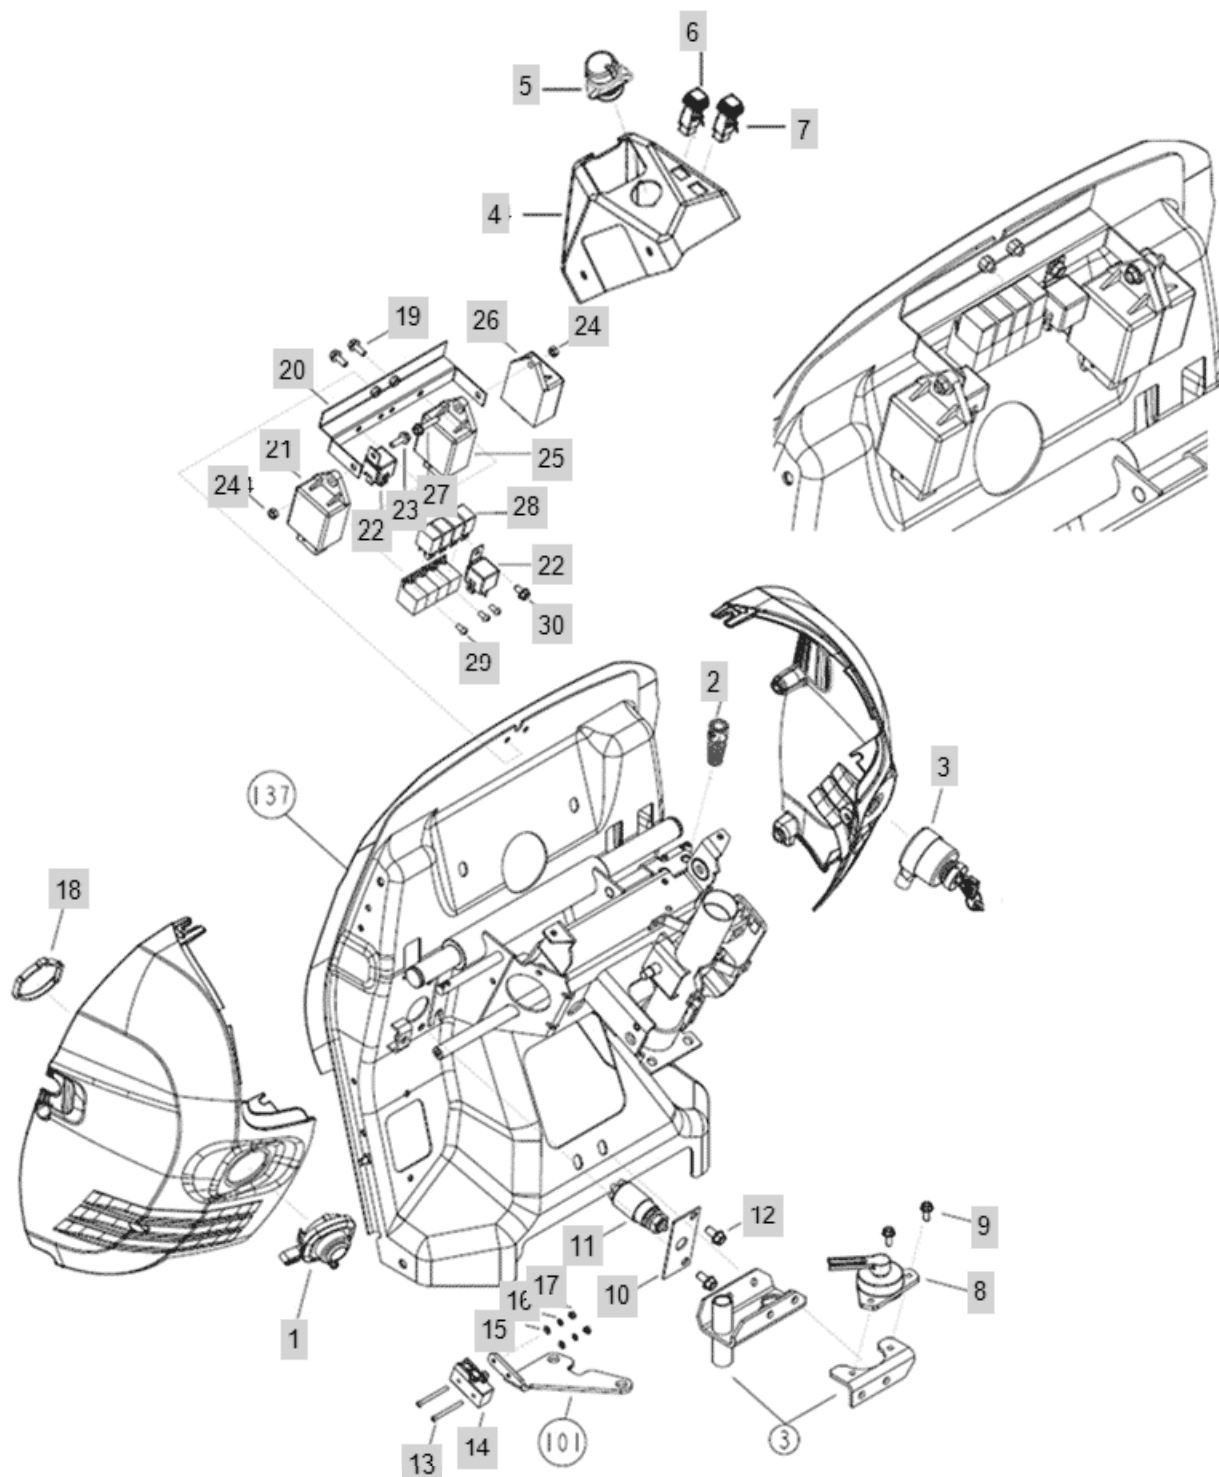

[illegible]

FIG C131

Branson 3520H(US)
_EN

Horn

Year/Month

2020/02

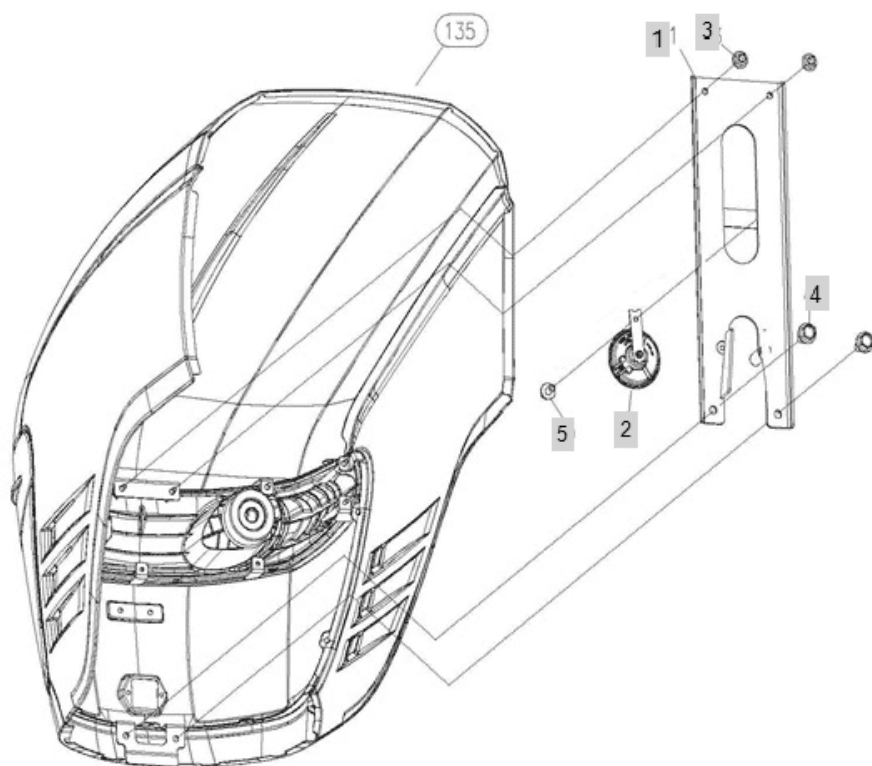


FIG C132-1

Branson 3520H(US)
_EN

Lamp

Year/Month

2020/02

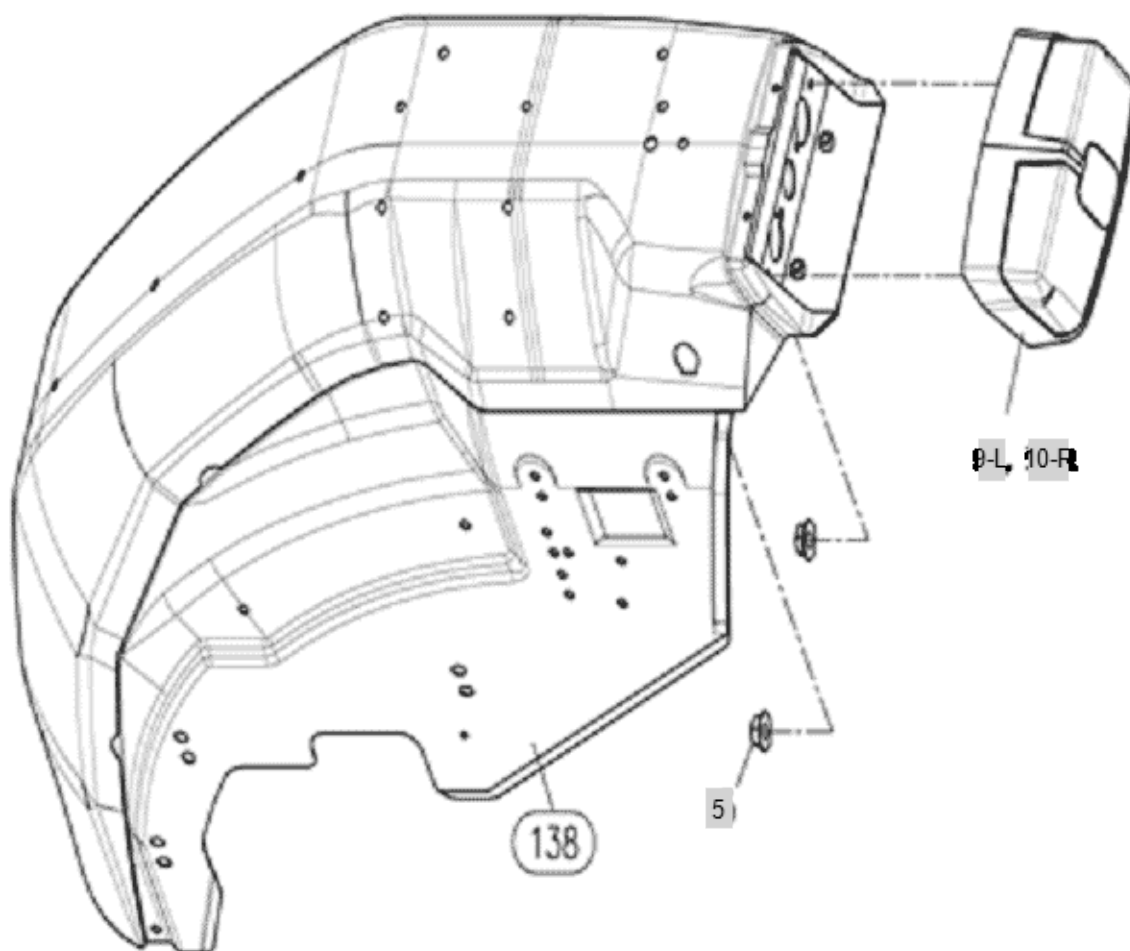


FIG C132-2

Branson 3520H(US)
_EN

Lamp(2019.12~)

Year/Month

2020/02

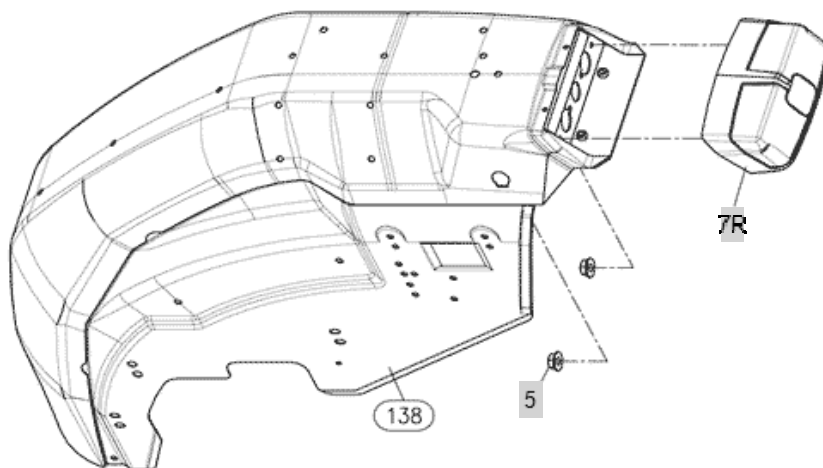


FIG C134-1

Branson 3520H(US)
_EN

Meter_Assembly

Year/Month

2020/02

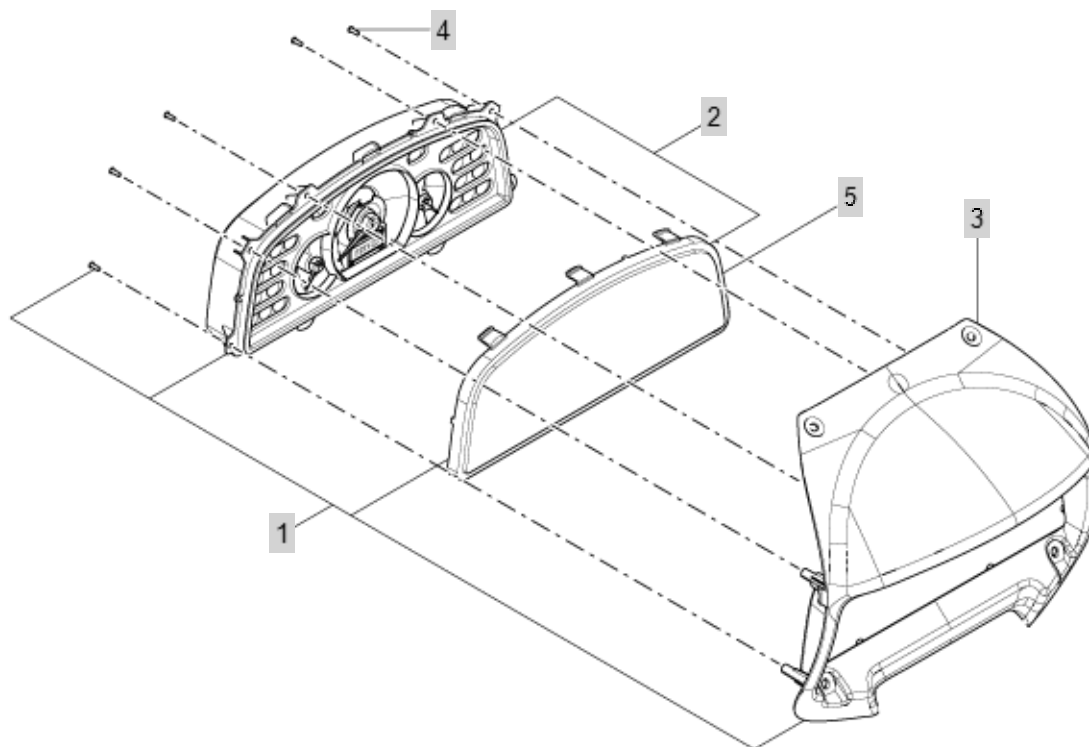


FIG C134-2

Branson 3520H(US)
_EN

Meter_Assembly(2019.12~)

Year/Month

2020/02

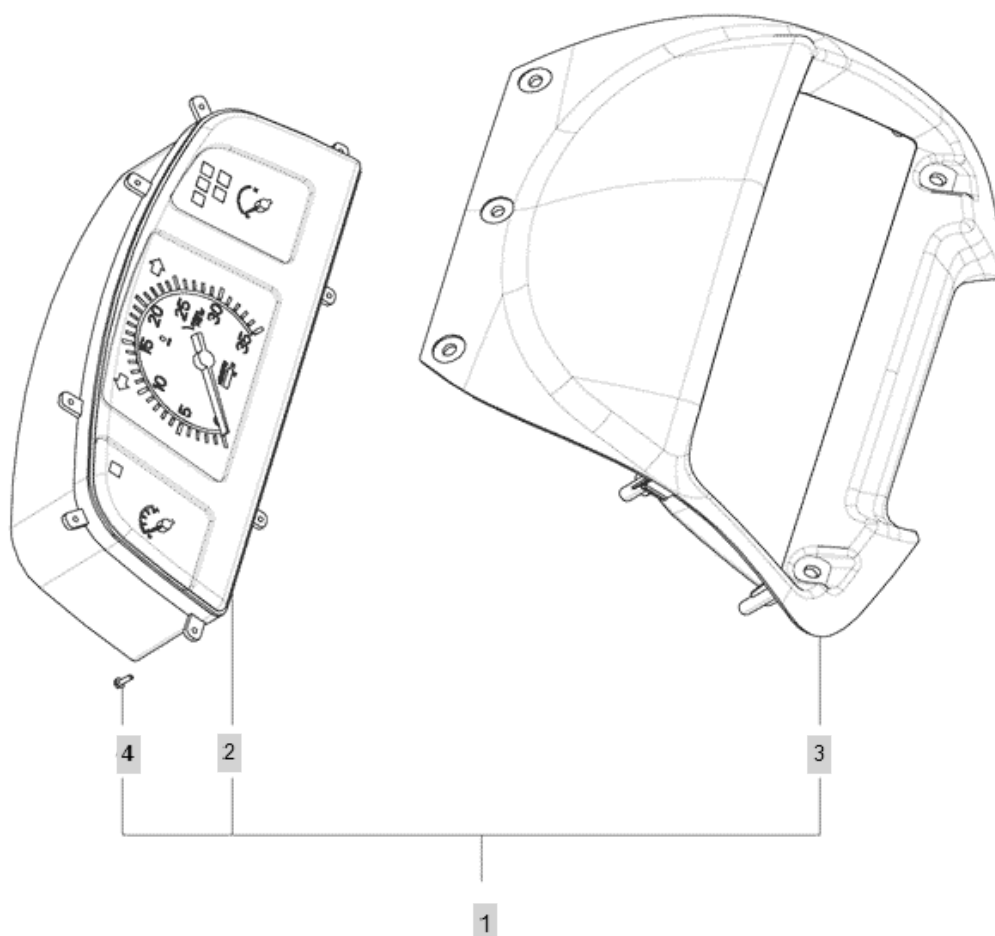



FIG C135-1

Branson 3520H(US)
_EN

Bonnet

Year/Month

2020/02

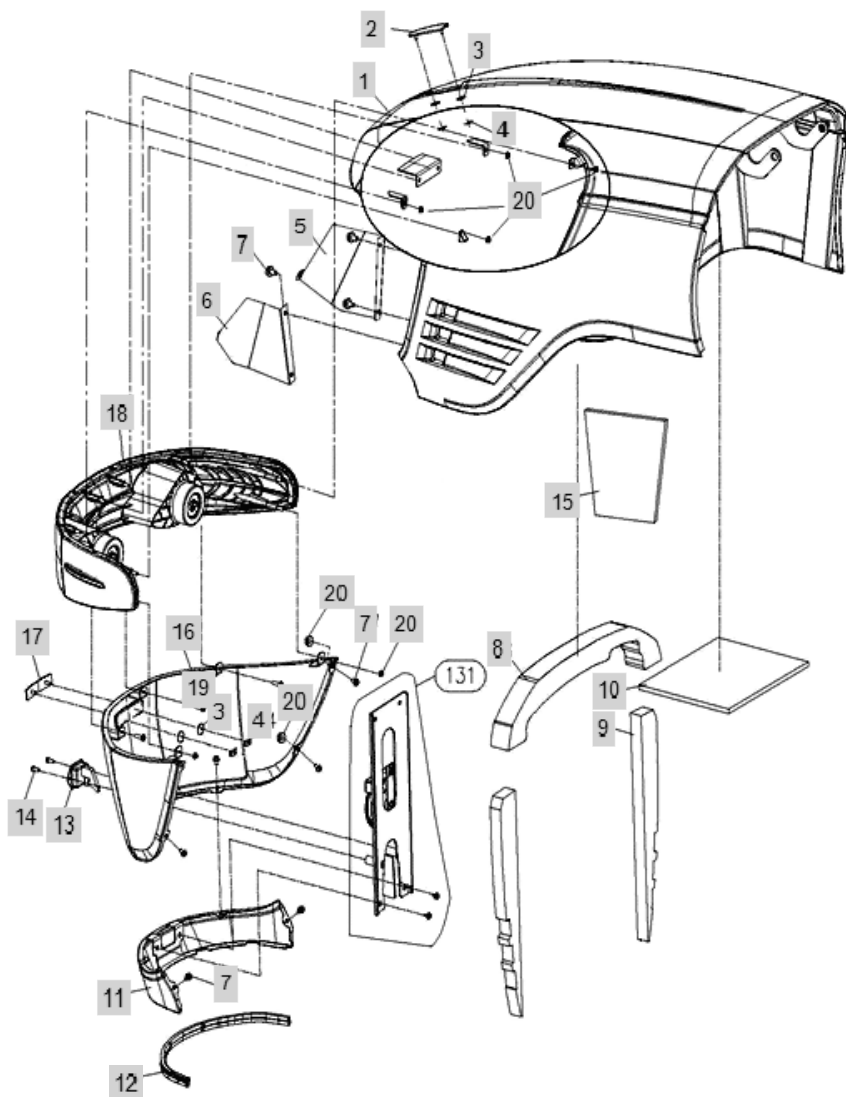

[illegible]


FIG C135-2

Branson 3520H(US)
_EN

BONNET(201806~)

Year/Month

2020/02

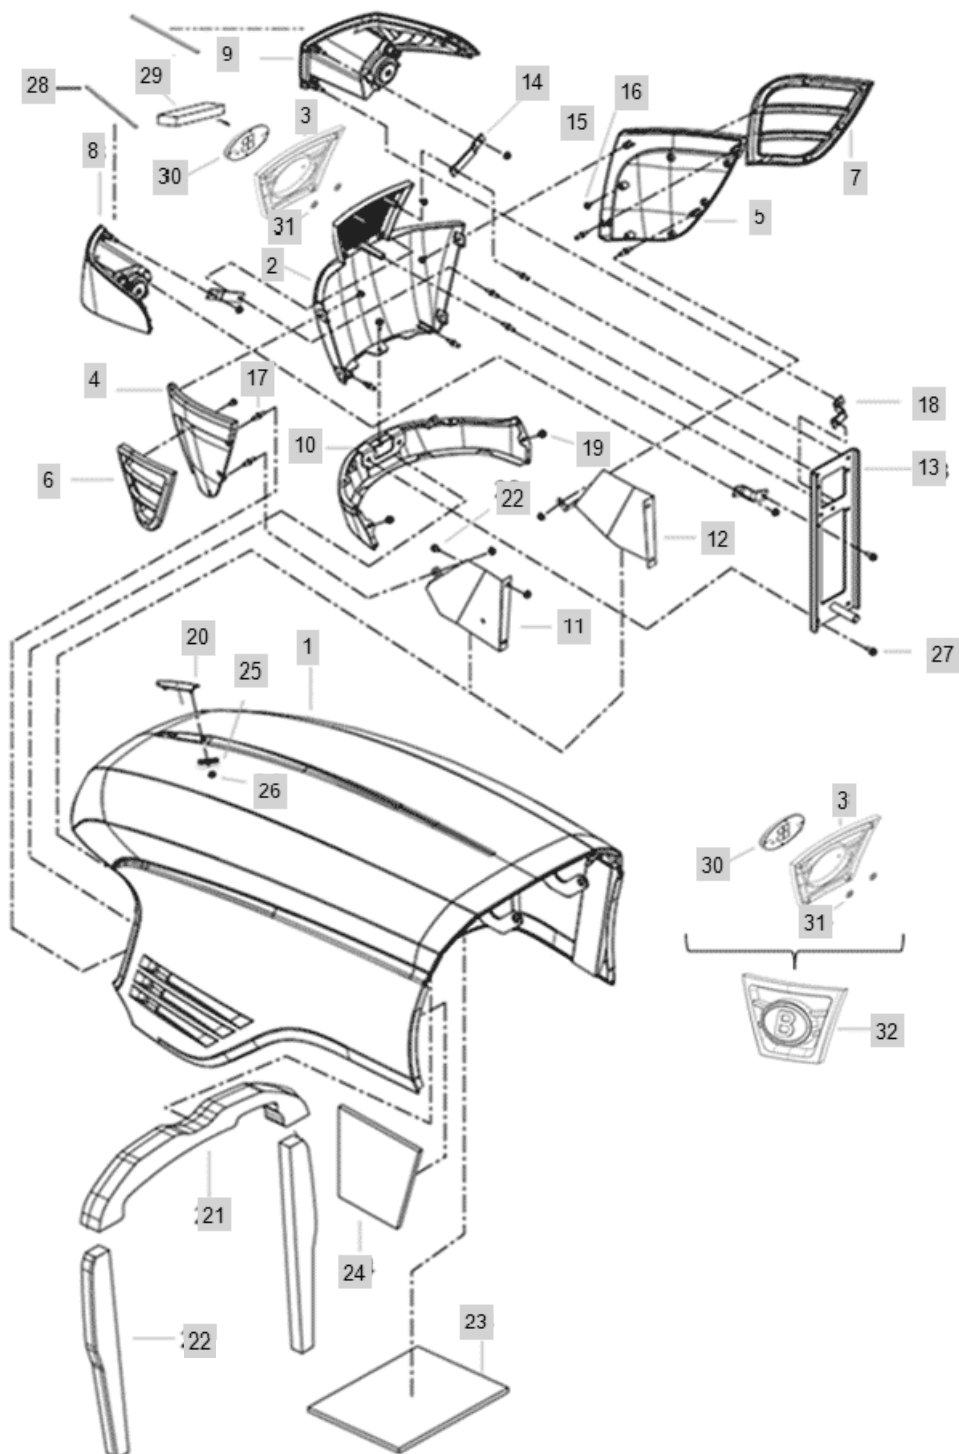

[illegible]


FIG C136A

Branson 3520H(US)
_EN

Bonnet_Support

Year/Month

2020/02

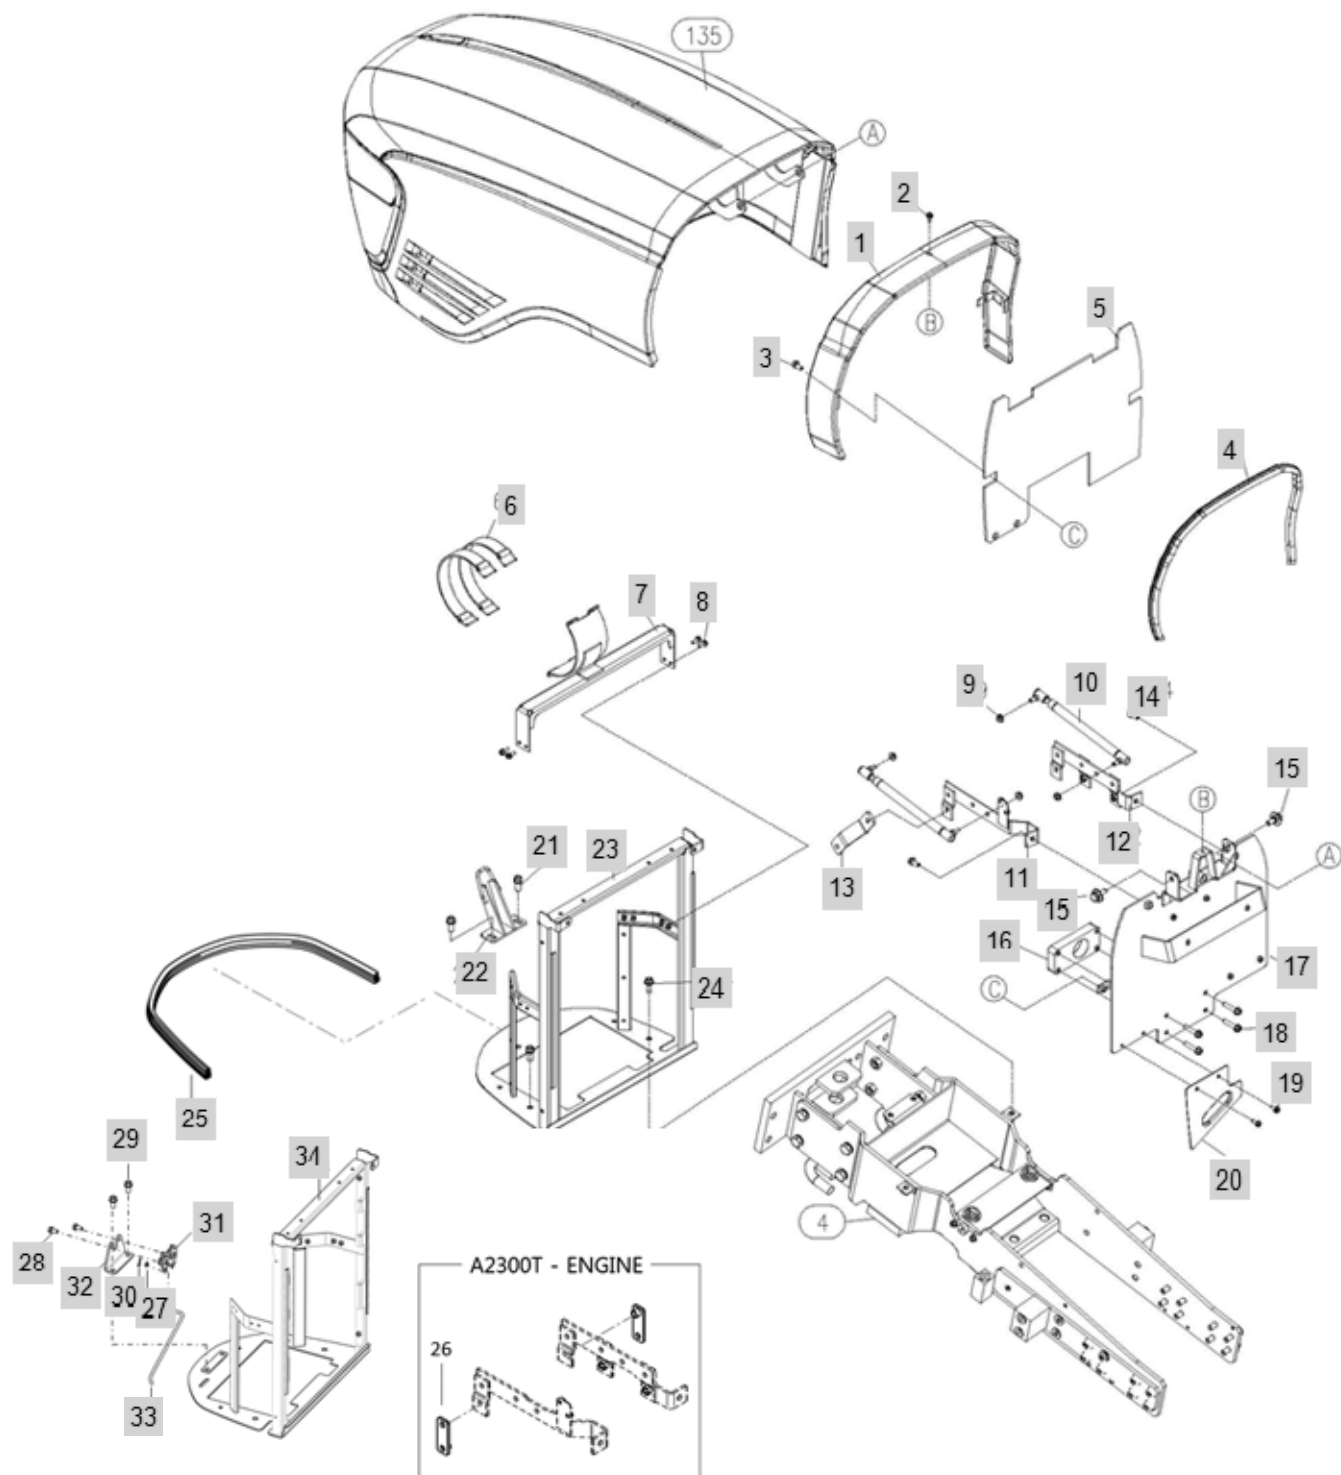

[illegible]

FIG C137

Branson 3520H(US)
_EN

Dash_Board

Year/Month

2020/02

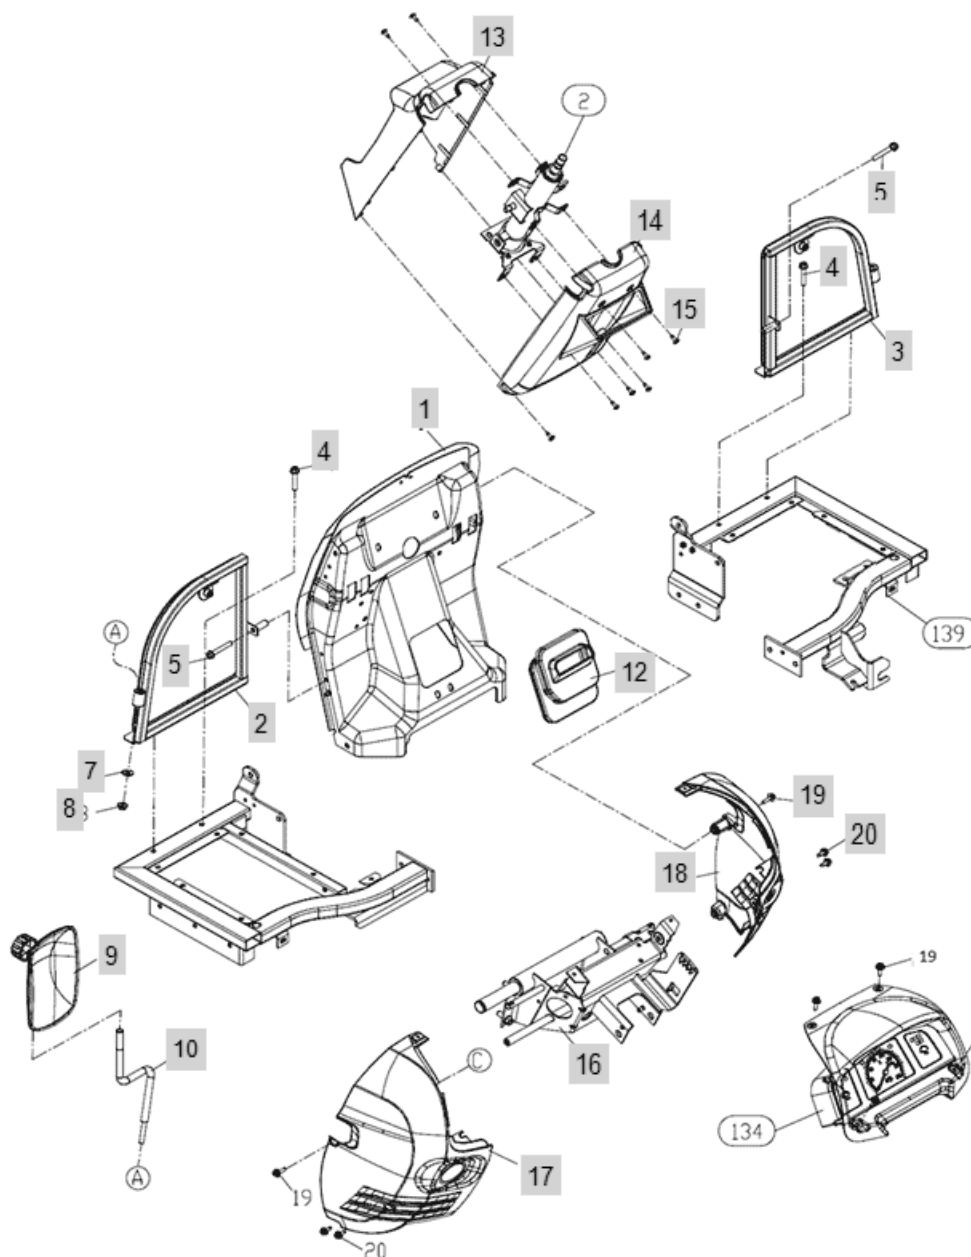



FIG C138-1

Branson 3520H(US)
_EN

FENDER

Year/Month

2020/02

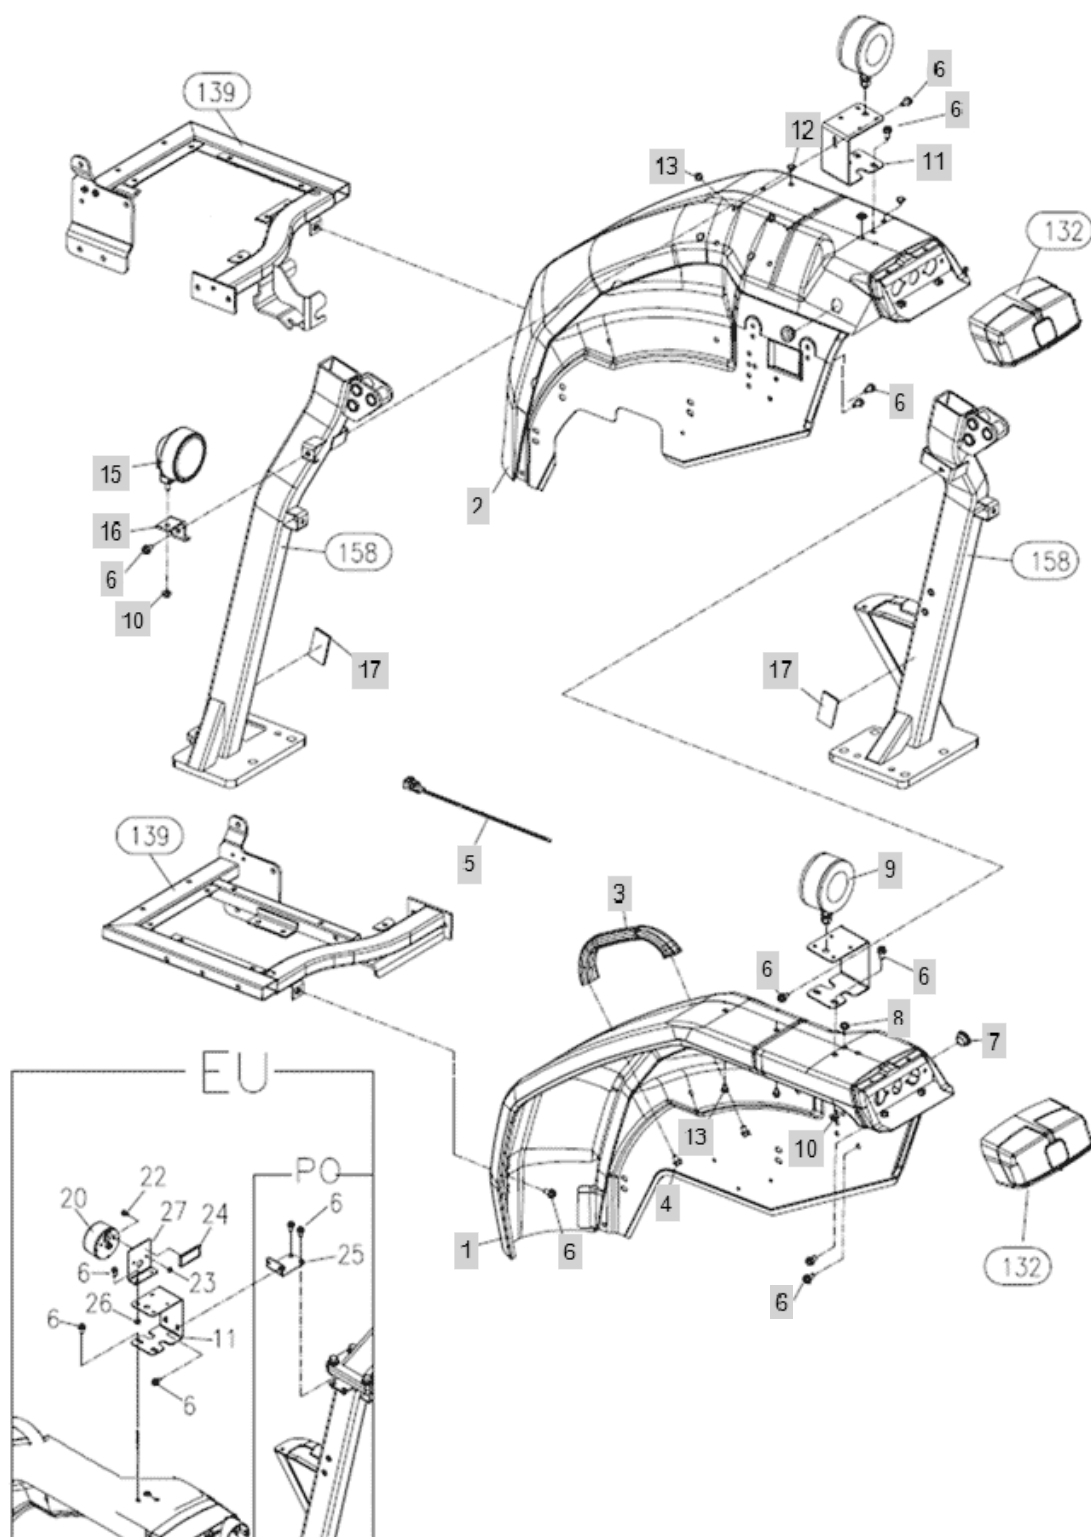

[illegible]

FIG C138-2

Branson 3520H(US)
_EN

FENDER(2016.10)

Year/Month

2020/02

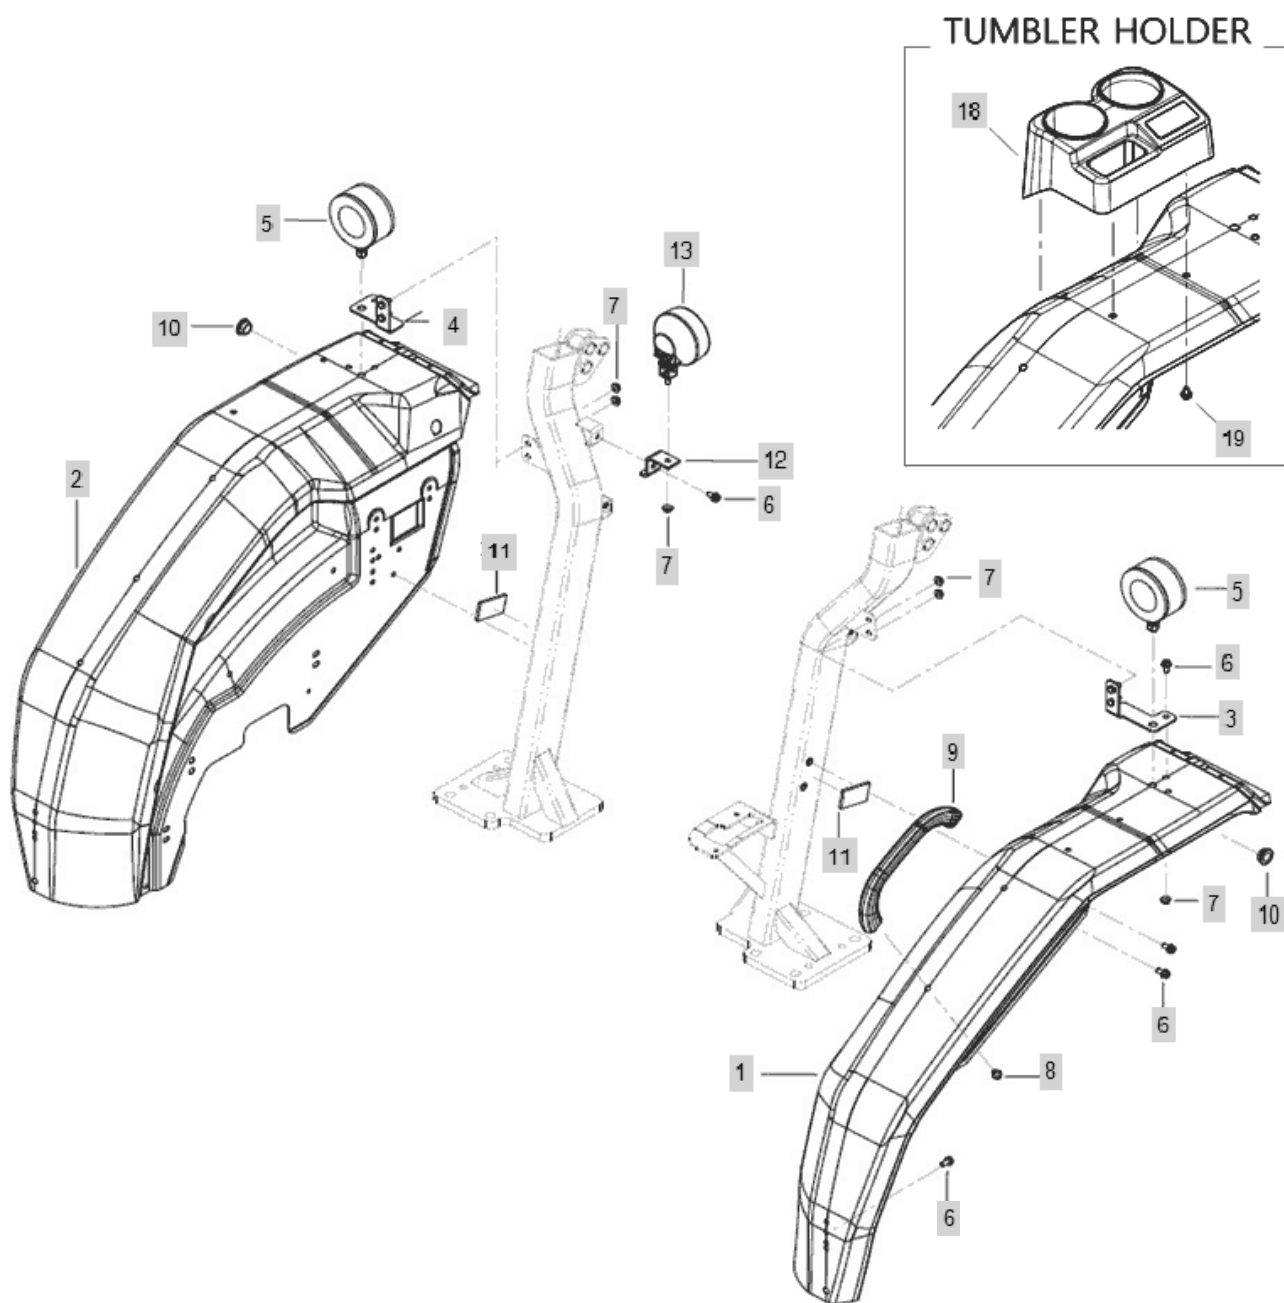


FIG C139

Branson 3520H(US)
_EN

FOOT_REST_ASSY

Year/Month

2020/02

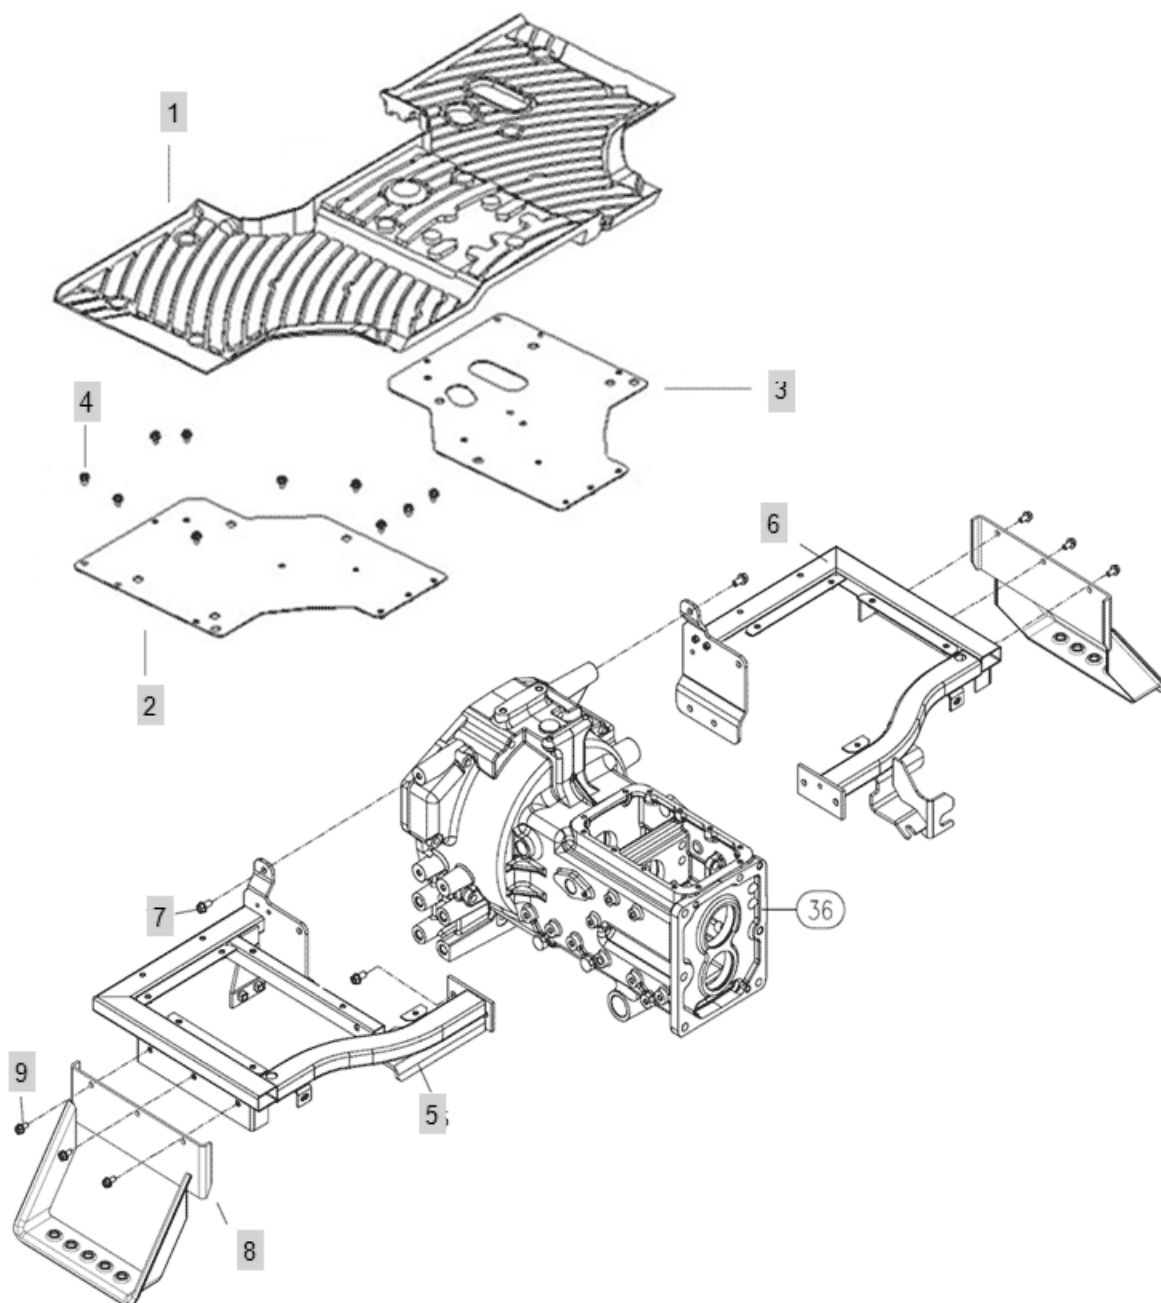


FIG C140

Branson 3520H(US)
_EN

Seat

Year/Month

2020/02

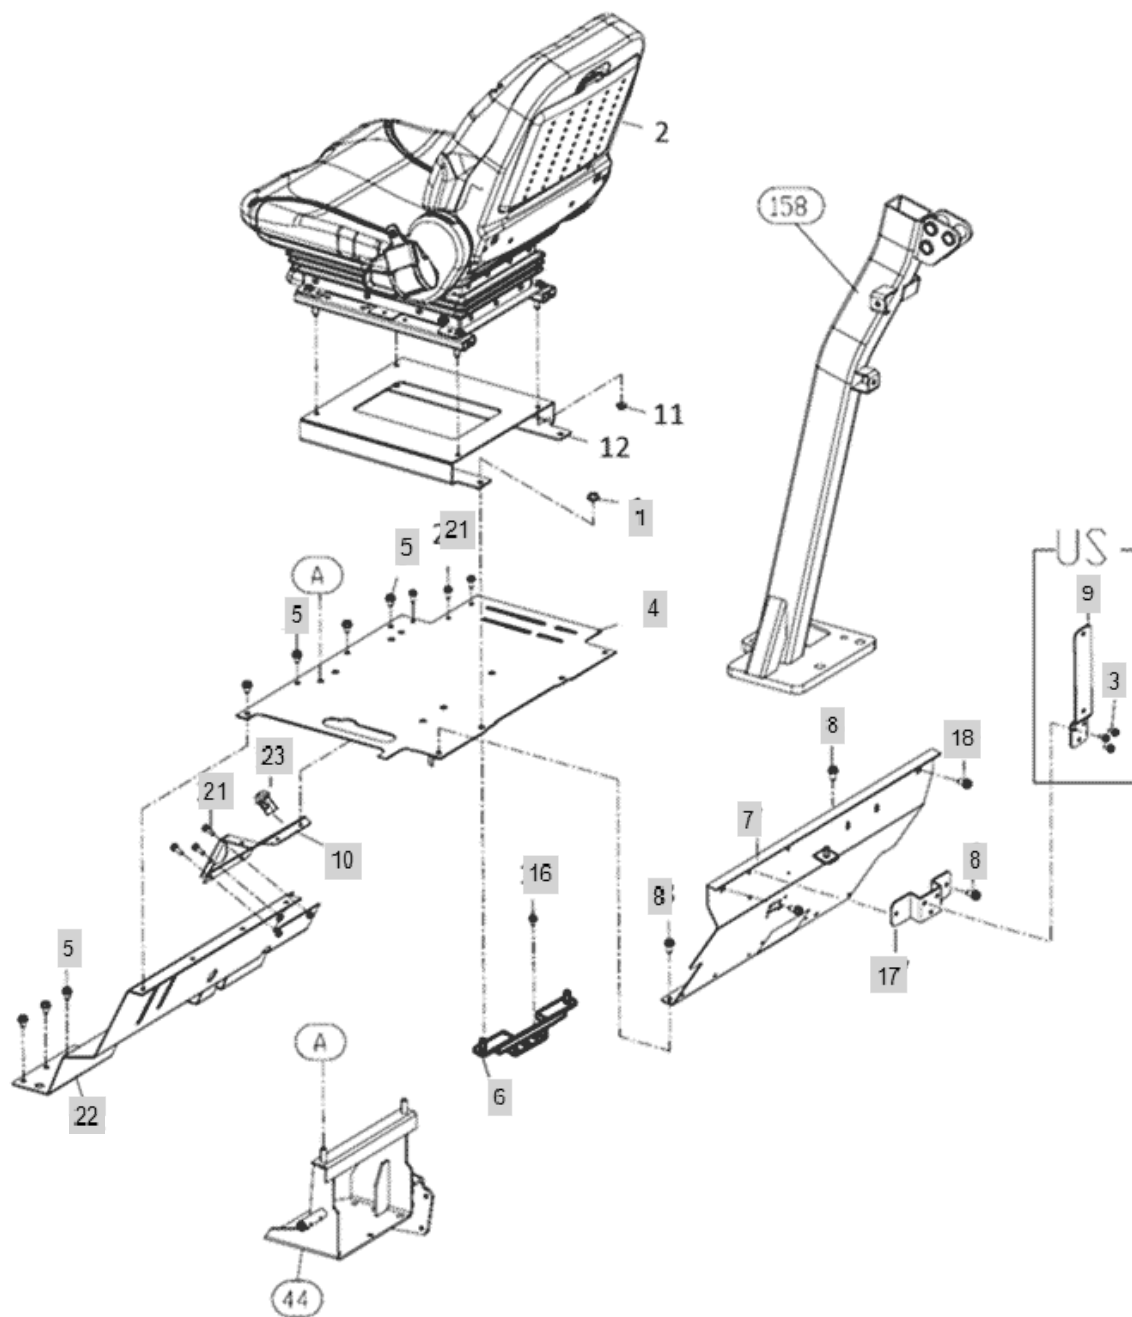



FIG C141-1

Branson 3520H(US)
_EN

FUEL TANK

Year/Month

2020/02

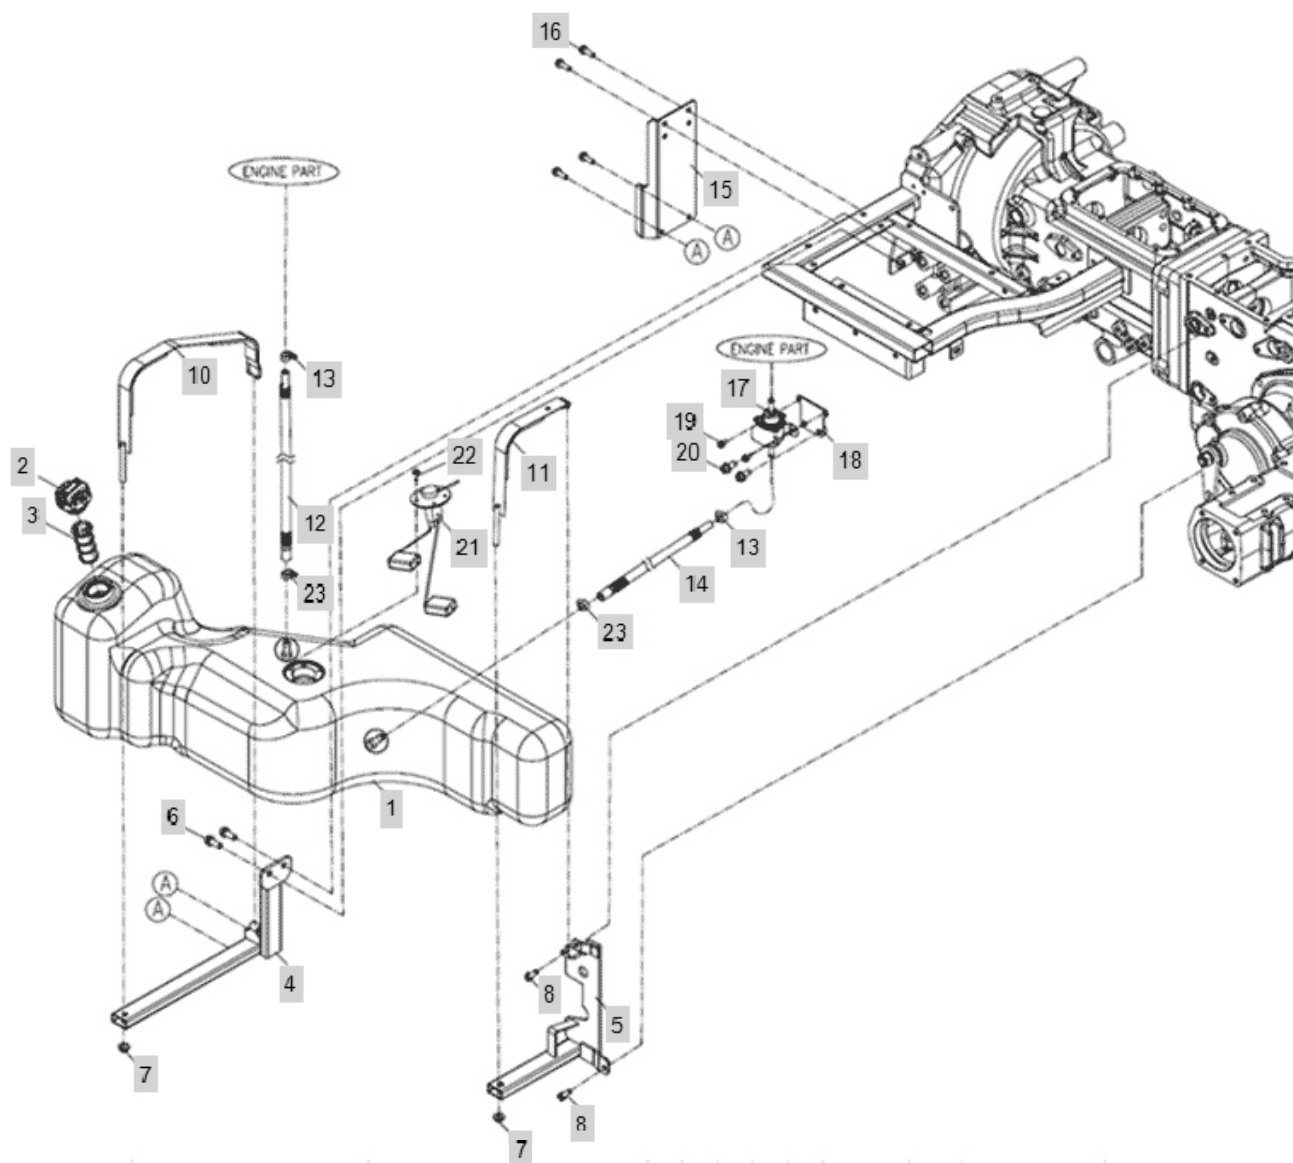

[illegible]


FIG C141-2

Branson 3520H(US)
_EN

FUEL TANK(2016.04.06)

Year/Month

2020/02

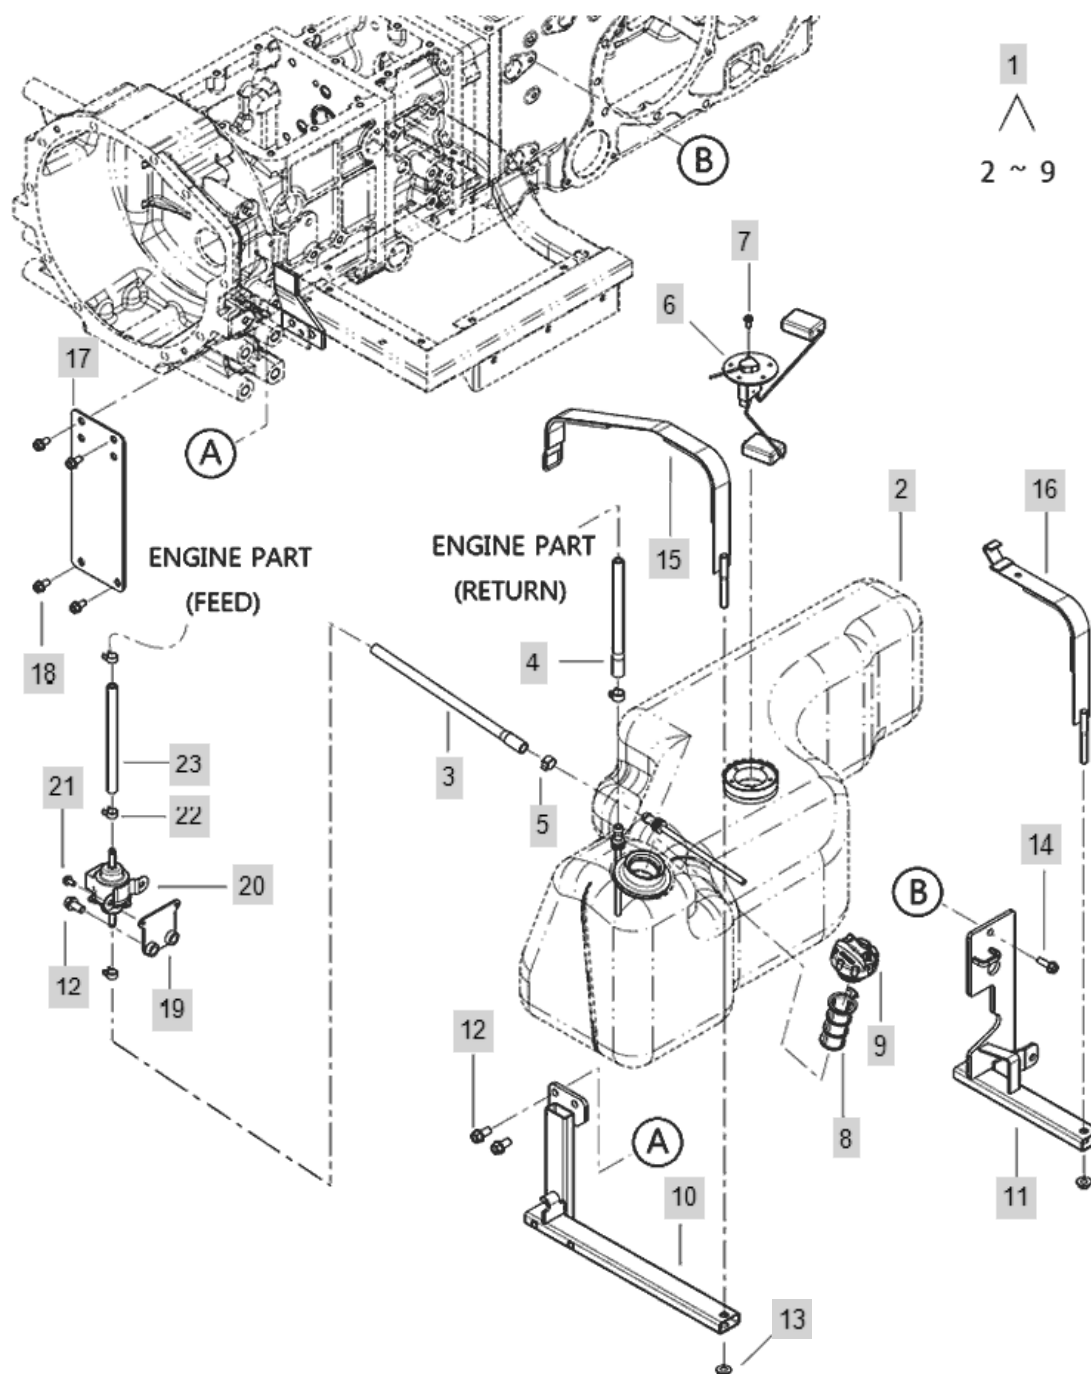

[illegible]


FIG C141A-3

Branson 3520H(US)
_EN

FUEL TANK

Year/Month

2020/02

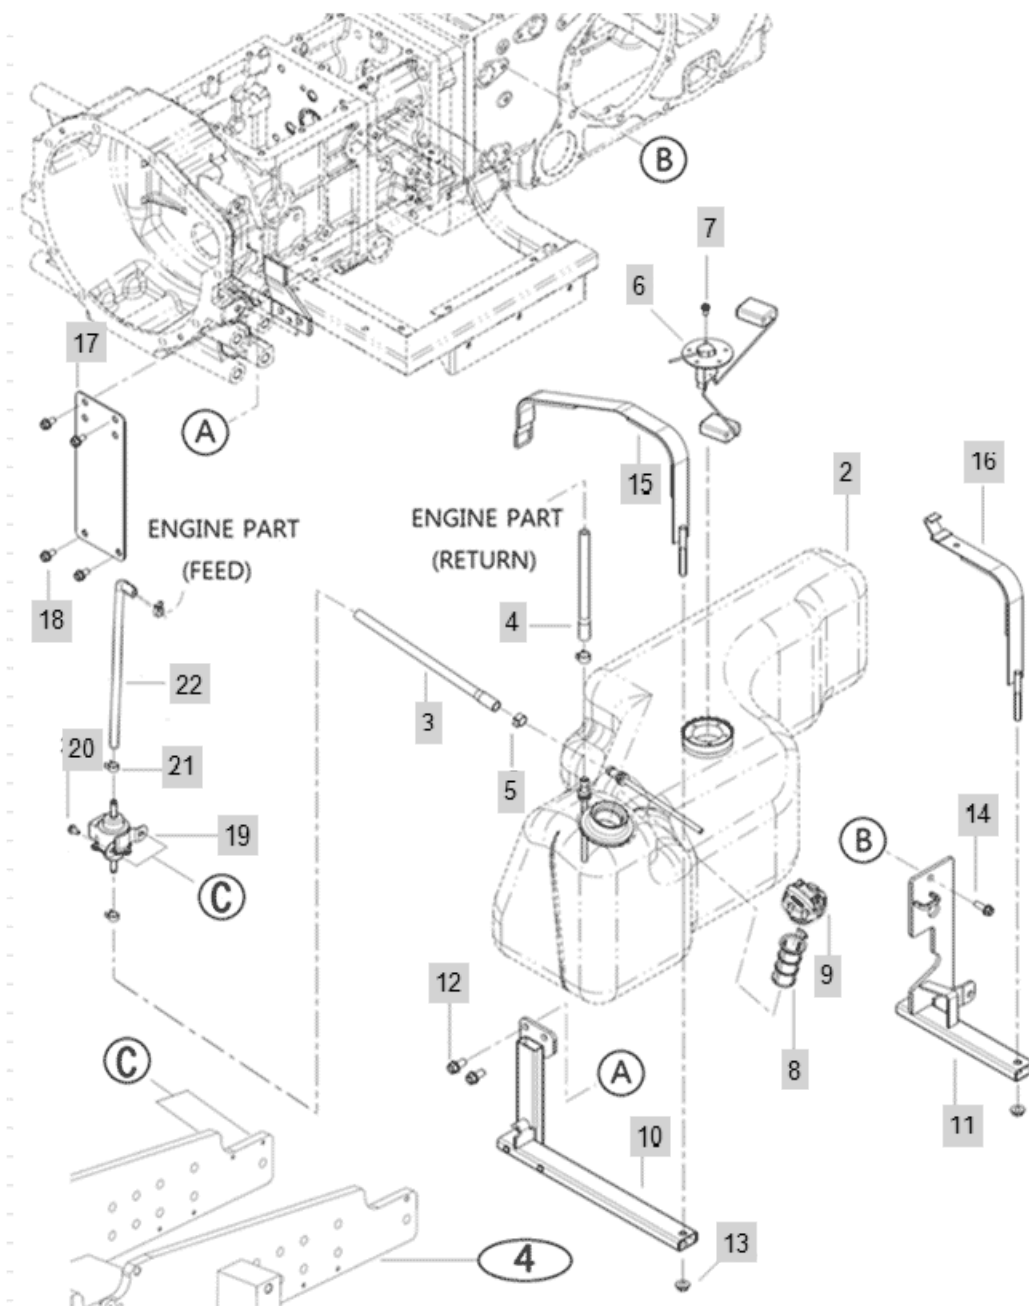

[illegible]


FIG C144A

Branson 3520H(US)
_EN

NAME_PLATE-3520H_EN

Year/Month

2020/02

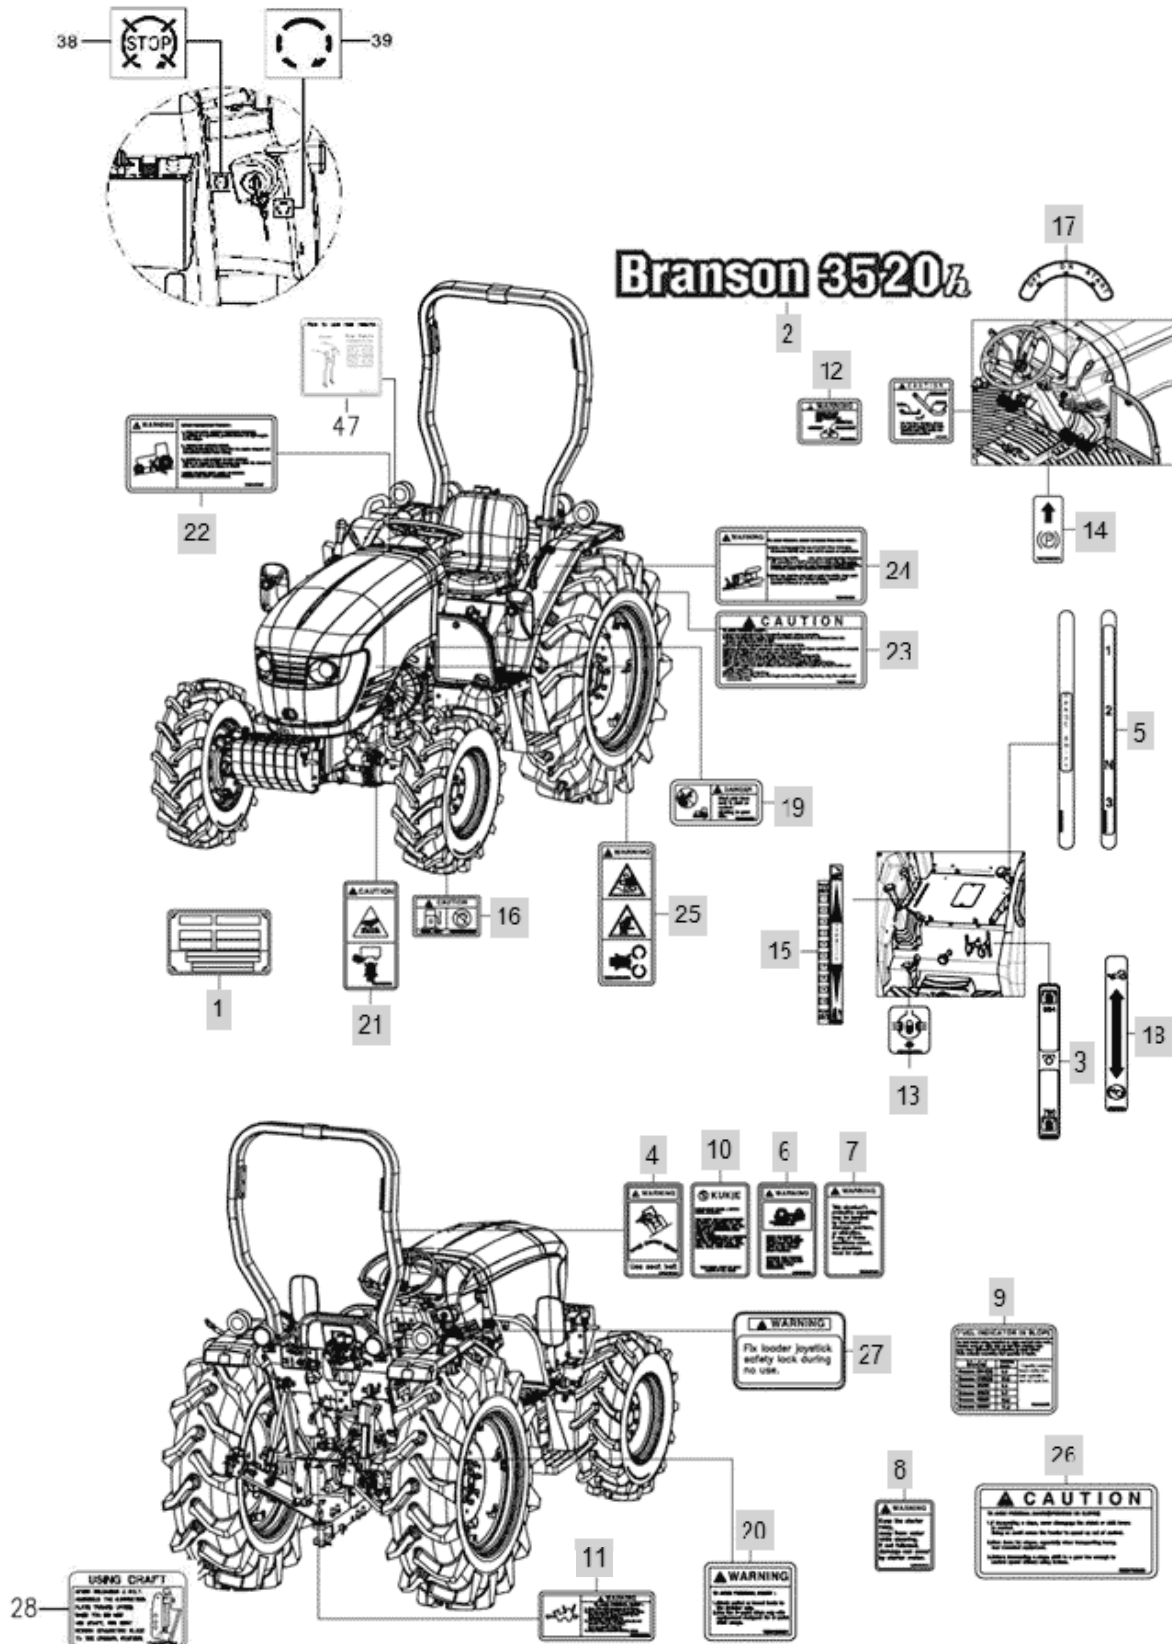

[illegible]


FIG C144B

Branson 3520H(US)
_EN

NAME_PLATE-4020H_EN

Year/Month

2020/02

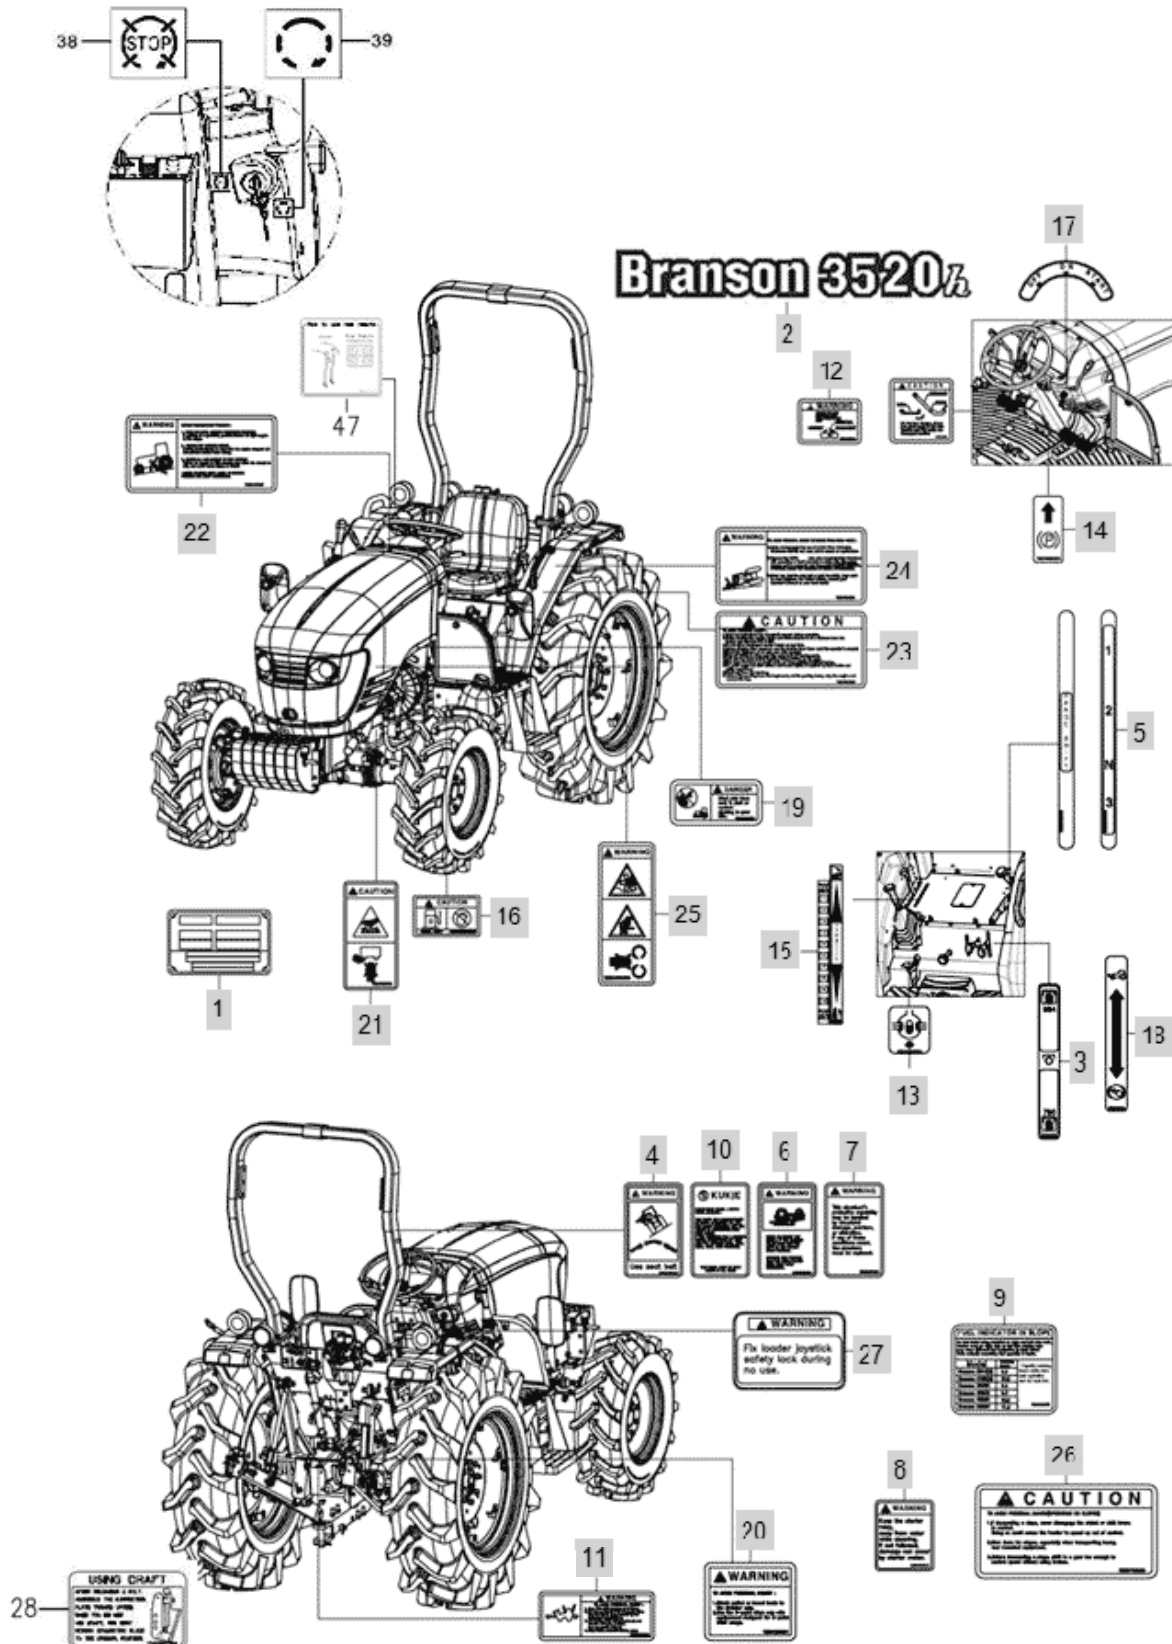

[illegible]



FIG C146-1

Branson 3520H(US)
_EN

Top_Link_Lift_Link_

Year/Month

2020/02

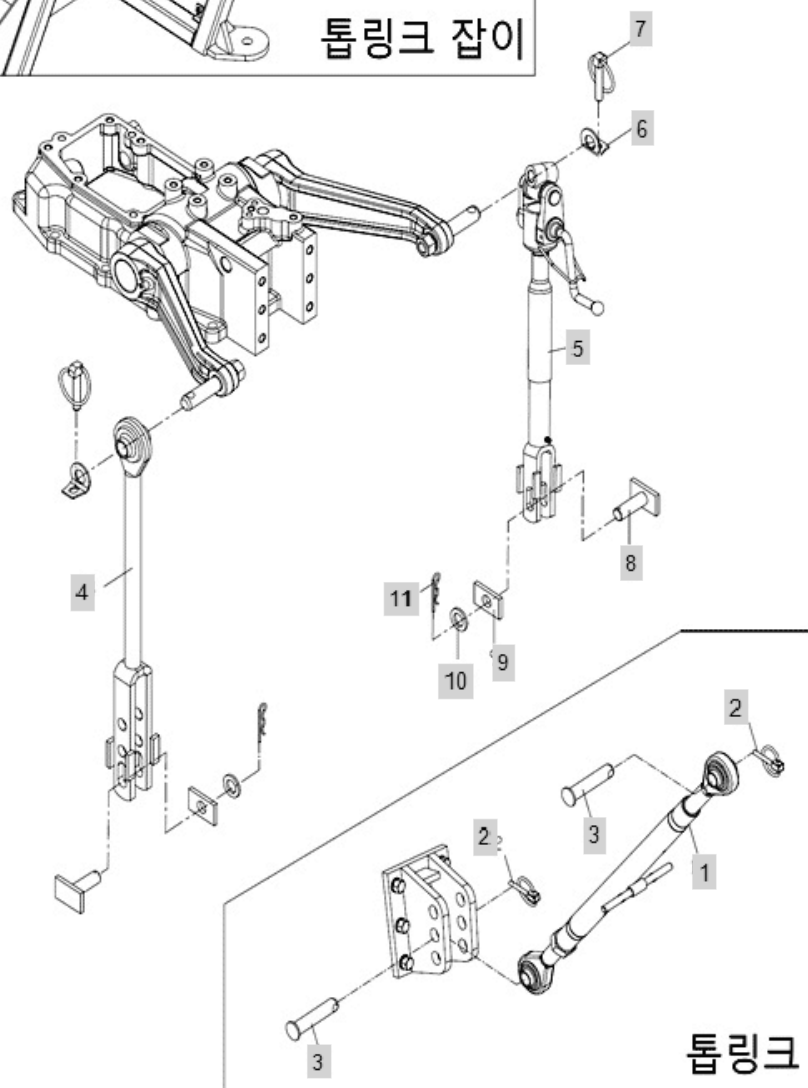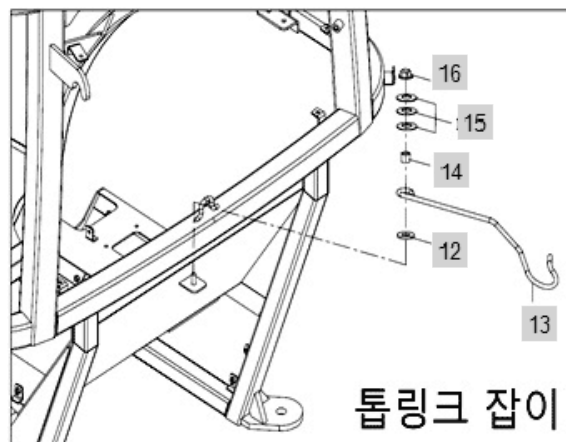

[illegible]


FIG C146-2

Branson 3520H(US)
_EN

TOP LINK, LIFT LINK

Year/Month

2020/02

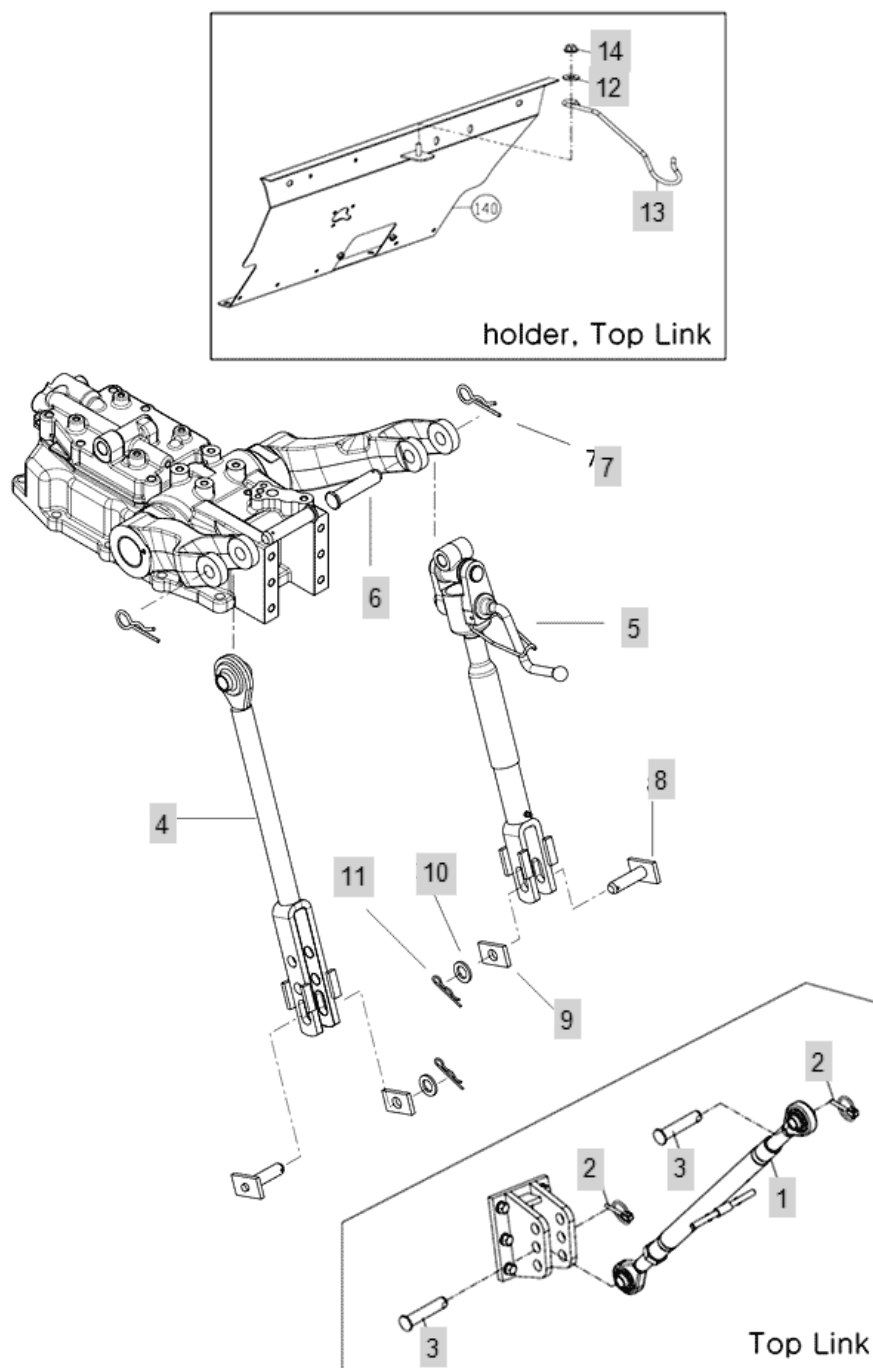

[illegible]


FIG C150A

Branson 3520H(US)
_EN

LOWER LINK

Year/Month

2020/02

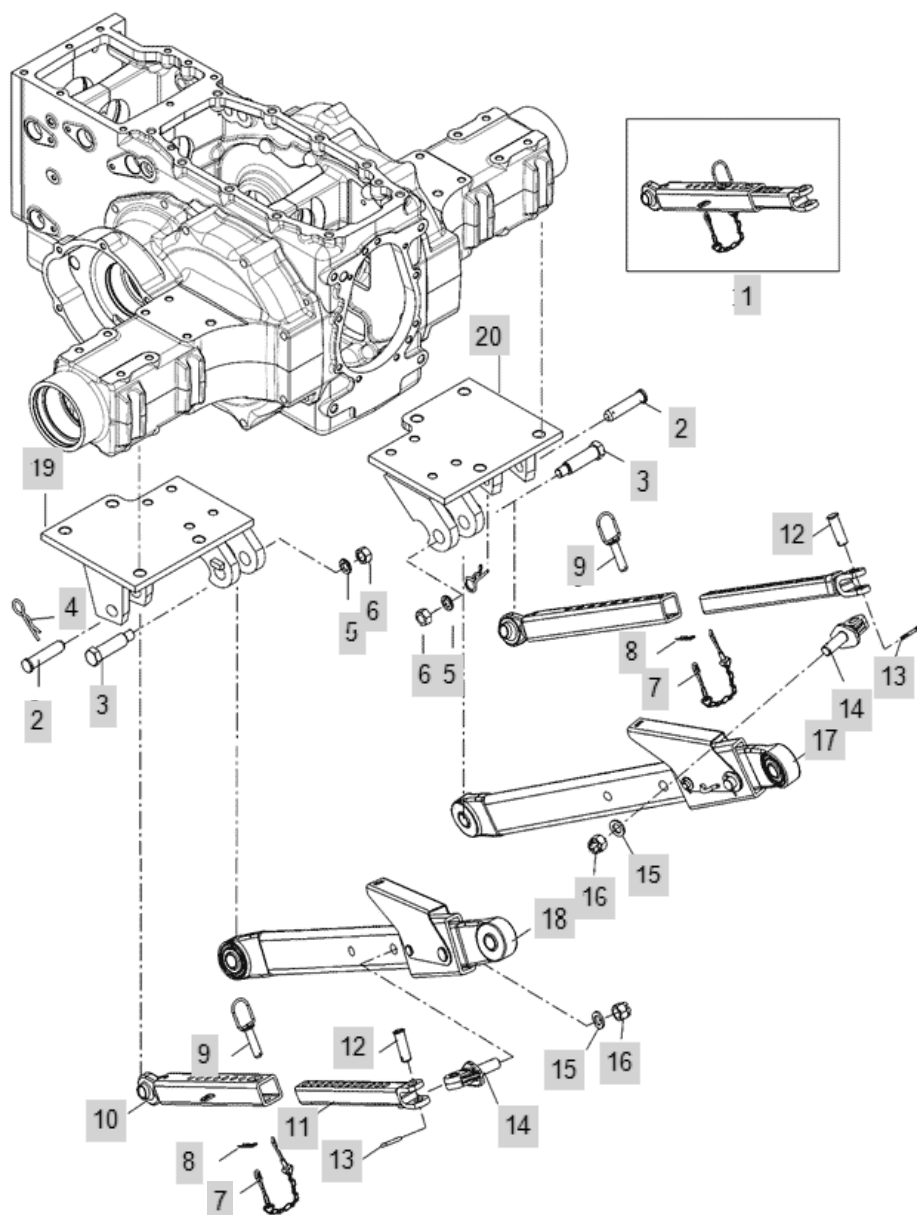

[illegible]

FIG C152

Branson 3520H(US)
_EN

DRAWBAR HITCH

Year/Month

2020/02

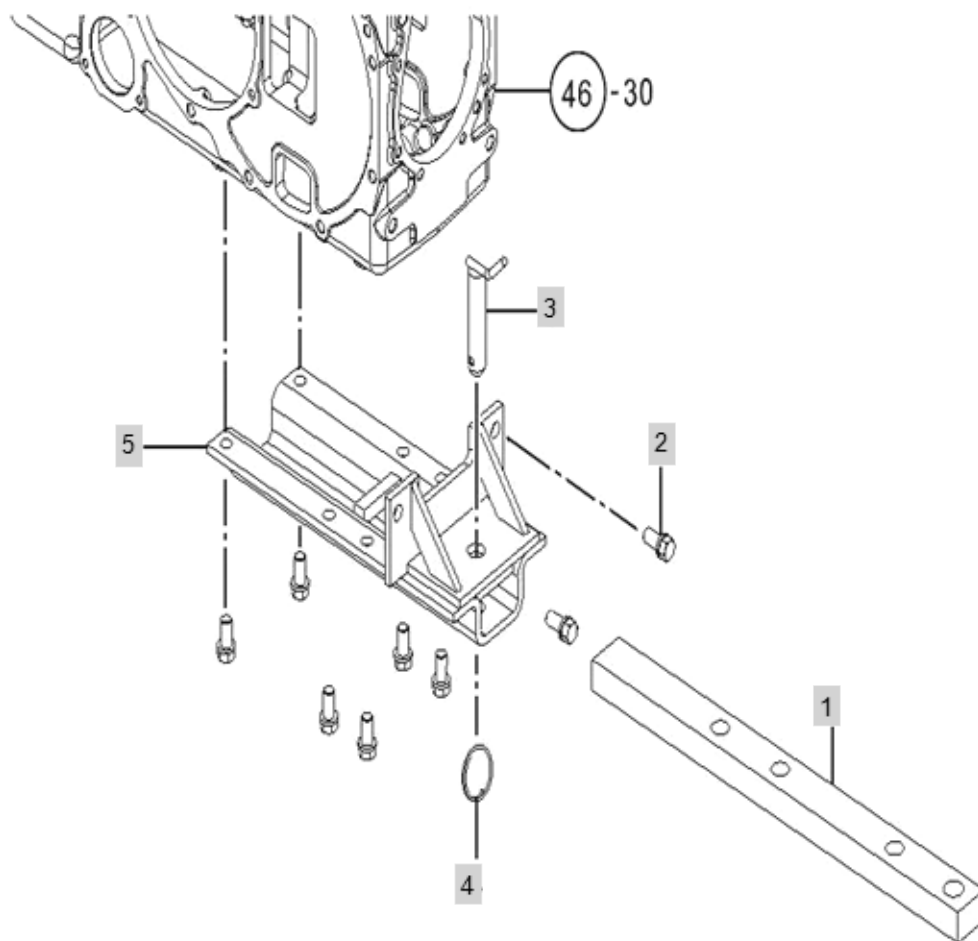


FIG C158

Branson 3520H(US)
_EN

Safety_Frame_Assembly

Year/Month

2020/02

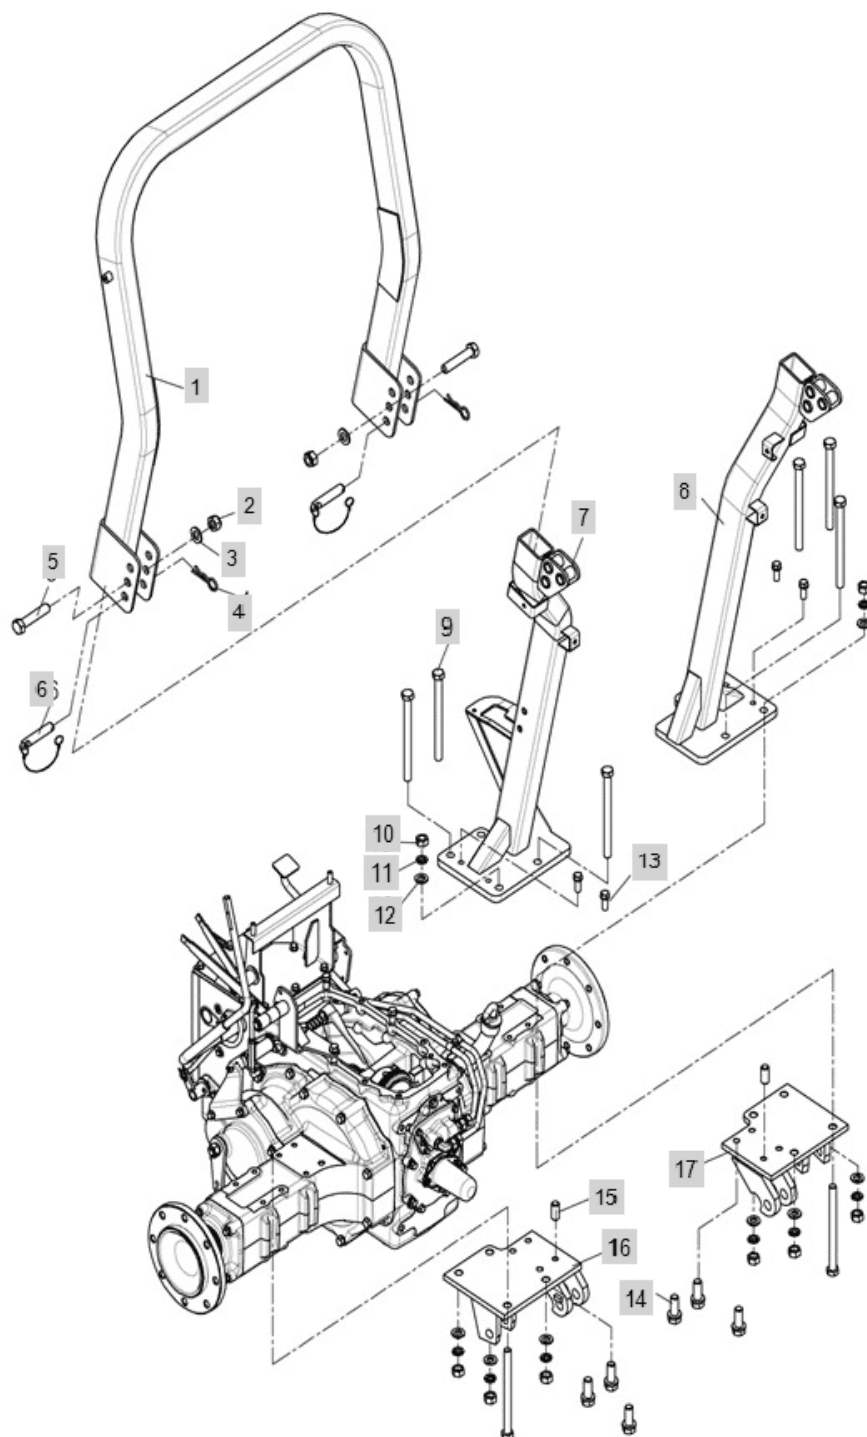



FIG C160

Branson 3520H(US)
_EN

Front_Weight

Year/Month

2020/02

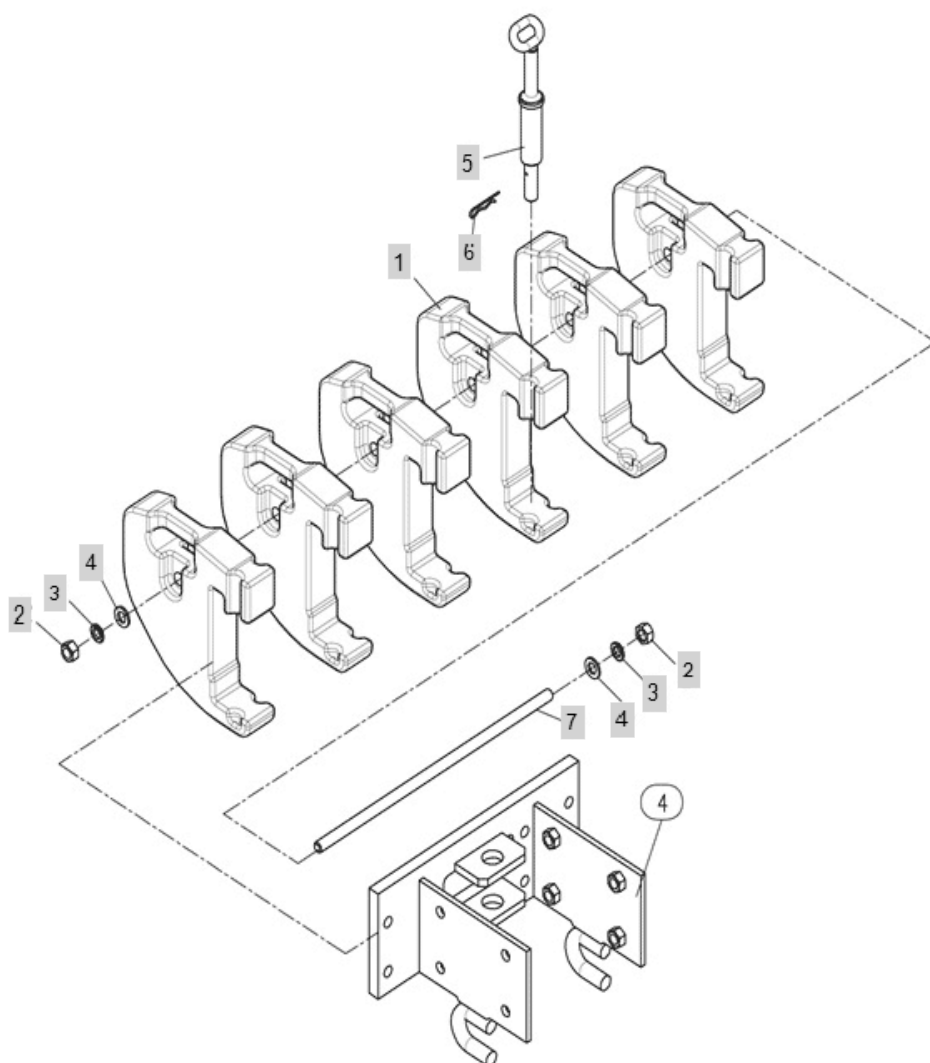

[illegible]


FIG C161A-1

Branson 3520H(US)
_EN

ENGINE SUB-3520H

Year/Month

2020/02

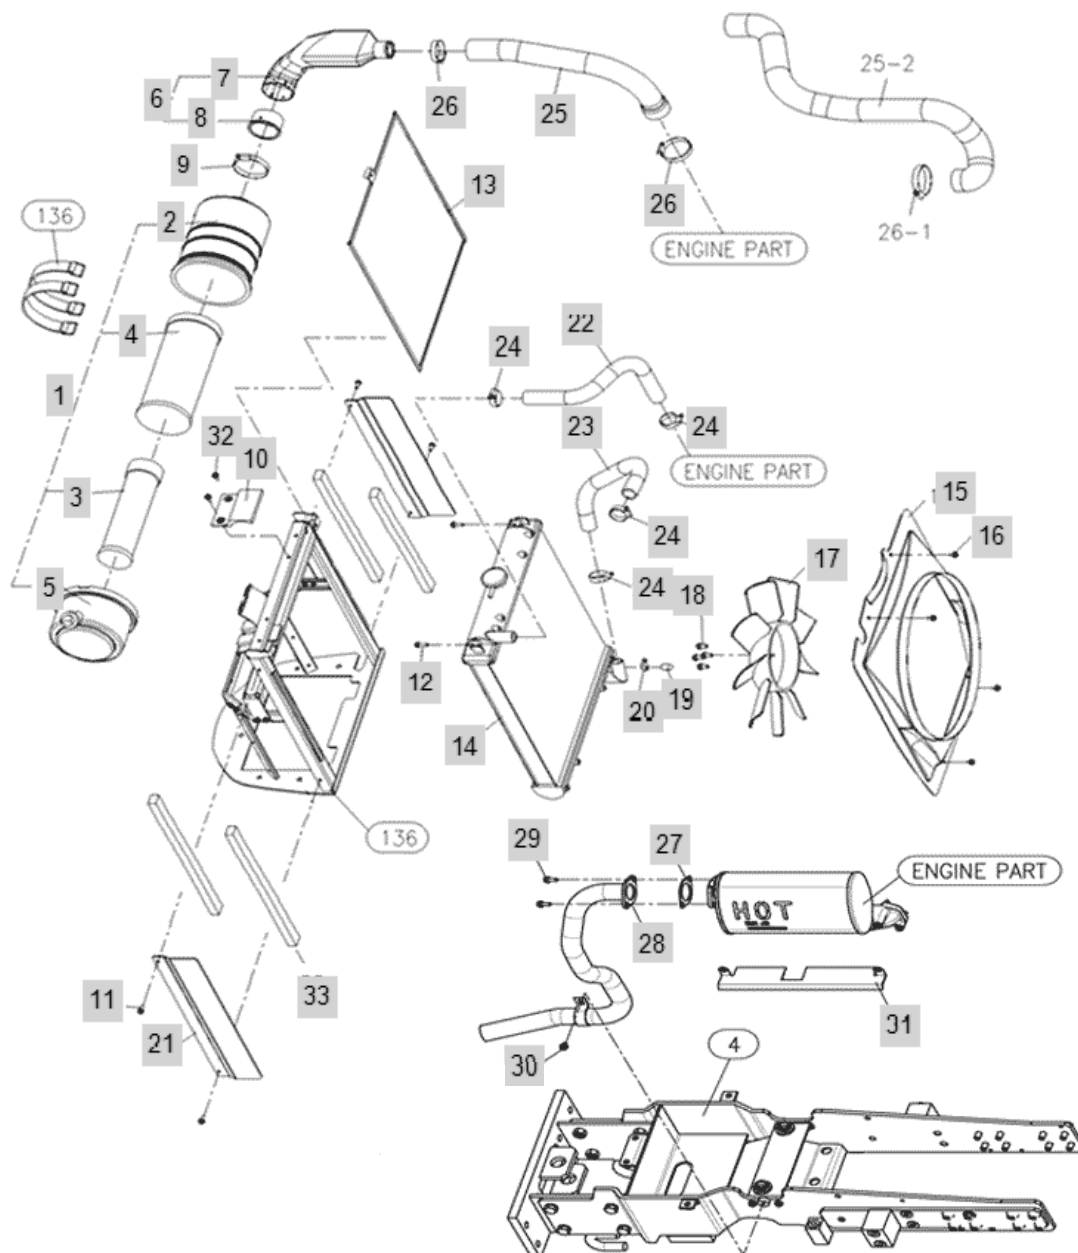

[illegible]


FIG C161A-2

Branson 3520H(US)
_EN

ENGINE SUB(2016.10)-3520H

Year/Month

2020/02

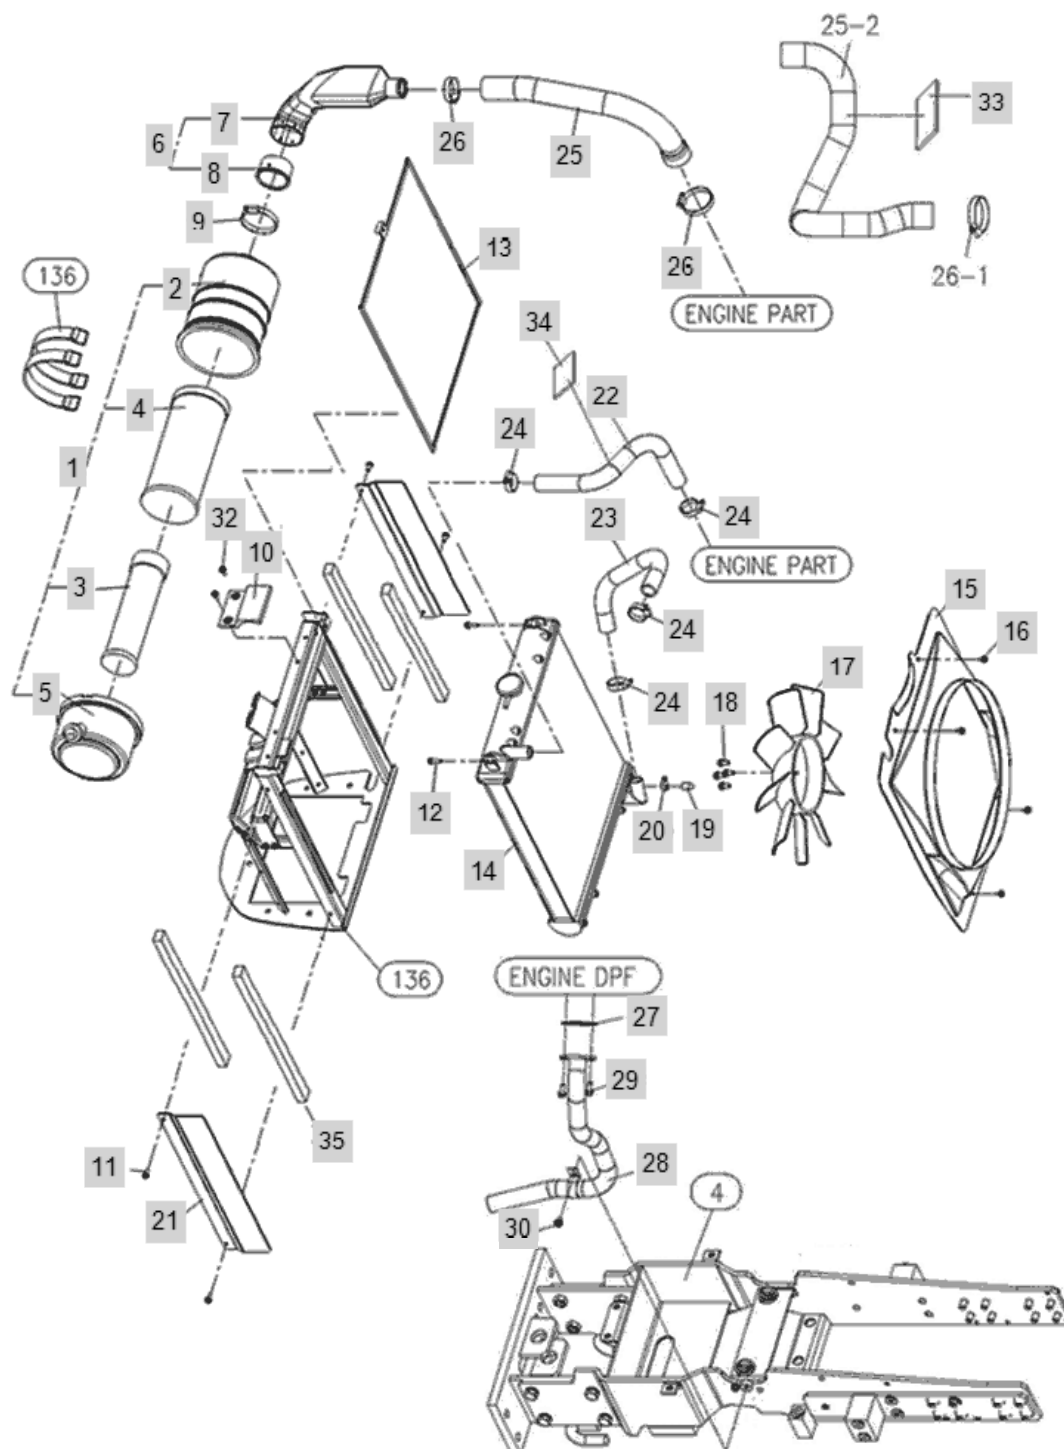

[illegible]


FIG C161A-3

Branson 3520H(US)
_EN

ENGINE SUB

Year/Month

2020/02

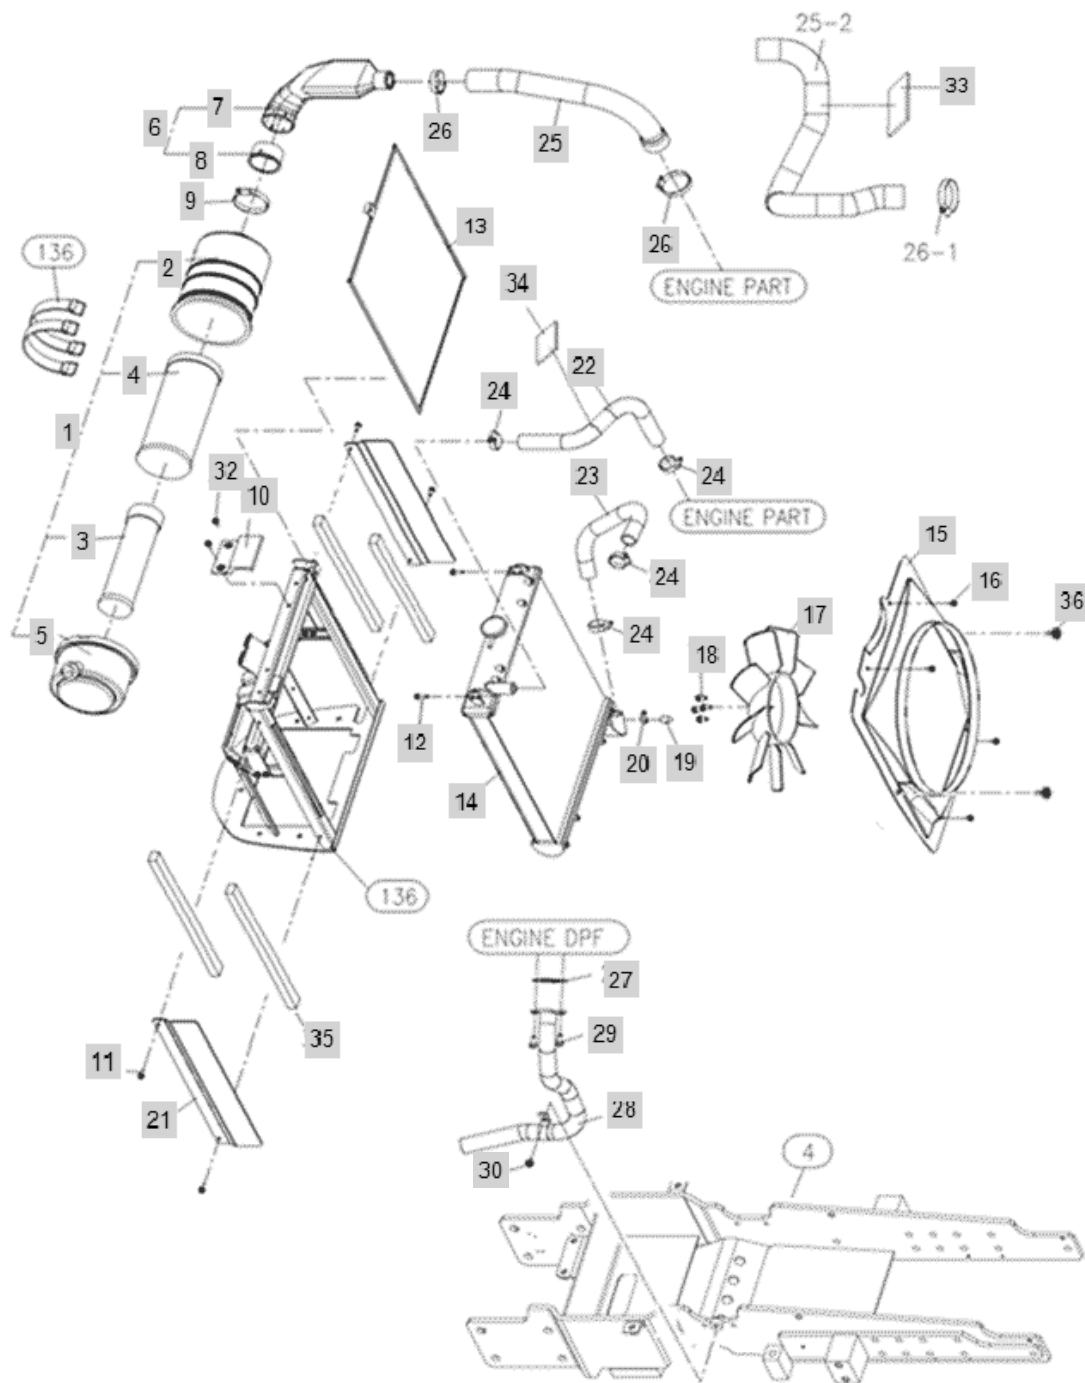

[illegible]

FIG C191-1

Branson 3520H(US)
_EN

4PORT ASS'Y

Year/Month

2020/02

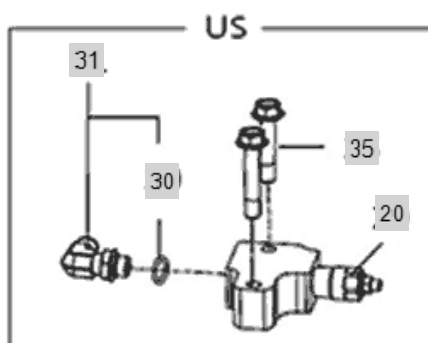



FIG E001

Branson 3520H(US)
_EN

CYLINDER BLOCK

Year/Month

2020/02

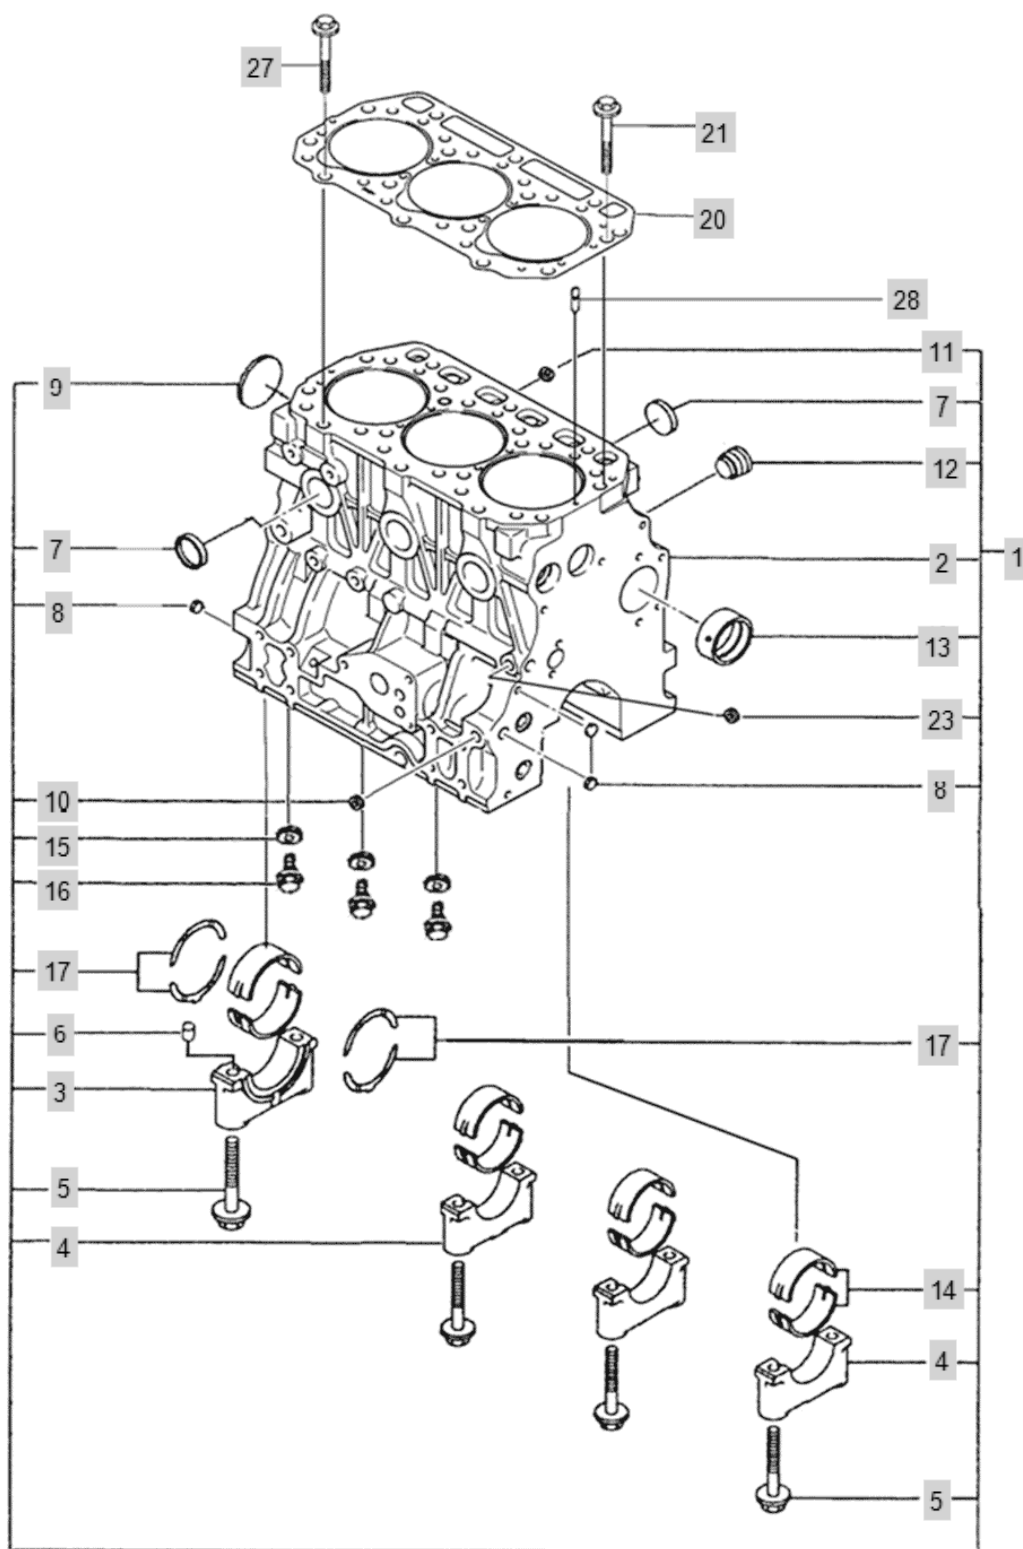

[illegible]


FIG E002

Branson 3520H(US)
_EN

GEAR CASE

Year/Month

2020/02

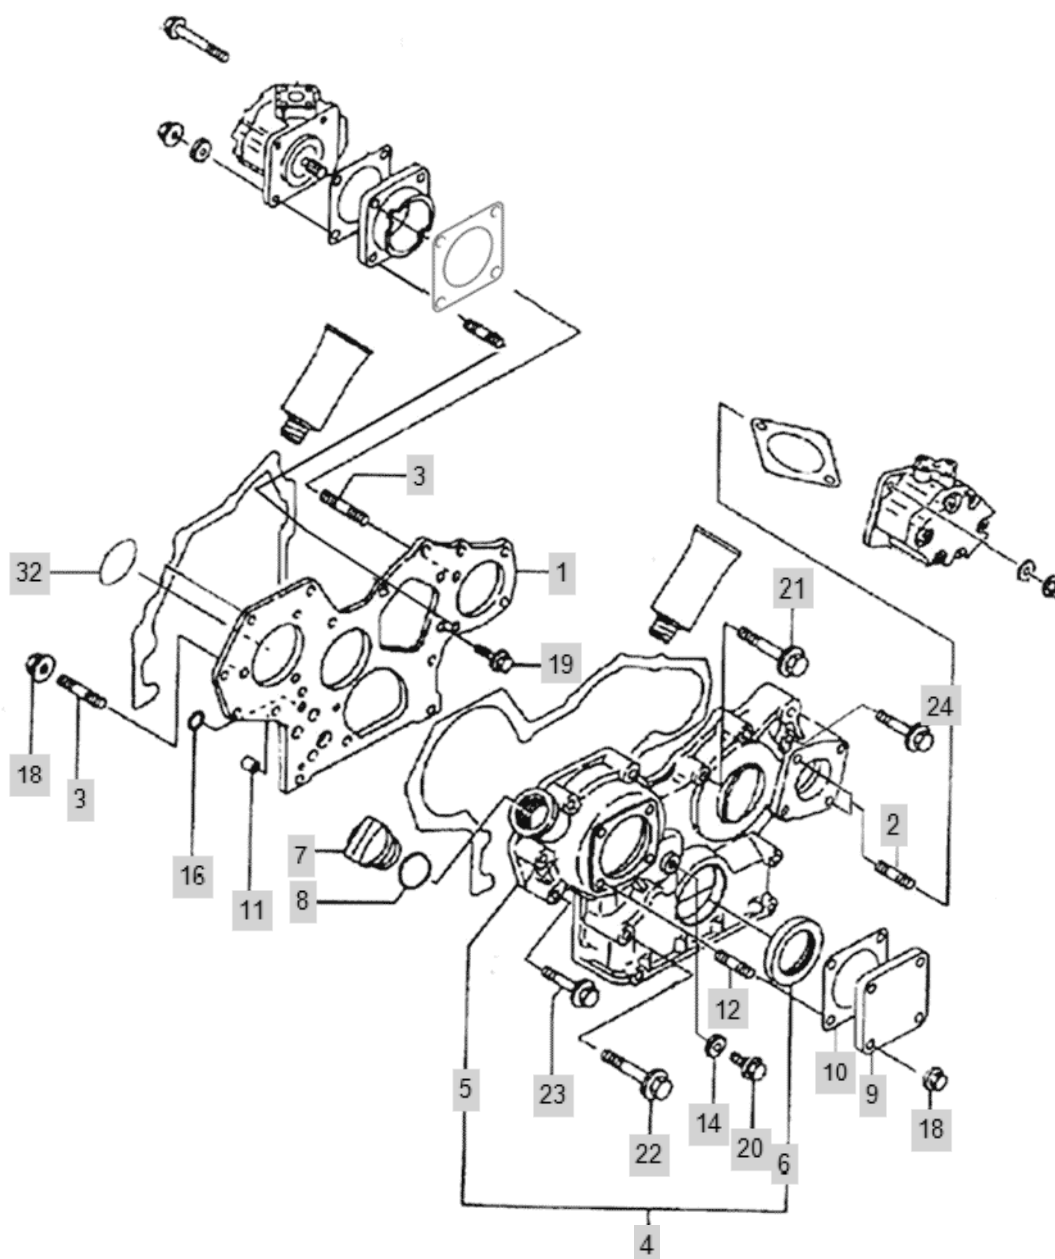

[illegible]

FIG E003

Branson 3520H(US)
_EN

MOUNTING FLANGE & OIL PAN

Year/Month

2020/02

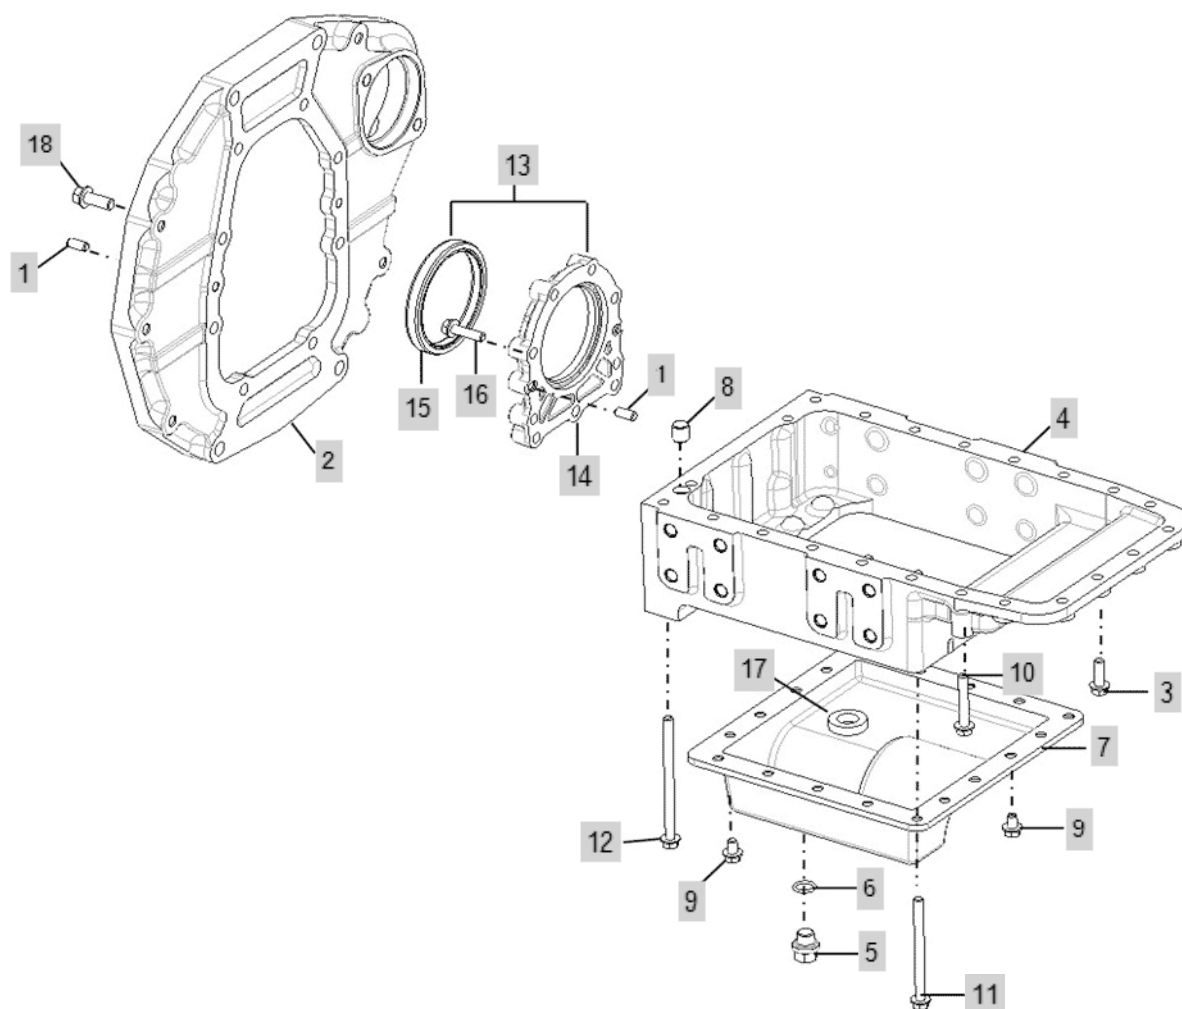


FIG E004

Branson 3520H(US)
_EN

CYLINDER HEAD & HEAD COVER

Year/Month

2020/02

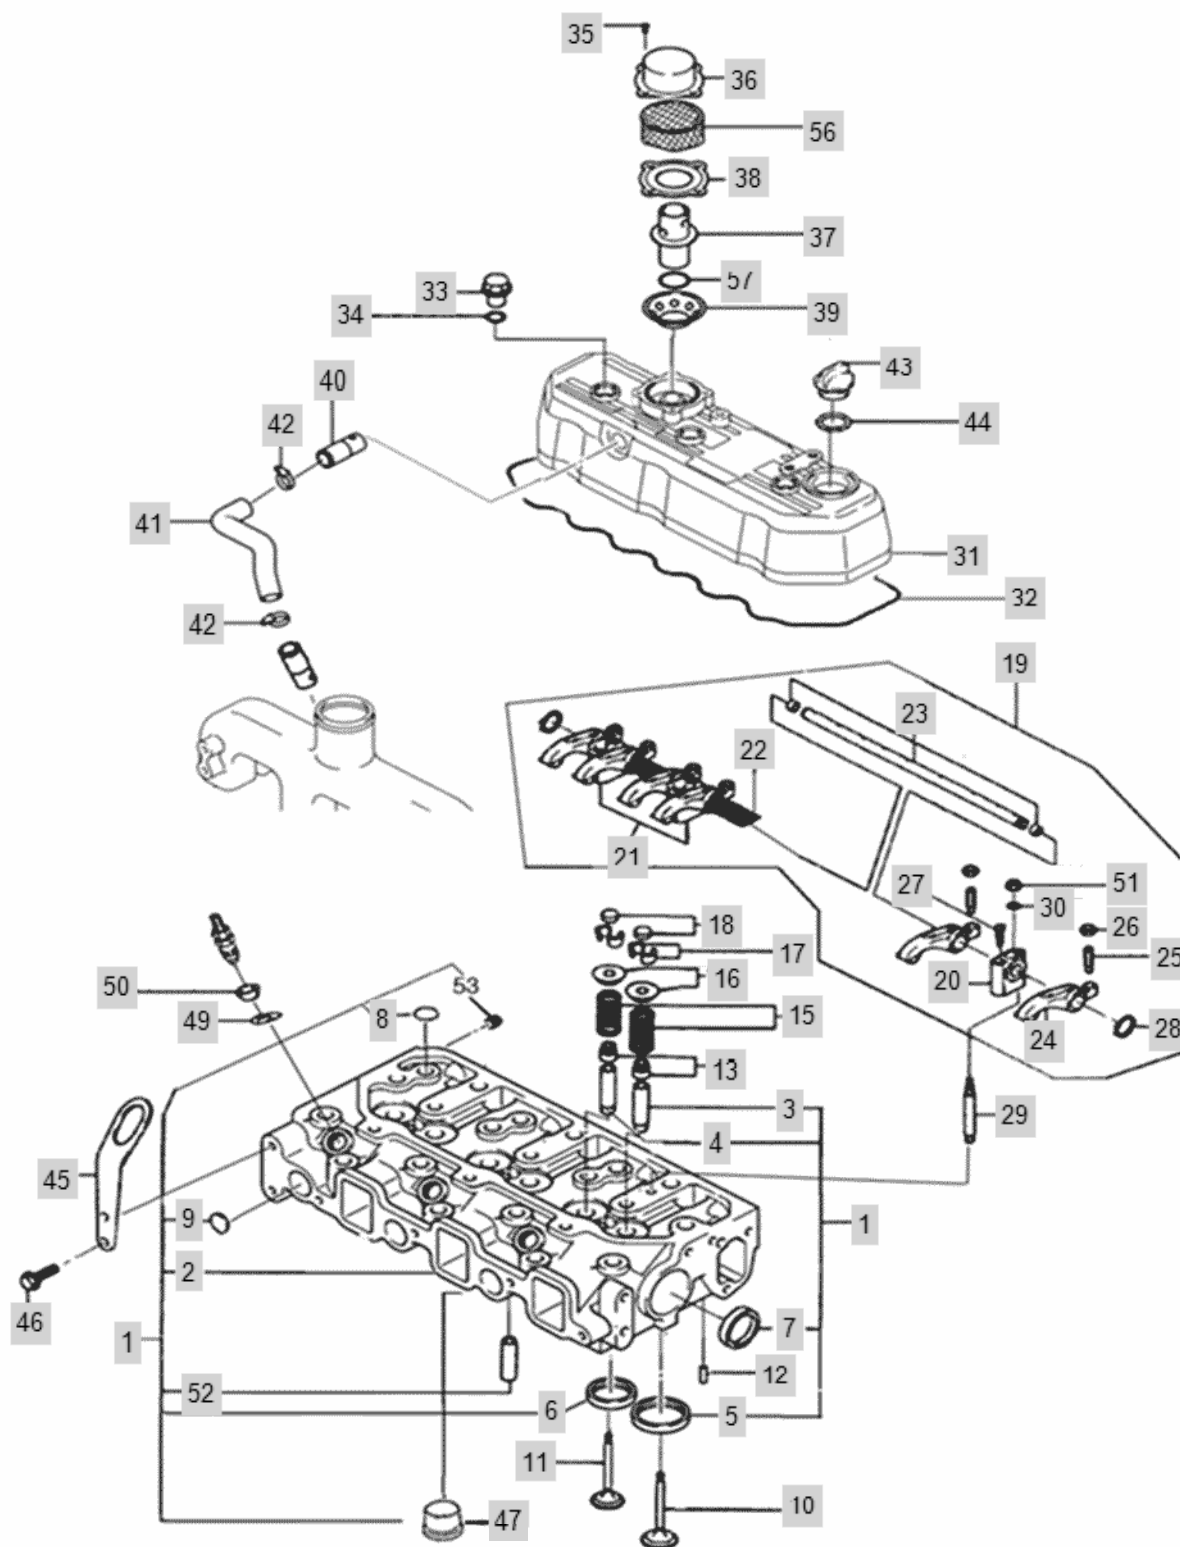


FIG E004 Branson 3520H(US) _EN		CYLINDER HEAD & HEAD COVER			Year/Month
					2020/02
KeyNo.	Part Number	Part Name	Quantity	Other	
1	EA00003265A	HAED, CYLINDER	1		
2	EA00003266A	HEAD, CYLINDER	1		
3	HRA0400102B4	GUIDE,VALVESTEM	3		
4	HRA0400103B4	GUIDE,VALVESTEM	3		
5	HRA0400104B4	SEAT,ENGINEINTAKEVALVE	3		
6	HRA0400105B4	SEAT,ENGINE EXHAUST VALVE	3		
7	27241-400000	PLUG (D40)	2		
8	27241-220000	PLUG,EXPANSION	3		
9	27241-220000	PLUG,EXPANSION	3		
10	HRA0400200A4	VALVE,INTAKE	3		
11	HRA0400300A4	VALVE,EXHAUST	3		
12	22312-040100	PIN, DOWEL (4-10)	2		
13	HA03070000A4	SEAL,VALVESTEM	6		
15	HRA0400700A4	SPRING,VALVE	6		
16	HRA0400800A4	RETAINER,VALVESPRING	6		
17	HRA0400900A4	COTTER,VALVE	12		
18	HK03680000B4	CAP,VALVE	6		
19	HRD0401100A2	SHAFTA'SSY.ROCKERARM	1		
20	HRA0401200A4	SUPPORT,ROCKERLEVER	1		
21	HRA0401300A4	SUPPORT,ROCKERLEVER	2		
22	HRA0401400A4	SPRING,COMPRESSION	2		
23	HRD0401500A3	SHAFT,ROCKERLEVER	1		
24	HRA0401600A4	LEVER,ROCKER	6		
25	AF02110000E4	SCREW,RKRLEVERADJUSTING	6		
26	HH05280000A4	NUT,VALVEADJUSTING	6		
27	26921-080102	SCREW,SLOTTEDSET	1		
28	22242-000190	SNAP RING, SHAFT (Φ 19)	2		
29	HRA0401800A4	STUD	3		
30	22117-120000	WASHER, PLAIN (Φ 12)	3		
31	HRD0402300B0	COVER,VALVE	1		
32	HRD0402400B3	GASKET,VALVECOVER	1		
33	HA03520000B4	NUT,HEXAGONCAP	3		
34	24311-000140	O-RING, DYNAMIC (Φ14)	3		
35	26587-040102	SCREW,FILLISTERHEADCAP	4		
36	HRA0403600A4	COVER,BREATHER	1		
37	HRA0403700A4	Valve, Pressure Relief	1		
38	HRA0403800A4	GASKET,BREATHER	1		
39	HRA0403900A4	PLATE,BREATHERADJUSTING	1		
40	HRA0404000A4	TUBE,BREATHER	1		
41	HRD0404100C3	BREATHER HOSE	1		
42	23080-021000	CLAMP,VBAND	2		
43	HC03470000B4	CAP,FILTER	1		
44	24311-000320	O-RING, DYNAMIC (Φ32)	1		
45	HK03530000A4	BRACKET,LIFTING	1		
46	26106-080162	SCREW,HEXFLANGEHEADCAP	2		

[illegible]

FIG E005

Branson 3520H(US)
_EN

INTAKE MANIFOLD

Year/Month

2020/02

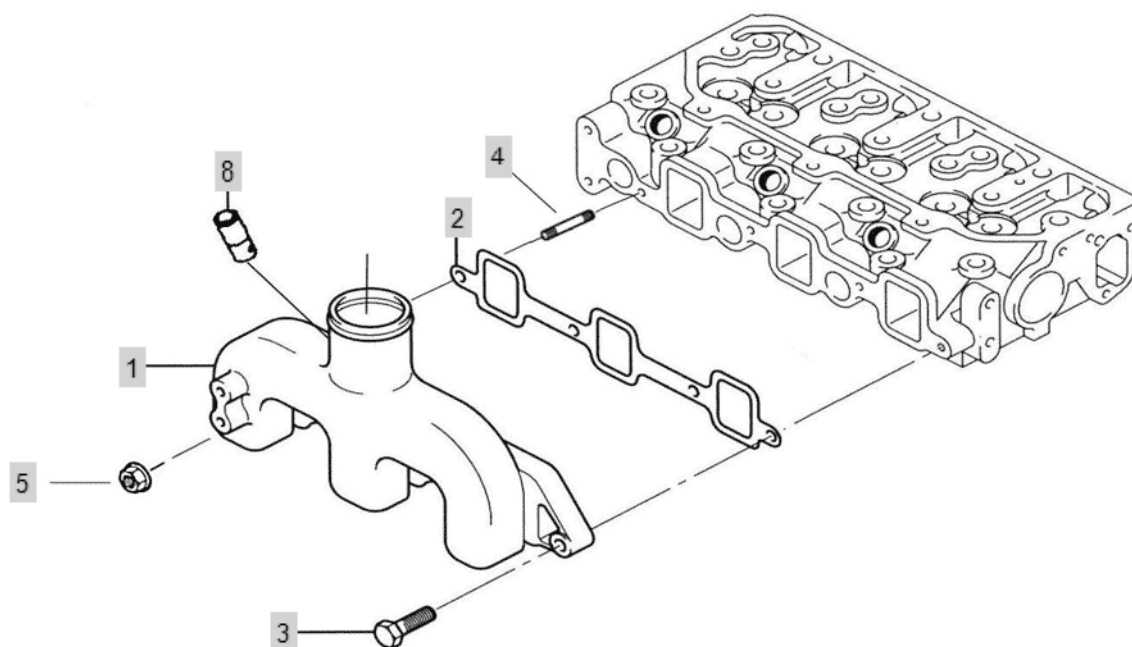


FIG E006

Branson 3520H(US)
_EN

EXHAUST MANIFOLD

Year/Month

2020/02

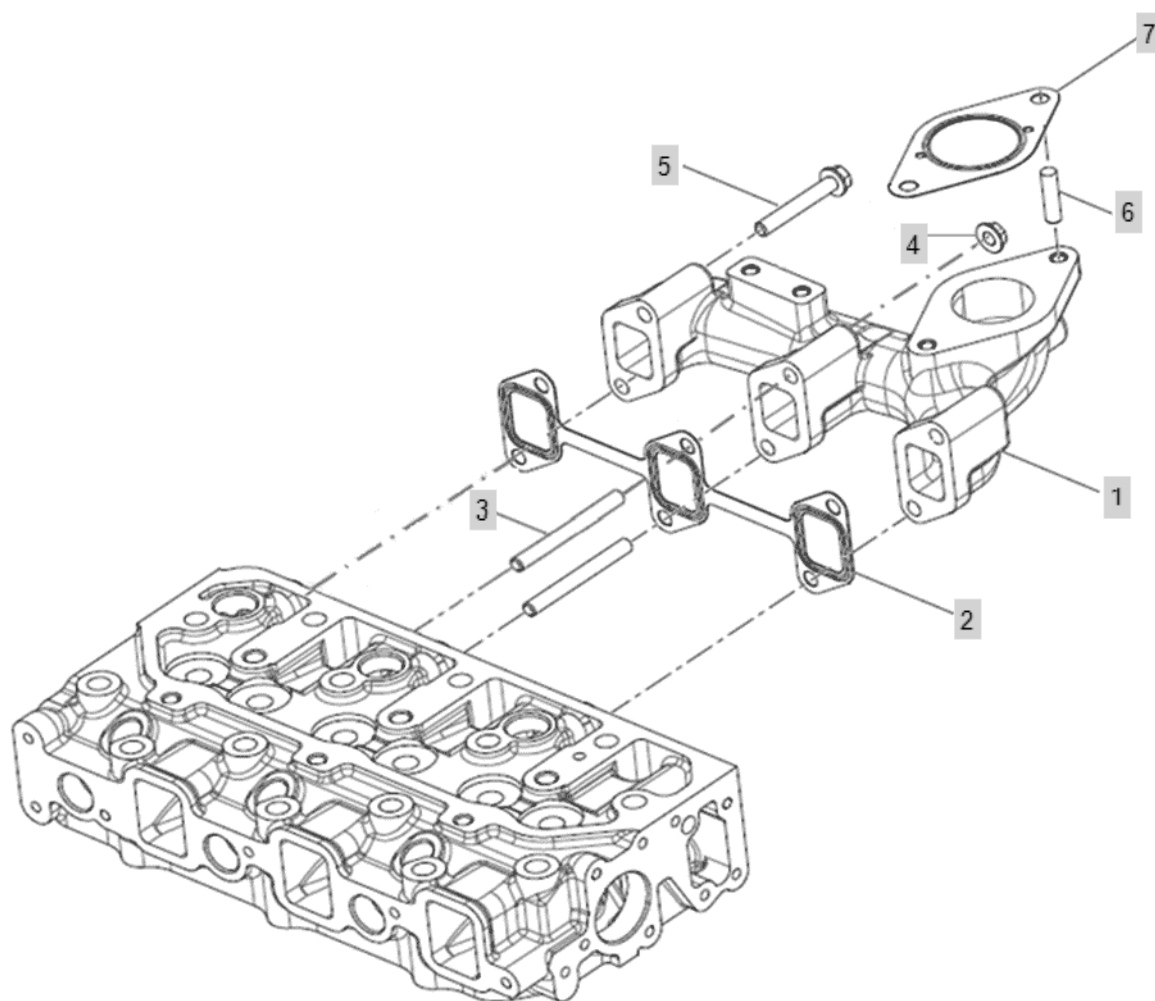



FIG E007

Branson 3520H(US)
_EN

CAM SHAFT & DRIVING GEAR

Year/Month

2020/02

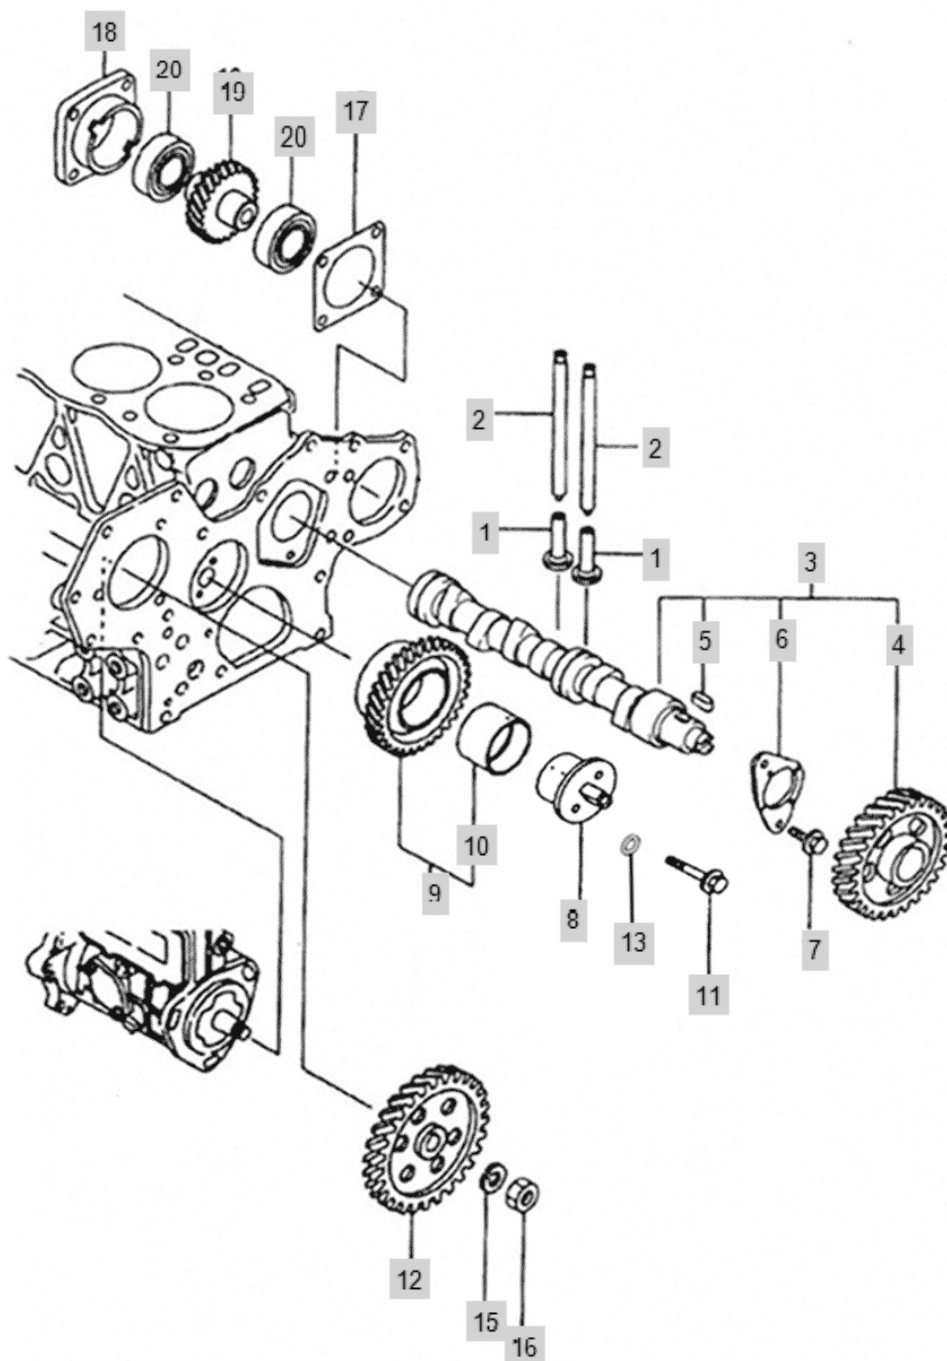

[illegible]

FIG E008

Branson 3520H(US)
_EN

CRANK SHAFT & PISTON

Year/Month

2020/02

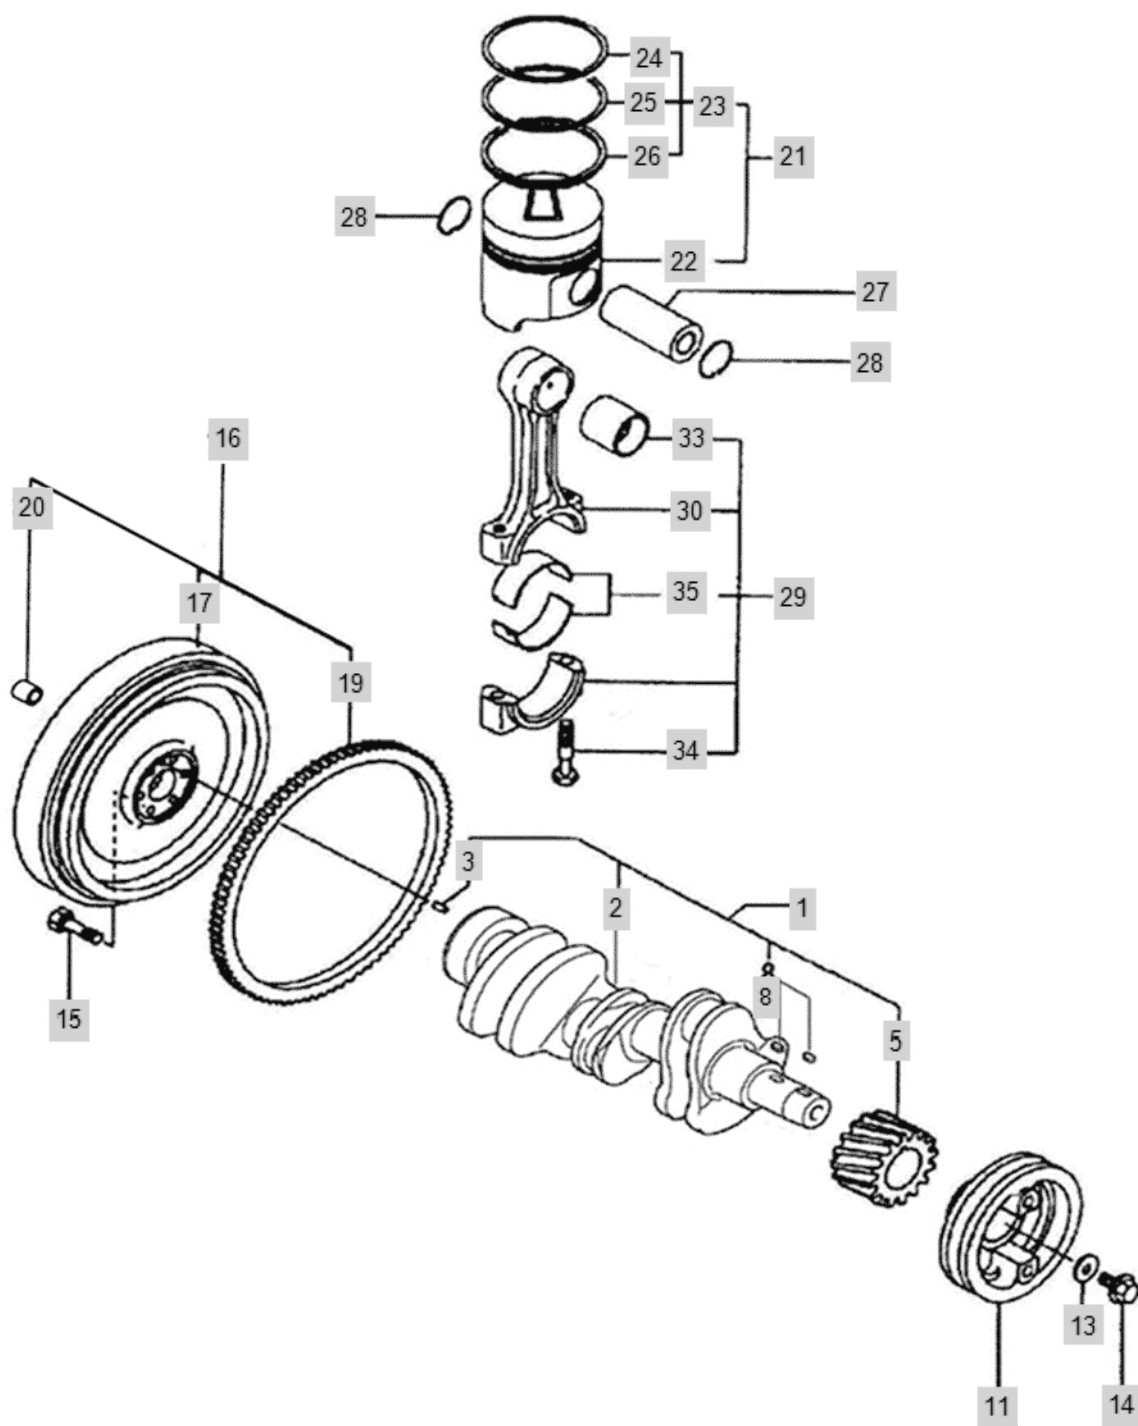



FIG E009

Branson 3520H(US)
_EN

LUB. OIL SYSTEM

Year/Month

2020/02

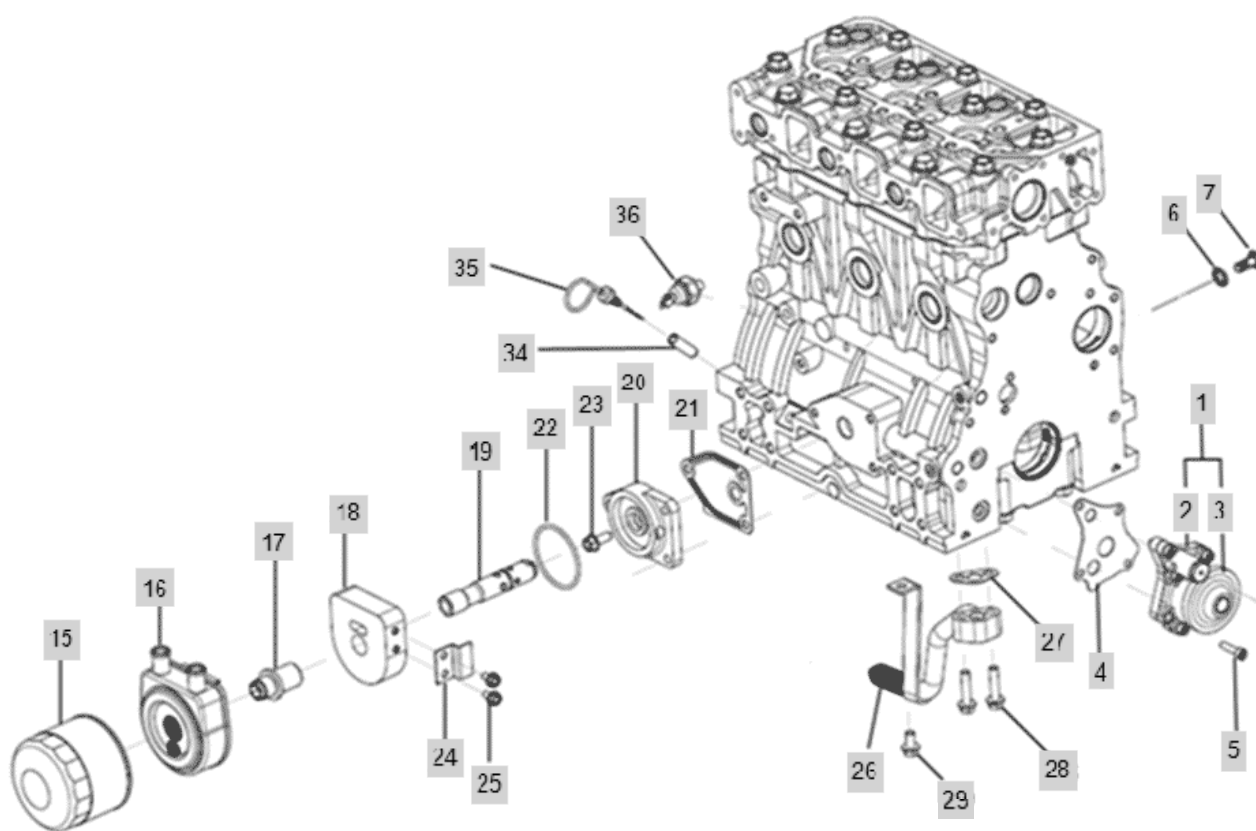

[illegible]


FIG E010

Branson 3520H(US)
_EN

COOLING SYSTEM

Year/Month

2020/02

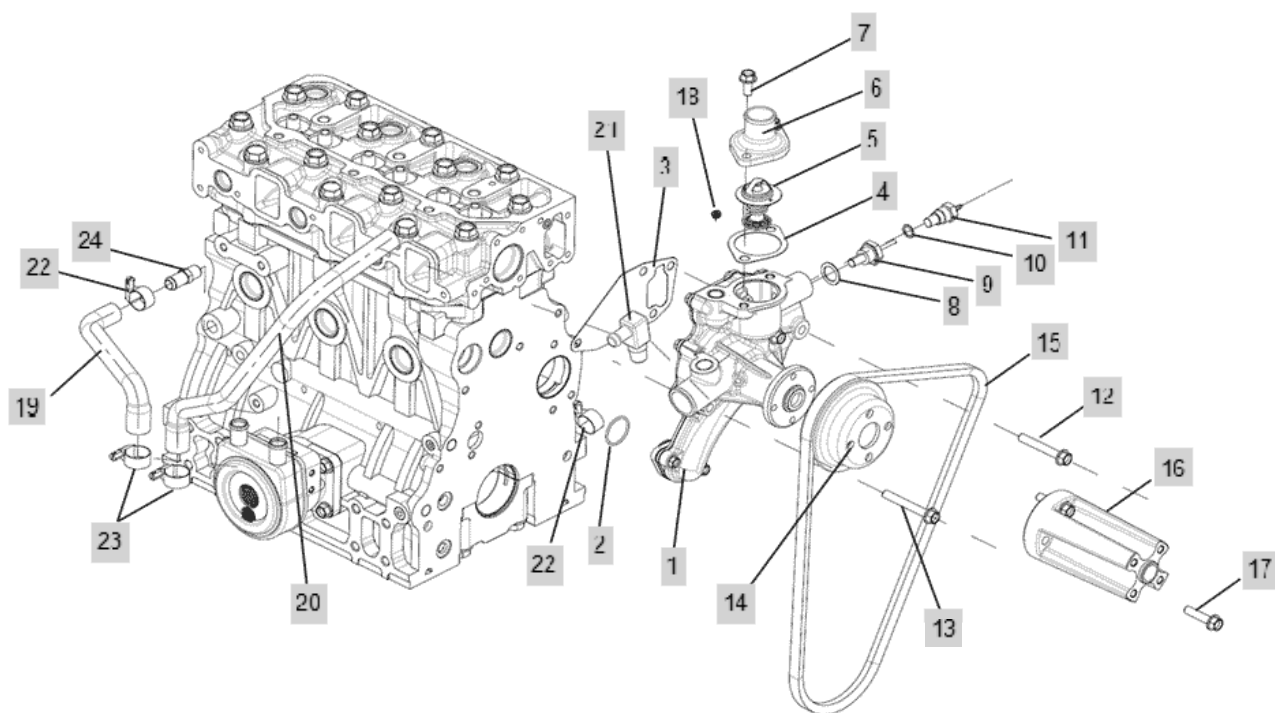

[illegible]

FIG E011

Branson 3520H(US)
_EN

FUEL INJECTION PUMP

Year/Month

2020/02

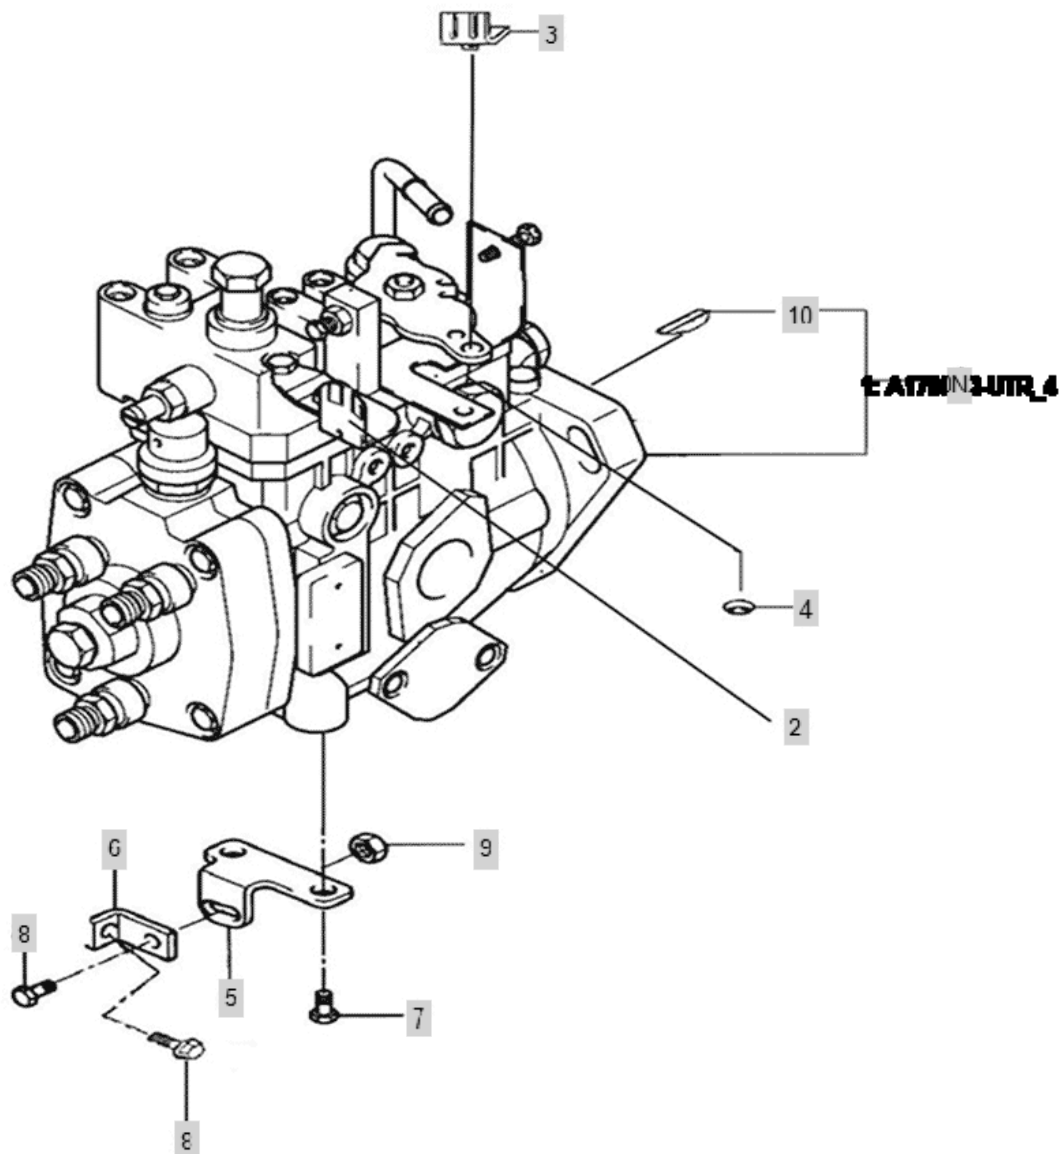


FIG E012

Branson 3520H(US)
_EN

FUEL INJECTION SYSTEM

Year/Month

2020/02

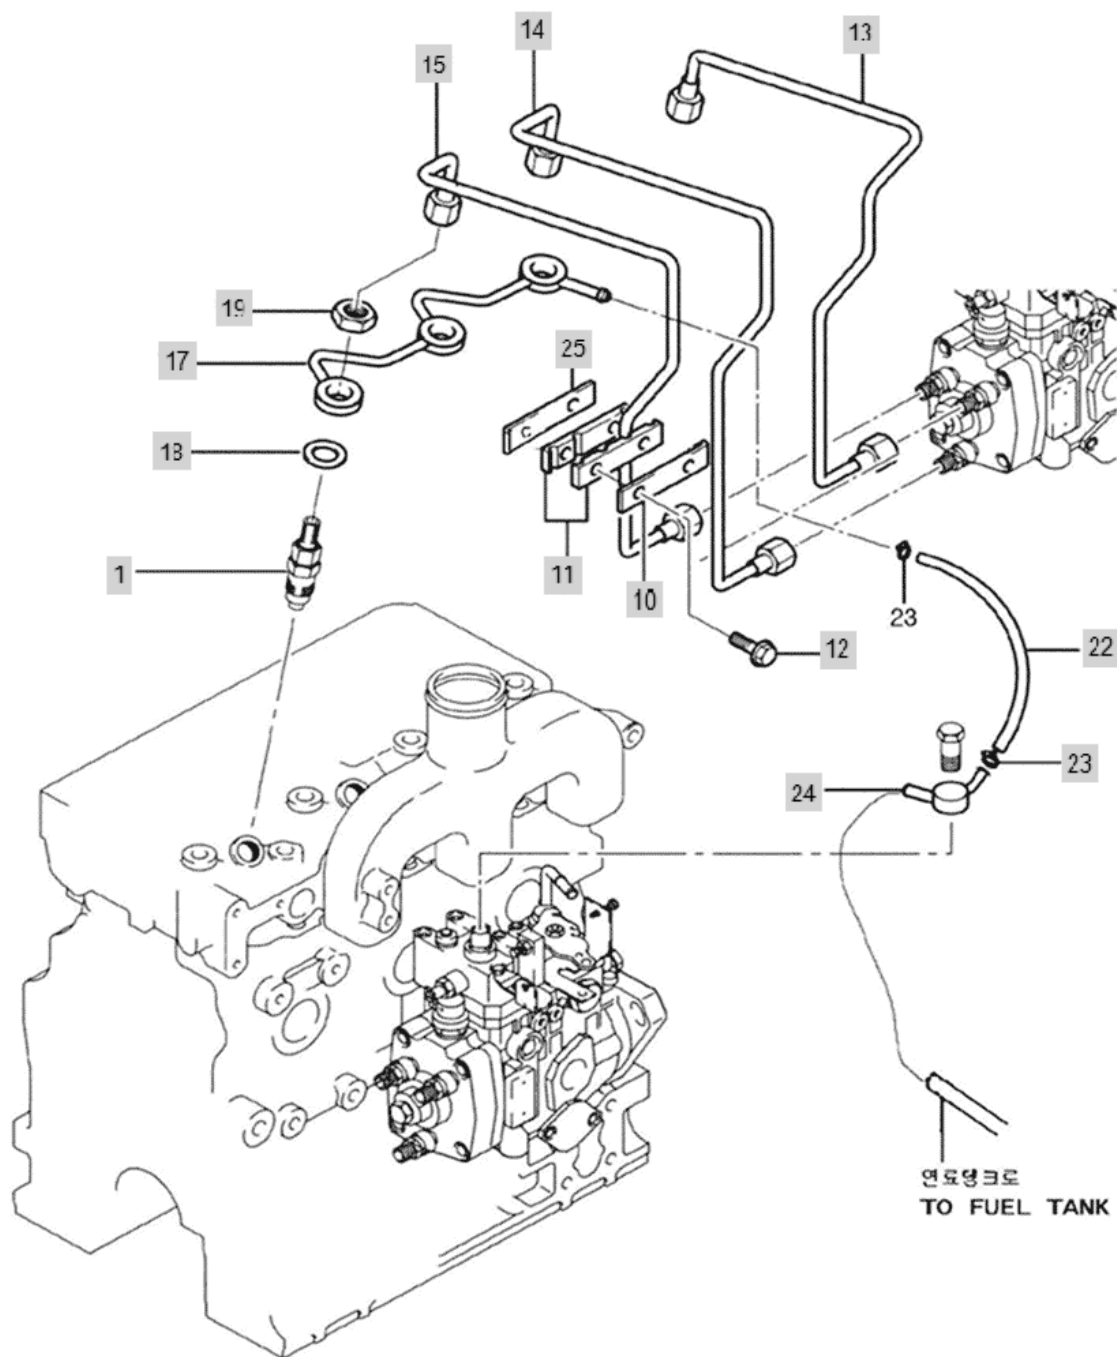


FIG E013

Branson 3520H(US)
_EN

FUEL SYSTEM

Year/Month

2020/02

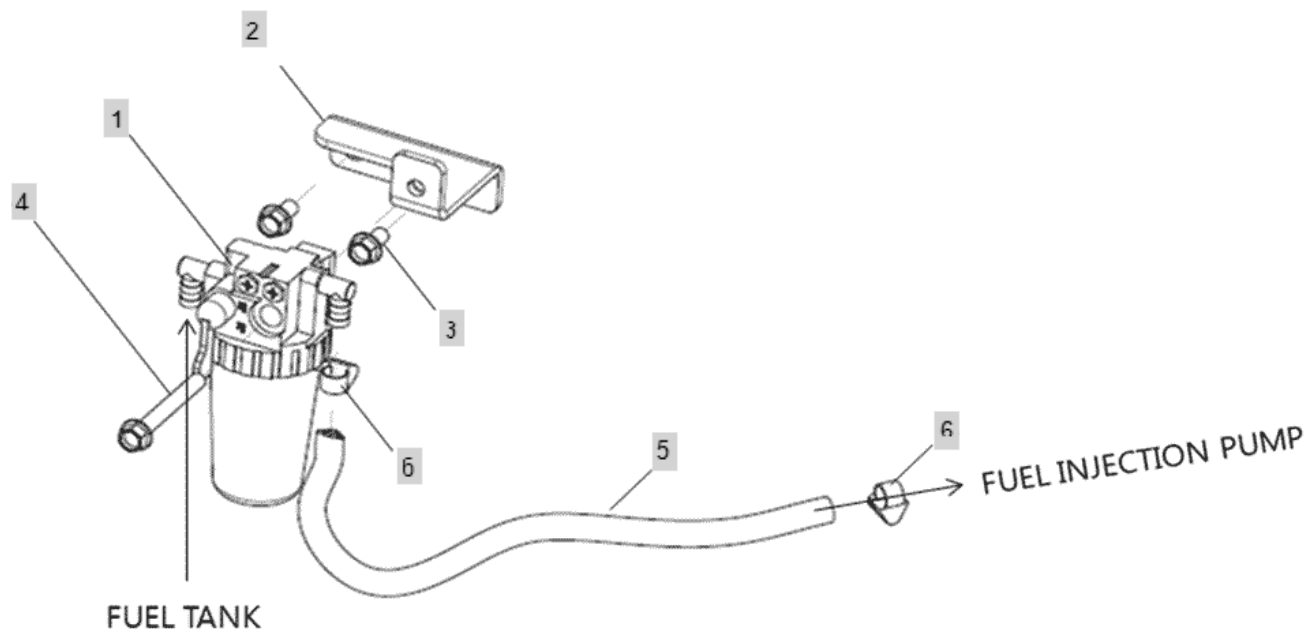


FIG E014

Branson 3520H(US)
_EN

STARTING MOTOR

Year/Month

2020/02

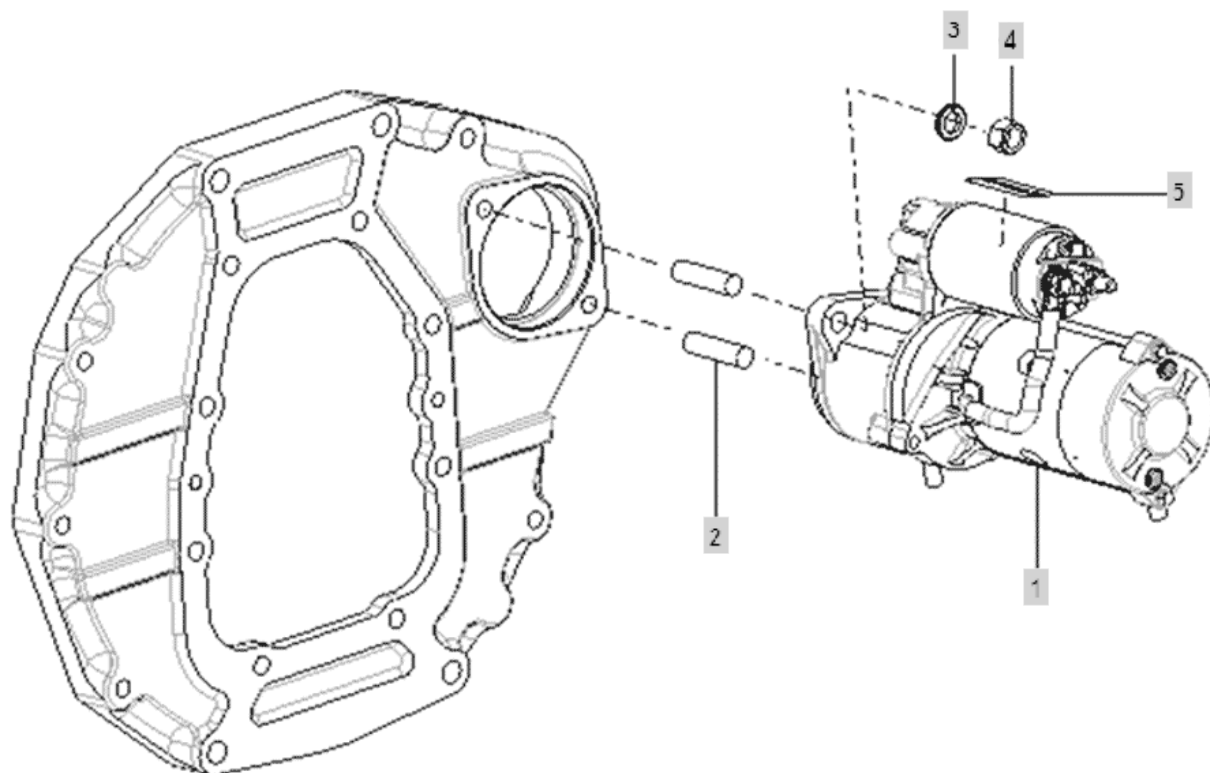


FIG E015

Branson 3520H(US)
_EN

GENERATOR & ELECTRIC DEVICE

Year/Month

2020/02

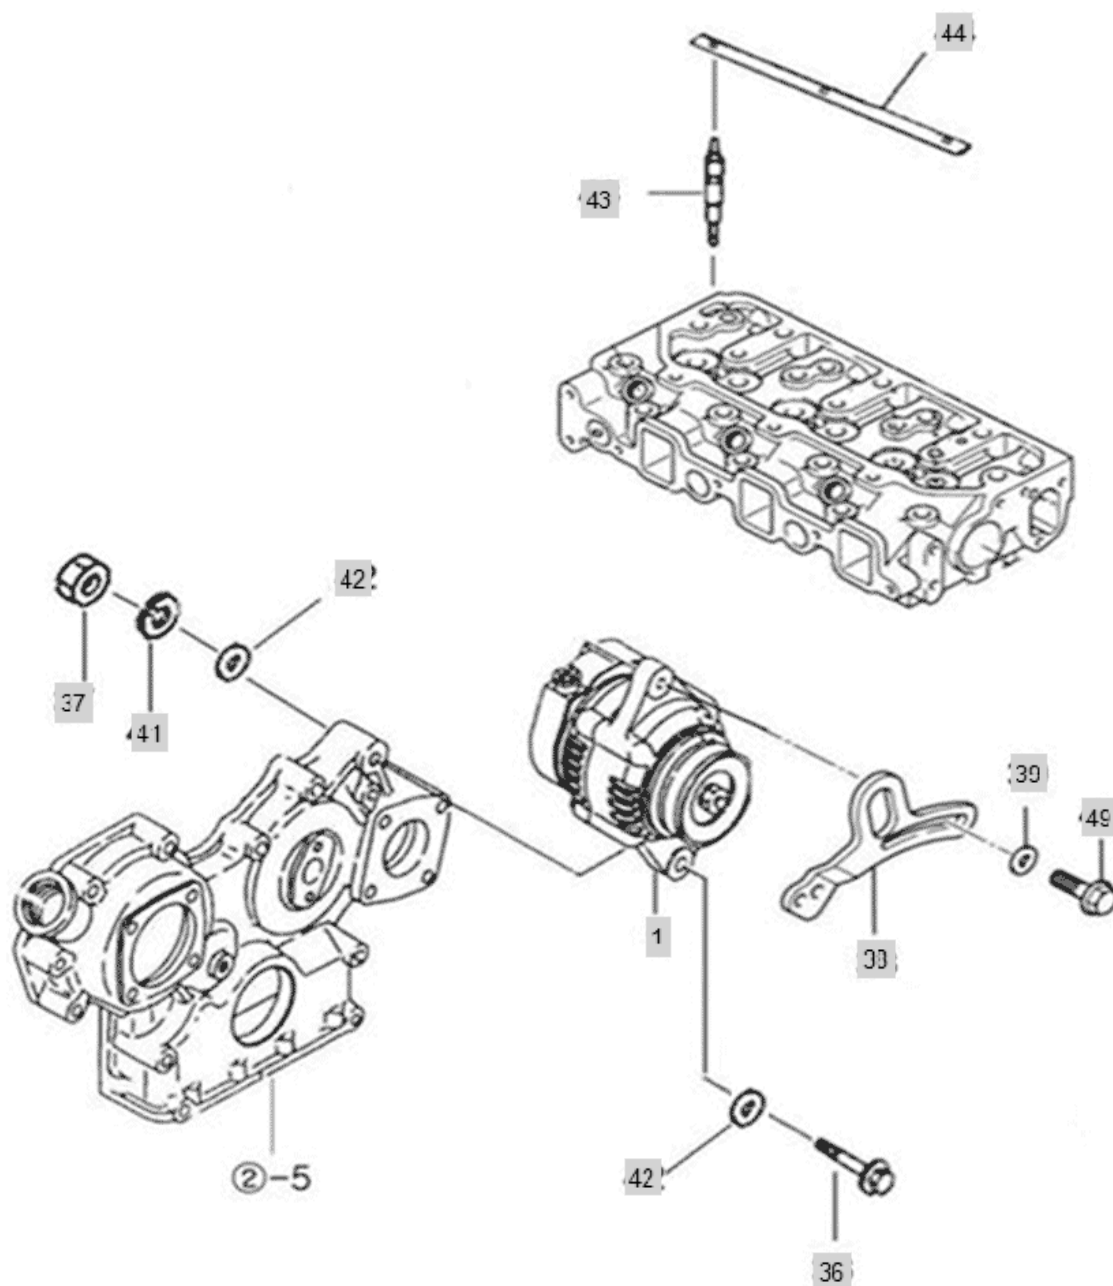




FIG E016

Branson 3520H(US)
_EN

DPF & DPF APPLICATION SYSTEM

Year/Month

2020/02

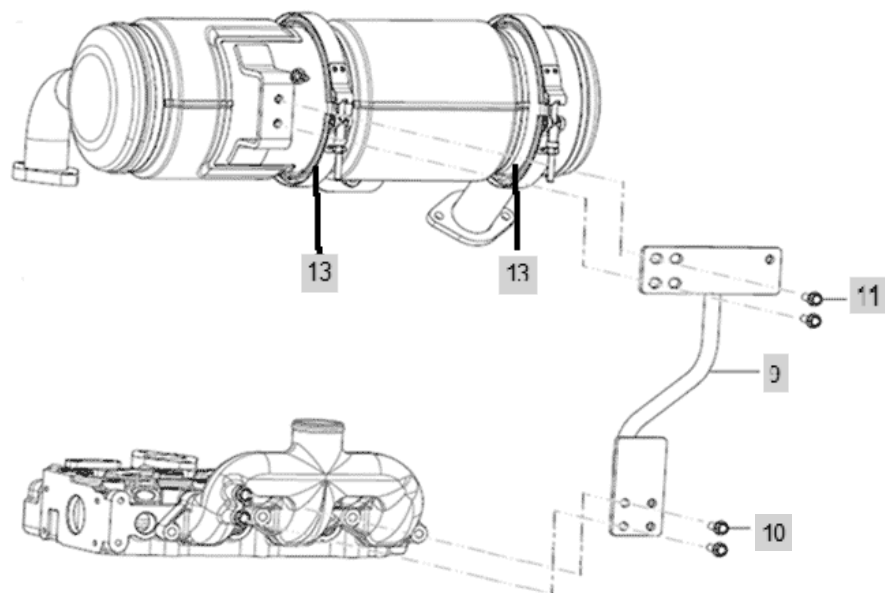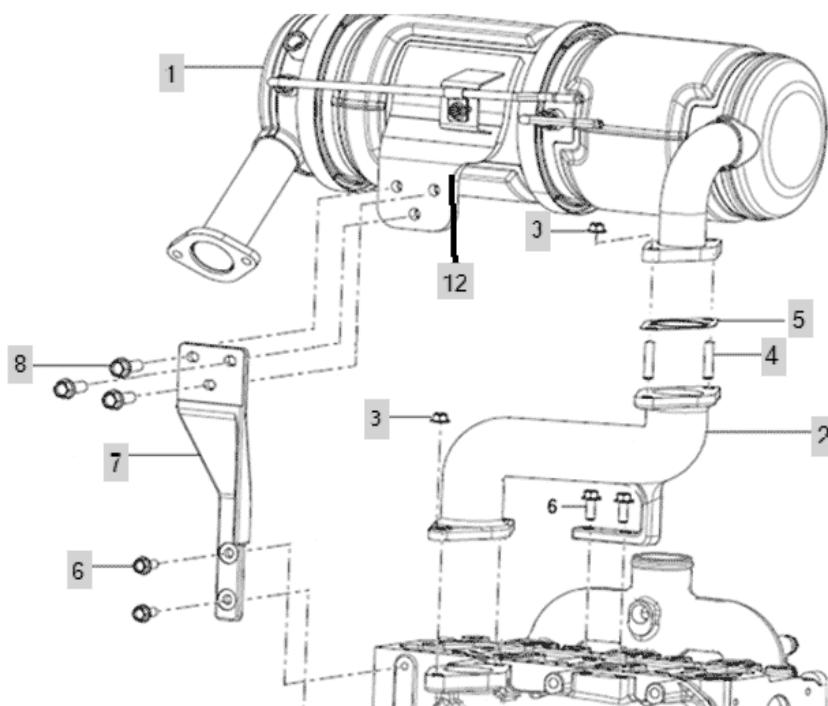

[illegible]


FIG E017

Branson 3520H(US)
_EN

DPF SENSOR OPTION

Year/Month

2020/02

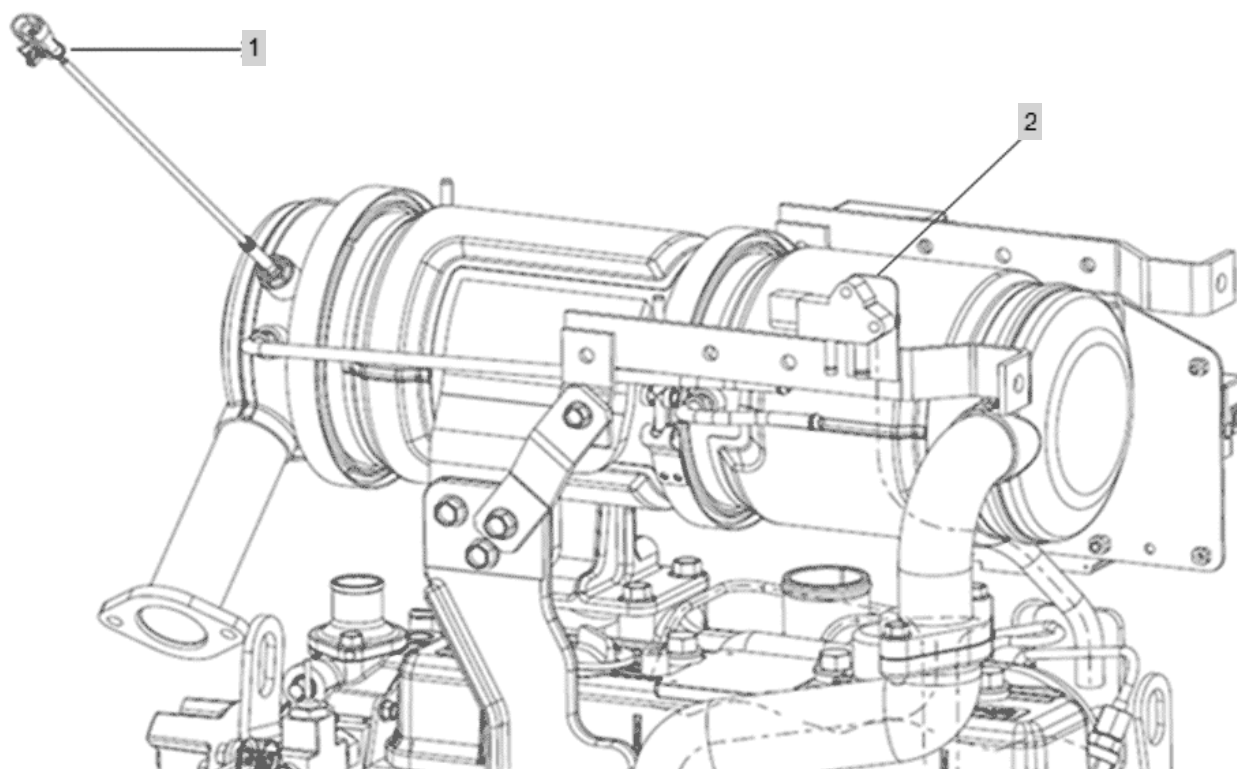

[illegible]

FIG E018

Branson 3520H(US)
_EN

DATAPLATE

Year/Month

2020/02

