

Parts Catalog

FARMTRAC

TRACTOR FARMTRAC 6075 HERITAGE 4WD

Escorts Agri Machinery

TABLE INDEX

Sr No.	Table Name	Table No.	Page No.
1	LINER, BLOCK ASSY	1	1-2
2	EXHAUST MANIFOLD, TURBO CHARGER ASSY	2	3-4
3	PUMP ASSY. LUBRICATION OIL	3	5-6
4	GEAR IDLER, CAMSHAFT	4	7-8
5	COVER AND HOUSING VALVE TIMING GEAR	5	9-10
6	PULLEY, CRANKSHAFT	6	11-12
7	PUMP ASSY. WATER, FAN ASSY	7	13-14
8	FLYWHEEL AND FLYWHEEL HOUSING	11	15-16
9	HYDRAULIC PUMP, STARTER MOTOR, ALTERNATOR ASSY	9	17-18
10	FILTERS	10	19-20
11	TUBES, INJECTORS, FIP	11	21-24
12	PISTON & CONNECTING ROD ASSY	12	25-26
13	INTAKE MANIFOLD, CYL. HEAD ASSY	13	27-30
14	TURBOCHARGER TUBE & MUFFLER	14	31-32
15	CLEANER ASSY INTERCOOLER AND HOSES	15	33-34
16	THROTTLE CONTROL	17	35-38
17	RADIATOR ASSEMBLY	18	39-40
18	FRONT WHEEL ASSEMBLY	19	41-42
19	STEERING MOTOR & PIPES	20	43-46
20	STEERING MECHANISM	21	47-48
21	FRONT AXLE ASSEMBLY-4WD	22	49-50
22	SWIVEL & CARRIER ASSEMBLY FRONT AXLE	22	51-52
23	RETAINER & BEVEL PINION SHAFT ASSY	23	53-54
24	RETAINER & BEVEL PINION SHAFT ASSY	24	55-56
25	FRONT AXLE ASSY WITH UP BOX ASSY.	25	57-58
26	DROP BOX ASSEMBLY	27	59-62
27	PROPELLER SHAFT ASSY.	21	63-64
28	CLUTCH CONTROLS	27	65-68
29	CLUTCH ASSY LPTO 11"X11" (CERAMETALLIC DISC)	28	69-70
30	TRANSMISSION CASE AND SHIFT LEVERS	31	71-74

TABLE INDEX

Sr No.	Table Name	Table No.	Page No.
31	MAIN GEAR SIDE SHIFT EXTERNAL	32	75-76
32	8+2 SPEED TRANSMISSION GEARS	33	77-82
33	CENTER HOUSING BRACKETS	34	83-84
34	REAR AXLE	35	85-86
35	REAR DIFFERENTIAL ASSEMBLIES	35	87-88
36	REAR AXLE, DIFFERENTIAL AND RELATED PARTS	36	89-90
37	REAR AXLE, DIFFERENTIAL AND RELATED PARTS	38	91-94
38	POWER TAKE OFF ASSEMBLY	39	95-98
39	REAR WHEELS	40	99-100
40	BRAKES AND BRAKE CONTROLS (UPTO TSN:M6SB37W5GNF590752)	41	101-102
41	INDEPENDENT PARKING BRAKE	42	103-104
42	HYDRAULIC LIFT COVER	43	105-108
43	HYDRAULIC LIFT CYLINDER	44	109-110
44	HYDRAULIC LIFT SHAFTS HEAVY DUTY	45	111-114
45	HYDRAULIC FLOW SYSTEM	44	115-116
46	HYDRAULIC LIFT LINKAGES	47	117-118
47	DCV TUBING-EXTERNAL CYLINDER	46A	119-120
48	DOUBLE ACTING SPOOL VALVE	46B	121-122
49	TUBING HYDRAULIC ASSEMBLY	50	123-126
50	BATTERY AND BATTERY SUPPORT	51	127-128
51	ELECT.SWITCHES & CONTROL	52	129-130
52	INSTRUMENT CLUSTER	49	131-132
53	WIRING HARNESS	54	133-134
54	HEAD LAMP AND WORK LAMP	55	135-136
55	SHEET METAL	56	137-140
56	FENDERS	57	141-142
57	DRIVER SHEET	55	143-144
58	FRONT WHEEL WEIGHT	56	145-146
59	REAR END WEIGHT	56A	147-148
60	DECAL	61	149-150

TABLE INDEX

Sr No.	Table Name	Table No.	Page No.
61	DECAL	62	151-152
62	REAR VIEW MIRROR	58	153-154
63	HITCH REAR SUBASSEMBLY	59	155-156
64	CANOPY ASSEMBLY	60	157-158
65	ROPS	66	159-160
66	KIT ENGINE VALVES INLET AND EXHAUST	101	161-162
67	KIT ENGINE VALVES INLET AND EXHAUST	102	163-164
68	KIT ENGINE SET OF PISTON CIRCLIP PIN PISTON	152	165-166
69	KIT GEAR BOX BALL AND SPRING	1	167-168
70	RUNNING BOARD	57	169-172
71	CONSUMABLES SUBASSEMBLY	114	173-174
72	DIFFERENTIAL LOCK	73	175-176
73	CLAMP & HOSES TURBOCHARGER	74	177-178
74	ACCESSORIES SUBASSEMBLY	68	179-180
75	FUEL TANK SUBASSEMBLY	12	181-182
76	ACCESSORIES E4.368NA ENGINE SUBASSEMBLY	17	183-184
77	CENTER HOUSING	33	185-188
78	ENGINE ASSEMBLY	1A	189-190
79	INTAKE MANIFOLD, CYL. HEAD ASSY	1	191-194

TABLE-1
LINER, BLOCK ASSY

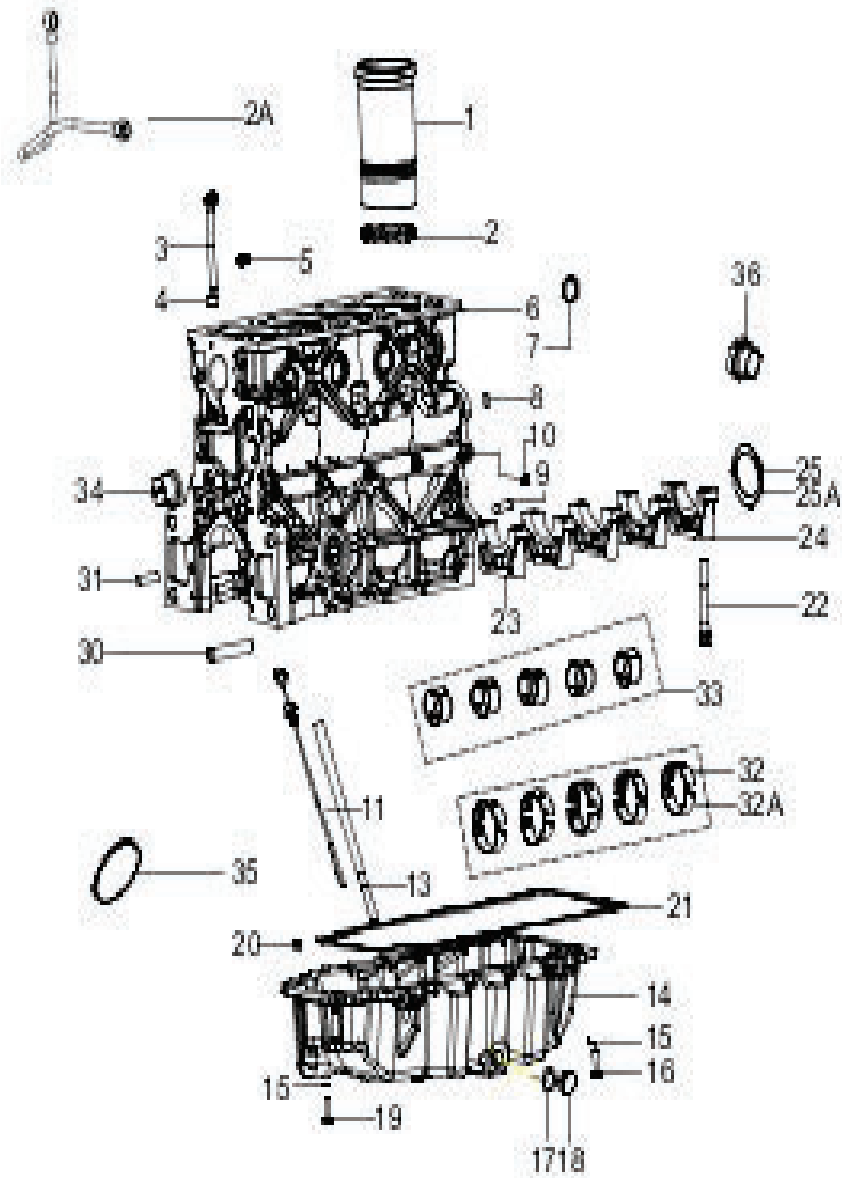


TABLE-1
LINER, BLOCK ASSY

Fig. No.	Part No.	Description	Qty
1	D10009220.9	LINER CYLINDER E3.215	4
2	D10010040.9	SEAL O RING 3.80X95.20 (M/S FENNER PART NO 7883)	8
2A	D10322920.9	PIPE ASSEMBLY LIVE LUBRICATION (FLEXIBLE)	1
3	D10114410.9	BOLT M12X1.5X138.5-12.9 HEX HEAD E4.286	18
4	D87500070.9	PIN 18X15 SLEEVE	1
5	D93100010.9	PLUG 1/4"-18 PIPE	1
6	D10281090.9	BLOCK ASSEMBLY CYLINDER E4.286 TCI	1
7	D10008890.9	PLUG 36.15MM WELCH	4
8	D10009990.9	DOWEL 16X9 CYLINDER BLOCK OIL GALLERY PLUG	1
9	D87500080.9	PIN 13X34 PLAIN DOWEL	1
10	D93100020.9	PLUG 1/8"-27 HEX HEAD	5
11	D10369680.9	INDICATOR ASSEMBLY OIL LEVEL	1
13	D10249580.9	TUBE ENGINE OIL LEVEL INDICATOR	1
14	D10322440.9	SUMP ENGINE OIL (E4.286 TCI)	1
15	D85500010.9	WASHER M10 FLAT	4
16	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	12
17	D10005120.9	WASHER M24 FLAT COPPER	1
18	D93100300.9	PLUG M24X1.5X15 DRAIN (MAGNETIC)	1
19	D82500150.9	SCREW M10X1.50X25-8.8 HEX HEAD	2
20	D83500090.9	NUT M10X1.50-8 HEX	2
21	D10095390.9	GASKET ENGINE OIL SUMP	1
22	D10114400.9	BOLT M14X1.5X110-10.9 CRANKSHAFT MAIN BEARING CAP E4.286	10
23	D10254580.9	CAP CRANKSHAFT MAIN BEARING	4
24	D10254590.9	CAP CRANKSHAFT MAIN BEARING THRUST	1
25	D10251190.9	RING CRANKSHAFT THRUST UPPER (E4.286 TCI)	2
25A	D10251180.9	RING CRANKSHAFT THRUST LOWER (E4.286 TCI)	2
26	D86500050.9	WASHER M10 SPRING LOCK	2
26-1	D86500050AC.9	WASHER M10 SPRING LOCK	2
27	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	2
30	D10035660.9	STUD FRONT AXLE SUPPORT	4
31	D10009340.9	DOWEL POSITIONING 10X50	2
32	D10251170.9	BEARING CRANKSHAFT MAIN UPPER (E4.286 TCI)	5
32A	D10251160.9	BEARING CRANKSHAFT MAIN LOWER (E4.286 TCI)	5
33	D10009470.9	BUSH CAMSHAFT E3.215	5
34	D10009310.9	SHAFT VALVE TIMING IDLER GEAR	1
35	D10009430.9	WASHER CYLINDER BLOCK OIL GALLERY	3
36	D10023940.9	PLUG DRAIN M24X1.5X15	1

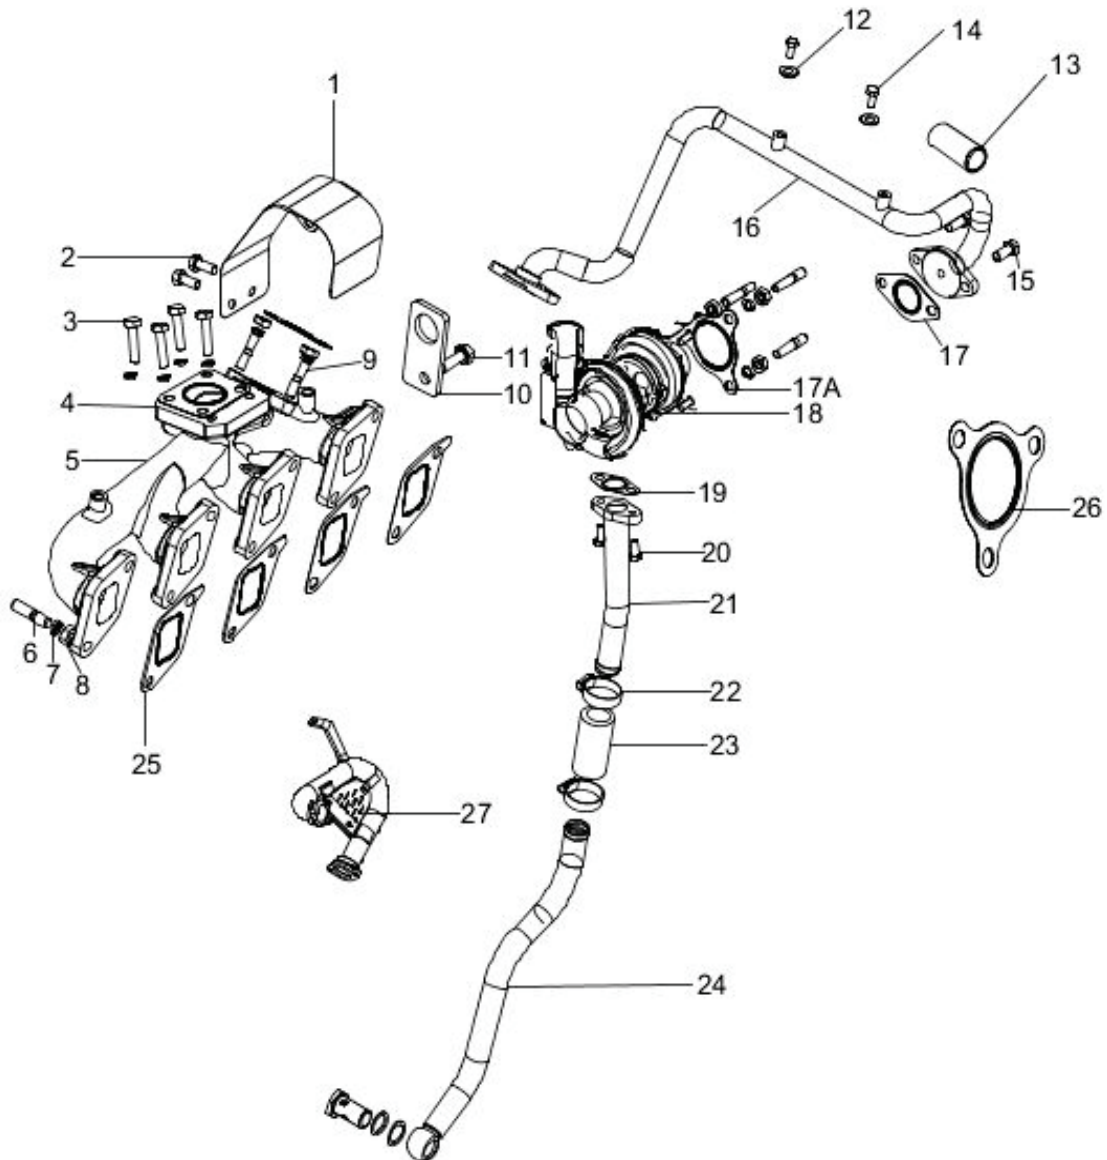
TABLE-2**EXHAUST MANIFOLD, TURBO CHARGER ASSY**

TABLE-2**EXHAUST MANIFOLD, TURBO CHARGER ASSY**

Fig. No.	Part No.	Description	Qty
1	D10244810.9	GUARD ASSEMBLY TURBOCHARGER (E4.286TCI BHARAT TREM 3A)	1
2	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
3	D81500030.9	BOLT M8X1.25X35-6.6 HEX HEAD	4
4	D10196590.9	GASKET TURBOCHARGER TO ADOPTER (G40)	1
5	D10309910.9	MANIFOLD EXHAUST E4.286 TCI	1
6	D84500020.9	STUD B M10X26-6.8 ZINC PASSIVATED	7
7	D86500050.9	WASHER M10 SPRING LOCK	8
8	D83500090.9	NUT M10X1.50-8 HEX	8
9	D84500110.9	STUD B M8X35-10.9	5
10	D10008600.9	PLATE HOOK ENGINE LIFTING	1
11	D82500150.9	SCREW M10X1.50X25-8.8 HEX HEAD	1
12	D10022040.9	WASHER 8.5X17 FUEL INJECTOR NOZZLE HOLDER	3
13	D10193240.9	HOSE CRANK CASE VENTILATION	1
14	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	3
15	D82500080.9	SCREW M8X1.25X25-8.8 HEX HEAD	4
15-1	D81500310.9	SCREW M8X1.25X30-8.8 HEX HEAD	4
16	D10310750.9	TUBE EXHAUST GAS RECIRCULATION	1
17	D10178440.9	GASKET EGR VALVE	3
17-1	D10944730AA.9	GASKET EGR VALVE	3
17A	D10168650.9	GASKET ADOPTER TURBOCHARGER MOUNTING	1
18	D10225990.9	TURBOCHARGER ASSEMBLY HX20 TD03L 6T/4	1
19	D10135850.9	GASKET TURBOCHARGER OIL OUTLET (E4.286 TC/TCI)	1
20	D82500400.9	SCREW M6X15-8.8 HEX HEAD ZINC PLATED	2
21	D10244870.9	PIPE OUTLET TURBOCHARGER LUBRICATION TOP (E4.286TCI BHARAT TREM 3A)	1
22	D10015860.9	CLAMP HOSE WORM DRIVE 35MM	2
23	D10169430.9	HOSE OUTLET TURBOCHARGER LUBRICATION (E4.286 TC/TCI)	1
24	D10236330.9	PIPE OUTLET TURBOCHARGER LUBRICATION BOTTOM	1
25	D10008650.9	GASKET EXHAUST MANIFOLD	3
26	D10178460.9	GASKET TURBOCHARGER EXHAUST ELBOW (E4.286 TC/TCI)	1
26-1	D10196690.9	GASKET EXHAUST ELBOW (G40)	1
27	D10308470.9	PIPE ASSEMBLY EXHAUST MANIFOLD	1
28	D10244800.9	GUARD EGR TUBE (E4.286TCI BHARAT TREM 3A)	1
29	D10310640.9	PLATE PIPE EXHAUST MANIFOLD	1

TABLE-3
PUMP ASSY. LUBRICATION OIL

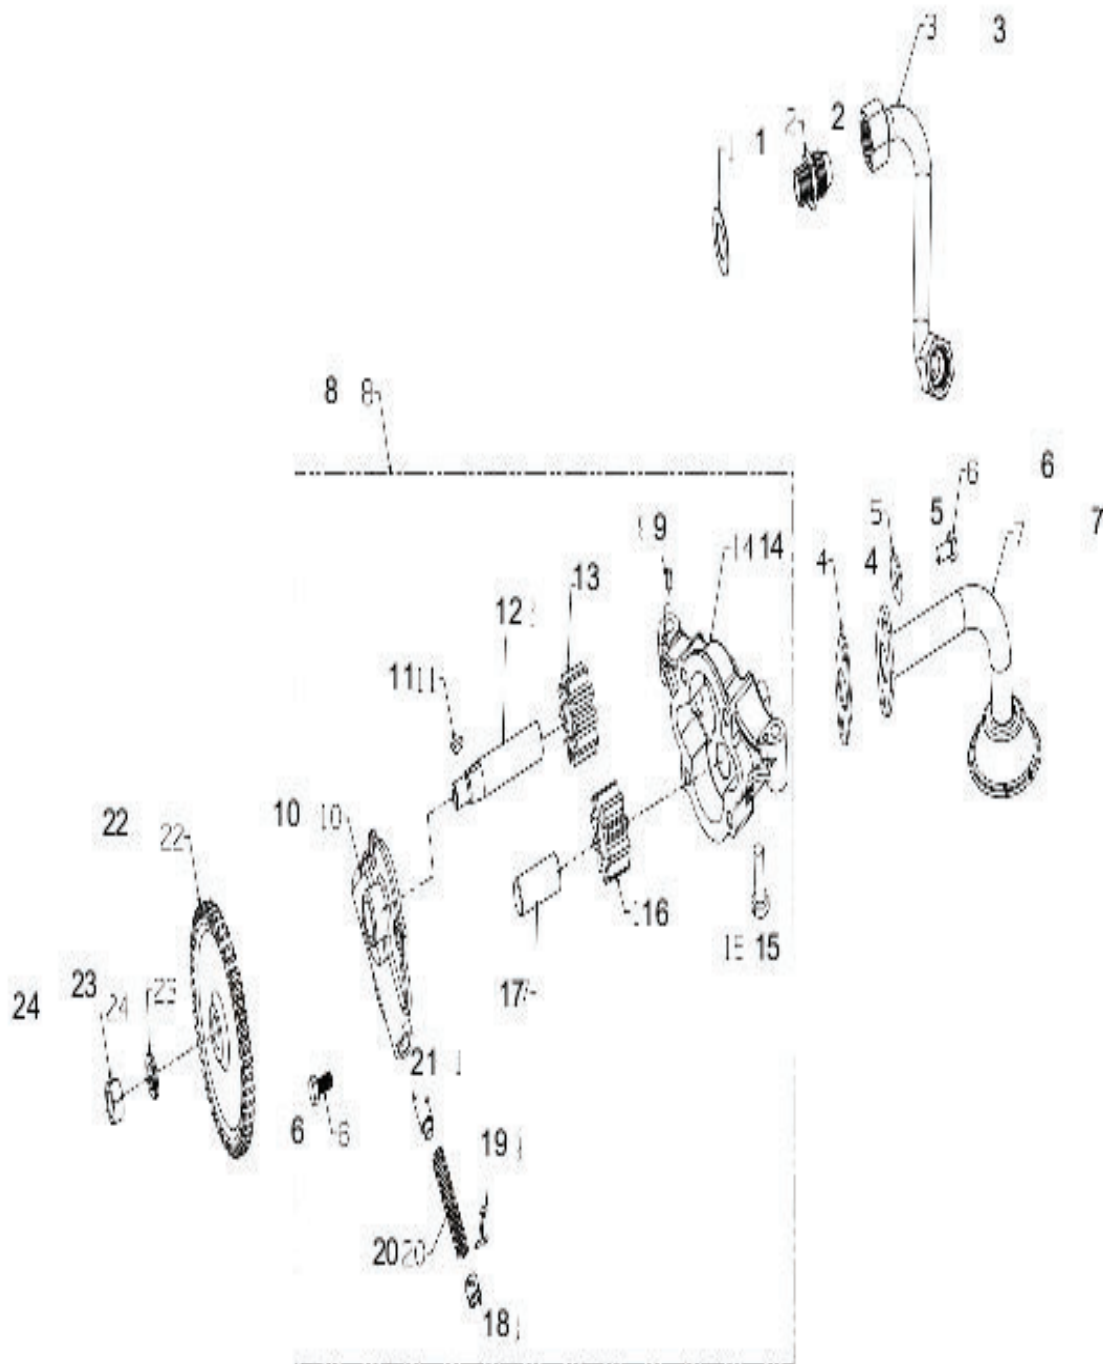


TABLE-3**PUMP ASSY. LUBRICATION OIL**

Fig. No.	Part No.	Description	Qty
1	D10008820.9	WASHER 20.5 ALUMINIUM SEALING	1
2	D10008810.9	ADAPTER LUBE OIL PUMP	1
3	D10008800.9	PIPE ASSEMBLY LUBE OIL DELIVERY	1
4	D10009790.9	GASKET LUBE OIL SUCTION PIPE	1
5	D10009980.9	WASHER LUBE OIL PUMP SUCTION STRAINER LOCK	1
6	D82500070.9	SCREW M8X1.25X15-6.8 HEX HEAD	5
7	D10099920.9	PIPE AND STRAINER ASSEMBLY LUBE OIL PUMP SUCTION	1
8	D10098690.9	PUMP ASSEMBLY ENGINE LUBE OIL	1
9	D87500090.9	PIN 5X30 PLAIN DOWEL	2
10	D10095420.9	BODY ENGINE LUBE OIL PUMP (E4.286)	1
11	D91000050.9	KEY 4X5 WOODRUFF	1
12	D10104140.9	SHAFT DRIVING ENGINE LUBE OIL PUMP (E4.286)	1
13	D10095450.9	GEAR DRIVE ENGINE LUBE OIL PUMP	1
15	D81500160.9	BOLT M10X1.50X45-10.9 HEX HEAD	2
16	D10095440.9	GEAR DRIVEN ENGINE LUBE OIL PUMP	1
17	D10099910.9	SHAFT ENGINE LUBE OIL PUMP DRIVEN GEAR	1
18	D10052790.9	TUBE LUBE OIL PUMP SPRING PRESSURE ADJUSTING	1
19	D88400050.9	PIN 1.6X25.4 COTTER	1
20	D10105360.9	SPRING	1
21	D10052660.9	PISTON LUBE OIL PUMP OUTLET VALVE	1
22	D10009810.9	GEAR DRIVEN LUBE OIL PUMP	1
23	D10009800.9	WASHER TAB D 15X32X3.5	1
24	D83500100.9	NUT M14X1.50-6 HEX	1

TABLE-4
GEAR IDLER, CAMSHAFT

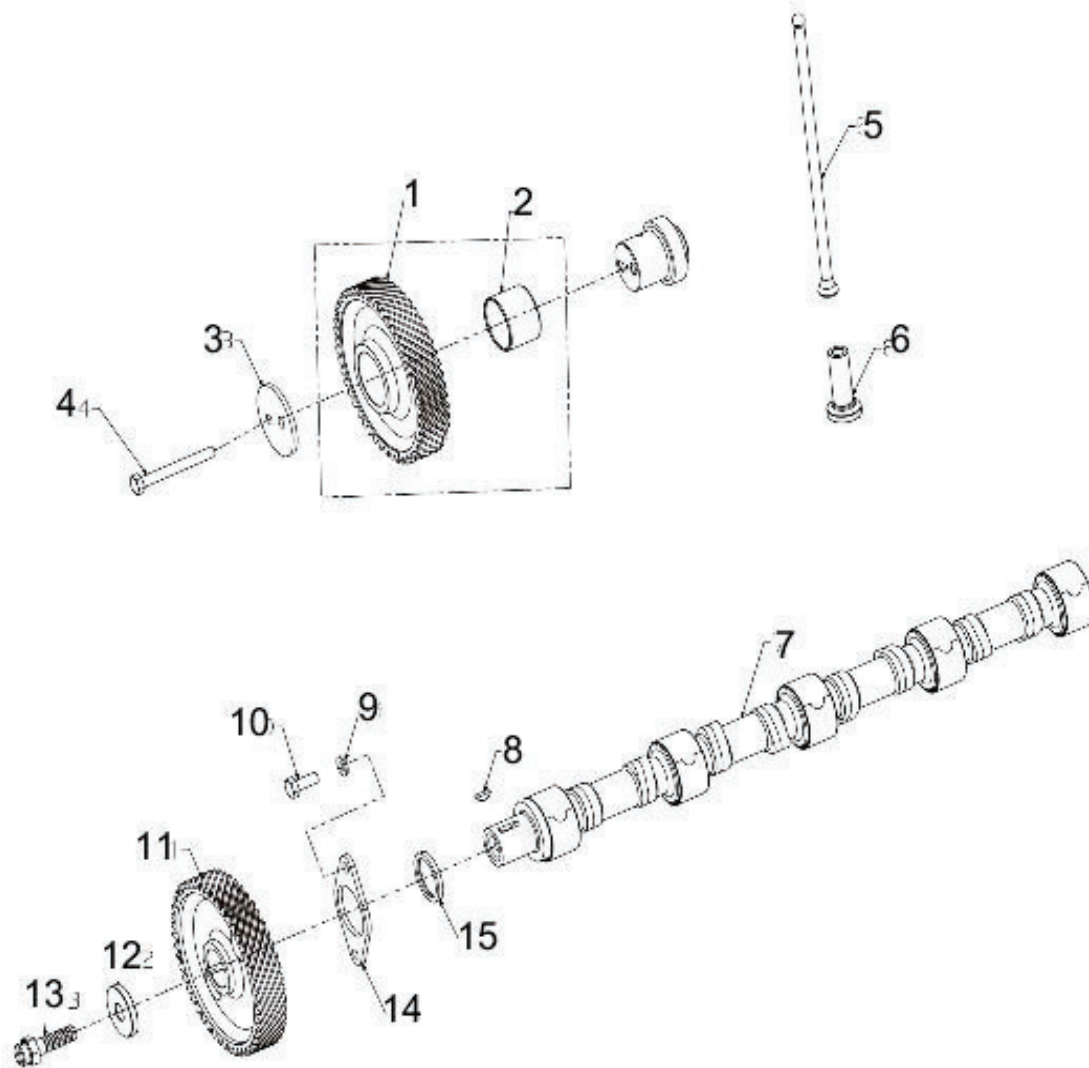


TABLE-4
GEAR IDLER, CAMSHAFT

Fig. No.	Part No.	Description	Qty
1	D10108450.9	GEAR ASSEMBLY IDLER ENGINE VALVE TIMING (HARDENED AND LEFT HAND HELIX)	1
2	D10101130.9	BUSH ENGINE VALVE TIMING IDLER GEAR	1
3	D10009650.9	PLATE VALVE TIMING IDLER GEAR SHAFT THRUST	1
4	D81500150.9	BOLT M8X1.25X70-8.8P HEX HEAD	3
5	D10009020.9	ROD VALVE PUSH E3.215	8
6	D10173250.9	TAPPET INTAKE AND EXHAUST VALVE	8
7	D10115780.9	CAMSHAFT(MACHINING E4.286 TC AND TCI)	1
7-1	D10115780AG.9	CAMSHAFT E4.286 TC AND TCI (MACHINED)	1
8	D91000130.9	KEY 5X7.5 WOODRUFF	1
9	D85500010.9	WASHER M10 FLAT	2
10	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	2
11	D10108470.9	GEAR CAM SHAFT Z-48 (HARDENED AND RIGHT HAND HELIX)	1
12	D10009240.9	PLATE CAMSHAFT THRUST	1
13	D10009230.9	BOLT M12X1.75X38 HEX HEAD CAMSHAFT	1
14	D10009270.9	PLATE FLANGED CAMSHAFT THRUST	1
15	D10009280.9	RING CAMSHAFT THRUST PLATE	1

TABLE-5
COVER AND HOUSING VALVE TIMING GEAR

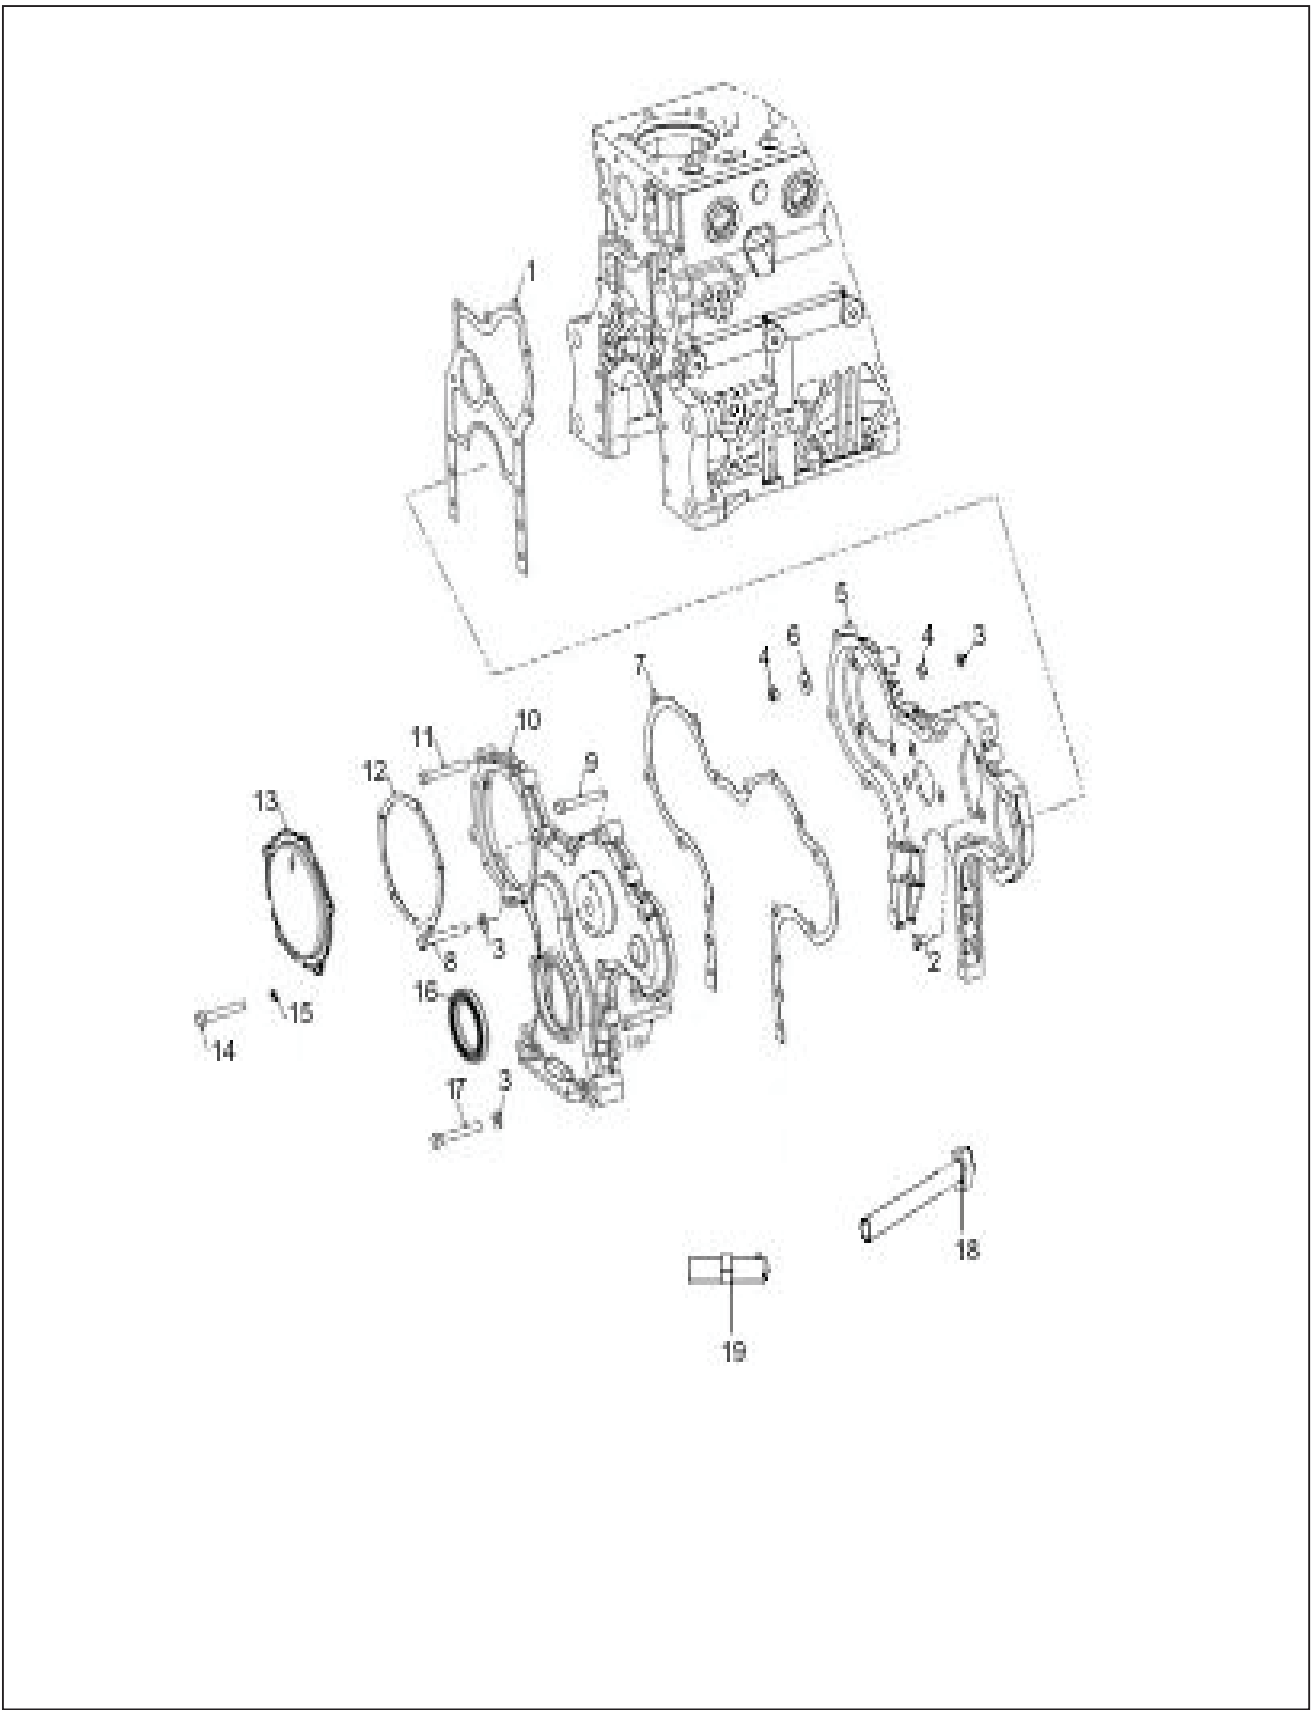


TABLE-5**COVER AND HOUSING VALVE TIMING GEAR**

Fig. No.	Part No.	Description	Qty
1	D10009330.9	GASKET TIMING GEAR HOUSING	1
2	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	5
3	D86500030.9	WASHER M8 SPRING LOCK	16
3-1	D86500030AC.9	WASHER M8 SPRING LOCK	16
4	D83500280.9	NUT M8X1.25 HEX	8
4-1	D83500060.9	NUT M8X1.25-6 HEX	8
5	D10009561.9	HOUSING VALVE TIMING GEAR (ALUMINIUM)	1
6	D86500030.9	WASHER M8 SPRING LOCK	4
7	D10331790.9	GASKET TIMING GEAR COVER	1
8	D81500130.9	BOLT M8X1.25X60-8.8 HEX HEAD	6
9	D81500140.9	BOLT M8X1.25X65-8.8 HEX HEAD	5
10	D10378030.9	COVER VALVE TIMING GEAR (ALUMINIUM)	1
11	D81500150.9	BOLT M8X1.25X70-8.8P HEX HEAD	1
12	D10378020.9	GASKET FIP GEAR INSPECTION COVER	1
13	D10378010.9	COVER FIP GEAR INSPECTION	1
14	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	6
15	D86500040.9	WASHER M6 SPRING LOCK	6
16	D10009550.9	SEAL OIL CRANKSHAFT FRONT (M/S FENNER PART NO 7844)	1
17	D81500120.9	BOLT M8X1.25X80-8.8 HEX HEAD	2
18	D81500140.9	BOLT M8X1.25X65-8.8 HEX HEAD	3
19	D84500180.9	STUD B M8X1.25X28-8.8	1

TABLE-6
PULLEY, CRANKSHAFT

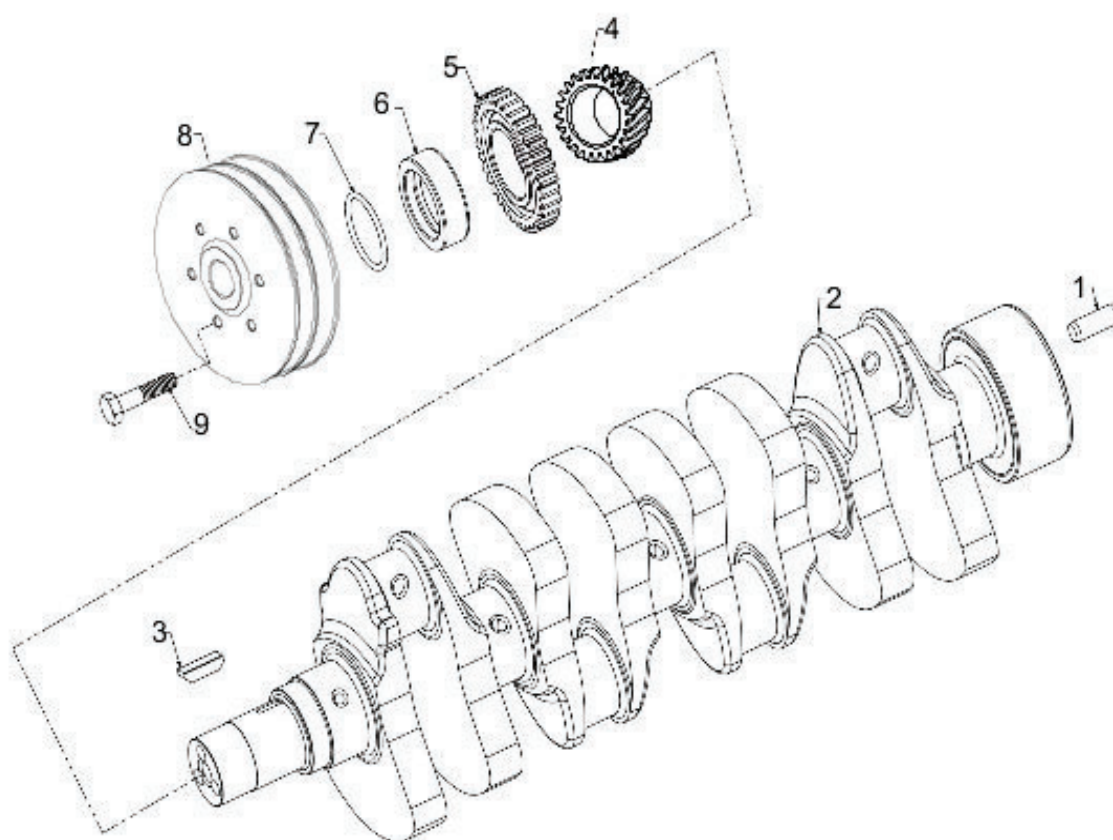


TABLE-6
PULLEY, CRANKSHAFT

Fig. No.	Part No.	Description	Qty
1	D87500080.9	PIN 13X34 PLAIN DOWEL	1
2	D10257890.9	CRANKSHAFT E4.286 TCI	1
3	D91000130.9	KEY 5X7.5 WOODRUFF	1
4	D10443940.9	GEAR CRANKSHAFT Z-24	1
5	D10009570.9	GEAR CRANKSHAFT LUBE OIL PUMP DRIVE Z-34	1
6	D10399350.9	SPACER CRANK PULLEY	1
7	D10010030.9	SEAL O RING 3.53X43.60	1
8	D10399400.9	PULLEY CRANKSHAFT	1
9	D81501740.9	BOLT M24X2.0X88 HEX HEAD	1

TABLE-7
PUMP ASSY. WATER, FAN ASSY

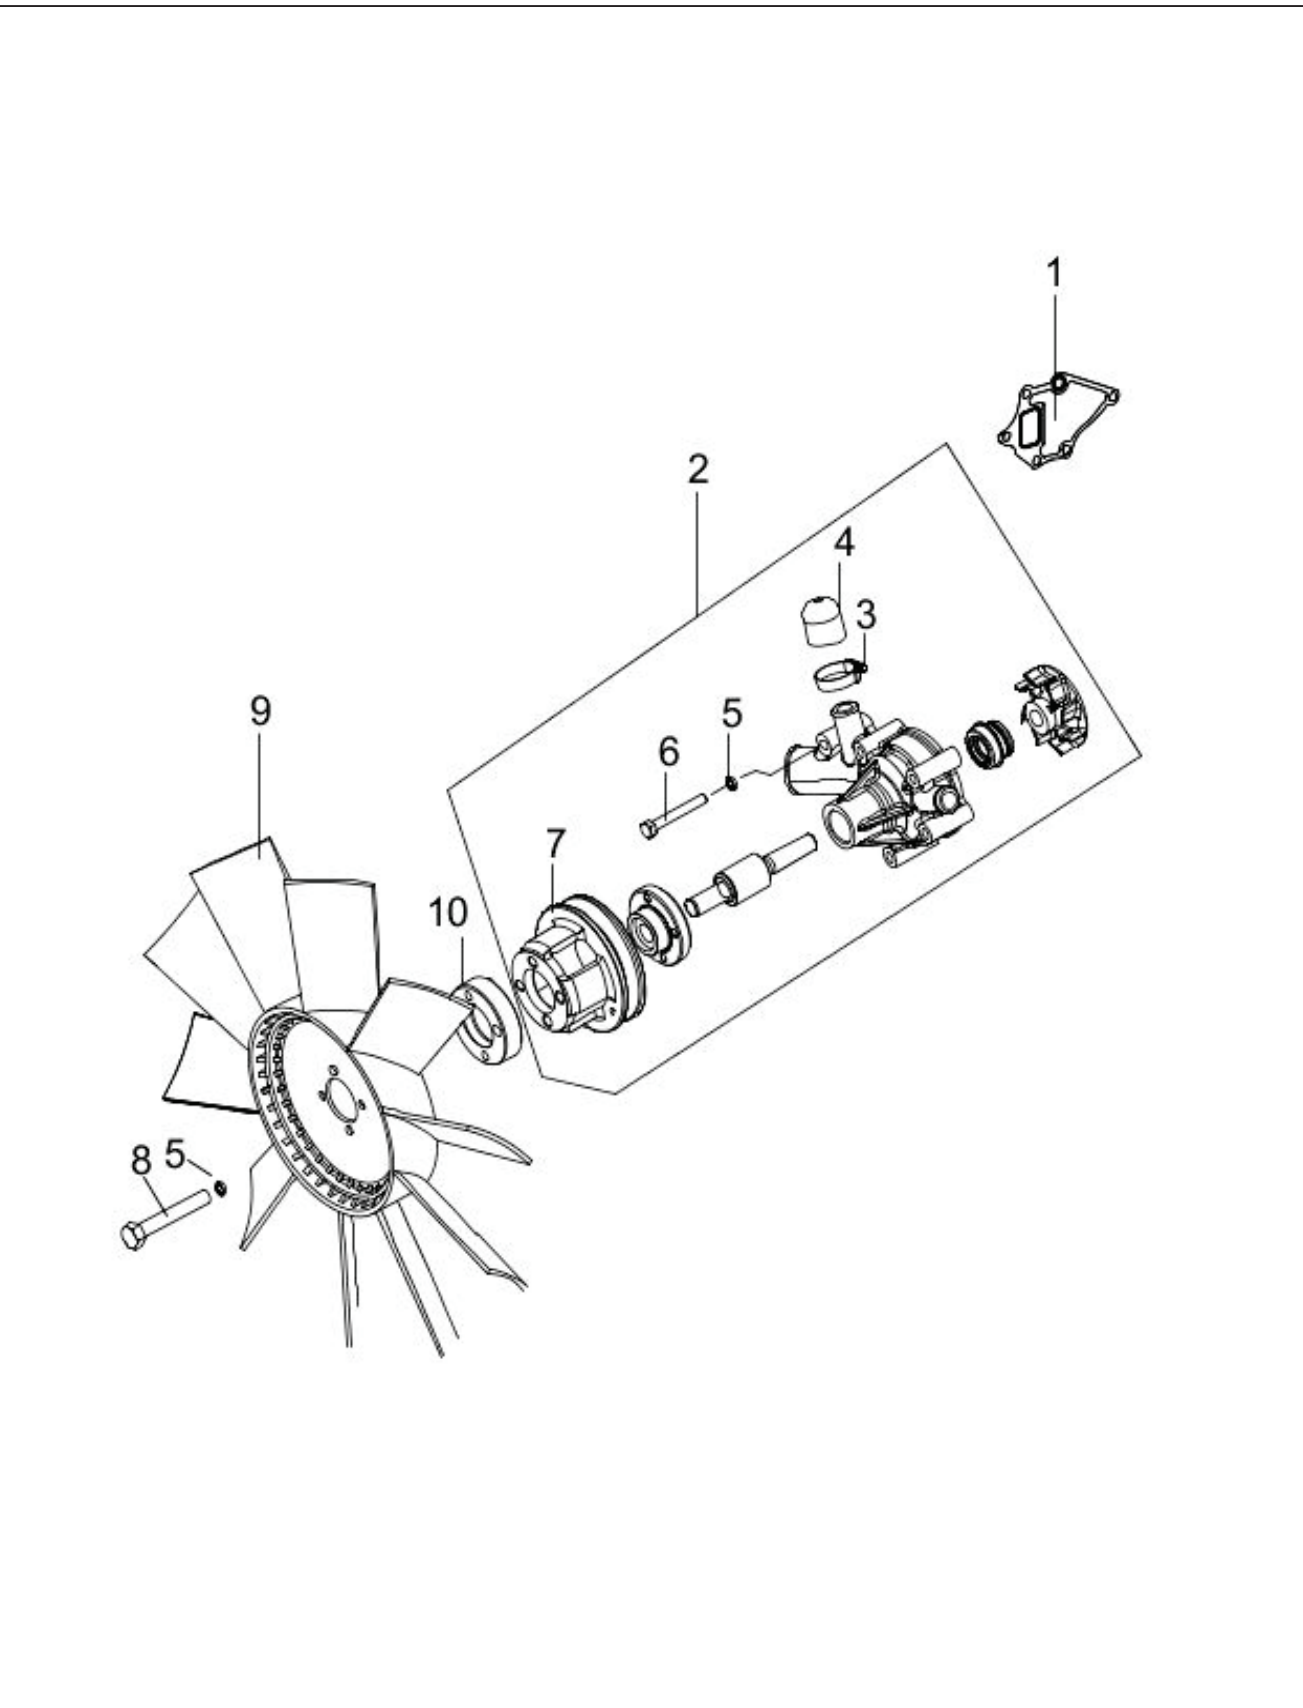


TABLE-7**PUMP ASSY. WATER, FAN ASSY**

Fig. No.	Part No.	Description	Qty
1	D10194820.9	GASKET WATER PUMP	1
2	D10221980.9	PUMP ASSEMBLY WATER E4.286 TCI	1
3	D10015860.9	CLAMP HOSE WORM DRIVE 35MM	1
4	D10188440.9	CAP WATER PUMP ASSEMBLY	1
5	D86500030.9	WASHER M8 SPRING LOCK	10
6	D81500130.9	BOLT M8X1.25X60-8.8 HEX HEAD	6
7	D10184400.9	PULLEY WATER PUMP B TYPE (E4.286 TCI)	1
8	D10035840.9	BOLT M8X1.25X55-6.6 HEX HEAD	4
8-1	D81500260.9	BOLT M8X1.25X55-6.6P HEX HEAD	4
9	D10182830.9	FAN ASSEMBLY WATER COOLING DIA 457MM (10 BLADE) E4.286 TCI	1
10	D10318380.9	SPACER FAN WATER COOLING	1

TABLE-11
FLYWHEEL AND FLYWHEEL HOUSING

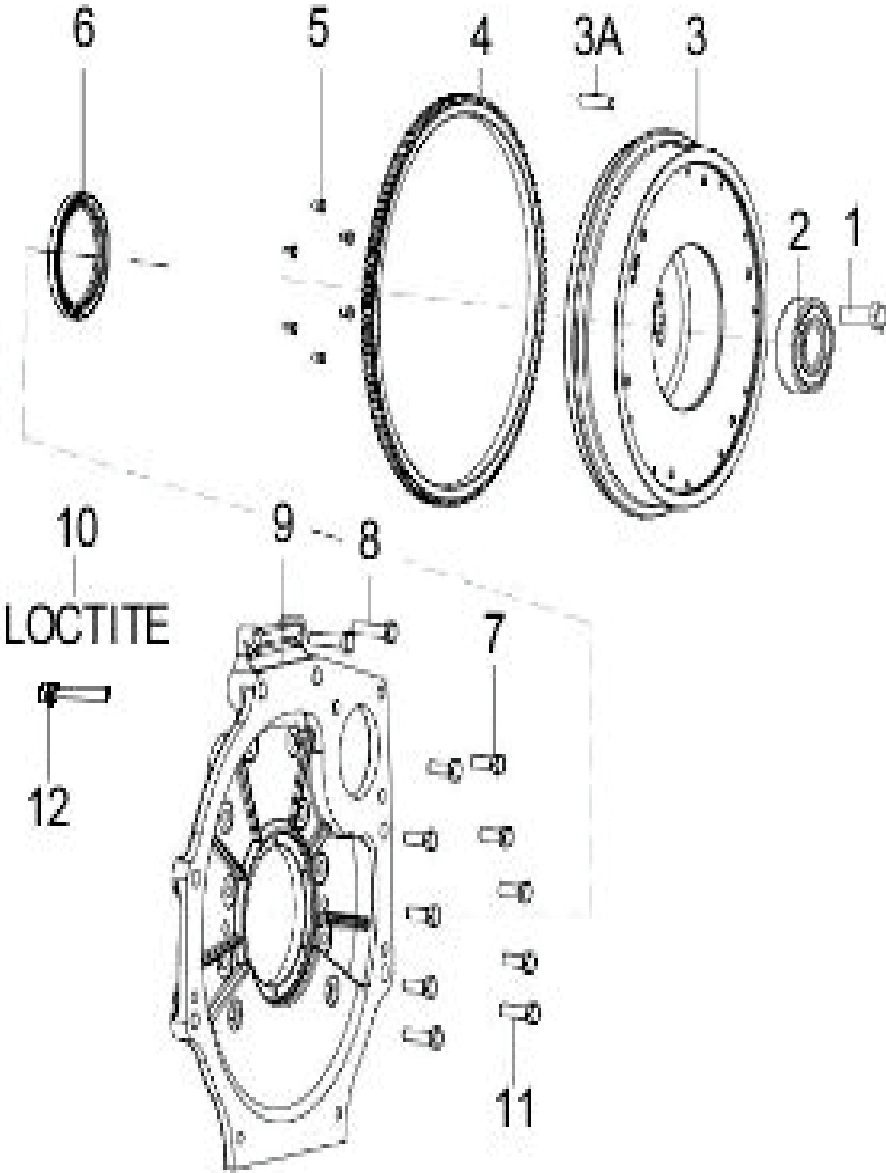


TABLE-11**FLYWHEEL AND FLYWHEEL HOUSING**

Fig. No.	Part No.	Description	Qty
1	D10009920.9	BOLT M12X1.25X36-10.9P HEX HEAD	6
2	D10009930.9	BEARING 6203 ZZ	1
3	D10250480.9	FLYWHEEL ASSEMBLY E4.286 TCI (DUAL CLUTCH)	1
3A	D87500080.9	PIN 13X34 PLAIN DOWEL	2
4	D10308030.9	RING GEAR FLYWHEEL	1
5	D81501250.9	BOLT M12X1.25X80-10.9P HEX HEAD	6
6	D10009120.9	SEAL OIL CRANKSHAFT REAR (M/S FENNER PART NO 7845)	1
7	D10007150.9	BOLT M12X1.75X45-10.9 HEX HEAD	2
8	D81500170.9	BOLT M12X1.75X55-10.9 HEX HEAD	2
9	D10437040.9	ADAPTER PLATE ENGINE	1
9-1	D10437040AC.9	ADAPTER PLATE ENGINE (E4.286)	1
10	D95010840.9	LOCTITE ANAEROBIC L-5182	AR
11	D10008440.9	BOLT M12X1.75X36-10.9P HEX HEAD	8
12	D10009830.9	PIN 8X83 PLAIN DOWEL	1

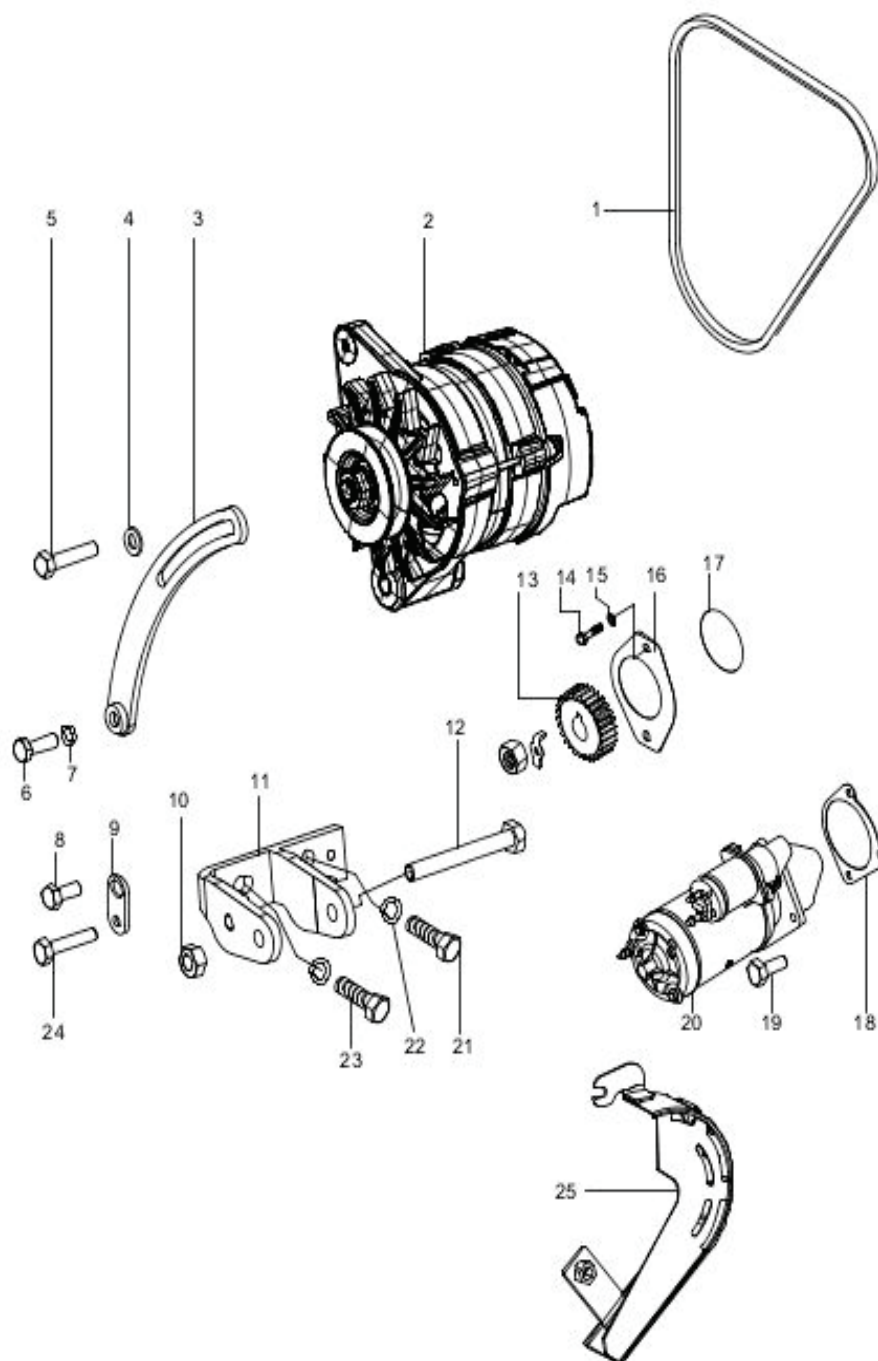
TABLE-9**HYDRAULIC PUMP, STARTER MOTOR, ALTERNATOR ASSY**

TABLE-9**HYDRAULIC PUMP, STARTER MOTOR, ALTERNATOR ASSY**

Fig. No.	Part No.	Description	Qty
1	D10184350.9	BELT DRIVE B1275	1
2	D10197190.9	ALTERNATOR ASSEMBLY 55 AMPERE (B TYPE PULLEY)	1
3	D10009210.9	LEVER ALTERNATOR ADJUSTING	1
4	D85500130.9	WASHER M8 FLAT	1
5	D81500310.9	SCREW M8X1.25X30-8.8 HEX HEAD	1
6	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	1
7	D86500030.9	WASHER M8 SPRING LOCK	8
8	D82500080.9	SCREW M8X1.25X25-8.8 HEX HEAD	2
9	D10009180.9	CLAMP ALTERNATOR MOUNTING BRACKET	1
10	D83500090.9	NUT M10X1.50-8 HEX	1
11	D10104200.9	BRACKET ASSEMBLY ALTERNATOR MOUNTING	1
11-1	D10194350.9	BRACKET ASSEMBLY ALTERNATOR MOUNTING	1
12	D81500290.9	BOLT M10X1.50X90-8.8 HEX HEAD	1
13	D10376270.9	GEAR HYDRAULIC LIFT PUMP DRIVE	1
14	D81500130.9	BOLT M8X1.25X60-8.8 HEX HEAD	2
15	D86500030.9	WASHER M8 SPRING LOCK	2
16	D10339130.9	GASKET HYDRAULIC PUMP	1
17	D10012900.9	SEAL POWER STEERING PUMP	1
18	D10345520.9	GASKET STARTER MOTOR	1
19	D81001350.9	BOLT 3/8"-16X2.00" HEX HEAD	1
20	D10104190.9	STARTER MOTOR ASSEMBLY LUCAS M127 (2.8KW)	1
21	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	1
22	D86500050.9	WASHER M10 SPRING LOCK	1
23	D82500150.9	SCREW M10X1.50X25-8.8 HEX HEAD	1
24	D81500130.9	BOLT M8X1.25X60-8.8 HEX HEAD	2
25	D10219670.9	GUARD ASSEMBLY ALTERNATOR FAN	1
25-1	D10790280.9	GUARD ASSEMBLY ALTERNATOR FAN	1

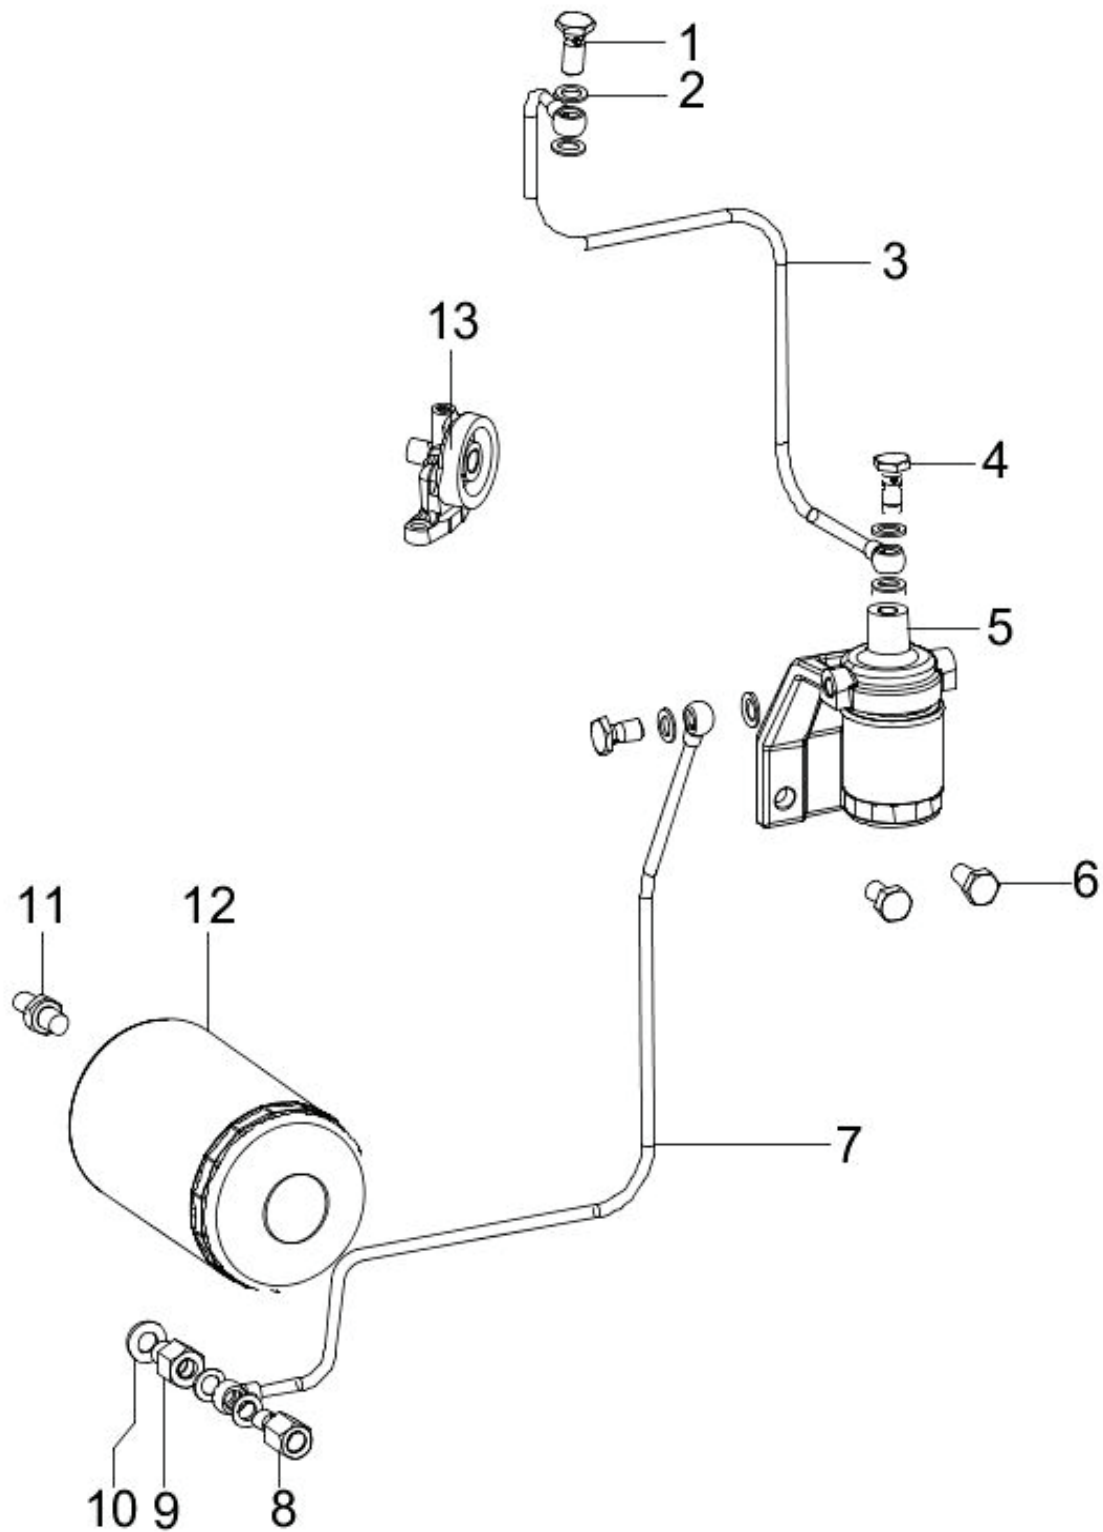
TABLE-10
FILTERS

TABLE-10
FILTERS

Fig. No.	Part No.	Description	Qty
1	D10248190.9	BOLT PIPE UNION M10X1.0X25 HEX HEAD	1
2	D10007280.9	WASHER COPPER SEALING	8
3	D10244850.9	PIPE OUTLET SECONDARY OIL FILTER TO TURBOCHARGER (E4.286TCI BHARAT TREM 3A)	1
4	D10034530.9	BOLT PIPE UNION M10X1.00 HEX HEAD	2
5	D10198880.9	FILTER ASSEMBLY SECONDARY FOR TURBOCHARGER	1
5-1	D10215760.9	FILTER AND BRACKET ASSEMBLY SECONDARY (E4.286 TCI)	1
6	D81500200.9	BOLT M10X1.50X20-6.6 HEX HEAD	2
7	D10244840.9	PIPE INLET SECONDARY OIL FILTER (E4.286TCI BHARAT TREM 3A)	1
9	D10033390.9	ADAPTER COMPRESSOR PIPE	1
10	D85500010.9	WASHER M10 FLAT	1
11	D10248390.9	INSERT OIL FILTER MOUNTING	1
12	D10285070.9	FILTER ASSEMBLY ENGINE LUBE OIL (E4.286 TCI)	1

TABLE-11
TUBES, INJECTORS, FIP




TABLE-11
TUBES, INJECTORS, FIP

Fig. No.	Part No.	Description	Qty
1	D10135670.9	TUBE ASSEMBLY FUEL INJECTION LEAK OFF (E4.286)	1
2	D83500060.9	NUT M8X1.25-6 HEX	4
2-1	D83501000.9	NUT M8X1.25-10 HEX FLANGED (WHITE PASSIVATED)	4
3	D81501860.9	BOLT M8X1.25X27 HEX HEAD FLANGED	4
4	D10022030.9	CLAMP FUEL INJECTOR NOZZLE HOLDER	4
5	D10039010.9	STUD INJECTOR M8X51	4
6	D10248400.9	NOZZLE FUEL INJECTOR (MICO PART NO B433391751)	4
7	D10226040.9	TUBE ASSEMBLY FUEL INJECTION CYLINDER NO 4 (E4.286 INLINE)	1
8	D10226030.9	TUBE ASSEMBLY FUEL INJECTION CYLINDER NO 3 (E4.286 INLINE)	1
9	D10226020.9	TUBE ASSEMBLY FUEL INJECTION CYLINDER NO 2 (E4.286 INLINE)	1
10	D10226010.9	TUBE ASSEMBLY FUEL INJECTION CYLINDER NO 1 (E4.286 INLINE)	1
11	D85500060.9	WASHER M12 FLAT	4
12	D81500630.9	BOLT M12X1.50 HEX HEAD PIPE UNION	2
12-1	D10017500.9	BOLT M12X1.5X23.5 PIPE UNION	1
13	D10383870.9	TUBE ASSEMBLY FUEL TANK RETURN	1
14	D10227710.9	PIPE ASSEMBLY FEED PUMP TO FUEL FILTER	1
14A	D10326000.9	HOSE ENGINE OVERFLOW TUBE TO FUEL TANK TUBE	1
14B	D10026170.9	TUBE NYLON THERMOSTAT	2
14C	D10088780.9	CLAMP THERMOSTAT TUBE	4
15	D10438770.9	PUMP ASSEMBLY FUEL INJECTION INLINE E4.286 TCI (75HP)	1
16	D10015190.9	WASHER 14.2X18 FLAT COPPER	8
17	D10169120.9	BOLT PIPE UNION FUEL SUPPLY SYSTEM	4
18	D10156710.9	HUB FUEL INJECTION PUMP 20MM CONE	1
19	D10009630.9	GASKET FUEL INJECTION PUMP	1
20	D10121290.9	KEY WOODRUFF	1
21	D83500700.9	NUT M8X1.25-6.8 DOME HEX FLANGE	4
22	D10424640.9	GEAR FUEL INJECTION PUMP (RH HELIX)	1
23	D10009600.9	WASHER 8.5X22 FLAT PHOSPHATED	4
24	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	3
25	D10227700.9	PIPE ASSEMBLY FUEL FILTER TO FUEL INJECTION PUMP	1
25-1	D10515490.9	TUBE AND HOSE ASSEMBLY FUEL FILTER TO FUEL INJECTION PUMP	1
25-2	D10671100.9	TUBE AND HOSE ASSEMBLY FUEL FILTER TO FUEL INJECTION PUMP	1
26	D10015140.9	FILTER ASSEMBLY FUEL (MICO PART NO 9450030120)	1
26-1	D10375260.9	FILTER ASSEMBLY FUEL (SPIN TYPE)	1
26A	D10171990.9	BRACKET FUEL FILTER MOUNTING	1
27	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	2
28	D10227690.9	PIPE FIP TO PIPE INTER COOLER OUTLET (LDA)	1
29	D10171980.9	BRACKET WATER SEPARATOR MOUNTING	1
30	D10035000.9	SEPARATOR ASSEMBLY WATER	1
31	D10348880.9	HOSE ASSEMBLY FUEL TANK TO FUEL WATER SEPARATOR	1

TABLE-11
TUBES, INJECTORS, FIP



TABLE-11
TUBES, INJECTORS, FIP

Fig. No.	Part No.	Description	Qty
32	D10313980.9	TUBE ASSEMBLY SEPARATOR WATER TO FUEL FEED PUMP	1
34	D10212530.9	BEADING CONSOLE FUEL TANK	1
35	D10008850.9	CLAMP ASSEMBLY FUEL INJECTION PIPE	1
36	D10009840.9	CAP END PROTECTION	1
37	D10018360.9	SPACER FUEL TANK MOUNTING LOWER	1
38	D10366610.9	TAP AND SCREEN ASSEMBLY FUEL CONTROL	1
38-1	D10366610AD.9	TAP AND SCREEN ASSEMBLY FUEL CONTROL	1
39	D10667080.9	HOSE ASSEMBLY FUEL FILTER TO FI PUMP	1

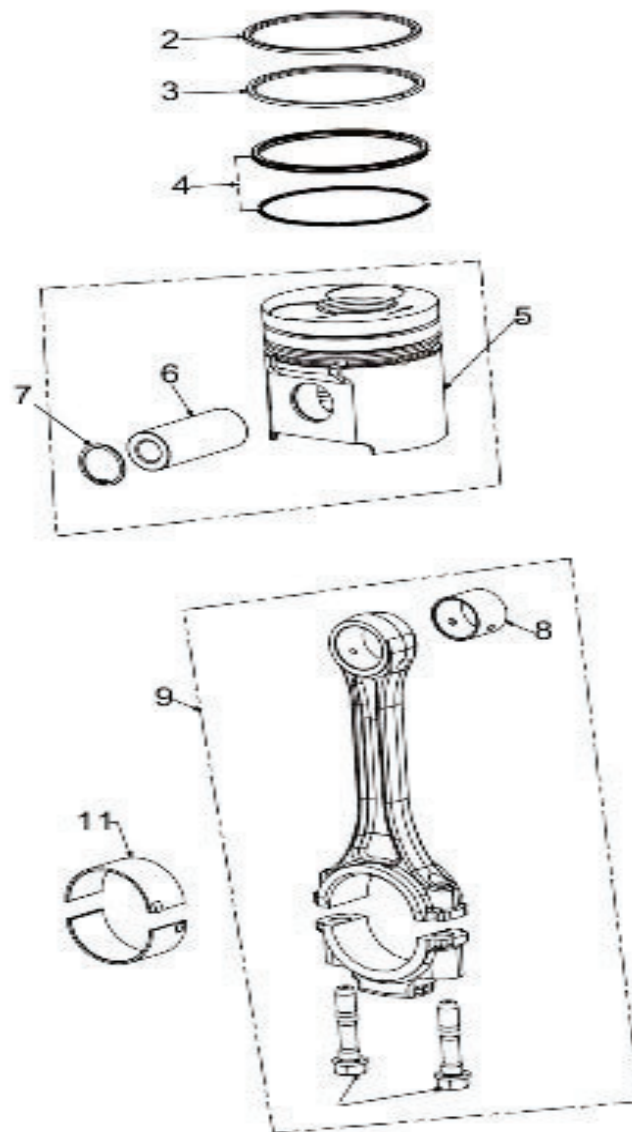
TABLE-12**PISTON & CONNECTING ROD ASSY**

TABLE-12**PISTON & CONNECTING ROD ASSY**

Fig. No.	Part No.	Description	Qty
2	D10009750.9	RING PISTON COMPRESSION UPPER	4
3	D10009740.9	RING PISTON COMPRESSION LOWER	4
4	D10009730.9	RING ASSEMBLY PISTON OIL CONTROL	4
5	D10234830.9	PISTON 91MM (E4.286)	4
6	D10009760.9	PIN PISTON E3.215	4
7	D90500050.9	CIRCLIP B28X1.2 N	8
8	D10114420.9	BUSH CONNECTING ROD SMALL END E4.286	4
9	D10114430.9	ROD ASSEMBLY CONNECTING E4.286	4
10	D10009720.9	BOLT M10X1.25X52-10.9 CONNECTING ROD	4
11	D10009670.9	BEARING CONNECTING ROD	8

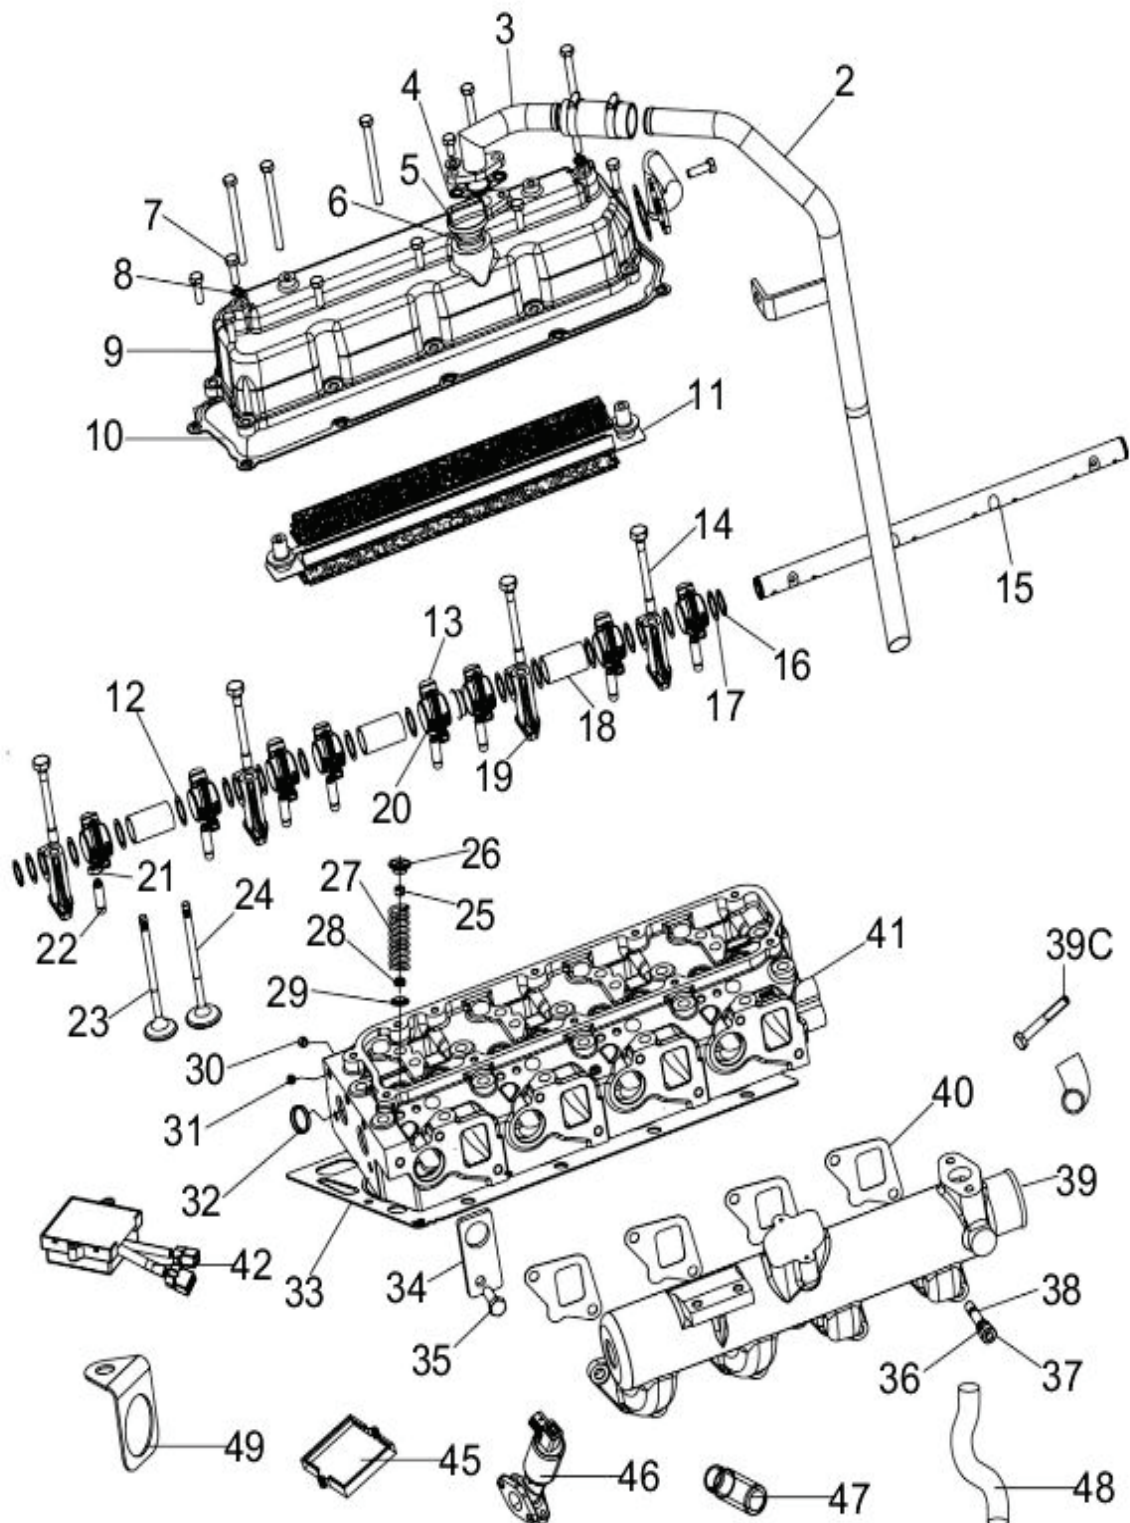
TABLE-13**INTAKE MANIFOLD, CYL. HEAD ASSY**

TABLE-13**INTAKE MANIFOLD, CYL. HEAD ASSY**

Fig. No.	Part No.	Description	Qty
1	D10182800.9	TUBE ROCKER COVER BLOW BY INLET E4.286 TCI	1
2	D10182810.9	TUBE TIMING GEAR COVER BLOW BY OUTLET E4.286TCI	1
3	D10312420.9	TUBE ROCKER COVER CRANKCASE VENTILATION (E4.286 NA)	1
3-1	D10309980.9	TUBE ROCKER COVER CRANKCASE VENTILATION	1
4	D10183950.9	GASKET TUBE ROCKER COVER E4.286 TCI	1
4-1	D10009910.9	GASKET TACHOMETER DRIVE	1
5	D10039090.9	CAP OIL FILLING	1
6	D10010020.9	SEAL O RING 3.00X28.00	1
7	D82500140.9	SCREW M8X1.25X25-6.6P HEX HEAD	4
8	D10008980.9	SEAL METAL BONDED	2
8-1	D10007460.9	SEAL BONDED DRAFT CONTROL	2
9	D10312440.9	COVER CYLINDER HEAD E4.286 NA	1
10	D10239270.9	GASKET CYLINDER HEAD COVER (E4.286)	1
11	D10433080.9	BAFFLE ASSEMBLY CYLINDER HEAD OIL PROTECTION	1
12	D10008830.9	WASHER ROCKER ARM SHAFT	16
14	D10177980.9	BOLT ROCKER ARM BRACKET	4
15	D10134800.9	SHAFT ASSEMBLY ROCKER ARM E4.286	1
16	D10105240.9	PLUG 14MM WELCH	2
17	D90000060.9	CIRCLIP A22X1.2 N	2
18	D10008560.9	SPACER ROCKER ARM SHAFT E3.215	3
19	D10008570.9	BRACKET ROCKER ARM SHAFT E3.215	4
20	D10189570.9	ARM ROCKER VALVE E3.215	8
21	D83500080.9	NUT M10X1.00-8 HEX	8
22	D10009030.9	SCREW M10X1.00 ROCKER ARM ADJUSTING	8
23	D10008720.9	VALVE EXHAUST 35MM GAUGE	4
24	D10008730.9	VALVE AIR INTAKE 37.9MM GAUGE	4
25	D10008690.9	LOCK VALVE SPRING DISC	8
26	D10115020.9	RETAINER VALVE SPRING E4.286 TURBO CHARGED/TCI	8
27	D10139630.9	SPRING VALVE E4.286 TURBO CHARGED/TCI	8
28	D10008740.9	SEAL VALVE STEM 8MM DIAMETER (M/S FENNER PART NO 7935)	8
29	D10115010.9	SEAT VALVE SPRING E4.286	8
30	D10079400.9	PLUG 20MM WELCH	3
31	D10483560.9	PLUG 32MM WELCH	3
32	D10433080.9	BAFFLE ASSEMBLY CYLINDER HEAD OIL PROTECTION	1
33	D10119170.9	GASKET ASSEMBLY CYLINDER HEAD E4.286 TC AND TCI (NON ASBESTOS)	1
34	D10008600.9	PLATE HOOK ENGINE LIFTING	1
35	D82500150.9	SCREW M10X1.50X25-8.8 HEX HEAD	1
36	D86500050.9	WASHER M10 SPRING LOCK	10
37	D83500090.9	NUT M10X1.50-8 HEX	10
38	D84500020.9	STUD B M10X26-6.8 ZINC PASSIVATED	10

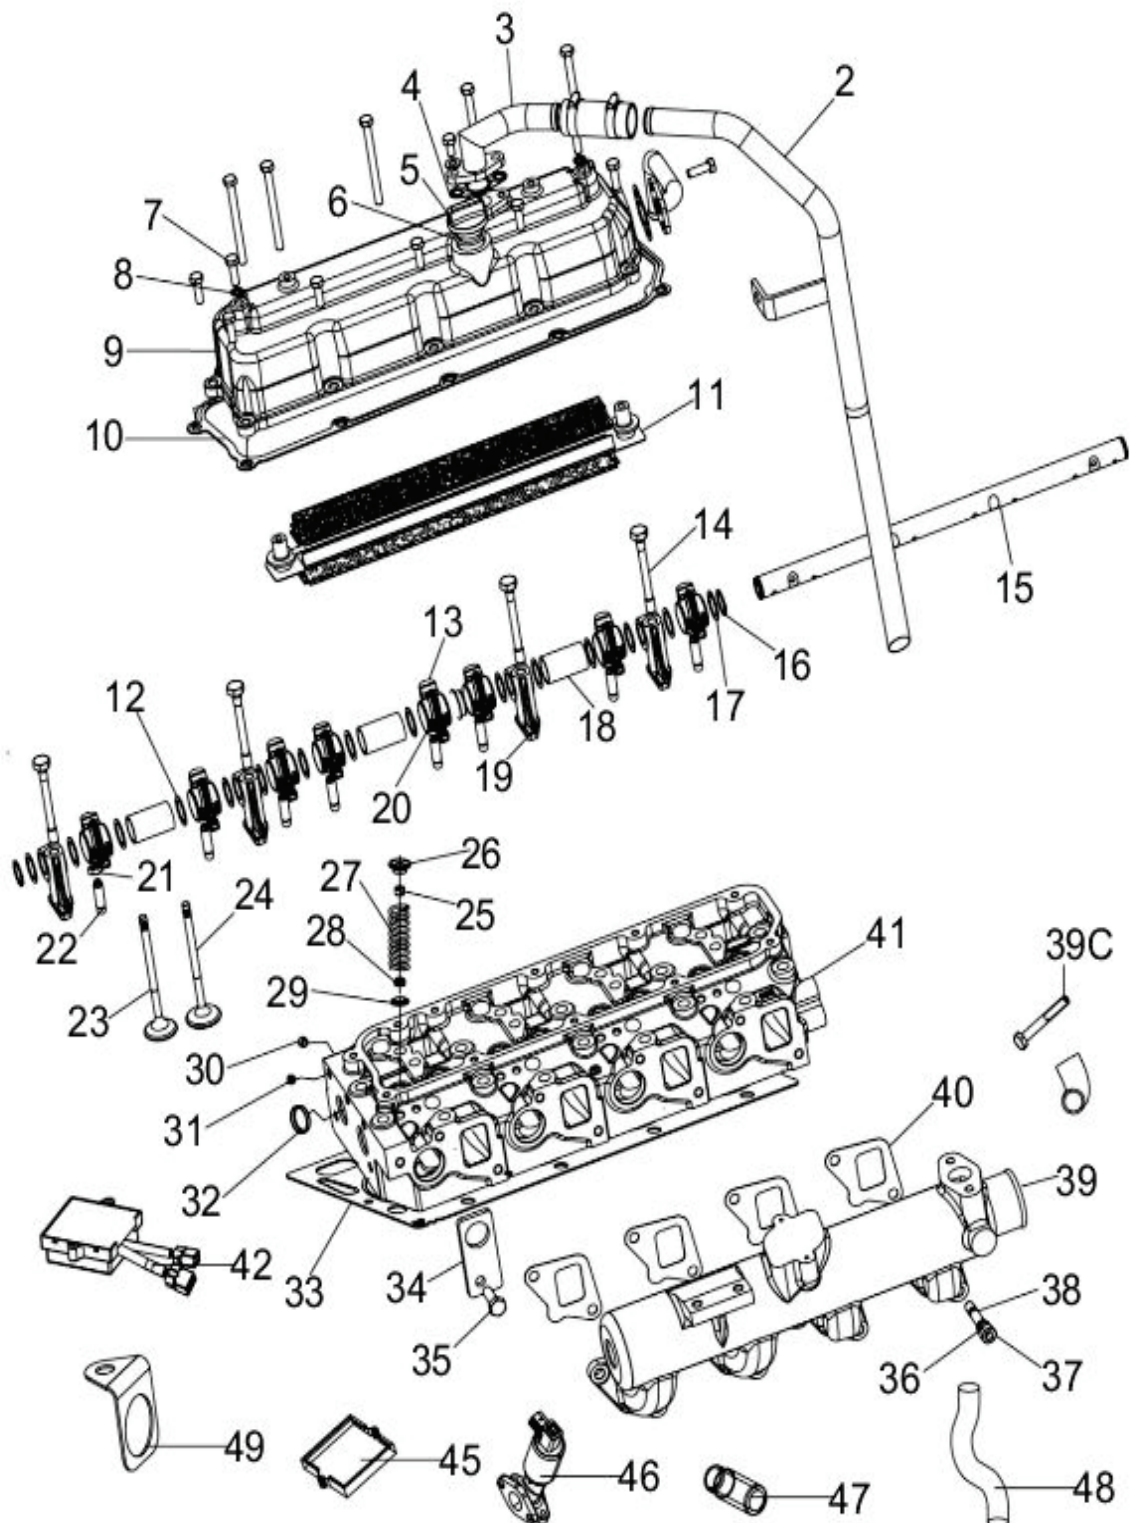
TABLE-13**INTAKE MANIFOLD, CYL. HEAD ASSY**

TABLE-13**INTAKE MANIFOLD, CYL. HEAD ASSY**

Fig. No.	Part No.	Description	Qty
39	D10383610.9	MANIFOLD ASSEMBLY ENGINE AIR INTAKE (E4.286 EXPORT)	1
39A	D10253440.9	UNIT ENGINE ELECTRONIC CONTROL EXHAUST GAS RECIRCULATION	1
39B	D85500190.9	WASHER M4.0 FLAT	2
39C	D81502140.9	BOLT M4X30-8.8 HEX HEAD	2
39D	D10254060.9	PAD MOUNTING ENGINE ELECTRONIC CONTROL UNIT (E4.286TCI)	1
40	D10008670.9	GASKET ENGINE AIR INTAKE MANIFOLD	4
41	D10316040.9	HEAD ASSEMBLY CYLINDER WITHOUT VALVE E4.286 TCI	1
42	D10253440.9	UNIT ENGINE ELECTRONIC CONTROL EXHAUST GAS RECIRCULATION	1
45	D10254060.9	PAD MOUNTING ENGINE ELECTRONIC CONTROL UNIT (E4.286TCI)	1
46	D10253460.9	VALVE ASSEMBLY EXHAUST GAS RECIRCULATION	1
47	D10008970.9	TUBE CYLINDER HEAD COVER TO BREATHER HOSE	1
47-1	D10361890.9	TUBE ASSEMBLY CRANK CASE VENTILATION UPPER	1
48	D10182820.9	HOSE TIMING GEAR COVER TUBE TO ROCKER COVER TUBE E4.286 TCI	1
49	D10179510.9	CLAMP TUBE CRANKCASE VENTILATION	1

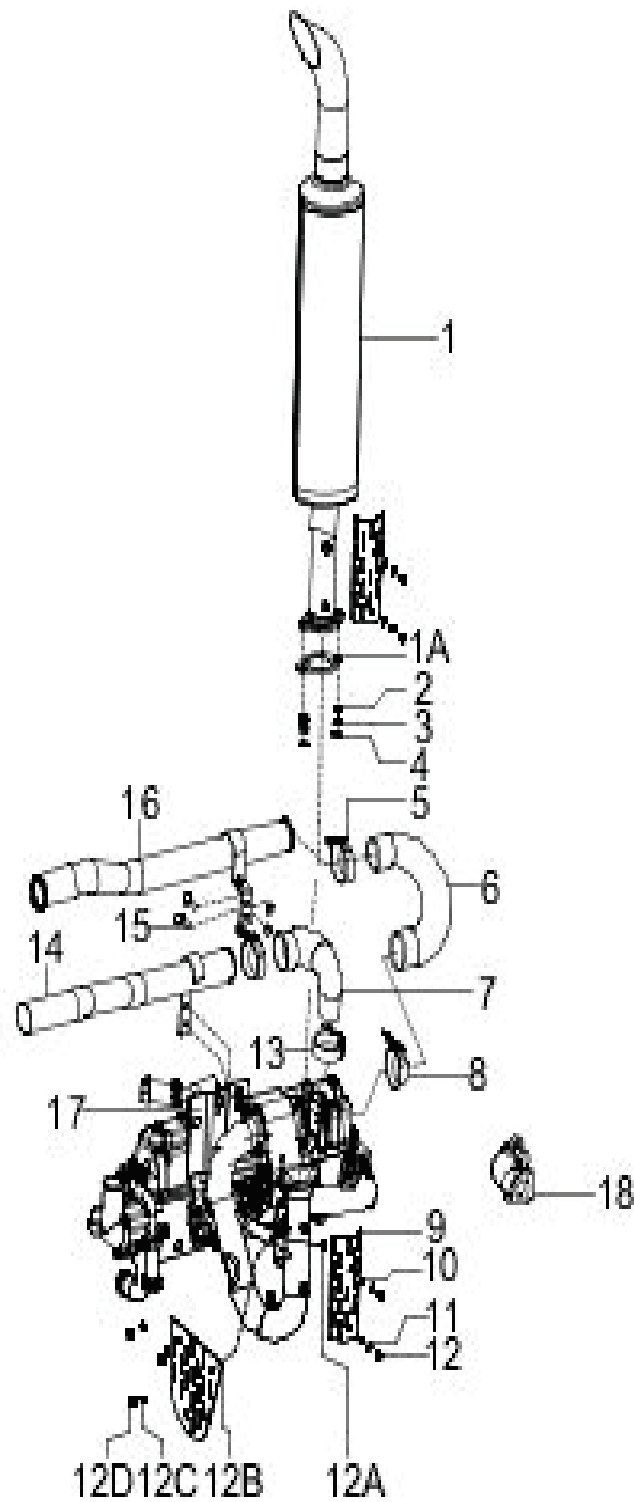
TABLE-14**TURBOCHARGER TUBE & MUFFLER**

TABLE-14**TURBOCHARGER TUBE & MUFFLER**

Fig. No.	Part No.	Description	Qty
1	D10310510.9	MUFFLER ASSEMBLY VERTICAL	1
1A	D10016120.9	GASKET MUFFLER INLET	1
1A-1	D10016120AE.9	GASKET MUFFLER INLET	1
2	D83500090.9	NUT M10X1.50-8 HEX	2
2-1	D83500940.9	NUT M10X1.5-10 HEX FLANGED (WHITE PASSIVATED)	2
3	D86500090.9	WASHER M10 SPRING LOCK	2
4	D85500140.9	WASHER M10 FLAT	2
5	D10017630.9	CLAMP ASSEMBLY AIR CLEANER HOSE	2
6	D10283770.9	HOSE AIR CLEANER PIPE TO TURBOCHARGER	1
7	D10283780.9	HOSE TURBOCHARGER OUTLET	1
8	D10201200.9	CLAMP ASSEMBLY HOSE (TB32)	1
9	D10310760.9	GUARD MUFFLER ASSEMBLY	2
10	D85500110.9	WASHER M6 FLAT	4
11	D86500040.9	WASHER M6 SPRING LOCK	4
11-1	D86500040AC.9	WASHER M6 SPRING LOCK	4
12	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	4
12A	D81501420.9	BOLT M8X1.25X15 HEX HEAD	3
12A-1	D82500070.9	SCREW M8X1.25X15-6.8 HEX HEAD	3
12B	D10311830.9	PLATE PIPE EXHAUST MANIFOLD	1
12C	D86500030.9	WASHER M8 SPRING LOCK	3
12C-1	D86500030AC.9	WASHER M8 SPRING LOCK	3
12D	D83500060.9	NUT M8X1.25-6 HEX	3
13	D10245040.9	CLAMP ASSEMBLY HOSE (TB26)	1
14	D10279710.9	PIPE AIR CLEANER HOSE TO TURBOCHARGER	1
15	D82500230.9	SCREW M8X1.25X20-8.8 HEX HEAD FLANGED	4
16	D10279700.9	PIPE TURBOCHARGER TO INTERCOOLER	1
17	D10279690.9	BRACKET SUPPORT EXHAUST ELBOW	1
18	D10008590.9	ELBOW EXHAUST MANIFOLD	1

TABLE-15
CLEANER ASSY INTERCOOLER AND HOSES

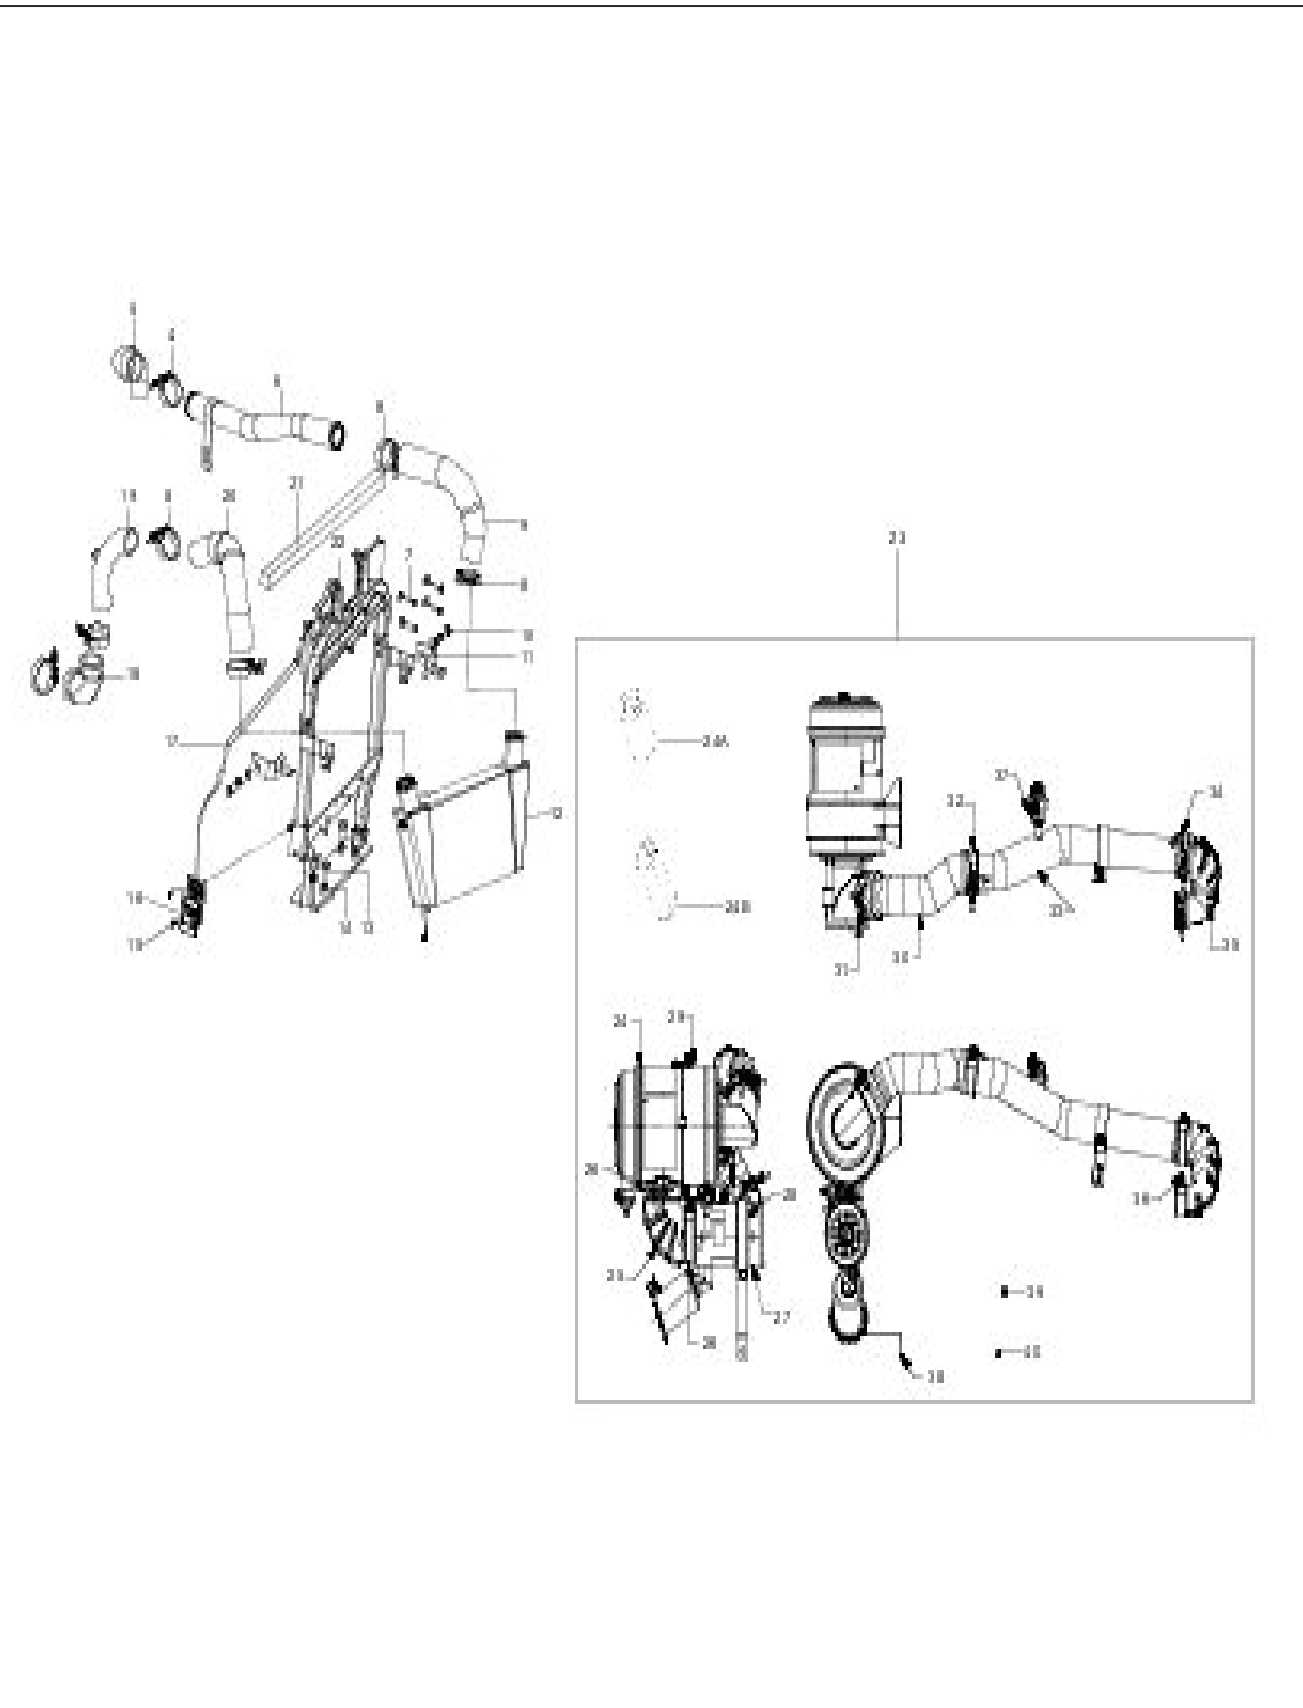


TABLE-15**CLEANER ASSY INTERCOOLER AND HOSES**

Fig. No.	Part No.	Description	Qty
4	D10245040.9	CLAMP ASSEMBLY HOSE (TB26)	2
5	D10283780.9	HOSE TURBOCHARGER OUTLET	1
6	D10279700.9	PIPE TURBOCHARGER TO INTERCOOLER	1
7	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	4
8	D10245050.9	CLAMP ASSEMBLY HOSE (TB42)	6
9	D10286110.9	HOSE TURBO OUTLET PIPE TO INTER COOLER	1
10	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
11	D10320890.9	BRACKET FRONT GRILL MOUNTING	2
12	D10286090.9	INTERCOOLER ASSEMBLY (BHARAT TREM 3A)	1
13	D81500560.9	BOLT M12X1.75X30-6G HEX HEAD	2
14	D86500020.9	WASHER M12 SPRING LOCK	2
15	D83500350.9	NUT M6X1.00 NYLOCK HEX	3
16	D10223100.9	LATCH ASSEMBLY HOOD	1
17	D10293310.9	CLIP CABLE LATCH	1
18	D10804970.9	PANEL ASSEMBLY HOOD REAR (PAINT TSA DELPHINIUM BLUE)	1
19	D10215580.9	TUBE INTERCOOLER TO INTAKE MANIFOLD	1
20	D10286120.9	HOSE INTERCOOLER TO INTAKE PIPE	1
21	D10292630.9	FOAM SEALING RADIATOR SIDE	1
22	D10341780.9	FRAME ASSEMBLY RADIATOR	1
23	D10344940.9	CLEANER ASSEMBLY ENGINE AIR (DRY TYPE)	1
24	D10345360.9	AIR CLEANER ASSEMBLY	1
24A	D10327600.9	ELEMENT PRIMARY FILTER AIR CLEANER	1
24B	D10327590.9	ELEMENT SECONDARY FILTER AIR CLEANER	1
25	D10313250.9	HOSE PRECLEANER TO AIR CLEANER	1
26	D10313420.9	CLAMP ASSEMBLY HOSE (TB72)	2
27	D10368230.9	PRECLEANER,METAL	1
28	D10313380.9	CLAMP HOLDING PRECLENER	1
29	D10368220.9	BRACKET ASSEMBLY	1
30	D10313400.9	HOSE AIR CLEANER TO PIPE	1
31	D10313410.9	CLAMP ASSEMBLY HOSE (TB62)	1
32	D10245080.9	CLAMP ASSEMBLY HOSE (TB52)	1
33	D10319800.9	TUBE ASSEMBLY AIR CLEANER TO TURBOCHARGER	1
34	D10245080.9	CLAMP ASSEMBLY HOSE (TB52)	1
35	D10313390.9	HOSE AIR CLEANER PIPE TO TURBOCHARGER	1
36	D10313430.9	HOSE CLAMP,T BOLT	1
37	D10313210.9	INDICATOR DRY AIR CLEANER ELECTROMECHANICAL	1
38	D10345380.9	BRACKET ASSEMBLY, POWDER COATED	1
39	D83500060.9	NUT M8X1.25-6 HEX	4
40	D86500030.9	WASHER M8 SPRING LOCK	4
41	D10415240.9	HOSE ENGINE AIR CLEANER AND CL	1

TABLE-17
THROTTLE CONTROL

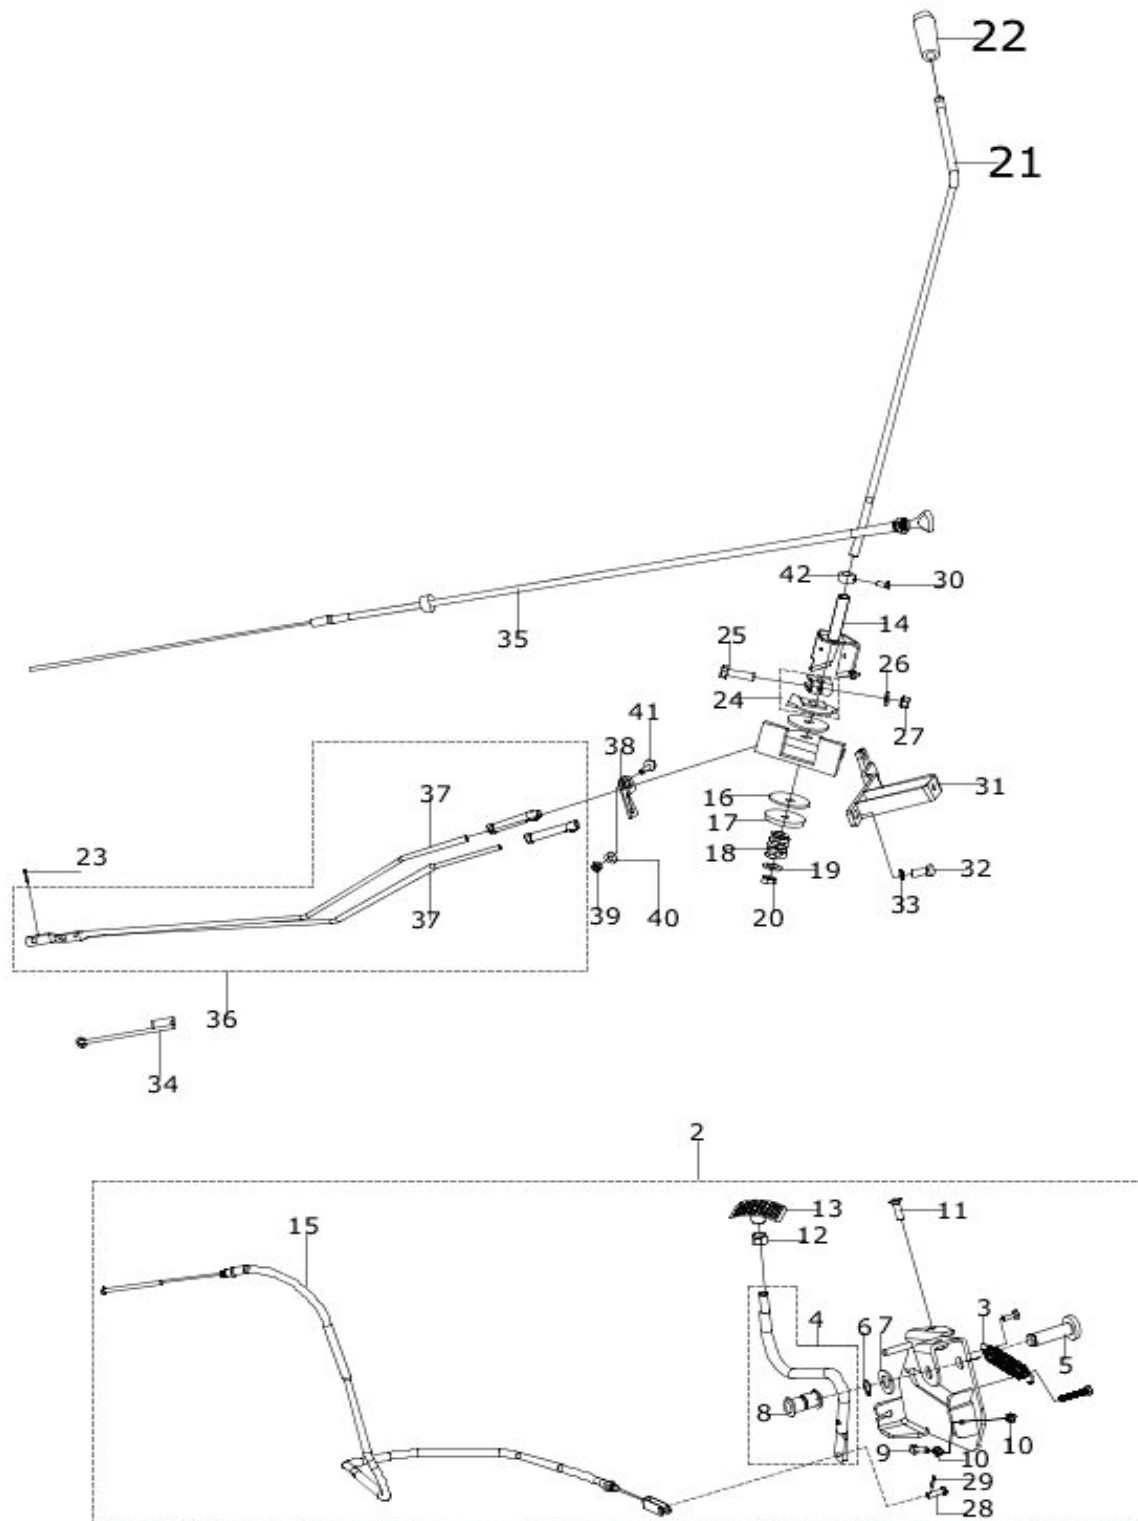


TABLE-17
THROTTLE CONTROL

Fig. No.	Part No.	Description	Qty
2	D10398790.9	BRACKET ASSEMBLY FOOT THROTTLE CONTROL	1
3	D10258450.9	SPRING FOOT THROTTLE CONTROL RETURN	1
4	D10258460.9	PEDAL ASSEMBLY FOOT THROTTLE CONTROL	1
5	D10309950.9	PIN FOOT THROTTLE PIVOT	1
6	D90000180.9	CIRCLIP A15X0.90 SB	1
7	D10042730.9	WASHER 15.5X30 DIFFERENTIAL LOCK BUSH THRUST	1
8	D10292740.9	BUSH HYDRAULIC CONTROL LEVER	1
9	D10034950.9	SCREW M6X1.00X20-6.6 HEX HEAD	1
10	D83500220.9	NUT M6X1.00-5 HEX	2
11	D82500760.9	SCREW M8X1.25X25-12.9 COUNTERSUNK HEAD	2
12	D83500210.9	NUT M10X1.50-5 HEX	1
13	D10258470.9	PAD THROTTLE CONTROL LEVER	1
14	D10389560.9	ARM ASSEMBLY HAND THROTTLE CONTROL	1
15	D10398780.9	CABLE ASSEMBLY FOOT THROTTLE CONTROL	1
15-1	D10398780AD.9	CABLE ASSEMBLY FOOT THROTTLE CONTROL	1
16	D10018170.9	DISC THROTTLE CONTROL	2
17	D10017960.9	PLATE THROTTLE CONTROL	1
18	D10016480.9	SPRING GOVERNOR MANUAL CONTROL LEVER	1
18-1	D10016480AD.9	SPRING GOVERNOR MANUAL CONTROL LEVER	1
19	D85000050.9	WASHER 3/8" FLAT	1
20	D83000010.9	NUT 3/8"-24 HEX	1
21	D10258840.9	LEVER HAND THROTTLE CONTROL	1
22	D10215860.9	KNOB HAND THROTTLE CONTROL LEVER	1
23	D10000640.9	PIN 1/16"X0.50" COTTER	1
24	D10021590.9	PLATE ASSEMBLY THROTTLE CONTROL POWER STEERING	1
25	D81000670.9	BOLT 5/16"-24X1.25" SQUARE HEAD	1
26	D10018690.9	WASHER 5/16" FLAT	1
27	D83000080.9	NUT 5/16"-18 HEX	1
28	D10016440.9	PIN 5.8X21 CLEVIS	1
29	D88400010.9	PIN 1.6X12.5 COTTER	1
29-1	D10000640.9	PIN 1/16"X0.50" COTTER	1
30	D82500030.9	SCREW M5X0.80X10-6.6 HEX HEAD	1
31	D10398740.9	BRACKET ASSEMBLY FOOT THROTTLE CABLE HOLDING	1
32	D82500040.9	SCREW M8X1.25X20-8.8 HEX HEAD	2
33	D86500030.9	WASHER M8 SPRING LOCK	2
34	D10011820.9	END ASSEMBLY FUEL SHUT OFF LEVER	1
34-1	D10151390.9	END ASSEMBLY FUEL SHUT OFF LEVER	1
35	D10017670.9	CONTROL ASSEMBLY FUEL SHUT OFF	1
36	D10399050.9	ROD ASSEMBLY THROTTLE CONTROL	1
37	D10223710.9	ROD THROTTLE CONTROL	2

TABLE-17
THROTTLE CONTROL

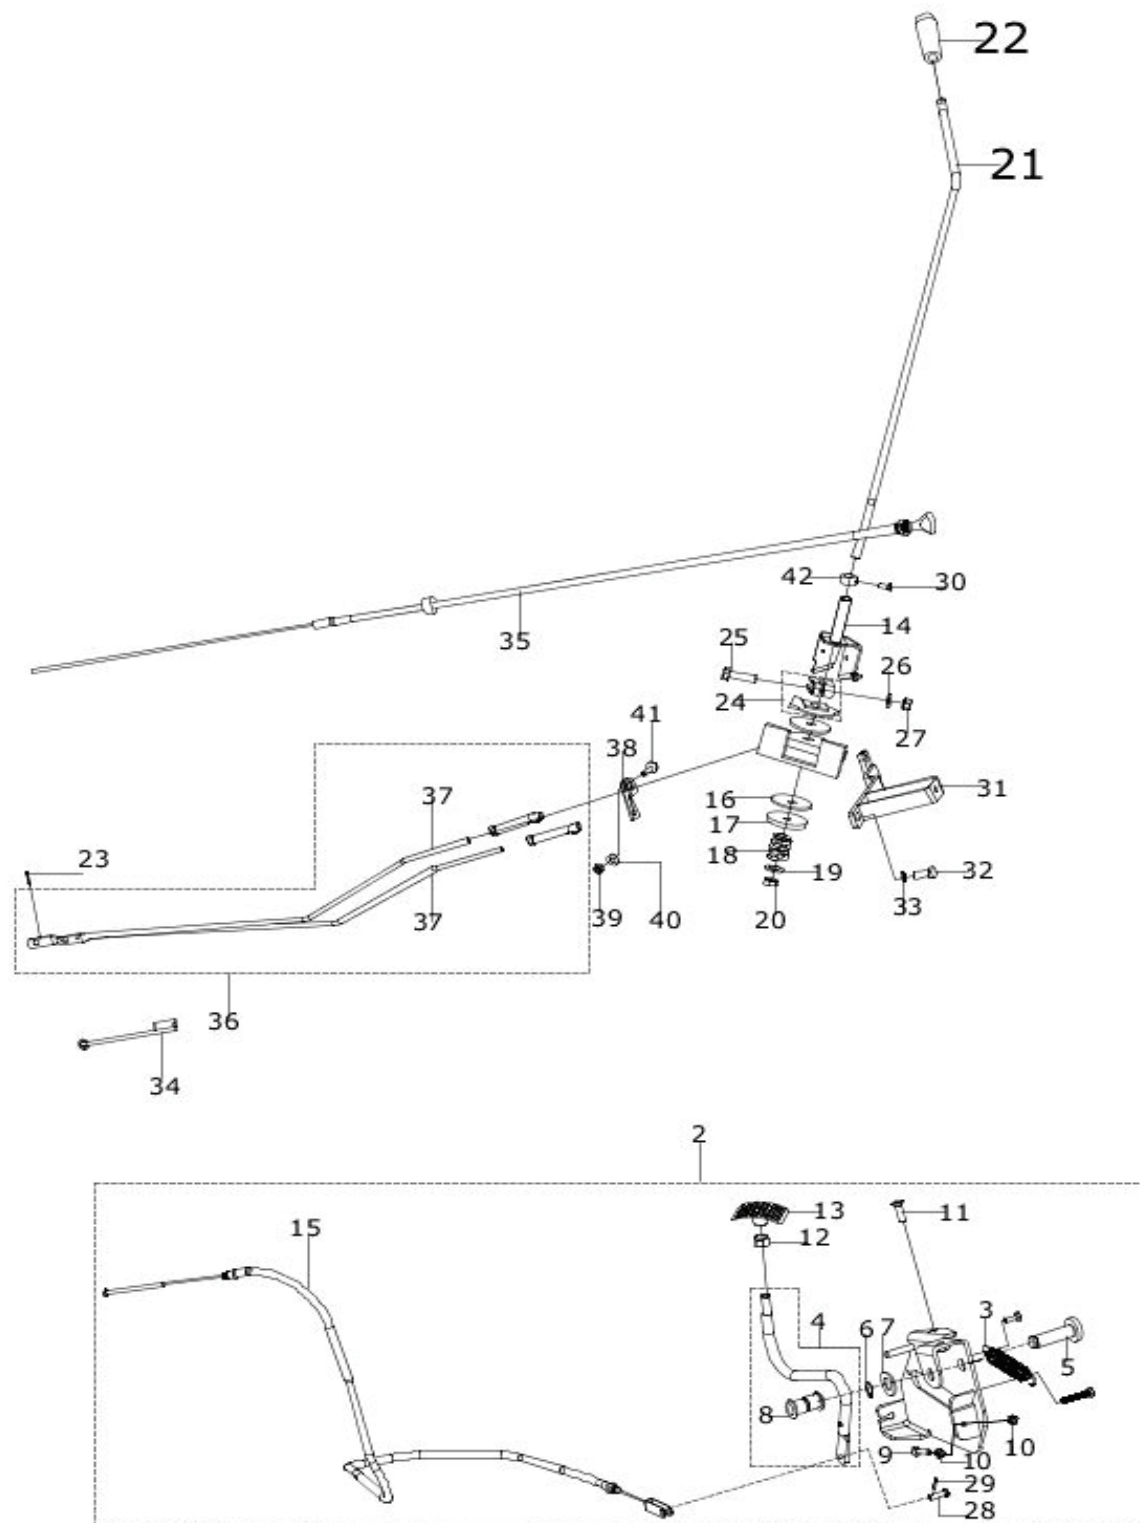


TABLE-17
THROTTLE CONTROL

Fig. No.	Part No.	Description	Qty
38	D10398770.9	BRACKET FOOT THROTTLE CABLE GUIDE	2
39	D83500070.9	NUT M6X1.00-6 HEX	2
40	D85500040.9	WASHER M6 FLAT	2
41	D81501610.9	BOLT M6X1.0X30-8.8 HEX HEAD (PRECOATING)	2
42	D10017970.9	STOP THROTTLE CONTROL LEVER	1

TABLE-18
RADIATOR ASSEMBLY

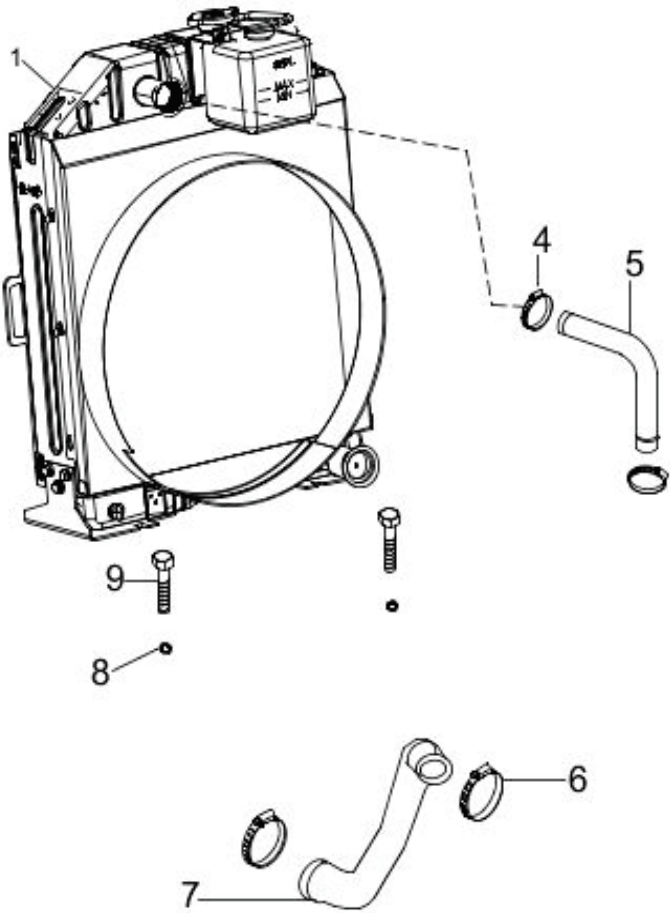


TABLE-18**RADIATOR ASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10299820.9	RADIATOR ASSEMBLY	1
4	D10017540.9	CLAMP RADIATOR HOSE UPPER	2
5	D10017340.9	HOSE RADIATOR UPPER	1
6	D10017620.9	CLAMP RADIATOR HOSE LOWER	2
6-1	D10330480.9	CLAMP HOSE WORM DRIVE 60MM	2
7	D10253180.9	HOSE RADIATOR LOWER TO WATER PUMP	1
7-1	D10174680.9	HOSE WATER PUMP TO RADIATOR OUTLET	1
8	D86500090.9	WASHER M10 SPRING LOCK	2
9	D81500370.9	BOLT M10X1.50X30-9.8 HEX HEAD	2
10	D10016300.9	FOAM RADIATOR SEALING SIDE	1

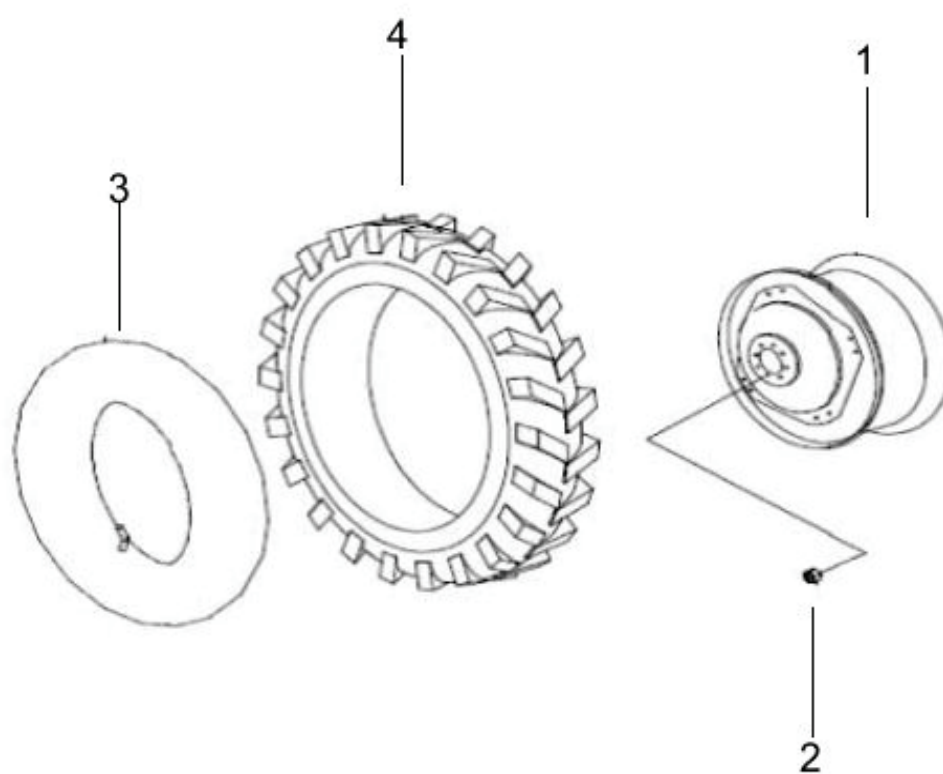
TABLE-19**FRONT WHEEL ASSEMBLY**

TABLE-19**FRONT WHEEL ASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10982930AA.9	WHEEL ASSEMBLY FRONT W10-24 (KUBOTA RED)	2
2	D10124340.9	NUT M18X1.50-8 HEX HEAD COLLARED (REAR WHEEL BOLT)	16
3	D10499230.9	TUBE ASSEMBLY FRONT TYRE 11.2X24	2
4	D10499220.9	TYRE ASSEMBLY FRONT WHEEL 11.2X24	2

TABLE-20
STEERING MOTOR & PIPES

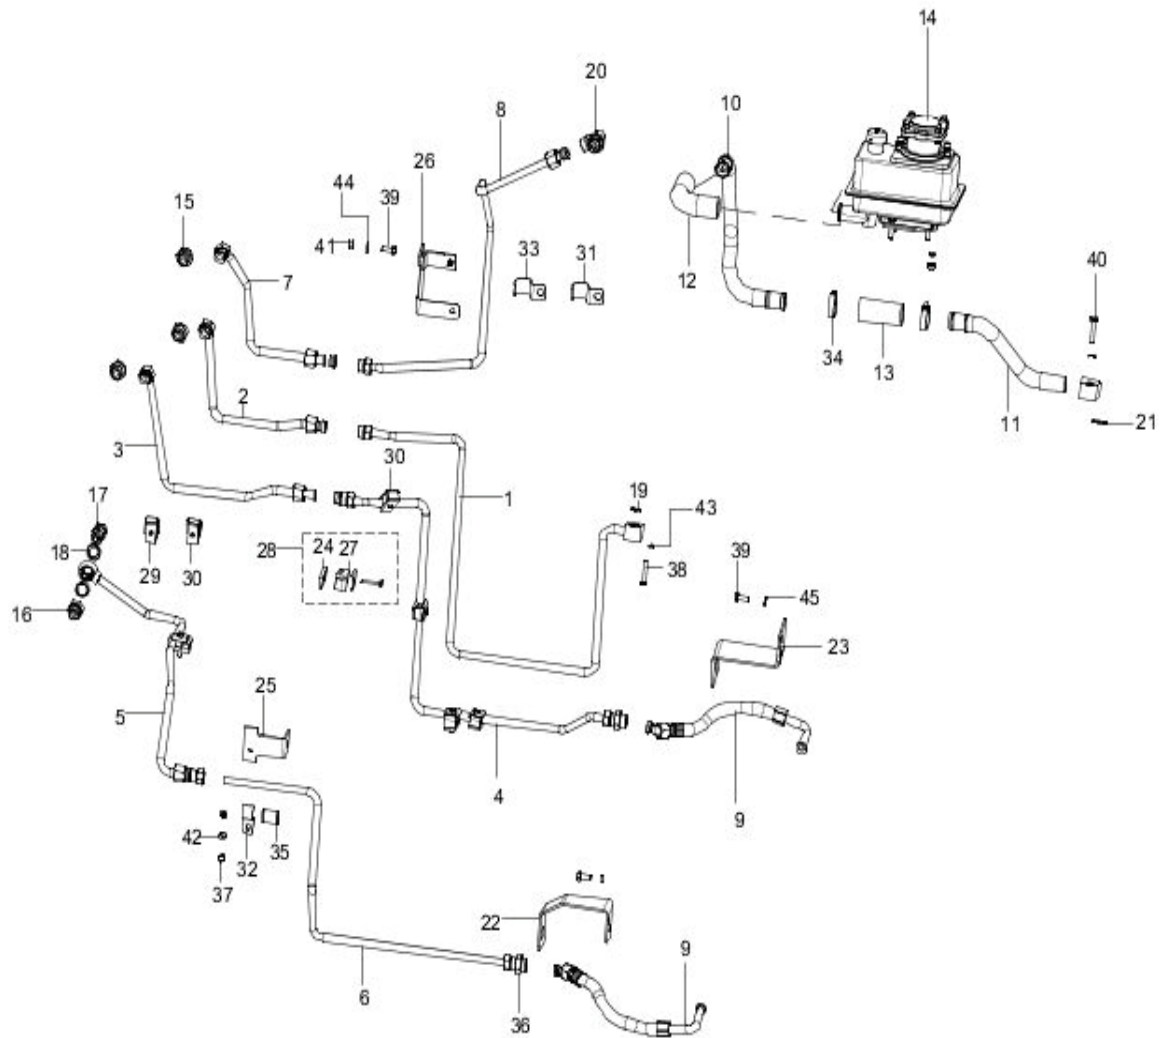


TABLE-20**STEERING MOTOR & PIPES**

Fig. No.	Part No.	Description	Qty
1	D10501260.9	TUBE ASSEMBLY STEERING PRESSURE TANDEM PUMP TO STEERING MOTOR	1
2	D10617910.9	TUBE ASSEMBLY STEERING CONNECTOR TO STEERING MOTOR	1
3	D10501300.9	TUBE ASSEMBLY STEERING MOTOR OUTLET TO CYLINDER LH	1
4	D10501320.9	TUBE ASSEMBLY STEERING MOTOR TO CYLINDER HOSE LH	1
5	D10501340.9	TUBE ASSEMBLY STEERING MOTOR OUTLET TO CYLINDER RH	1
6	D10501360.9	TUBE ASSEMBLY STEERING MOTOR TO CYLINDER HOSE RH	1
7	D10617890.9	TUBE ASSEMBLY RETURN STEERING MOTOR TO CONNECTOR	1
8	D10617870.9	TUBE ASSEMBLY RETURN CONNECTOR TO STEERING RESERVOIR	1
9	D10520430.9	HOSE ASSEMBLY POWER STEERING CYLINDER	2
10	D10524090.9	TUBE SUCTION STEERING RESERVOIR TO HOSE	1
11	D10524070.9	TUBE ASSEMBLY POWER STEERING SUCTION HOSE TO TANDEM PUMP	1
12	D10520440.9	HOSE STEERING SUCTION TUBE	1
13	D10519950.9	HOSE STEERING SUCTION TUBE	1
14	D10490500.9	RESERVOIR ASSEMBLY POWER STEERING OIL	1
14-1	D10490500AF.9	RESERVOIR ASSEMBLY POWER STEERING OIL	1
15	D10375240.9	ADAPTOR 13/16"-16 UN AND 3/4"-16 UNF	3
16	D10528430.9	CONNECTOR M18X1.5 AND 3/4-16 UNF STUD END	1
17	D10174960.9	BOLT BANJO M18X1.50	1
17-1	D10174960AD.9	BOLT BANJO M18X1.50	1
18	D10174950.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	2
18-1	D10174950AD.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	1
19	D91500040.9	ELBOW 13/16-16 UNF AND 1/2-14 BSP	1
20	D93600670.9	SEAL O RING 1.78X15.6	1
21	D93600580.9	SEAL O RING 1.78X23.52	1
22	D10561550.9	BRACKET STEERING TUBE HOLDING	1
23	D10561560.9	BRACKET STEERING TUBE HOLDING	1
24	D10619190.9	PLATE SUPPORT POWER STEERING TUBE	1
25	D10619170.9	BRACKET ASSEMBLY POWER STEERING TUBE HOLDING	1
26	D10558970.9	BRACKET ASSEMBLY SUCTION TUBE HOLDING	1
27	D10587620.9	CLAMP ASSEMBLY HYDRAULIC PRESSURE	1
28	D10472160.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	2
29	D10296350.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	3
30	D10402170.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE 1	1
31	D10527370.9	CLAMP TUBE HOLDING DIA 12	1
32	D10548020.9	CLAMP TUBE HOLDING DIA 12	1
33	D10504260.9	CLAMP POWER STEERING TUBE HOLDING	1
34	D10013970.9	CLAMP HOSE 35A	4
35	D10413940.9	GROMMET TUBE RETURN STEERING MOTOR TO RESERVOIR	1
36	D83000400.9	NUT 13/16"-16 UN HEX	2
37	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	2

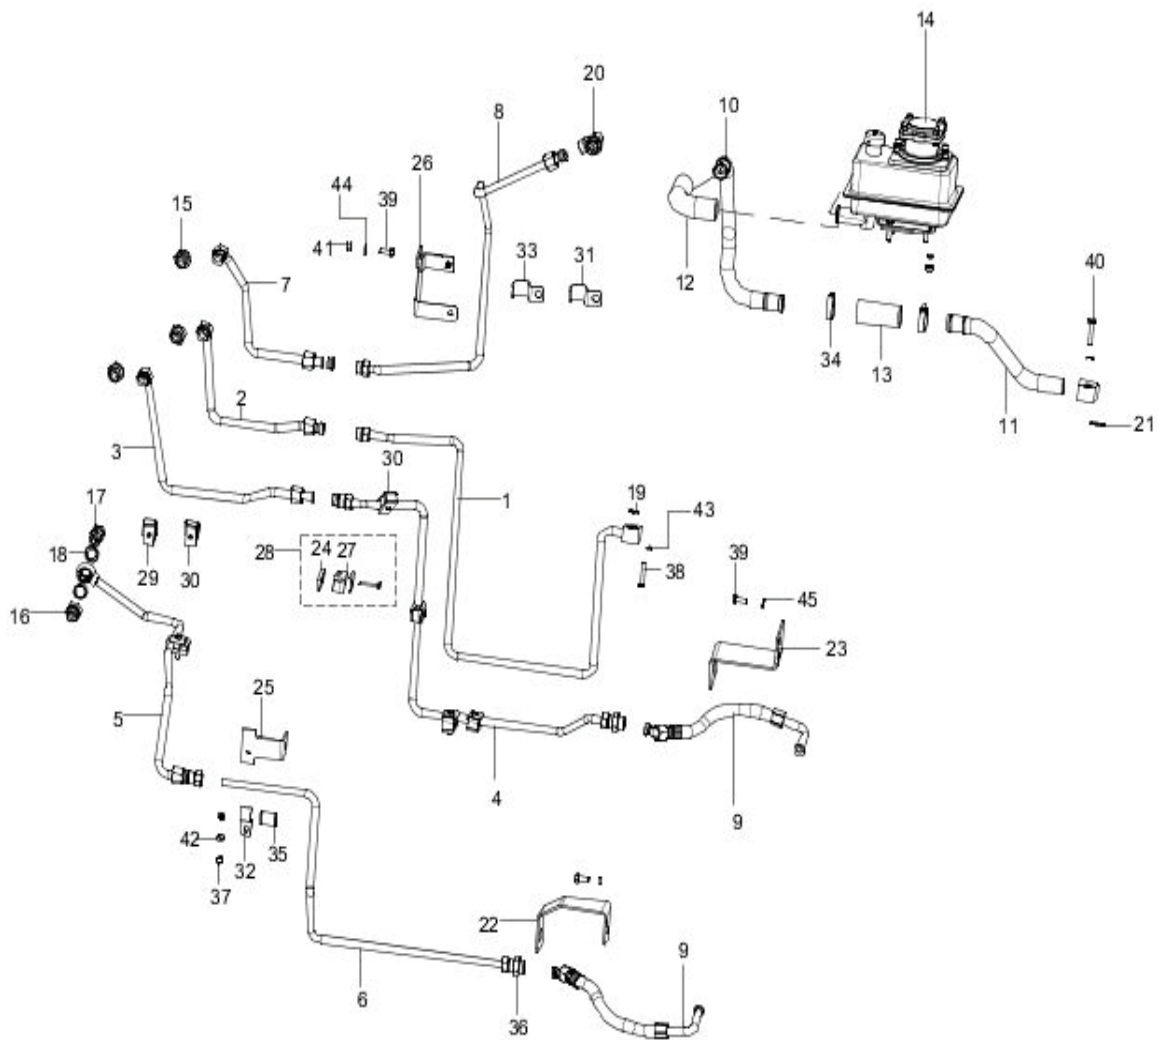
TABLE-20**STEERING MOTOR & PIPES**

TABLE-20**STEERING MOTOR & PIPES**

Fig. No.	Part No.	Description	Qty
38	D81500340.9	BOLT M6X1.00X35-8.0 HEX HEAD	3
39	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	6
40	D81500030.9	BOLT M8X1.25X35-6.6 HEX HEAD	2
41	D10053080.9	NUT M8X1.25-6 HEX	4
42	D85500040.9	WASHER M6 FLAT	2
43	D86500040.9	WASHER M6 SPRING LOCK	2
44	D85500130.9	WASHER M8 FLAT	2
45	D86500030.9	WASHER M8 SPRING LOCK	9

TABLE-21
STEERING MECHANISM

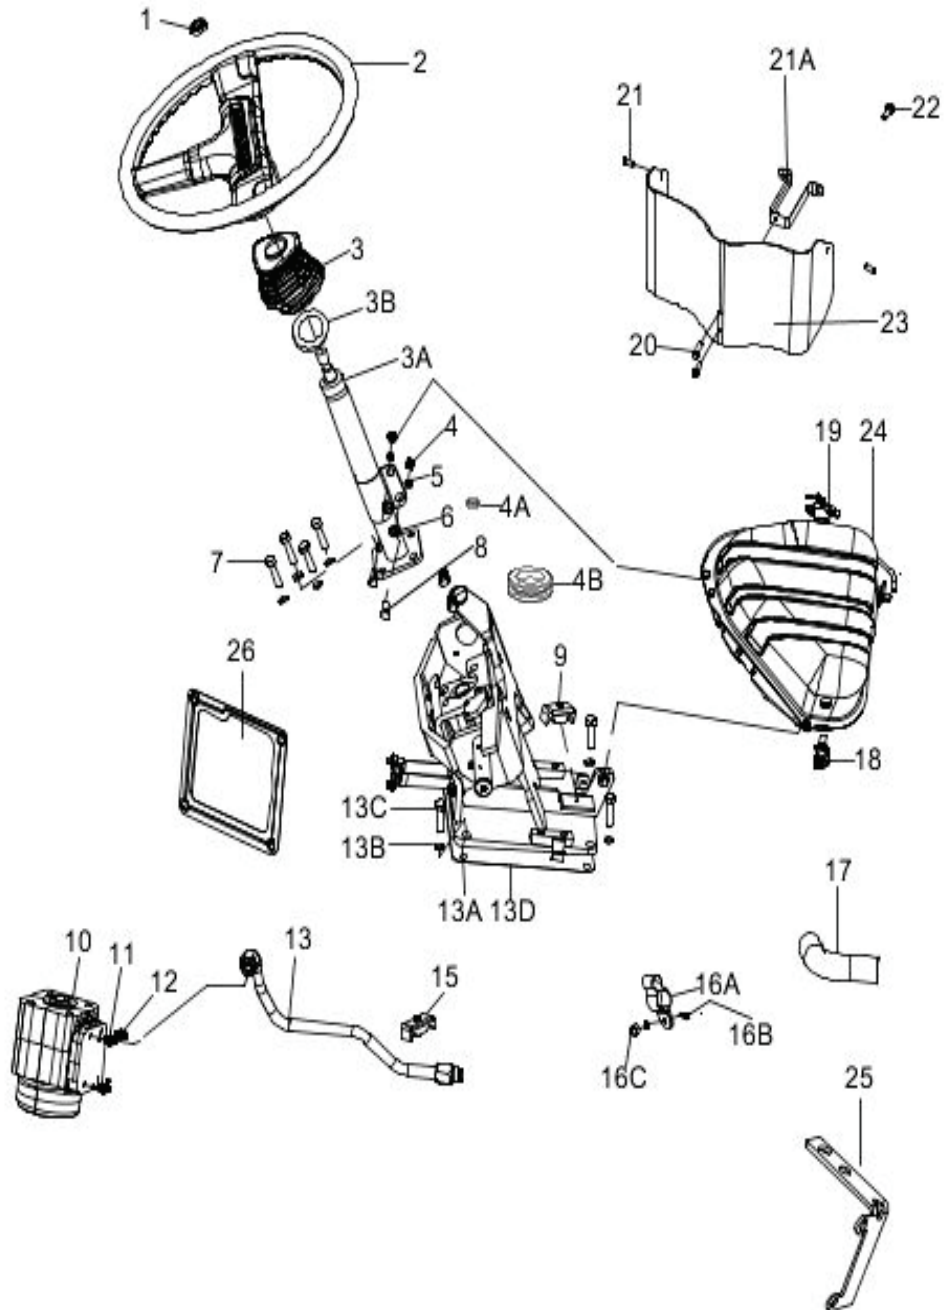


TABLE-21
STEERING MECHANISM

Fig. No.	Part No.	Description	Qty
1	D10018500.9	NUT NYLOCK STEERING WHEEL RETAINING	1
2	D10455770.9	WHEEL ASSEMBLY POWER STEERING	1
3	D10280240.9	BOOT STEERING COLUMN	1
3A	D10304720.9	COLUMN ASSEMBLY POWER STEERING	1
3A -1	D10304720AD.9	COLUMN ASSEMBLY POWER STEERING	1
4	D83500110.9	NUT M8X1.25-8 HEX	8
4A	D10018530.9	SEAL STEERING COLUMN DUST	1
4B	D10018640.9	GROMMET	1
5	D86500030.9	WASHER M8 SPRING LOCK	15
6	D10034590.9	WASHER M8 FLAT	6
7	D81500610.9	BOLT M10X1.50X40-8.8 HEX HEAD	6
8	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	3
9	D10296340.9	CLAMP ASSEMBLY TUBING POWER STEERING	3
10	D10336000.9	MOTOR ASSEMBLY POWER STEERING	1
10 -1	D10336000AD.9	MOTOR ASSEMBLY POWER STEERING	1
11	D93600070.9	SEAL O RING 0.087"X0.644"	4
12	D10021160.9	CONNECTER 1/2" FLX 3/4"-14 UNF STRAIGHT THREAD	4
13	D10501400.9	HOSE ASSEMBLY STEERING MOTOR TO STEERING OIL RESERVOIR	1
13A	D10255350.9	BRACKET ASSEMBLY POWER STEERING MOUNTING	1
13B	D86000060.9	WASHER 1/2" SPRING LOCK	4
13C	D10012330.9	BOLT 1/2"-13X1.38" HEX HEAD (STEERING GEAR MOUNTING)	4
15	D10472160.9	CLAMP ASSEMBLY TUBING HYDRAULIC PRESSURE	2
16A	D10504260.9	CLAMP POWER STEERING TUBE HOLDING	1
16B	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	1
16C	D83500070.9	NUT M6X1.00-6 HEX	1
17	D10479530.9	HOSE STEERING OIL RESERVOIR OUTLET	1
18	D10366610.9	TAP AND SCREEN ASSEMBLY FUEL CONTROL	1
19	D10019100.9	CAP AND KEY ASSEMBLY FUEL TANK	1
20	D10011090.9	BOLT M6X1.00X20-6.6 HEX FLANGED (LUBE OIL PUMP)	2
21	D82000040.9	SCREW 1/4"-28X0.625 PAN HEAD	2
21A	D10280990.9	BRACKET STEERING GEAR COVER REAR	1
21A -1	D10280990AE.9	BRACKET STEERING GEAR COVER REAR	1
22	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	7
23	D10254980.9	COVER ASSEMBLY STEERING GEAR	1
24	D10298000.9	TANK ASSEMBLY FUEL	1
24 -1	D10401680.9	TANK ASSEMBLY FUEL	1
25	D10230710.9	BRACKET TUBING POWER STEERING RH	1
26	D10333020.9	GASKET STEERING GEAR ASSEMBLY	1

TABLE-22

FRONT AXLE ASSEMBLY-4WD

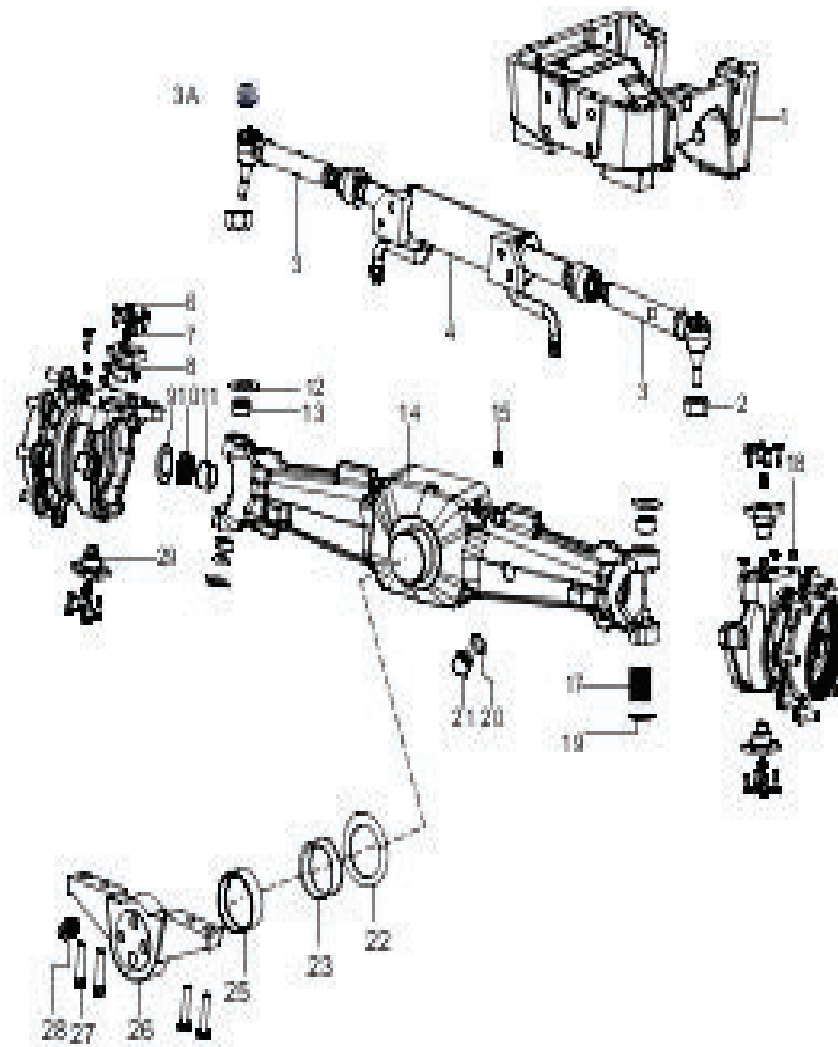


TABLE-22**FRONT AXLE ASSEMBLY-4WD**

Fig. No.	Part No.	Description	Qty
1	D10248290.9	SUPPORT FRONT AXLE (4 WHEEL DRIVE)	1
2	D83500540.9	NUT M14X1.50 HEX NYLOCK	2
3	D10344160.9	LINK ASSEMBLY POWER STEERING	2
3A	D10860470.9	DUST COVER (M/S QH TALBROS PART NO 3337X)	1
4	D10504930.9	CYLINDER ASSEMBLY POWER STEERING	1
4A	D10870470.9	KIT POWER STEERING CYLINDER SERVICE (DANTAL HYD PART NO DS12384)	1
6	D82500610.9	SCREW M12X1.75X30-10.9	16
7	D10084850.9	GREASE NIPPLE M6X1	4
8	D10152550.9	PIN SWIVEL HOUSING UPPER	2
9	D10312740.9	SHIELD MUD HALF FRONT AXLE SHAFT	2
10	D10312780.9	SEAL OIL HALF AXLE SHAFT 4WD FRONT AXLE (COMBINATION TYPE)	2
11	D10313060.9	BUSH SHAFT SUN GEAR (BI METALLIC)	2
12	D10152580.9	WASHER BELLEVILLE 71.0X36.0X2.0	2
13	D10152670.9	BUSH PIN SWIVEL HOUSING UPPER	2
13-1	D10152670AE.9	BUSH PIN SWIVEL HOUSING UPPER	2
14	D10312630.9	HOUSING ASSEMBLY FRONT AXLE 4 WHEEL DRIVE WET LAND	1
15	D10342000.9	BREATHER ASSEMBLY HYDRAULIC OIL	1
15-1	D10497260.9	BREATHER ASSEMBLY FRONT AXLE	1
17	D10188370.9	BEARING SPHERICAL	2
18	D93400410.9	PLUG M16X2 SQUARE HEAD (DELPHINIUM BLUE)	8
19	D10152590.9	WASHER BELLEVILLE 61.0X43.0X1.0	2
20	D10005120.9	WASHER M24 FLAT COPPER	1
21	D93100300.9	PLUG M24X1.5X15 DRAIN (MAGNETIC)	1
22	D10152660.9	WASHER THRUST FRONT PILLOW BLOCK FRONT AXLE	1
23	D10152710.9	BUSH RETAINER FRONT AXLE 4WD	1
25	D10152700.9	BUSH PILLOW BLOCK REAR	1
26	D10248310.9	BRACKET FRONT AXLE TRUNION	1
27	D81001650.9	BOLT 3/4"-10X3.0" HEX HEAD	4
28	D92500010.9	GREASE NIPPLE B M6	1
29	D10152560.9	PIN SWIVEL HOUSING LOWER	2

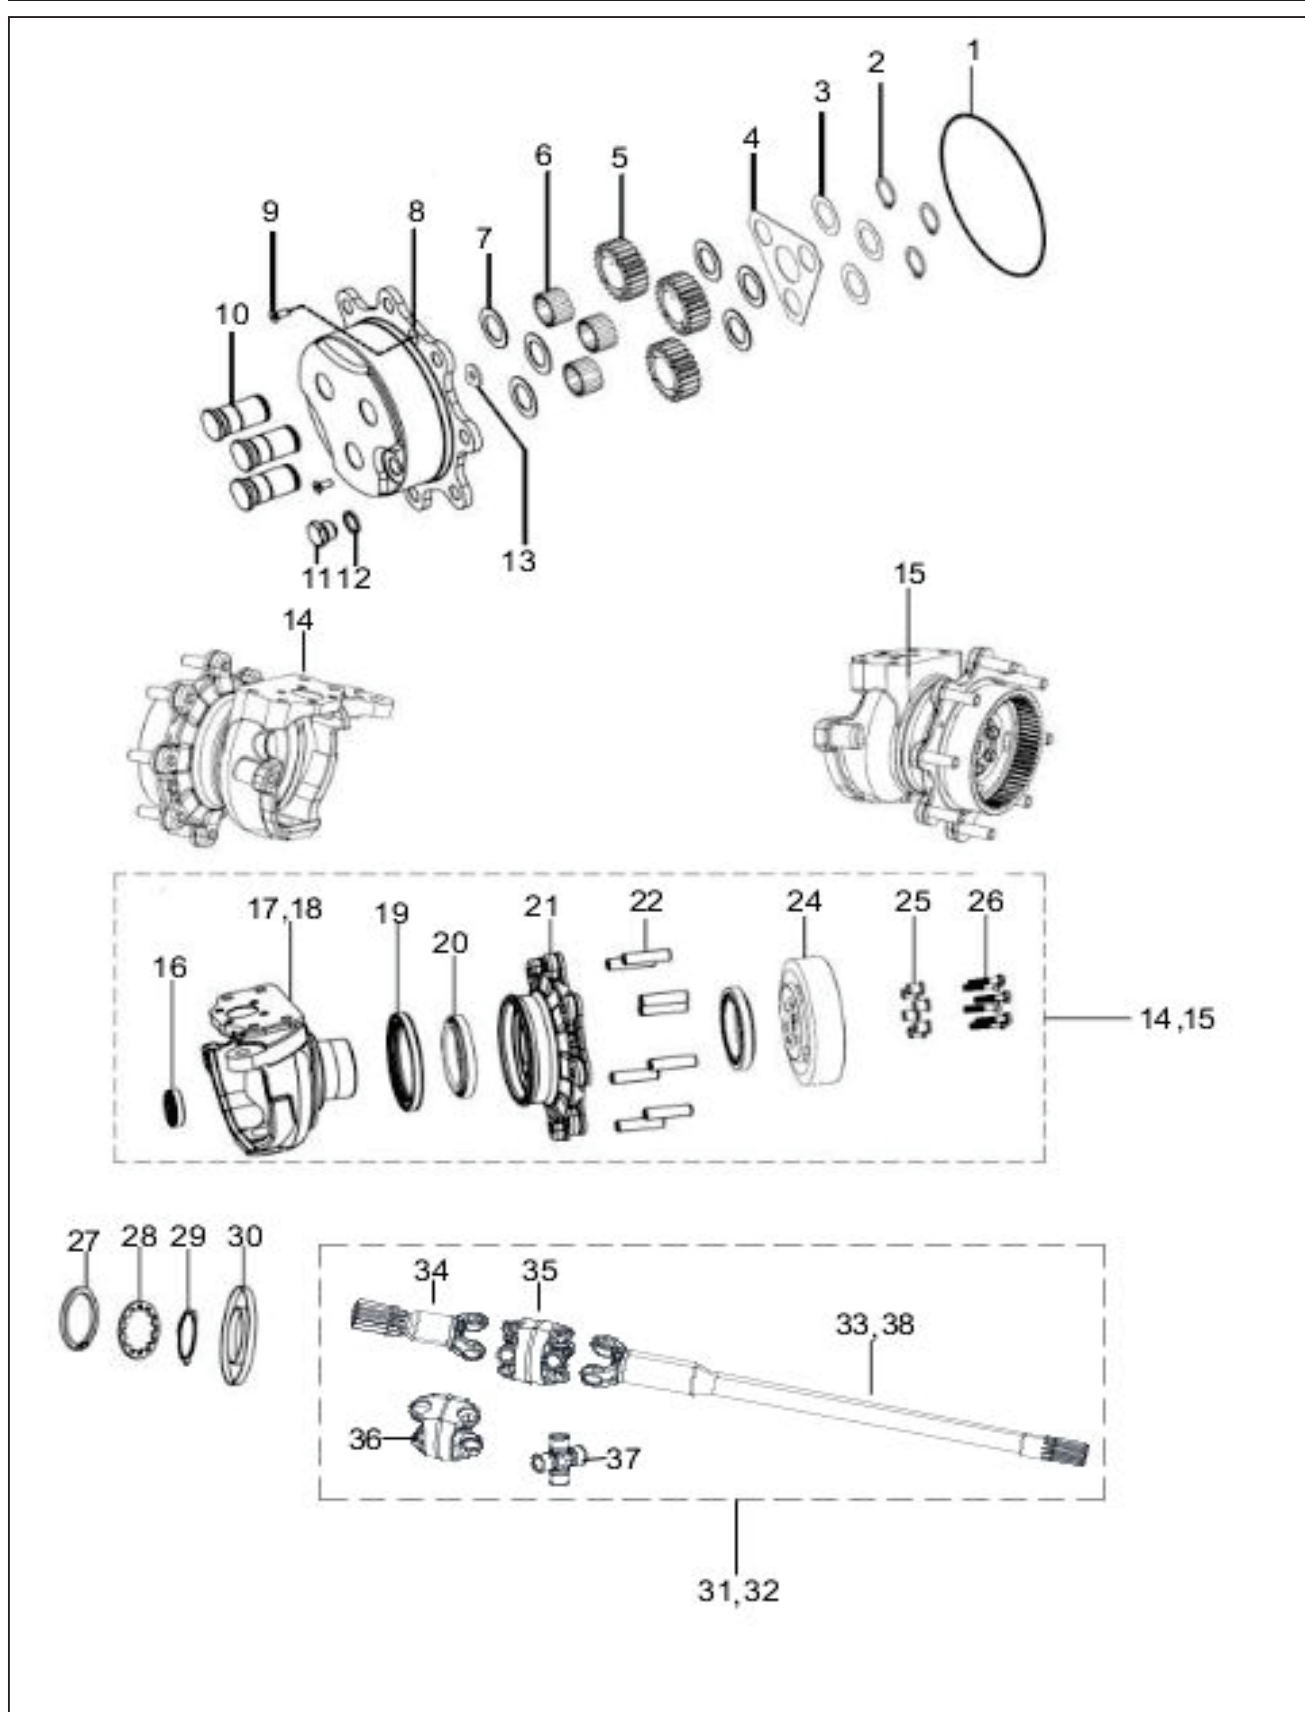
TABLE-22**SWIVEL & CARRIER ASSEMBLY FRONT AXLE**

TABLE-22**SWIVEL & CARRIER ASSEMBLY FRONT AXLE**

Fig. No.	Part No.	Description	Qty
1	D10150710.9	SEAL O RING HUB EPICYCLIC FRONT AXLE	2
2	D90000550.9	CIRCLIP A35.0X2.5 H	6
3	D10231640.9	SHIM SHAFT FRONT AXLE PLANETARY GEAR	AR
4	D10150780.9	THRUST WASHER PLANETARY GEAR EPICYCLIC FRONT AXLE	2
5	D10150810.9	GEAR PLANETARY EPICYCLIC FRONT AXLE (Z-23)	6
6	D10150800.9	BEARING NEEDLE EPICYCLIC FRONT AXLE	150
7	D10150790.9	WASHER 55.0X34.6X1.5 PLANETARY GEAR EPICYCLIC FRONT AXLE	6
8	D10150770.9	HOUSING FRONT AXLE PLANETARY GEAR EPICYCLIC	2
9	D10152630.9	SCREW M8X1.25X20 COUNTERSUNK SOCKET HEAD	2
10	D10151160.9	SHAFT FRONT AXLE PLANETARY GEAR	6
11	D10023940.9	PLUG DRAIN M24X1.5X15	1
12	D10005120.9	WASHER M24 FLAT COPPER	2
13	D10158460.9	WASHER THRUST PLANETARY HOUSING	2
14	-.9	HEAD CYLINDER	1
16	D10312780.9	SEAL OIL HALF AXLE SHAFT 4WD FRONT AXLE (COMBINATION TYPE)	2
17	D10343830.9	HOUSING ASSEMBLY SWIVEL FRONT AXLE LH (WET LAND)	1
18	D10343840.9	HOUSING ASSEMBLY SWIVEL FRONT AXLE RH (WET LAND)	1
19	D10312800.9	SEAL WHEEL HOUSING 4WD FRONT AXLE (CASSETTE TYPE)	2
20	D10150680.9	BEARING HUB EPICYCLIC FRONT AXLE	4
21	D10312700.9	HOUSING WHEEL EPICYCLIC WET LAND	2
22	D10150700.9	STUD M18X37.0	16
24	D10150740.9	GEAR RING EPICYCLIC FRONT AXLE	2
25	D10150750.9	BUSH CENTERING EPICYCLIC FRONT AXLE	12
26	D10150760.9	BOLT M10X45.0 EPICYCLIC FRONT AXLE	12
27	D90000600.9	CIRCLIP A45X2.5 H	2
28	D10152790.9	WASHER THRUST WITH INTERNAL SPLINE SHAFT SUN GEAR	2
29	D10152780.9	WASHER THRUST SHAFT SUN GEAR	2
30	D10312730.9	SHIELD MUD SUN GEAR SHAFT	2
31	D10343890.9	SHAFT ASSEMBLY 4WD FRONT AXLE LH (B300)	1
31-1	D10343890AF.9	SHAFT ASSEMBLY 4WD FRONT AXLE LH (B300)	1
32	D10343900.9	SHAFT ASSEMBLY 4WD FRONT AXLE RH (B300)	1
32-1	D10343900AF.9	SHAFT ASSEMBLY 4WD FRONT AXLE RH (B300)	1
33	D10343920.9	SHAFT HALF AXLE SHAFT 4WD FRONT LH	1
34	D10343910.9	SHAFT SUN GEAR 4WD FRONT	2
35	D10343940.9	UNIVERSAL JOINT ASSEMBLY (B300)	2
36	D10458910.9	DOUBLE YOKE ASSEMBLY	2
37	D10458900.9	UNIT PACK	4
38	D10343930.9	SHAFT HALF AXLE SHAFT 4WD FRONT RH	1

TABLE-23
RETAINER & BEVEL PINION SHAFT ASSY

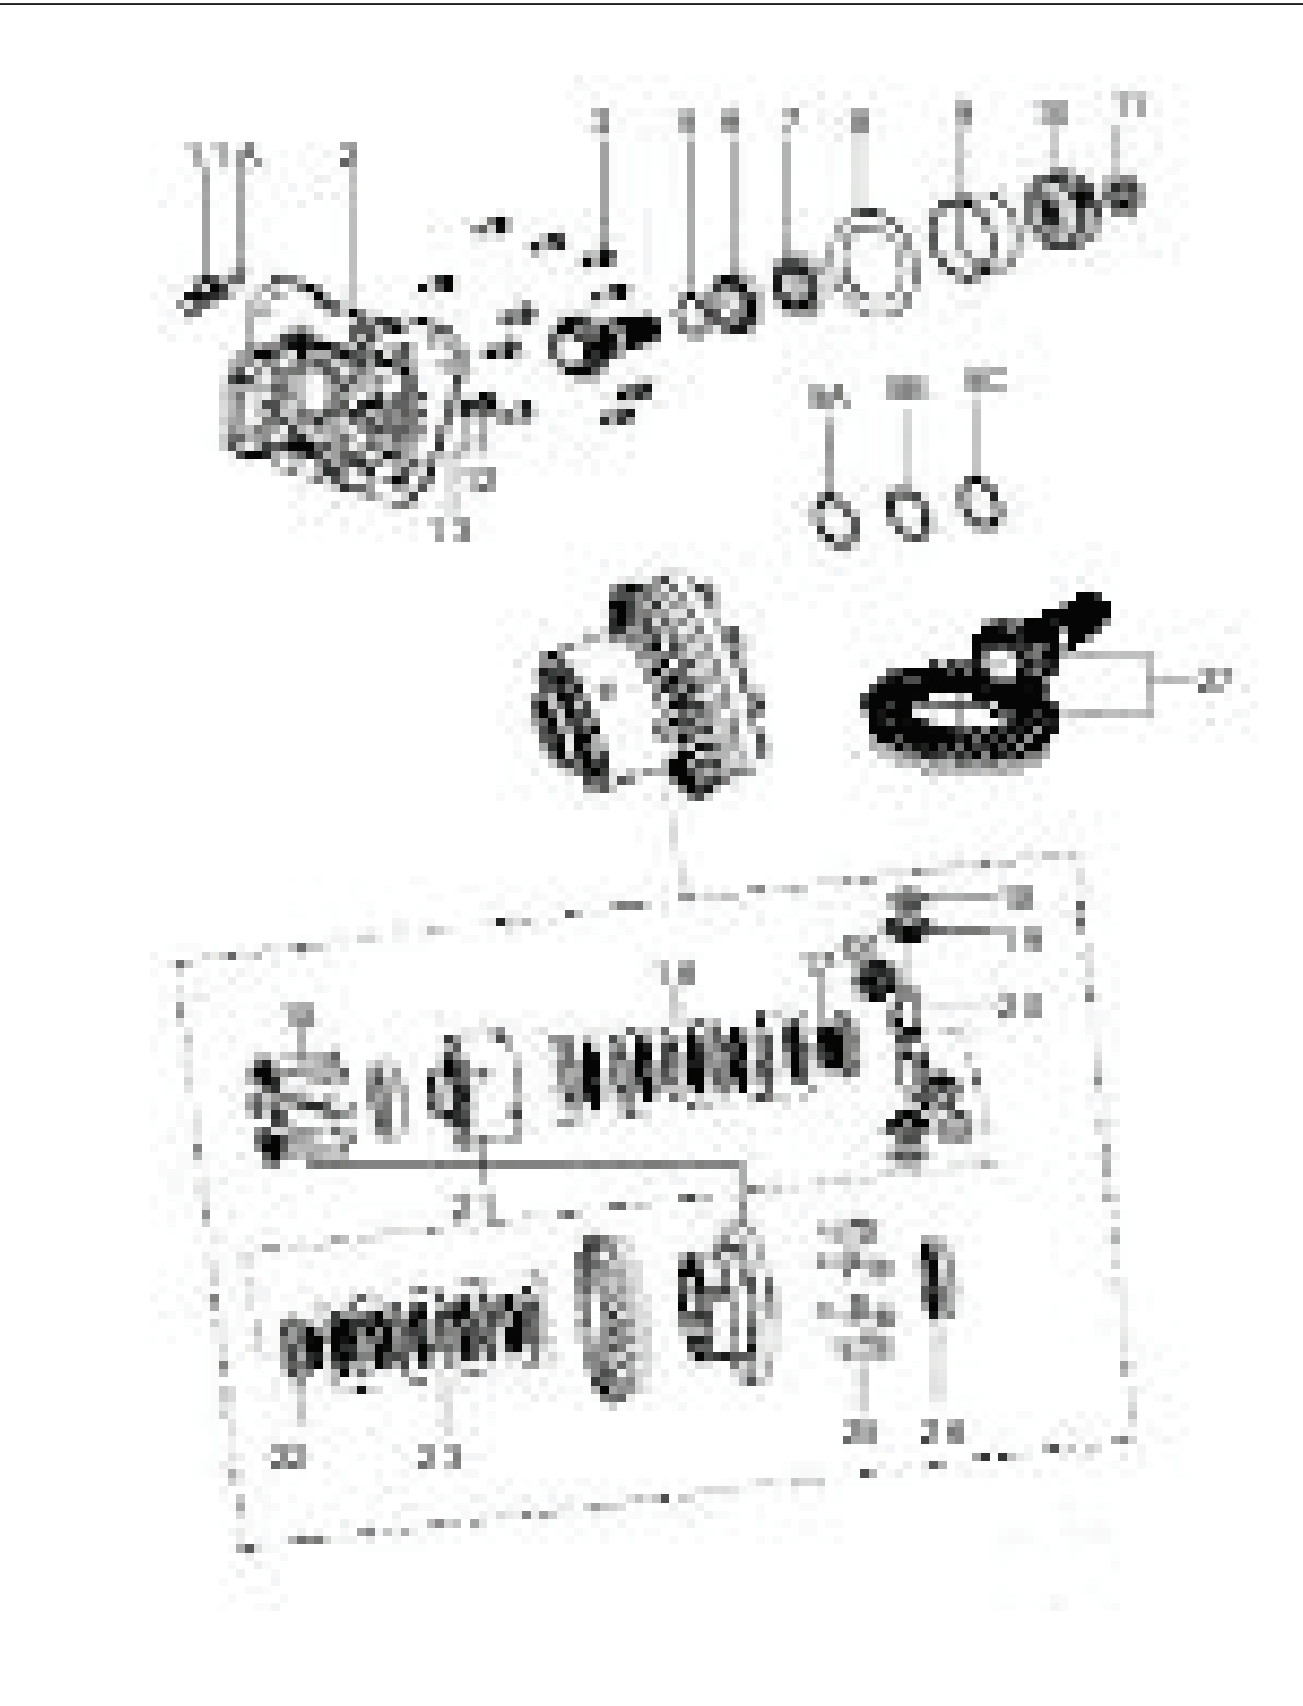


TABLE-23**RETAINER & BEVEL PINION SHAFT ASSY**

Fig. No.	Part No.	Description	Qty
1	D81500740.9	BOLT M14X2.00X35-10.9 HEX HEAD LOCK	4
1A	D86500070.9	WASHER M14 SPRING LOCK	4
2	D10292840.9	RETAINER SHAFT BEVEL PINION (4WD)	1
3	D81501550.9	BOLT M12X1.75X40-10.9 HEX HEAD	10
5	D10191800.9	SHIM FRONT AXLE SHAFT BEVEL PINION (0.075MM)	AR
5A	D10192000.9	SHIM FRONT AXLE SHAFT BEVEL PINION (0.125MM)	AR
5B	D10192490.9	SHIM FRONT AXLE SHAFT BEVEL PINION (0.2285MM)	AR
5C	D10193820.9	SHIM FRONT AXLE SHAFT BEVEL PINION (0.4065MM)	AR
6	D10185770.9	BEARING BEVEL PINION SHAFT FRONT AXLE	1
8	D10152660.9	WASHER THRUST FRONT PILLOW BLOCK FRONT AXLE	1
9	D10322830.9	BUSH UP BOX FRONT AXLE 4WD	1
10	D10316500.9	GEAR UPPER UP BOX Z-25	1
10-1	D10316500AC.9	GEAR UPPER UP BOX Z-25	1
11	D10185780.9	NUT RING M33X1.5 BEVEL PINION SHAFT	1
12	D10006500.9	PLUG M18X1.5X12-6.8 HEX HEAD	1
13	D10005880.9	WASHER M18 FLAT COPPER	1
15	D10007180.9	BOLT M12X1.75X80-10.9 HEX HEAD	8
16	D10161600.9	PLATE ASSEMBLY LIMITED SLIP FRONT AXLE	1
17	D10150600.9	GEAR SIDE FRONT AXLE DIFFERENTIAL	1
18	D10315090.9	WASHER THRUST FRONT AXLE DIFFERENTIAL STAR GEAR	2
19	D10315080.9	PINION FRONT AXLE DIFFERENTIAL	2
20	D10299110.9	SPIDER SHAFT FRONT AXLE DIFFERENTIAL GEAR	1
21	D10299120.9	CASE ASSEMBLY FRONT AXLE DIFFERENTIAL GEAR	1
22	D10150600.9	GEAR SIDE FRONT AXLE DIFFERENTIAL	1
23	D10161600.9	PLATE ASSEMBLY LIMITED SLIP FRONT AXLE	1
25	D10052710.9	BOLT M12X1.25X35-10.9 HEX HEAD COLLARED	8
25-1	D81002450AA.9	BOLT M12X1.25X35-12.9 HEX HEAD COLLARED	8
26	D10152610.9	BEARING TAPPER ROLLER (30209)	1
27	D10185760.9	GEAR SET BEVEL PINION AND CROWN WHEEL FRONT AXLE	1

TABLE-24
RETAINER & BEVEL PINION SHAFT ASSY

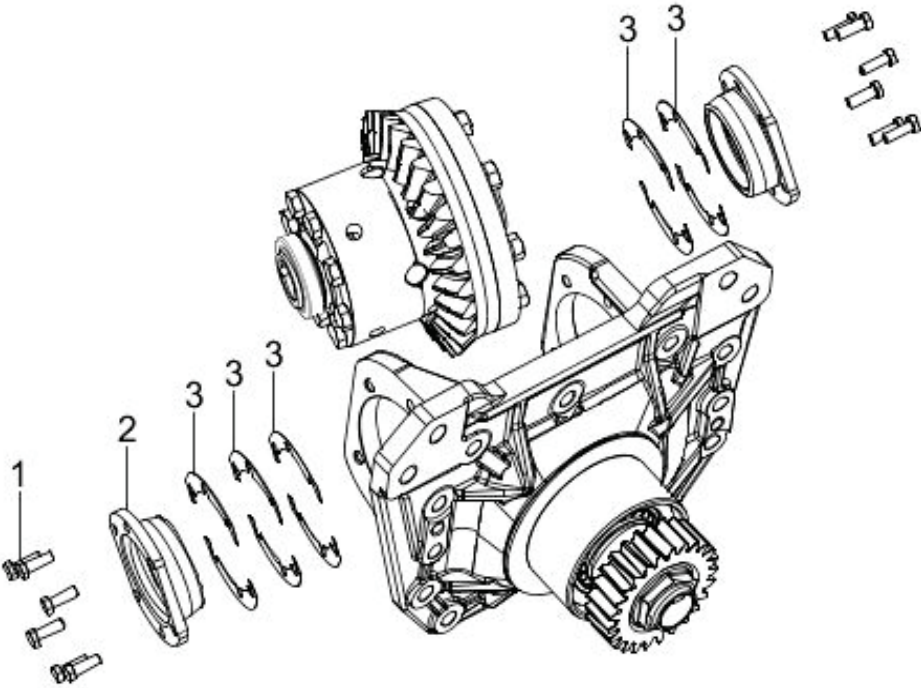


TABLE-24**RETAINER & BEVEL PINION SHAFT ASSY**

Fig. No.	Part No.	Description	Qty
1	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	12
2	D10152540.9	RETAINER DIFFERENTIAL CASING 4WD	1
3	D10161320.9	SHIM BEARING DIFFERENTIAL FRONT AXLE (0.075MM)	1
3A	D10161330.9	SHIM BEARING DIFFERENTIAL FRONT AXLE (0.125MM)	1
3B	D10161340.9	SHIM BEARING DIFFERENTIAL FRONT AXLE (0.2285MM)	1
3C	D10161350.9	SHIM BEARING DIFFERENTIAL FRONT AXLE (0.4065MM)	1
3D	D10161360.9	SHIM BEARING DIFFERENTIAL FRONT AXLE (0.5335MM)	1

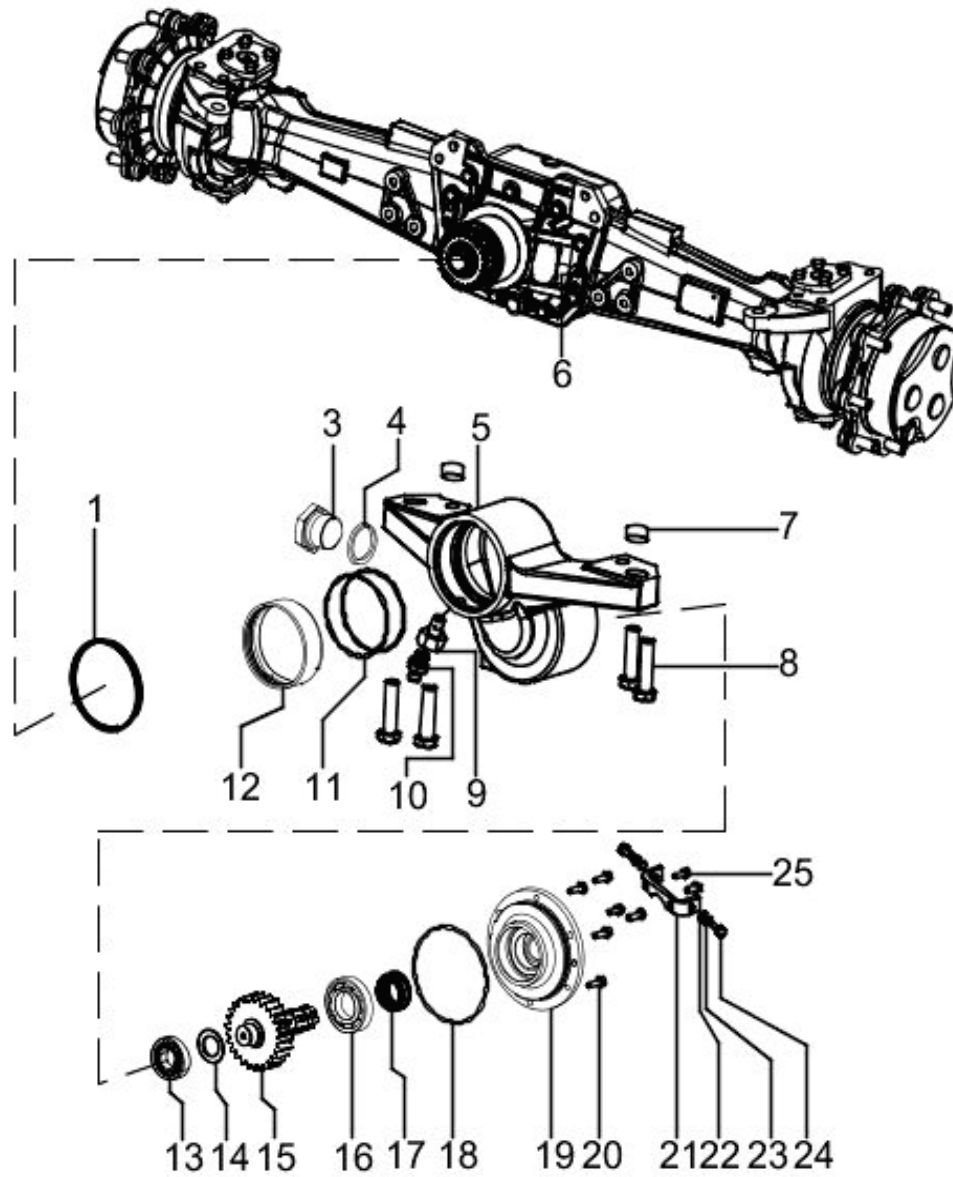
TABLE-25**FRONT AXLE ASSY WITH UP BOX ASSY.**

TABLE-25**FRONT AXLE ASSY WITH UP BOX ASSY.**

Fig. No.	Part No.	Description	Qty
1	D10322860.9	SEAL DUST UP BOX	1
3	D93100300.9	PLUG M24X1.5X15 DRAIN (MAGNETIC)	1
4	D10005120.9	WASHER M24 FLAT COPPER	1
5	D10322870.9	HOUSING UP BOX	1
6	D87500080.9	PIN 13X34 PLAIN DOWEL	2
7	D10155900.9	DOWEL BUSH UP BOX	2
8	D81001650.9	BOLT 3/4"-10X3.0" HEX HEAD	8
9	D10155920.9	BOLT BUSH LOCKING UP BOX	1
10	D10084850.9	GREASE NIPPLE M6X1	1
11	D93600450.9	SEAL O RING 3.55X115	1
12	D10322820.9	BUSH RETAINER FRONT AXLE 4WD	1
13	D10155850.9	BEARING ROLLER NJ 206	1
14	D10155910.9	WASHER 30.2X48.0X3.0	1
15	D10316510.9	SHAFT LOWER UP BOX Z-26	1
16	D10006610.9	BEARING BALL 6208	1
17	D10312760.9	SEAL OIL DROP BOX OUTPUT SHAFT (COMBINATION TYPE)	1
18	D93600470.9	SEAL O RING 136.0X3.55	1
19	D10321150.9	COVER UP BOX (WET LAND)	1
20	D81501470.9	BOLT M8X1.25X25-10.9 HEX HEAD	6
21	D10155820.9	BRACKET PROPELLER GUARD SUPPORT	1
22	D85500130.9	WASHER M8 FLAT	2
23	D86000040.9	WASHER 5/16" SPRING LOCK	2
24	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2

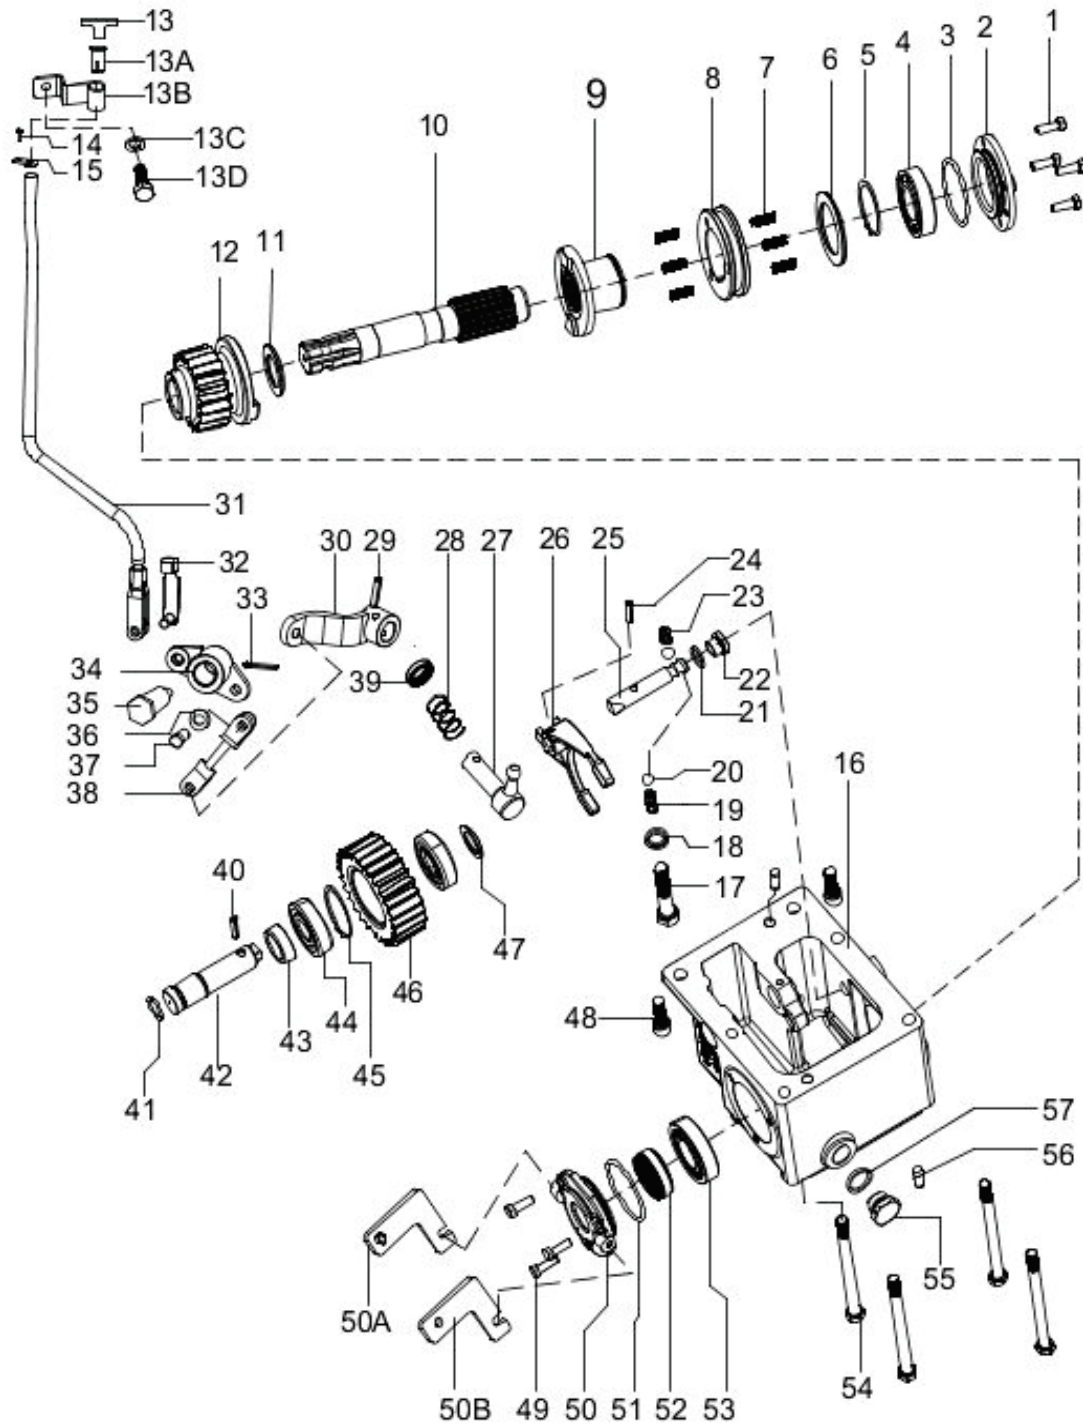
TABLE-27**DROP BOX ASSEMBLY**

TABLE-27**DROP BOX ASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D81501470.9	BOLT M8X1.25X25-10.9 HEX HEAD	4
2	D10154510.9	COVER REAR DROP BOX (FT60 4WD)	1
2A	D10344930.9	COVER REAR DROP BOX	1
3	D10154560.9	SEAL O RING 2.65X65.0	3
4	D10022290.9	BEARING BALL 6207	1
5	D90000530.9	CIRCLIP A55.0X2.0 N	1
6	D10152360.9	WASHER THRUST 80.0X55.0X3.0	1
7	D10152500.9	SPRING SLEEVE 4WD	6
8	D10152370.9	SLEEVE ENGAGEMENT DROP BOX	1
9	D10152380.9	HUB SPLINE DROP BOX	1
10	D10154480.9	SHAFT DROP BOX	1
11	D10154470.9	WASHER 55.0X35.0X3.0	1
12	D10316530.9	GEAR DROP BOX Z-20	1
13	D10042460.9	KNOB PTO	1
13A	D10366560.9	BUSH GUIDE LEVER 4 WHEEL DRIVE (NYLON)	1
13B	D10366400.9	BRACKET GUIDE 4WD LEVER	1
13C	D86500020.9	WASHER M12 SPRING LOCK	1
13D	D81000450.9	BOLT 7/16"-14X0.75 HEX HEAD	1
14	D81500490.9	BOLT M6X1.00X20-9.8 HEX HEAD	1
15	D10319140.9	PAD BUSH LEVER 4 WHEEL DRIVE (NYLON)	2
16	D10291630.9	HOUSING DROP BOX	1
17	D81500550.9	BOLT M12X1.75X60-6.6 HEX HEAD	1
18	D10161480.9	WASHER 12.0X22.0 SCREW RAIL	1
19	D10160180.9	SPRING COMPRESSION LOWER ENGAGE 4WD RAIL	1
20	D10000490.9	BALL 3/8" DIAMETER	2
21	D10005880.9	WASHER M18 FLAT COPPER	1
22	D10006500.9	PLUG M18X1.5X12-6.8 HEX HEAD	1
23	D10160190.9	SPRING COMPRESSION UPPER ENGAGE 4WD RAIL	1
24	D87000140.9	PIN 1/4"X1.00" SPRING DOWEL COMBINATION TYPE	1
25	D10154490.9	RAIL 4WD ENGAGE	1
26	D10152490.9	FORK 4WD ENGAGE	1
27	D10152440.9	LEVER 4WD ENGAGE	1
28	D10152480.9	SPRING LEVER 4WD ENGAGE	1
29	D87000160.9	PIN 1/4"X1.50" SPRING DOWEL COMBINATION TYPE	1
30	D10346080.9	BRACKET ASSEMBLY HUB AND LEVER	1
31	D10289510.9	LEVER ASSEMBLY ENGAGEMENT 4 WHEEL DRIVE	1
32	D10292730.9	PIN 3/8" CLEVIS	1
33	D10013460.9	PIN 1/8"X0.75" COTTER	1
34	D10346310.9	HUB AND BUSH ASSEMBLY LEVER 4WD	1
35	D10346320.9	PIN LEVER FOUR WHEEL DRIVE	1

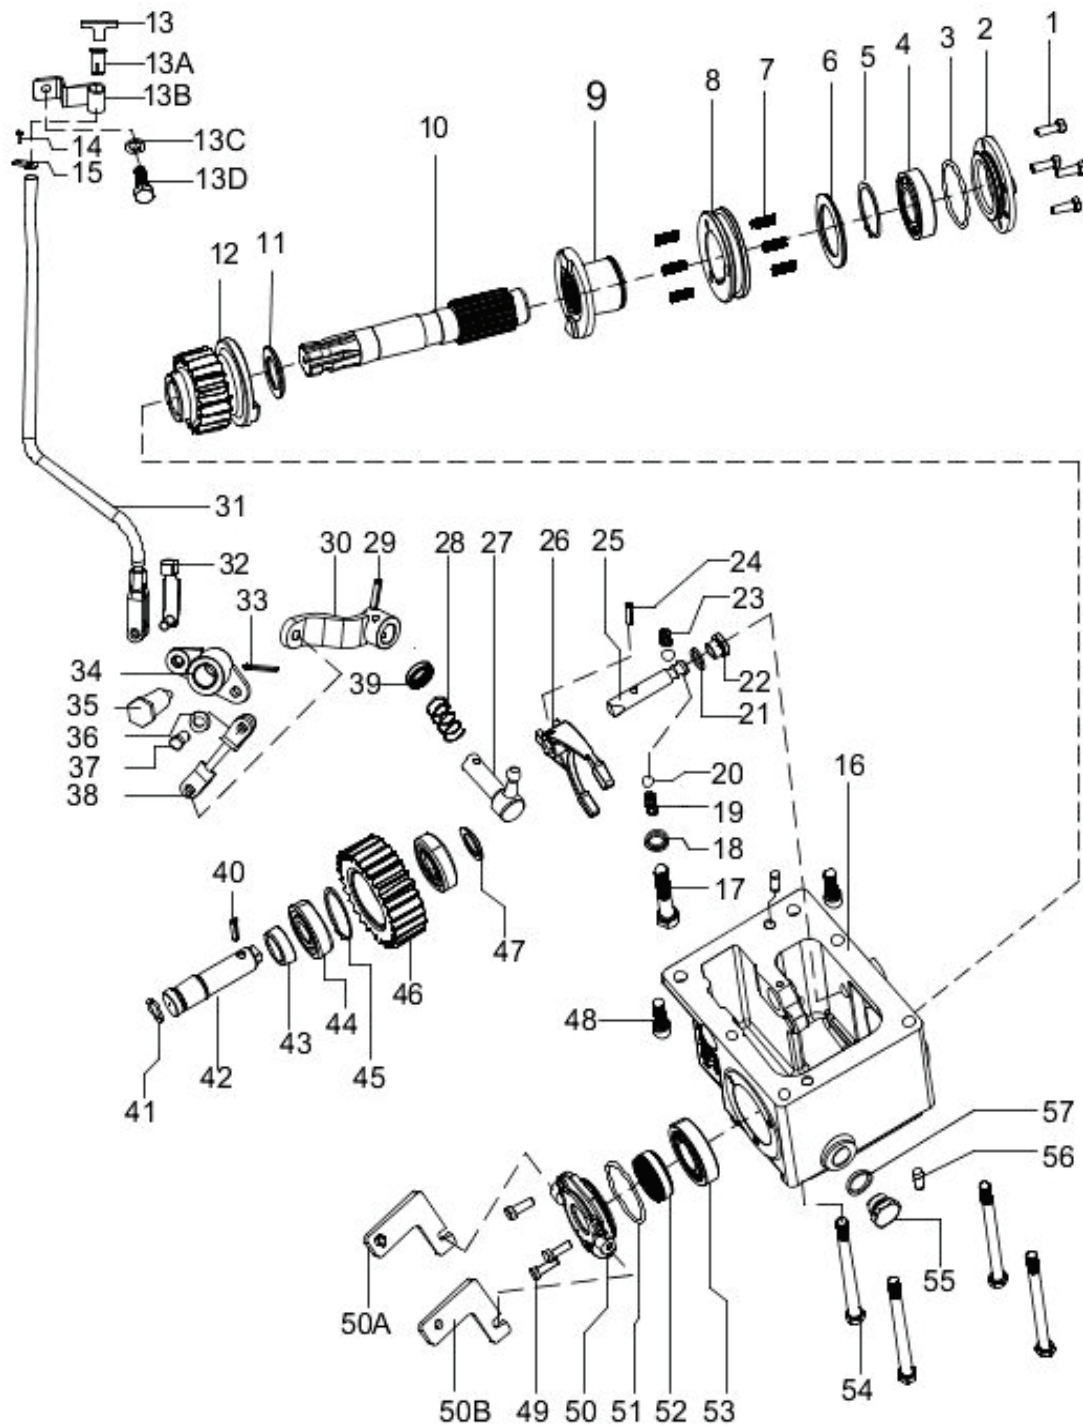
TABLE-27**DROP BOX ASSEMBLY**

TABLE-27**DROP BOX ASSEMBLY**

Fig. No.	Part No.	Description	Qty
36	D85500140.9	WASHER M10 FLAT	1
37	D93400030.9	PIN 3/8"X1.14" CLEVIS	1
38	D10346290.9	ROD AND CLEVIS ASSEMBLY 4WD	1
39	D10152510.9	SEAL OIL 20.0X30.0X7.0	1
40	D87500170.9	PIN 6.0X18.0 SPRING DOWEL	1
41	D10154550.9	SEAL O RING 2.65X22.4	1
42	D10336390.9	SHAFT IDLER GEAR DROP BOX	1
43	D10336400.9	SPACER SHAFT IDLER DROP BOX	1
44	D10336870.9	BEARING ROLLER NJ-305	2
45	D90500320.9	CIRCLIP B62X3.0 H	1
46	D10336380.9	GEAR IDLER DROP BOX Z-28	1
47	D10336410.9	WASHER SHAFT IDLER DROP BOX	1
48	D81501410.9	BOLT M12X1.75X35-10.9 ALLEN	2
48A	D10034590.9	WASHER M8 FLAT	2
49	D81501470.9	BOLT M8X1.25X25-10.9 HEX HEAD	5
50	D10312710.9	COVER FRONT DROP BOX WET LAND	1
50A	D10369410.9	BRACKET ASSEMBLY GUARD PROPELLER SHAFT REAR MOUNTING RH	1
50B	D10369360.9	BRACKET ASSEMBLY GUARD PROPELLER SHAFT REAR MOUNTING LH	1
51	D10154560.9	SEAL O RING 2.65X65.0	1
52	D10312760.9	SEAL OIL DROP BOX OUTPUT SHAFT (COMBINATION TYPE)	1
53	D10154520.9	BEARING ROLLER (35.0X72.0X17.0)	1
54	D81501800.9	BOLT M12X1.75X150-10.9 HEX HEAD	4
55	D93100300.9	PLUG M24X1.5X15 DRAIN (MAGNETIC)	1
56	D10159950.9	DOWEL POSITIONING 10X25	2
57	D10005120.9	WASHER M24 FLAT COPPER	1
58	D81500700.9	BOLT M12X1.75X60	1

TABLE-21
PROPELLER SHAFT ASSY.

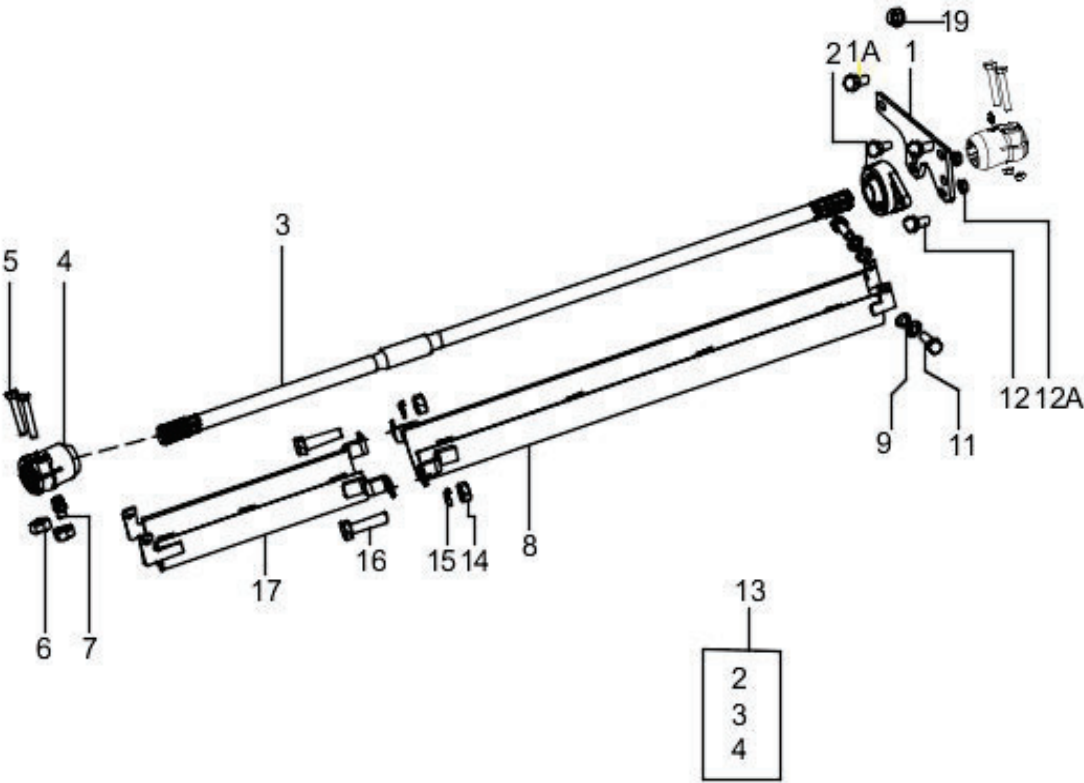


TABLE-21**PROPELLER SHAFT ASSY.**

Fig. No.	Part No.	Description	Qty
1	D10403400.9	PLATE BEARING SUPPORT PROPELLER SHAFT	1
1A	D81001350.9	BOLT 3/8"-16X2.00" HEX HEAD	3
2	D10339400.9	BEARING FLANGED UNIT WITH CAST HOUSING	1
3	D10249520.9	SHAFT PROPELLER (4WD)	1
4	D10349230.9	COUPLING PROPELLER SHAFT	2
5	D81500090.9	BOLT M10X1.50X60-8.8 HEX HEAD	4
6	D83500240.9	NUT M10X1.50-6 HEX	4
7	D10084850.9	GREASE NIPPLE M6X1	2
7-1	D92500010.9	GREASE NIPPLE B M6	2
8	D10349480.9	GUARD ASSEMBLY PROPELLER SHAFT REAR	1
9	D10034590.9	WASHER M8 FLAT	2
11	D81501470.9	BOLT M8X1.25X25-10.9 HEX HEAD	2
12	D81500540.9	BOLT M12X1.75X40-9.8 HEX HEAD	4
12A	D83500180.9	NUT M12X1.75 NYLOCK HEX	2
13	D10249510.9	SHAFT ASSEMBLY PROPELLER (4WD)	1
14	D83500090.9	NUT M10X1.50-8 HEX	1
15	D86500090.9	WASHER M10 SPRING LOCK	1
16	D81500010.9	BOLT M10X1.50X40-8.8 HEX HEAD	1
17	D10347980.9	GUARD ASSEMBLY PROPELLER SHAFT FRONT	1
18	D86000010.9	WASHER 3/8" SPRING LOCK	3
19	D10403550.9	SPACER BEARING SUPPORT PLATE	3

TABLE-27
CLUTCH CONTROLS

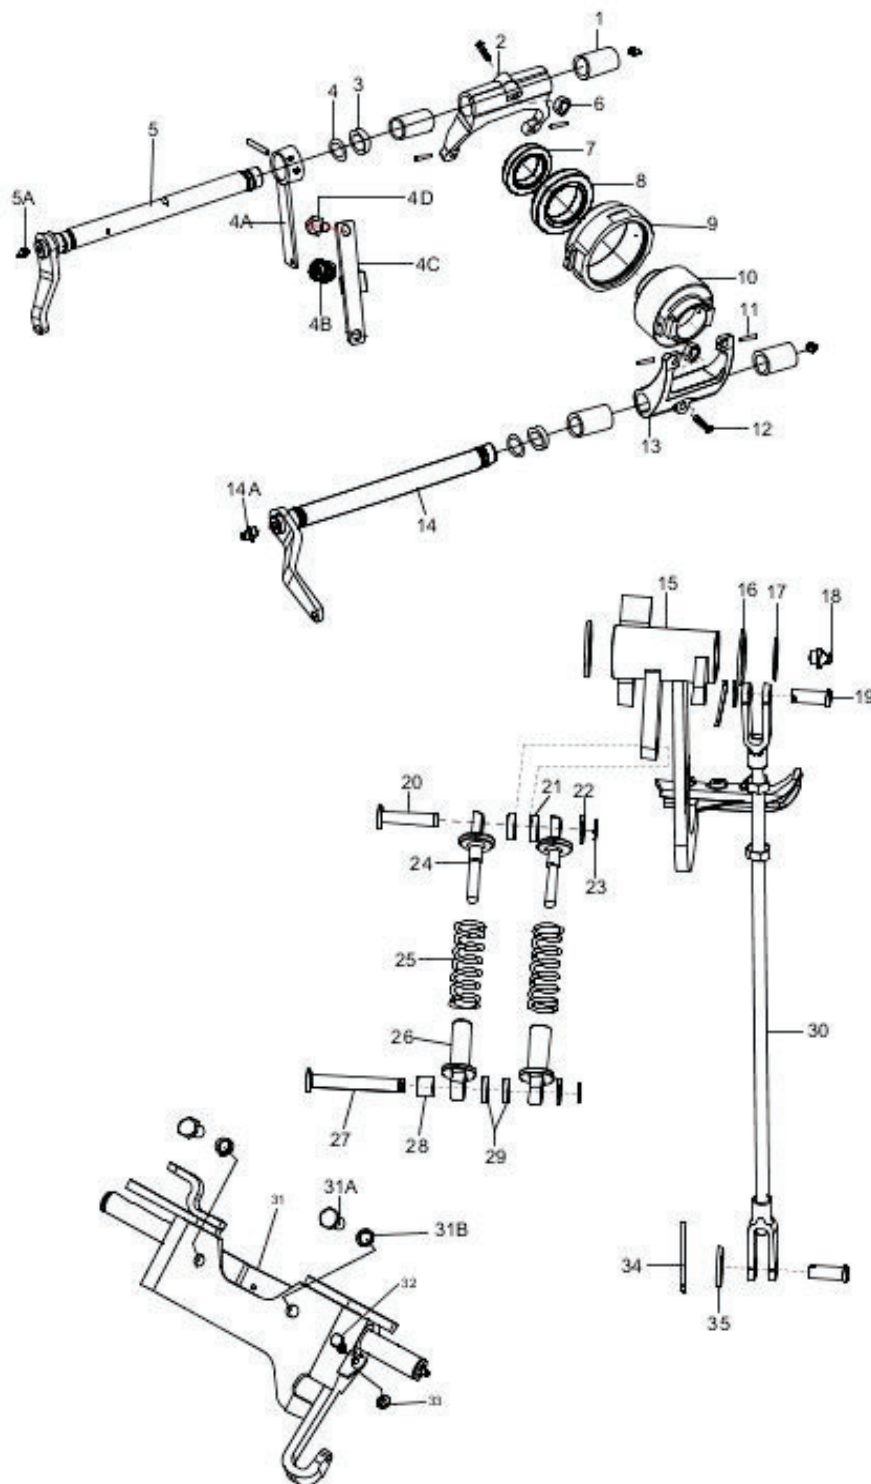


TABLE-27
CLUTCH CONTROLS

Fig. No.	Part No.	Description	Qty
1	D10188380.9	BUSH CLUTCH RELEASE SHAFT WITH OUT GRAPHITE INDENTATION	4
2	D10309330.9	FORK ASSEMBLY CLUTCH RELEASE PTO	1
3	D10001490.9	WASHER CLUTCH RELEASE SHAFT	2
4	D93600490.9	SEAL O RING 2.65X23.6	4
4A	D10309120.9	LEVER ASSEMBLY PTO SHAFT RETURN	1
4B	D10309310.9	SPRING PTO SHAFT CONTROL	1
4C	D10309110.9	PLATE SPRING MOUNTING PTO SHAFT	1
4D	D81000020.9	BOLT 3/8"-16X1.125" HEX HEAD	2
5	D10301250.9	SHAFT AND LEVER ASSEMBLY PTO CLUTCH RELEASE	1
5A	D92500090.9	GREASE NIPPLE B M10X1 WITH LOCKNUT	1
6	D10001520.9	NUT 3/8"-16 HEX PREVAILING TORQUE	2
7	D10093320.9	BEARING ASSEMBLY PTO CLUTCH RELEASE	1
8	D10228590.9	BEARING ASSEMBLY CLUTCH RELEASE	1
9	D10309070.9	HUB CLUTCH RELEASE BEARING PTO	1
10	D10309060.9	HUB CLUTCH RELEASE BEARING MAIN	1
11	D87500350.9	PIN 5X28 SPRING DOWEL	4
12	D10001510.9	BOLT CLUTCH RELEASE FORK TO SHAFT	2
13	D10309320.9	FORK ASSEMBLY CLUTCH RELEASE MAIN	1
14	D10255980.9	SHAFT ASSEMBLY CLUTCH RELEASE	1
14A	D92500020.9	GREASE NIPPLE A M10X1	3
15	D10255970.9	PEDAL ASSEMBLY TRANSMISSION CLUTCH	1
16	D10012260.9	WASHER BRAKE PEDAL CROSS SHAFT THRUST	2
17	D90000570.9	CIRCLIP A28X1.5 N	1
18	D92500020.9	GREASE NIPPLE A M10X1	3
19	D93400030.9	PIN 3/8"X1.14" CLEVIS	2
20	D10256140.9	PIN GUIDE CLUTCH SPRING UPPER	1
21	D10256790.9	BUSH CLUTCH PEDAL UPPER	2
22	D85500140.9	WASHER M10 FLAT	3
23	D10006220.9	CIRCLIP C8X1.00 N	2
24	D10256110.9	FORK GUIDE CLUTCH SPRING UPPER	2
25	D10256100.9	SPRING CLUTCH PEDAL	2
26	D10256120.9	FORK GUIDE CLUTCH SPRING LOWER	2
27	D10256130.9	PIN GUIDE CLUTCH SPRING LOWER	1
28	D10256720.9	BUSH CLUTCH PEDAL	1
29	D10256780.9	BUSH CLUTCH PEDAL LOWER	2
30	D10297260.9	ROD AND CLEVIS ASSEMBLY CLUTCH CONTROL	1
31	D10255360.9	BRACKET ASSEMBLY BRAKE AND CLUTCH PEDAL MOUNTING	1
31A	D81500250.9	BOLT M16X2.00X35-8.8P HEX HEAD	2
31B	D86500060.9	WASHER M16 SPRING LOCK	2
32	D81500880.9	BOLT M10X1.5X35-8.8 HEX HEAD	2

TABLE-27
CLUTCH CONTROLS

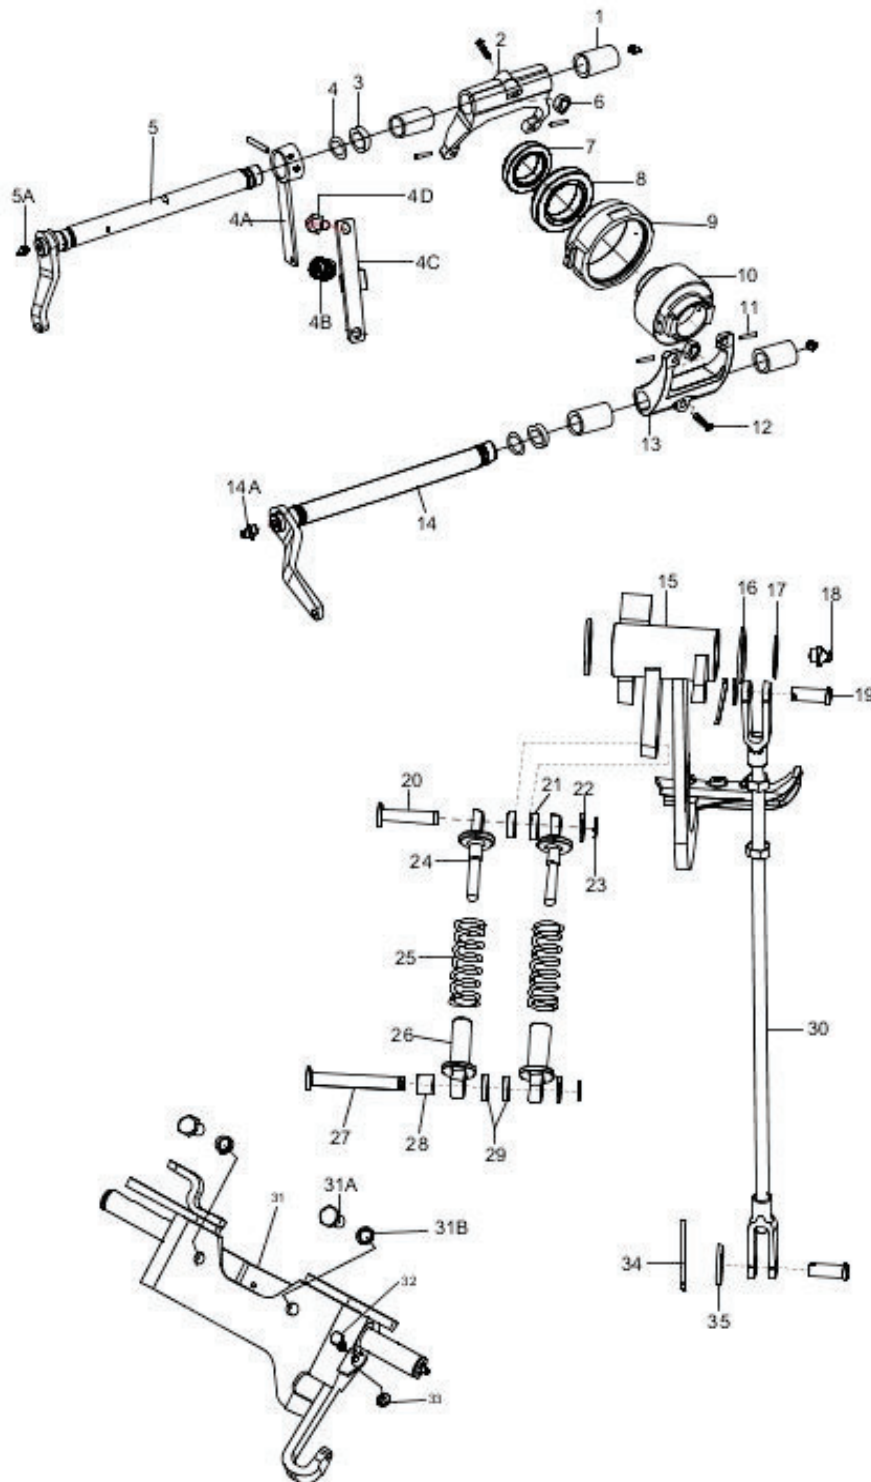


TABLE-27**CLUTCH CONTROLS**

Fig. No.	Part No.	Description	Qty
32-1	D81500210.9	BOLT M10X1.50X35-6.6P HEX HEAD	2
33	D83500210.9	NUT M10X1.50-5 HEX	1
34	D10013460.9	PIN 1/8"X0.75" COTTER	2
35	D85500140.9	WASHER M10 FLAT	2

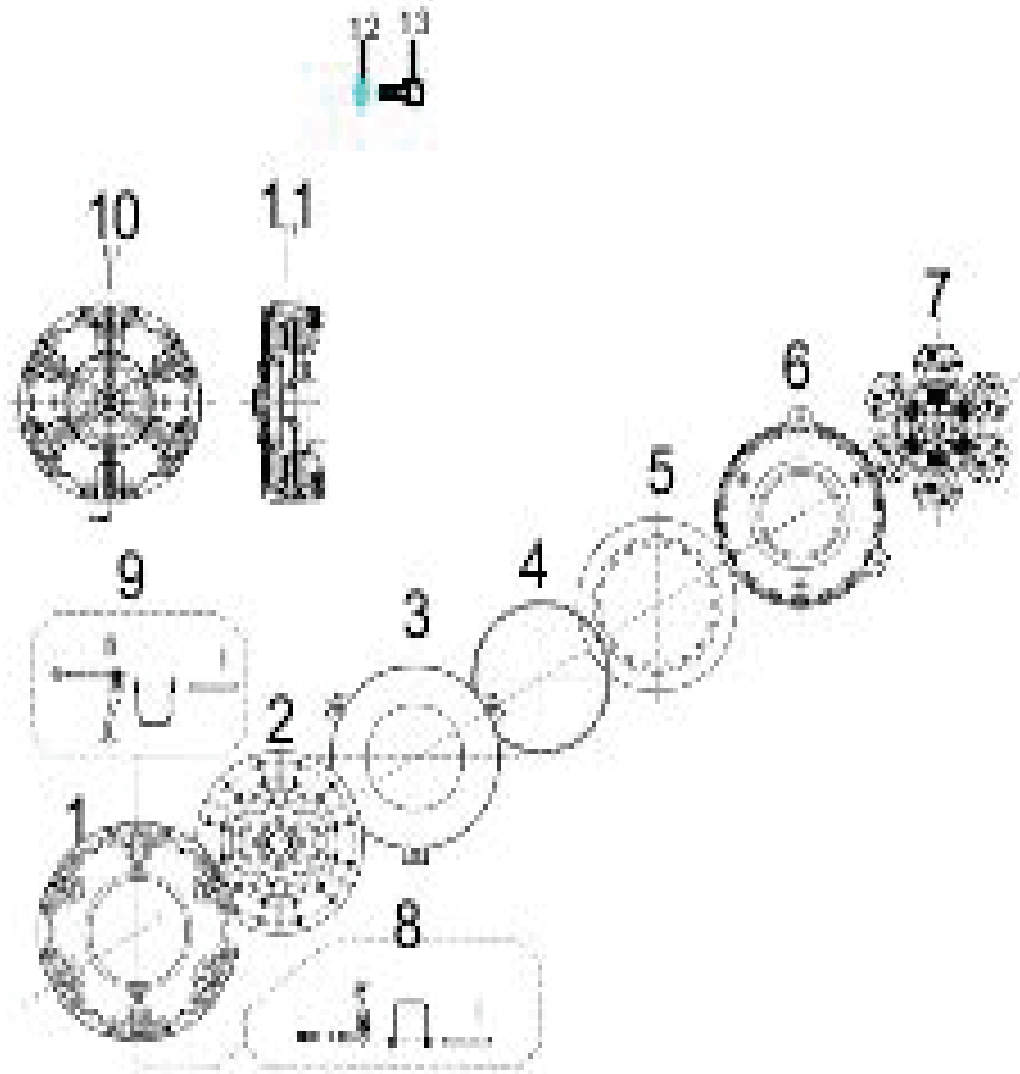
TABLE-28**CLUTCH ASSY LPTO 11"X11" (CERAMETALLIC DISC)**

TABLE-28**CLUTCH ASSY LPTO 11"X11" (CERAMETALLIC DISC)**

Fig. No.	Part No.	Description	Qty
1	D10327940.9	COVER CLUTCH HOUSING (LUK PART NO L-2101-0P11)	1
2	D10327950.9	DISC ASSEMBLY CLUTCH PTO (LUK PART NO L-03028-0PGT)	1
3	D10327920.9	PLATE PRESSURE PTO CLUTCH (LUK PART NO L-02103-0P10)	1
4	D10327960.9	RING FULCRUM (LUK PART NO L-02165-0115)	1
5	D10327910.9	SPRING DIAPHRAGM (LUK PART NO L-04127-0005)	1
6	D10327930.9	PLATE PRESSURE MAIN CLUTCH (LUK PART NO L-02103-0432)	1
7	D10245850.9	DISC CLUTCH MAIN DRIVE (CERAMETALLIC INDEPENDENT PTO CLUTCH 11")	1
8	D10327980.9	KIT REPAIR PTO CLUTCH (LUK PART NO L-02615-1009)	3
9	D10327970.9	KIT REPAIR MAIN CLUTCH (LUK PART NO L-02615-1010)	3
10	D10245840.9	PLATE AND COVER ASSEMBLY CERAMETALLIC INDEPENDENT PTO CLUTCH	1
12	D86500030.9	WASHER M8 SPRING LOCK	12
13	D10042970.9	BOLT M8X1.25X100 (CLUTCH COVER)	12

TABLE-31
TRANSMISSION CASE AND SHIFT LEVERS

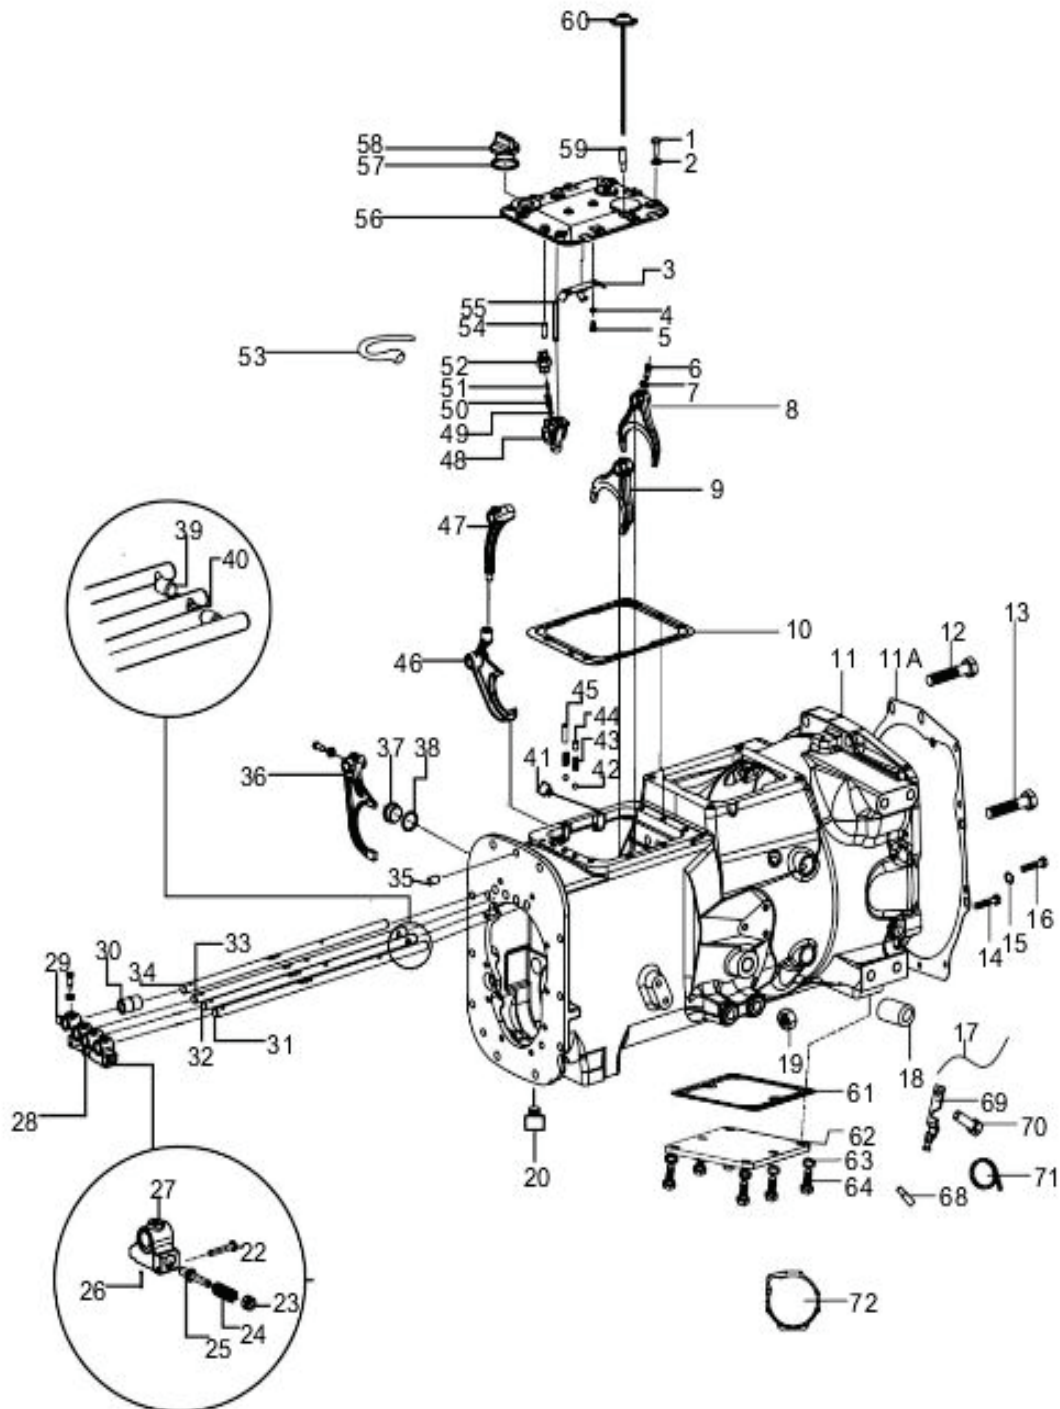


TABLE-31**TRANSMISSION CASE AND SHIFT LEVERS**

Fig. No.	Part No.	Description	Qty
1	D81000060.9	BOLT 3/8"-16X1.00" HEX HEAD	7
2	D86000010.9	WASHER 3/8" SPRING LOCK	7
3	D10249720.9	CLIP HARNESS SAFETY SWITCH	1
4	D86000050.9	WASHER 1/4" SPRING LOCK	2
5	D10085720.9	SCREW M6X10 (SELF LOCK)	2
6	D10000550.9	SCREW TRANSMISSION CONNECTOR LOCK	8
7	D83000010.9	NUT 3/8"-24 HEX	8
8	D10250000.9	FORK TRANSMISSION GEAR SHIFT 1ST AND 3RD SPEED	1
9	D10000570.9	FORK TRANSMISSION GEAR SHIFT 1ST AND 3RD SPEED	1
10	D10001950.9	GASKET COVER CASE TRANSMISSION	1
11	D10295630.9	CASE ASSEMBLY TRANSMISSION	1
11-1	D10295630AC.9	CASE ASSEMBLY TRANSMISSION	1
12	D81000580.9	BOLT 3/4"-16X2.75" HEX HEAD	2
13	D81000590.9	BOLT 5/8"-11X2.375" HEX HEAD	2
14	D81000600.9	BOLT 5/8"-11X3.75" HEX HEAD	2
15	D86000020.9	WASHER 7/16" SPRING LOCK	2
16	D81000090.9	BOLT 7/16"-14X1.25" HEX HEAD	2
17	D10009960.9	WIRE LOCKING	1
19	D83000090.9	NUT 5/8"-11 HEX	2
20	D10213110.9	PLUG DRAIN 3/4-14 NPTF (MAGNETIC)	1
22	D93400010.9	PIN 3/16"X1.219" CLEVIS	1
23	D10000670.9	RETAINER SELECTOR SPRING PLUNGER	1
24	D10240590.9	SPRING CONNECTOR GEAR SHIFTING 1ST 3RD AND 4TH SPEED	1
25	D10000650.9	PLUNGER TRANSMISSION GEAR SHIFT ARM	1
26	D10000640.9	PIN 1/16"X0.50" COTTER	1
27	D10219480.9	CONNECTOR GEAR SHIFTING 1ST 3RD AND 4TH SPEED (SIDE SHIFTING GEAR)	1
28	D10219490.9	CONNECTOR GEAR SHIFTING 2ND AND REVERSE (SIDE SHIFTING GEAR)	1
29	D10219500.9	CONNECTOR GEAR SHIFTING HIGH LOW (SIDE SHIFTING GEAR)	1
30	D10299750.9	SLEEVE STOPPER GEAR SHIFT(SIDE SHIFT)	1
31	D10219460.9	RAIL TRANSMISSION GEAR SHIFT 4TH SPEED (SIDE SHIFTING GEAR)	1
32	D10219440.9	RAIL TRANSMISSION GEAR SHIFT 1ST AND 3RD SPEED (SIDE SHIFTING GEAR)	1
33	D10219450.9	RAIL TRANSMISSION GEAR SHIFT 2ND AND REVERSE SPEED (SIDE SHIFTING GEAR)	1
34	D10219470.9	RAIL TRANSMISSION GEAR SHIFT HIGH LOW SPEED (SIDE SHIFTING GEAR)	1
34-1	D10219470AE.9	RAIL TRANSMISSION GEAR SHIFT HIGH LOW SPEED (SIDE SHIFTING GEAR)	1
35	D10000090.9	DOWEL 1/2"X0.8125" PLAIN	2
36	D10220170.9	FORK TRANSMISSION GEAR SHIFT HIGH LOW (SIDE SHIFTING GEAR)	1
37	D10238120.9	PLUG M30X1.5X12 WELCH	1
38	D10107280.9	WASHER COPPER HYDRAULIC LIFT (36X30X2)	1
39	D10000310.9	INTERLOCK TRANSMISSION GEAR SHIFTING	2
40	D10005570.9	PIN GEAR SHIFT RAIL INTERLOCK	1

TABLE-31
TRANSMISSION CASE AND SHIFT LEVERS

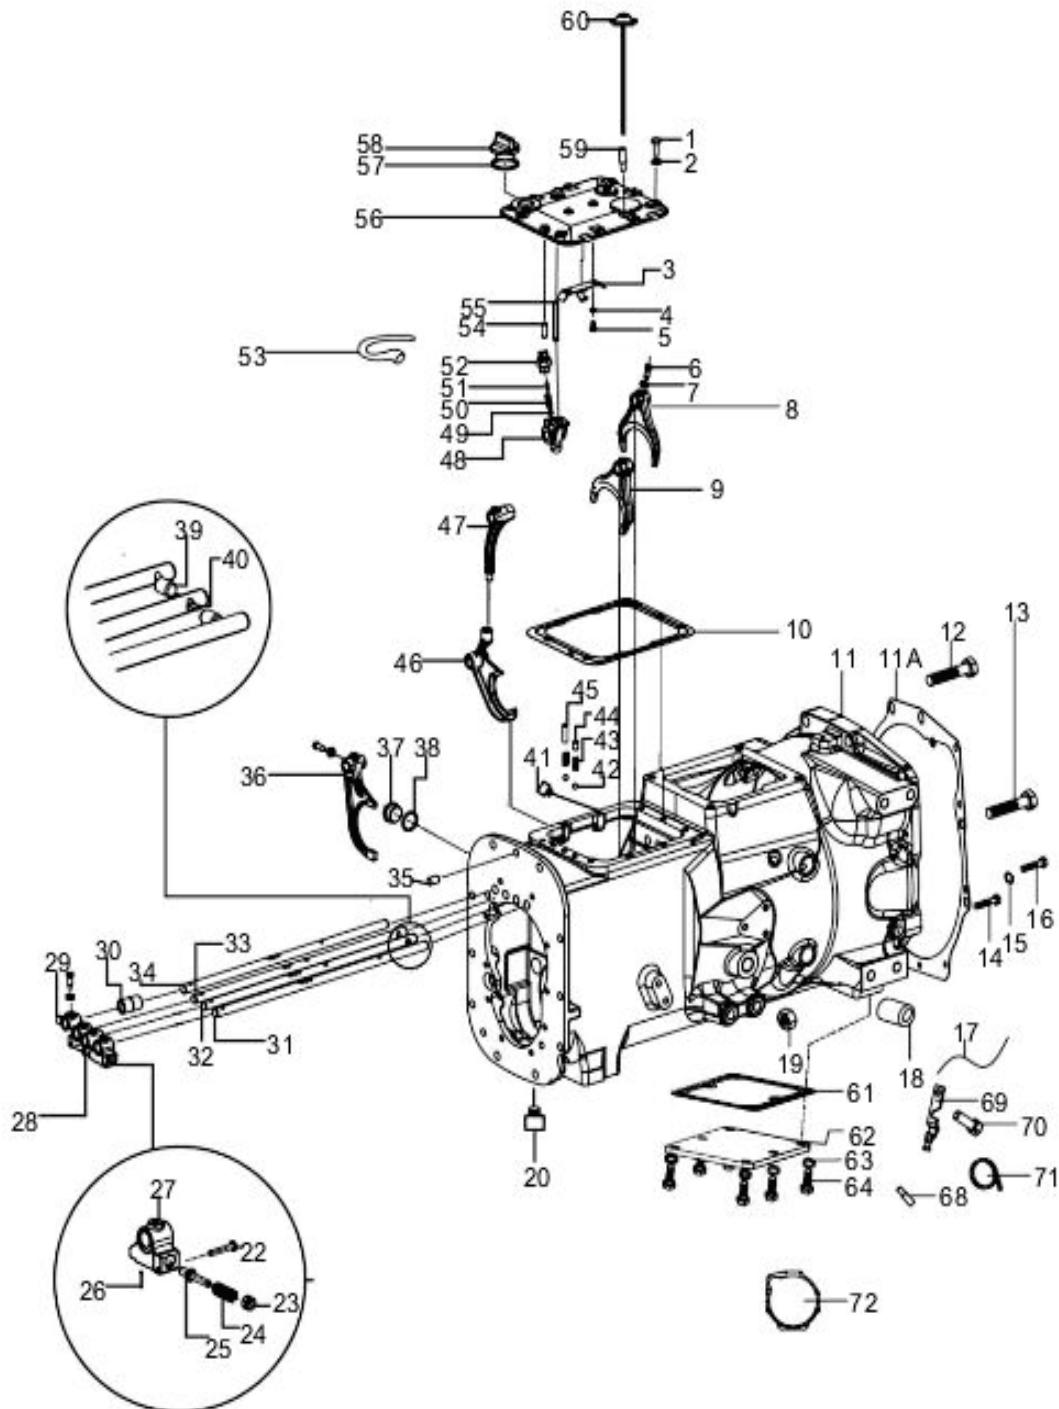


TABLE-31
TRANSMISSION CASE AND SHIFT LEVERS

Fig. No.	Part No.	Description	Qty
41	D93100010.9	PLUG 1/4"-18 PIPE	1
42	D10000490.9	BALL 3/8" DIAMETER	4
43	D10000690.9	SPRING TRANSMISSION GEAR SHIFT	4
44	D10000710.9	PIN TRANSMISSION GEAR SHIFT	1
45	D10000700.9	PIN 3/8"X1.26/1-27 STRAIGHT	3
46	D10254450.9	FORK TRANSMISSION GEAR SHIFT 4TH SPEED	1
47	D10220160.9	ARM TRANSMISSION 4TH SPEED (SIDE SHIFTING GEAR)	1
48	D10179670.9	RETAINER SAFETY START SWITCH	1
48-1	D10179670AC.9	RETAINER SAFETY START SWITCH	1
49	D10000490.9	BALL 3/8" DIAMETER	1
50	D10000500.9	SPRING SAFETY START SWITCH	1
51	D10000510.9	PLUNGER SAFETY START SWITCH	1
52	D10000520.9	SWITCH ASSEMBLY TRANSMISSION CONTROL SELECTOR NEUTRAL	1
53	D10001920.9	HARNESS ASSEMBLY TRANSMISSION	1
54	D10107600.9	PIN DOWEL	1
56	D10426860.9	COVER ASSEMBLY TOP TRANSMISSION CASE (SIDE SHIFTING GEAR)	1
57	D10102850.9	GASKET PLUG OIL FILLER REAR AXLE	1
58	D10004030.9	BREATHER ASSEMBLY TRANSMISSION OIL FILLER	1
58-1	D11251550AA.9	BREATHER ASSEMBLY TRANSMISSION	1
59	D10107620.9	TUBE OIL LEVEL INDICATOR	1
60	D10191970.9	INDICATOR ASSEMBLY TRANSMISSION OIL	1
61	D10075230.9	KIT BUSH CLUTCH SHAFT	2
62	D10075590.9	KIT GASKETS GEAR BOX FT	1
64	D10228940.9	GASKET CLUTCH INSPECTION COVER	1
65	D10228930.9	COVER CLUTCH INSPECTION CASE TRANSMISSION	1
66	D86000040.9	WASHER 5/16" SPRING LOCK	6
67	D81000200.9	BOLT 5/16"-18X0.75 HEX HEAD	6
67-1	D81001890AB.9	BOLT 5/16 INCH-18X0.75 INCH HEX HEAD (PRECOATED)	6
68	D10107620.9	TUBE OIL LEVEL INDICATOR	1
69	D10256250.9	BRACKET ASSEMBLY STOPPER DUAL CLUTCH LEVER	1
70	D10292080.9	BOLT 3/8"-16X1.00" HEX HEAD WITH HOLE	2
71	D10203560.9	CLAMP GROMMET GEAR SHIFTING LEVER	1
72	D10388180.9	GASKET ENGINE TO TRANSMISSION ASSEMBLY	1
73	D10559170.9	PLATE MODEL AND CHASSIS IDENTIFICATION	1

TABLE-32
MAIN GEAR SIDE SHIFT EXTERNAL

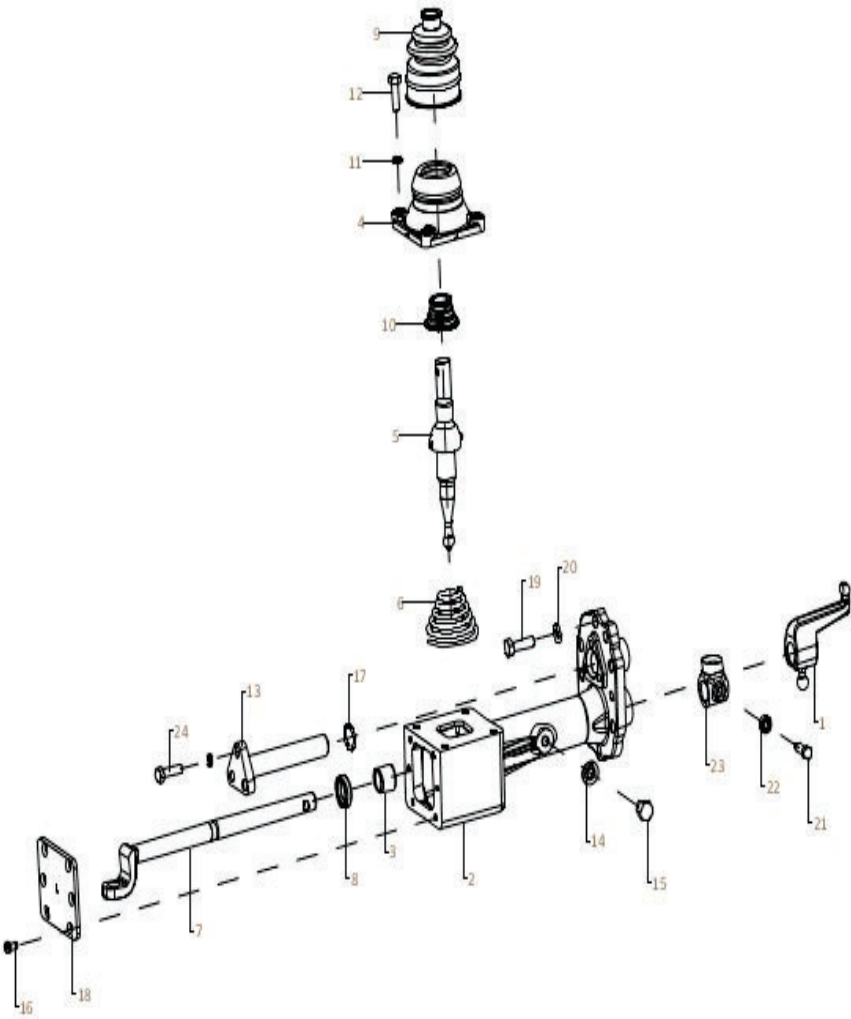


TABLE-32**MAIN GEAR SIDE SHIFT EXTERNAL**

Fig. No.	Part No.	Description	Qty
1	D10290460.9	LEVER CONNECTOR ASSEMBLY MAIN GEAR SHIFT (SIDE SHIFTING GEAR)	1
2	D10482430.9	HOUSING ASSEMBLY TRANSMISSION MAIN GEAR SHIFT LEVER (SIDE SHIFTING)	1
3	D10220410.9	SLEEVE BEARING (18X24X20)	2
4	D10499350.9	HOUSING MOUNTING MAIN GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
5	D10239400.9	LEVER ASSEMBLY HIGH LOW GEAR SHIFTING TRANSMISSION	1
6	D10242830.9	SPRING GEAR SHIFTING LEVER TRANSMISSION (SIDE SHIFTING GEAR)	1
7	D10290450.9	ROD LINK ASSEMBLY MAIN GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
8	D10220420.9	SEAL OIL 18X30X7	1
9	D10400710.9	BOOT HOUSING MOUNTING MAIN GEAR SHIFT LEVER	1
10	D10242760.9	BOOT HOUSING MOUNTING MAIN GEAR SHIFT LEVER	1
11	D86500030.9	WASHER M8 SPRING LOCK	15
12	D82500010.9	SCREW M8X1.25X28-8.8 HEX HEAD	7
13	D10220320.9	PIN LEVER CONNECTOR MAIN GEAR SHIFT HOLD (SIDE SHIFTING GEAR)	1
14	D10006750.9	WASHER 10X22 FLAT	1
15	D10007670.9	SCREW M10X1.50X12-6.8 HEX HEAD	1
16	D82501010.9	SCREW M6X1.0X12 ALLEN	6
17	D10016360.9	SEAL O RING 2.65X20.50	1
18	D10492120.9	PLATE HOUSING MAIN GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
19	D81000730.9	BOLT 3/8"-16X1.25" HEX HEAD	6
20	D86000010.9	WASHER 3/8" SPRING LOCK	6
21	D10000550.9	SCREW TRANSMISSION CONNECTOR LOCK	2
22	D83000010.9	NUT 3/8"-24 HEX	2
23	D10220310.9	BUSH ROD LINK ASSEMBLY MAIN GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
24	D81501420.9	BOLT M8X1.25X15 HEX HEAD	4
25	D95010830.9	LOCTITE 5060	AR
26	D95010840.9	LOCTITE ANAEROBIC L-5182	AR
27	D95000030.9	PASTE OKS-200 MOLYBDENUM COMPOUND	AR
28	D95000410.9	LOCTITE 574	AR
29	D10203560.9	CLAMP GROMMET GEAR SHIFTING LEVER	AR
30	D95000340.9	GREASE EP-2	AR

TABLE-33

8+2 SPEED TRANSMISSION GEARS

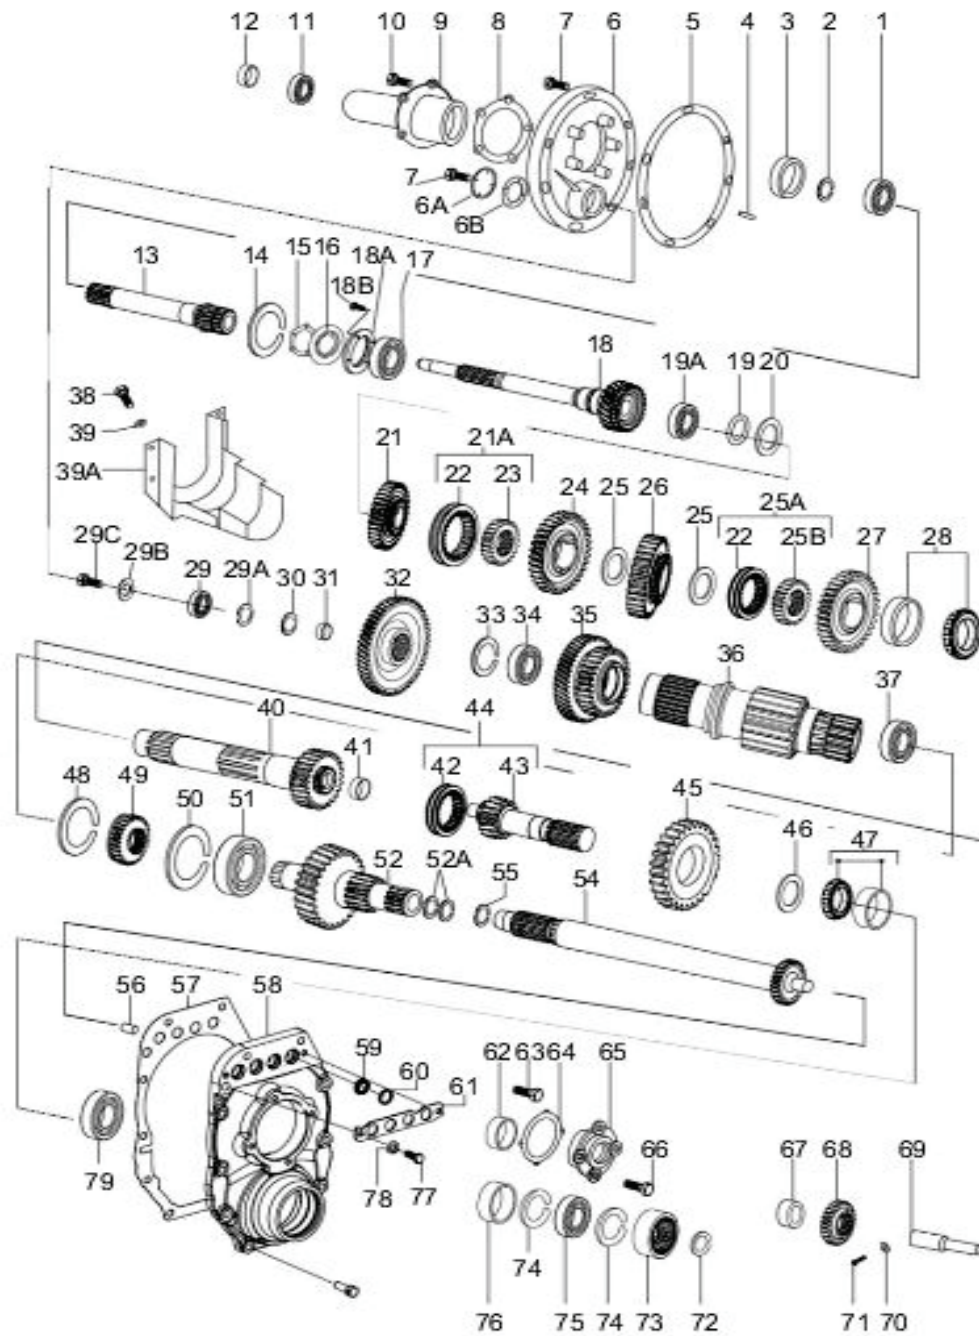


TABLE-33**8+2 SPEED TRANSMISSION GEARS**

Fig. No.	Part No.	Description	Qty
1	D10019710.9	BEARING ASSEMBLY LIVE PTO	1
2	D10019610.9	RING PTO INPUT SHAFT SNAP	1
3	D10019660.9	SEAL OIL TRANSMISSION INPUT SHAFT	1
4	D87000010.9	PIN 3/8"X0.687" DOWEL	1
5	D10001270.9	GASKET PLATE CLUTCH RELEASE BEARING HUB SUPPORT	1
6	D10417990.9	PLATE CLUTCH RELEASE (REVERSE PTO)	1
6A	D10249960.9	COVER CLUTCH RELEASE PLATE	1
6B	D10249980.9	GASKET COVER CLUTCH RELEASE PLATE	1
7	D81000020.9	BOLT 3/8"-16X1.125" HEX HEAD	7
8	D10001400.9	GASKET RETAINER TRANSMISSION INPUT SHAFT	1
9	D10309100.9	RETAINER TRANSMISSION INPUT SHAFT LIVE PTO (MACHINED)	1
10	D81000030.9	BOLT 3/8"-16X0.875" HEX HEAD LOCK (GRADE-5)	5
11	D10019730.9	BEARING ASSEMBLY LIVE PTO	1
11-1	D10019730AB.9	BEARING ASSEMBLY LIVE PTO	1
12	D10031320.9	SEAL OIL TRANSMISSION MAIN DRIVE SHAFT	1
13	D10341070.9	SHAFT PTO INPUT TRANSMISSION Z-17	1
14	D10000120.9	RING TRANSMISSION MAIN DRIVE SHAFT BEARING SNAP	1
15	D10019640.9	RING MAIN SHAFT DRIVE GEAR	1
16	D10019630.9	PLATE TRANSMISSION MAIN DRIVE	1
17	D10000900.9	BEARING BALL TRANSMISSION INPUT SHAFT	1
18	D10616180.9	SHAFT TRANSMISSION INPUT Z-29	1
18A	D10087380.9	RETAINER TRANSMISSION INPUT SHAFT BEARING	1
18B	D81000020.9	BOLT 3/8"-16X1.125" HEX HEAD	3
19	D90000030.9	CIRCLIP A40X1.75 N	1
19A	D10616220.9	BEARING ROLLER NU 305 X-LIFE	1
19A-1	D10019720.9	BEARING PTO COUNTERSHAFT	1
20	D10005340.9	WASHER 40X64 FLAT	1
21	D10335780.9	GEAR ASSEMBLY TRANSMISSION 3RD AND 7TH SPEED (Z-35)	1
21A		CONNECTOR & COUPLING ASSY TRANS. 1ST & 3RD GEAR	1
22	D10000390.9	COUPLING TRANSMISSION GEAR SHIFT (MACHINED)	2
23	D10087550.9	CONNECTOR TRANSMISSION 1ST AND 3RD SPEED	1
24	D10378420.9	GEAR ASSEMBLY TRANSMISSION 1ST AND 5TH SPEED (Z-47)	1
25	D10087560.9	WASHER TRANSMISSION MAIN SHAFT THRUST	2
25A		CONNECTOR & COUPLING ASSY TRANS. 2ND & REVERSE GEAR	1
25B	D10087490.9	CONNECTOR TRANSMISSION 2ND AND REVERSE SPEED	1
26	D10253040.9	GEAR ASSEMBLY TRANSMISSION REVERSE SPEED Z-41	1
27	D10335820.9	GEAR ASSEMBLY TRANSMISSION 2ND AND 6TH SPEED (Z-39)	1
28	D10032500.9	BEARING ASSEMBLY (32211)	1
29	D10019720.9	BEARING PTO COUNTERSHAFT	1
29-1	D10616220.9	BEARING ROLLER NU 305 X-LIFE	1

TABLE-33

8+2 SPEED TRANSMISSION GEARS

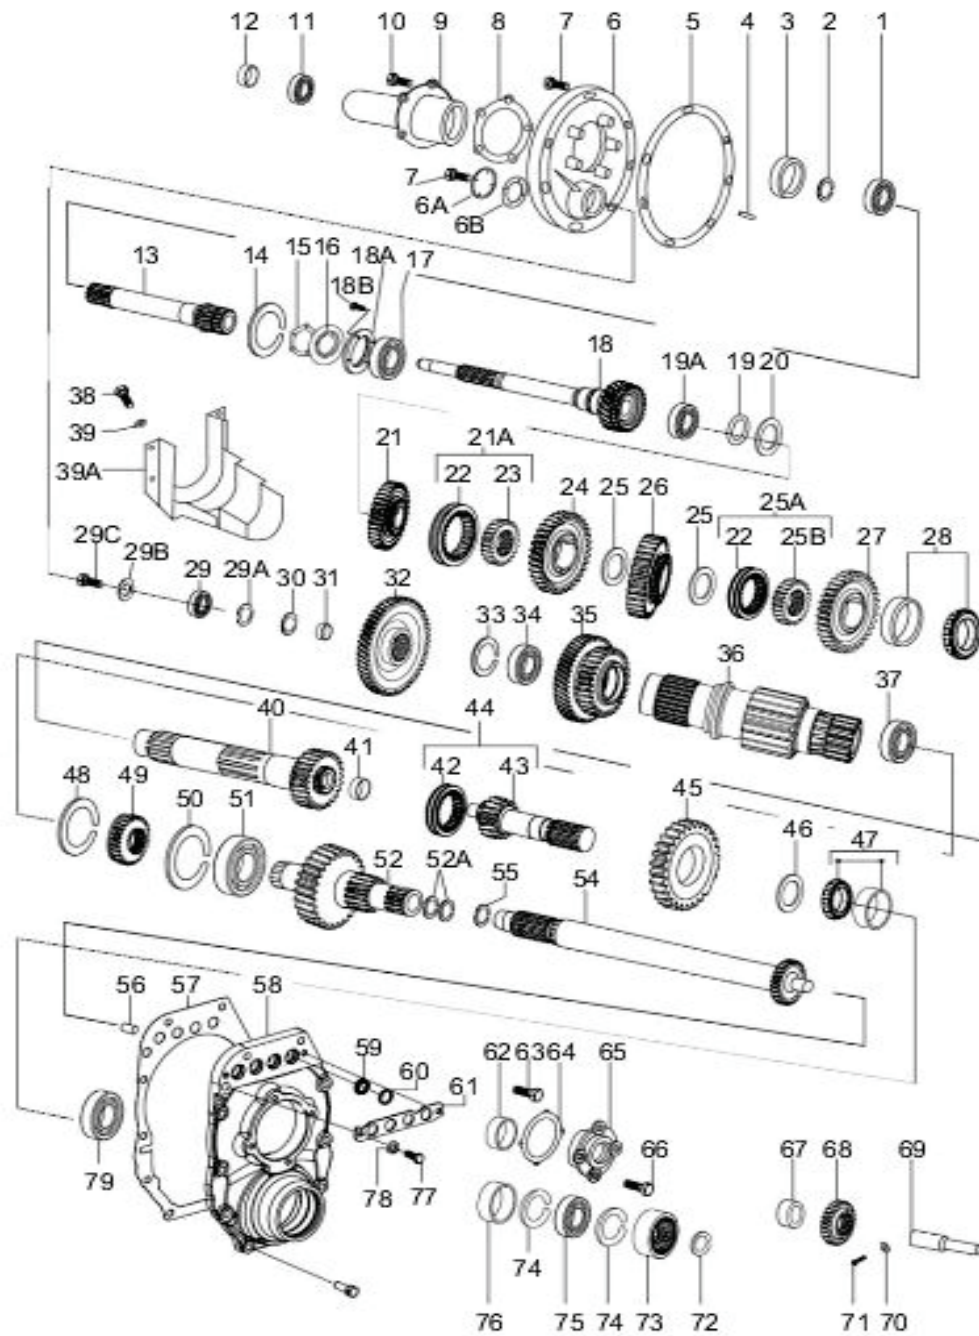


TABLE-33**8+2 SPEED TRANSMISSION GEARS**

Fig. No.	Part No.	Description	Qty
29A	D90500120.9	CIRCLIP B62X2.0 N	1
29B	D10184680.9	LOCKING PLATE PTO COUNTER SHAFT	1
29C	D10052710.9	BOLT M12X1.25X35-10.9 HEX HEAD COLLARED	1
30	D10019650.9	RING PTO COUNTER SHAFT GEAR SNAP	1
31	D10019600.9	WASHER PTO COUNTERSHAFT THRUST	1
32	D10019880.9	GEAR PTO COUNTERSHAFT Z-57 (MACHINED)	1
33	D10000120.9	RING TRANSMISSION MAIN DRIVE SHAFT BEARING SNAP	1
34	D10019710.9	BEARING ASSEMBLY LIVE PTO	1
35	D10087390.9	GEAR TRANSMISSION COUNTERSHAFT	1
36	D10220880.9	SHAFT COUNTER TRANSMISSION LIVE PTO (MACHINED)	1
36-1	D10220880AE.9	SHAFT COUNTER TRANSMISSION LIVE PTO (MACHINED)	1
37	D10000230.9	BEARING BALL COUNTERSHAFT REAR	1
38	D81500330.9	BOLT M8X1.25X40-8.8 HEX HEAD	2
39	D86500030.9	WASHER M8 SPRING LOCK	2
39A	D10123430.9	SHROUD GEAR COUNTER SHAFT TRANSMISSION	1
40	D10616200.9	SHAFT TRANSMISSION MAIN Z-30	1
41	D10001990.9	BEARING ASSEMBLY TRANSMISSION MAIN SHAFT REAR PILOT	1
42	D10000390.9	COUPLING TRANSMISSION GEAR SHIFT (MACHINED)	1
43	D10087540.9	SHAFT TRANSMISSION OUTPUT	1
43-1	D10087540AD.9	SHAFT TRANSMISSION OUTPUT	1
44	D10090880.9	COUPLING AND SHAFT ASSEMBLY TRANSMISSION	1
45	D10338010.9	GEAR ASSEMBLY TRANSMISSION OUTPUT (Z-49)	1
46	D10000840.9	WASHER TRANSMISSION OUTPUT SHAFT	1
47	D10002000.9	BEARING ASSEMBLY TRANSMISSION OUTPUT SHAFT	1
48	D10000130.9	RING FRONT TRANSMISSION INNER HOUSING SNAP	1
49	D10320410.9	COUPLING TRANSMISSION COUNTERSHAFT SLIDING GEAR Z-19	1
50	D10000140.9	RING TRANSMISSION COUNTER SHAFT FRONT BEARING SNAP	1
51	D10000730.9	BEARING BALL TRANSMISSION COUNTERSHAFT HIGH LOW REAR	1
52	D10080410.9	GEAR AND BUSH ASSEMBLY TRANSMISSION COUNTERSHAFT (Z-35)	1
52A	D10080370.9	SEAL OIL 32.5X39.5X5	1
54	D10249970.9	SHAFT TRANSMISSION COUNTER (REVERSE PTO)	1
54-1	D10249970AB.9	SHAFT TRANSMISSION COUNTER (REVERSE PTO)	1
55	D90500120.9	CIRCLIP B62X2.0 N	1
56	D10000090.9	DOWEL 1/2"X0.8125" PLAIN	1
57	D10296290.9	GASKET TRANSMISSION OUTPUT RETAINER	1
58	D10490540.9	RETAINER TRANSMISSION OUTPUT SHAFT BEARING (SIDE SHIFT)	1
58-1	D11036050AA.9	RETAINER TRANSMISSION OUTPUT SHAFT BEARING (SIDE SHIFT)	1
58-2	D11036050AB.9	RETAINER TRANSMISSION OUTPUT SHAFT BEARING (SIDE SHIFT)	1
59	D10252920.9	SEAL WIPER 16X22X4.0	4
60	D10252930.9	WASHER 18.5X22X3.0 SEAL WIPER RETAINER	4

TABLE-33

8+2 SPEED TRANSMISSION GEARS

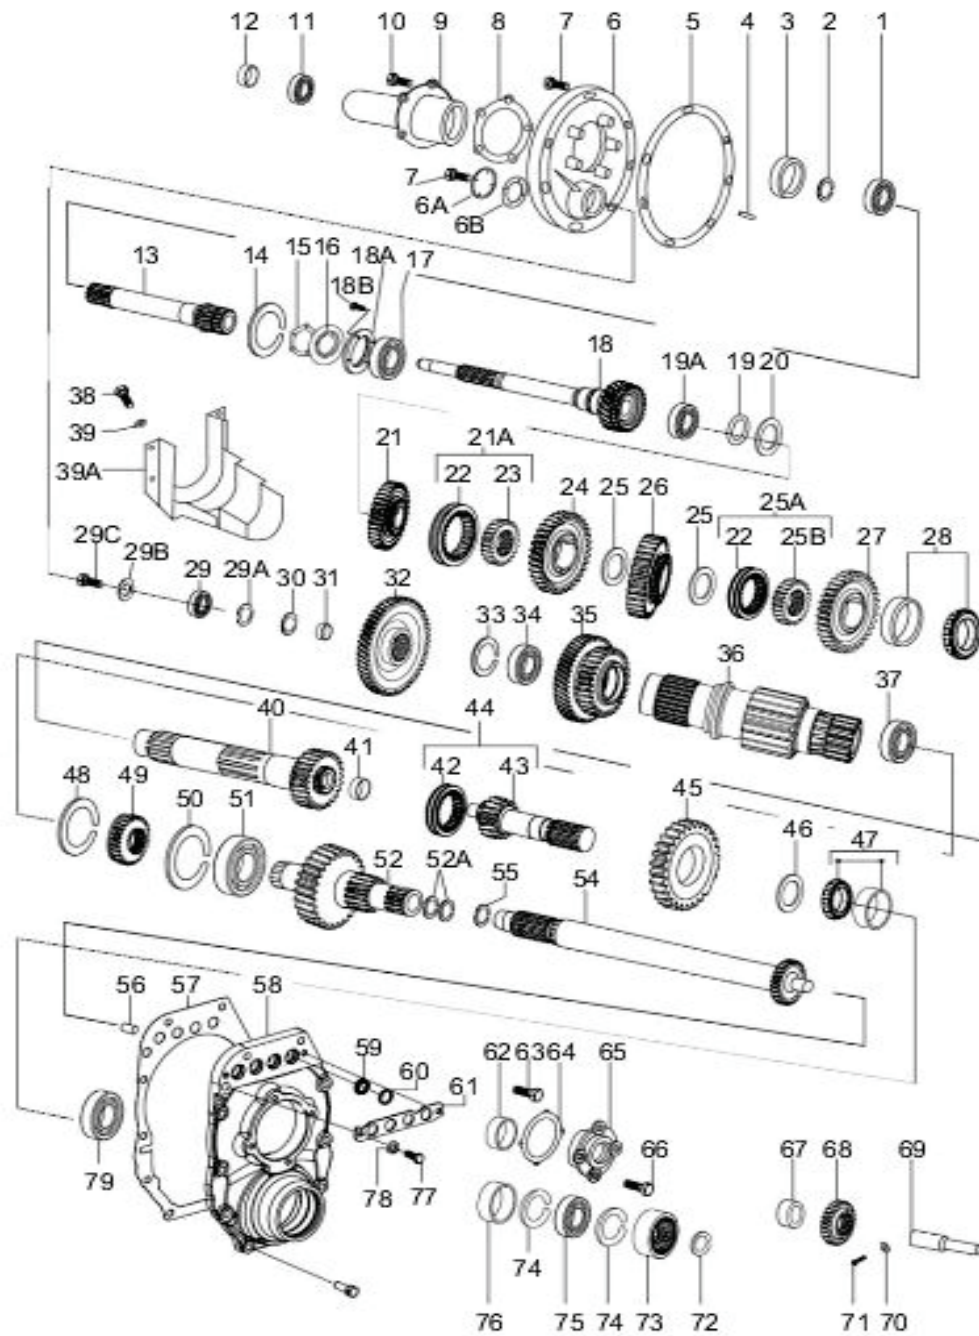


TABLE-33**8+2 SPEED TRANSMISSION GEARS**

Fig. No.	Part No.	Description	Qty
61	D10252910.9	PLATE STOPPER SEAL WIPER	1
62	D10001120.9	SEAL TRANSMISSION OUTPUT SHAFT	1
63	D81000020.9	BOLT 3/8"-16X1.125" HEX HEAD	10
64	D10001130.9	SHIM TRANSMISSION OUTPUT SHAFT 0.003" THICK	1
64A	D10001140.9	SHIM TRANSMISSION OUTPUT SHAFT 0.005" THICK	3
64B	D10001150.9	SHIM TRANSMISSION OUTPUT SHAFT 0.012" THICK	2
65	D10001100.9	RETAINER TRANSMISSION OUTPUT	1
66	D81000030.9	BOLT 3/8"-16X0.875" HEX HEAD LOCK (GRADE-5)	4
67	D10000280.9	BUSH TRANSMISSION REVERSE IDLER GEAR	1
68	D10253070.9	GEAR ASSEMBLY TRANSMISSION REVERSE IDLER Z -29	1
69	D10000260.9	SHAFT TRANSMISSION REVERSE IDLER	1
70	D10000290.9	SEAL IDLER SHAFT RETAINER BOLT LOCK	1
71	D10000300.9	BOLT TRANSMISSION REVERSE IDLER	1
72	D10019650.9	RING PTO COUNTER SHAFT GEAR SNAP	1
73	D10012290.9	BUSHING FRONT WHEEL SPINDLE PIN UPPER	1
74	D10000980.9	RING PTO BEARING HOUSING SNAP	1
75	D10002140.9	BEARING BALL PTO SHAFT REAR AXLE	1
76	D10080360.9	SEAL OIL 50.6X73X15.87	1
77	D81000010.9	BOLT 5/16"-18X0.375" HEX HEAD	2
78	D86000040.9	WASHER 5/16" SPRING LOCK	2
79	D10000740.9	BEARING BALL TRANSMISSION COUNTERSHAFT HIGH LOW FRONT	1

TABLE-34
CENTER HOUSING BRACKETS

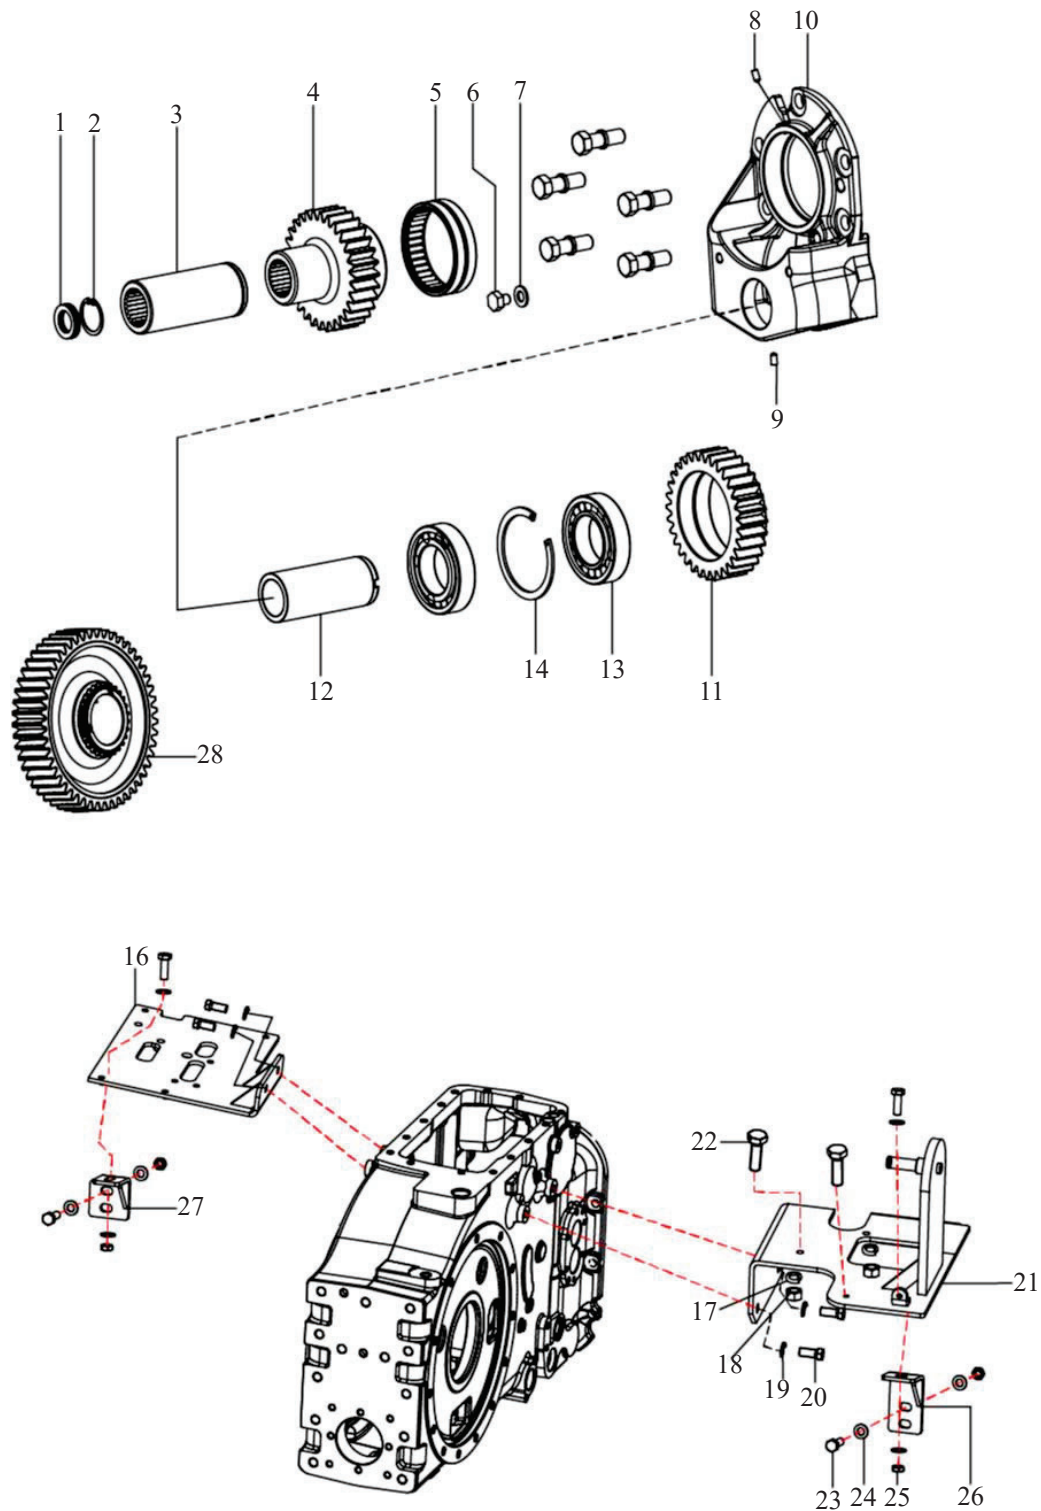


TABLE-34**CENTER HOUSING BRACKETS**

Fig. No.	Part No.	Description	Qty
1	D10106650.9	WASHER 22.2X34.6 BELLEVILLE	6
2	D10106680.9	CIRCLIP B35X1.30 HB	1
3	D10157630.9	COUPLING DRIVE SHAFT (4WD)	1
4	D10316540.9	GEAR TRANSMISSION FOUR WHEEL DRIVE Z-30	1
5	D10106630.9	BEARING NEEDLE ROLLER (80X95X25)	2
6	D10007670.9	SCREW M10X1.50X12-6.8 HEX HEAD	2
7	D85500010.9	WASHER M10 FLAT	2
8	D10106640.9	SCREW M6X1.00X12 GRUB	1
8-1	D82501690.9	SCREW M6X1.00X12 GRUB (LOCTITE PRE COATED)	1
9	D87500380.9	PIN 8X25 SPRING DOWEL COMBINATION TYPE	1
10	D10365120.9	HOUSING INTERNAL SUPPORT (4WD)	1
11	D10316550.9	GEAR TRANSMISSION FOUR WHEEL DRIVE Z-32	1
12	D10364850.9	BUSH HOUSING INTERNAL SUPPORT (4WD)	1
13	D10106610.9	BEARING CYLINDRICAL ROLLER	2
14	D10106690.9	CIRCLIP B90X2.80 HB	1
16	D10395700.9	BRACKET ASSEMBLY IPTO MOUNTING	1
17	D86500030.9	WASHER M8 SPRING LOCK	2
18	D83500230.9	NUT M8X1.25-5 HEX	2
19	D86000020.9	WASHER 7/16" SPRING LOCK	4
20	D81000100.9	BOLT 7/16"-14X1.00" HEX HEAD	4
21	D10395650.9	BRACKET ASSEMBLY SPOOL VALVE AND HYDRAULIC LEVER MOUNTING	1
22	D81500130.9	BOLT M8X1.25X60-8.8 HEX HEAD	2
23	D81500060.9	BOLT M10X1.50X30-8.8 HEX HEAD	4
24	D85500140.9	WASHER M10 FLAT	8
25	D83500240.9	NUT M10X1.50-6 HEX	1
26	D10343050.9	BRACKET SUPPORT REAR FENDER MOUNTING RH	1
27	D10343040.9	BRACKET SUPPORT REAR FENDER MOUNTING LH	1
28	D10338020.9	GEAR TRANSMISSION OUTPUT (Z-49)	1

TABLE-35
REAR AXLE

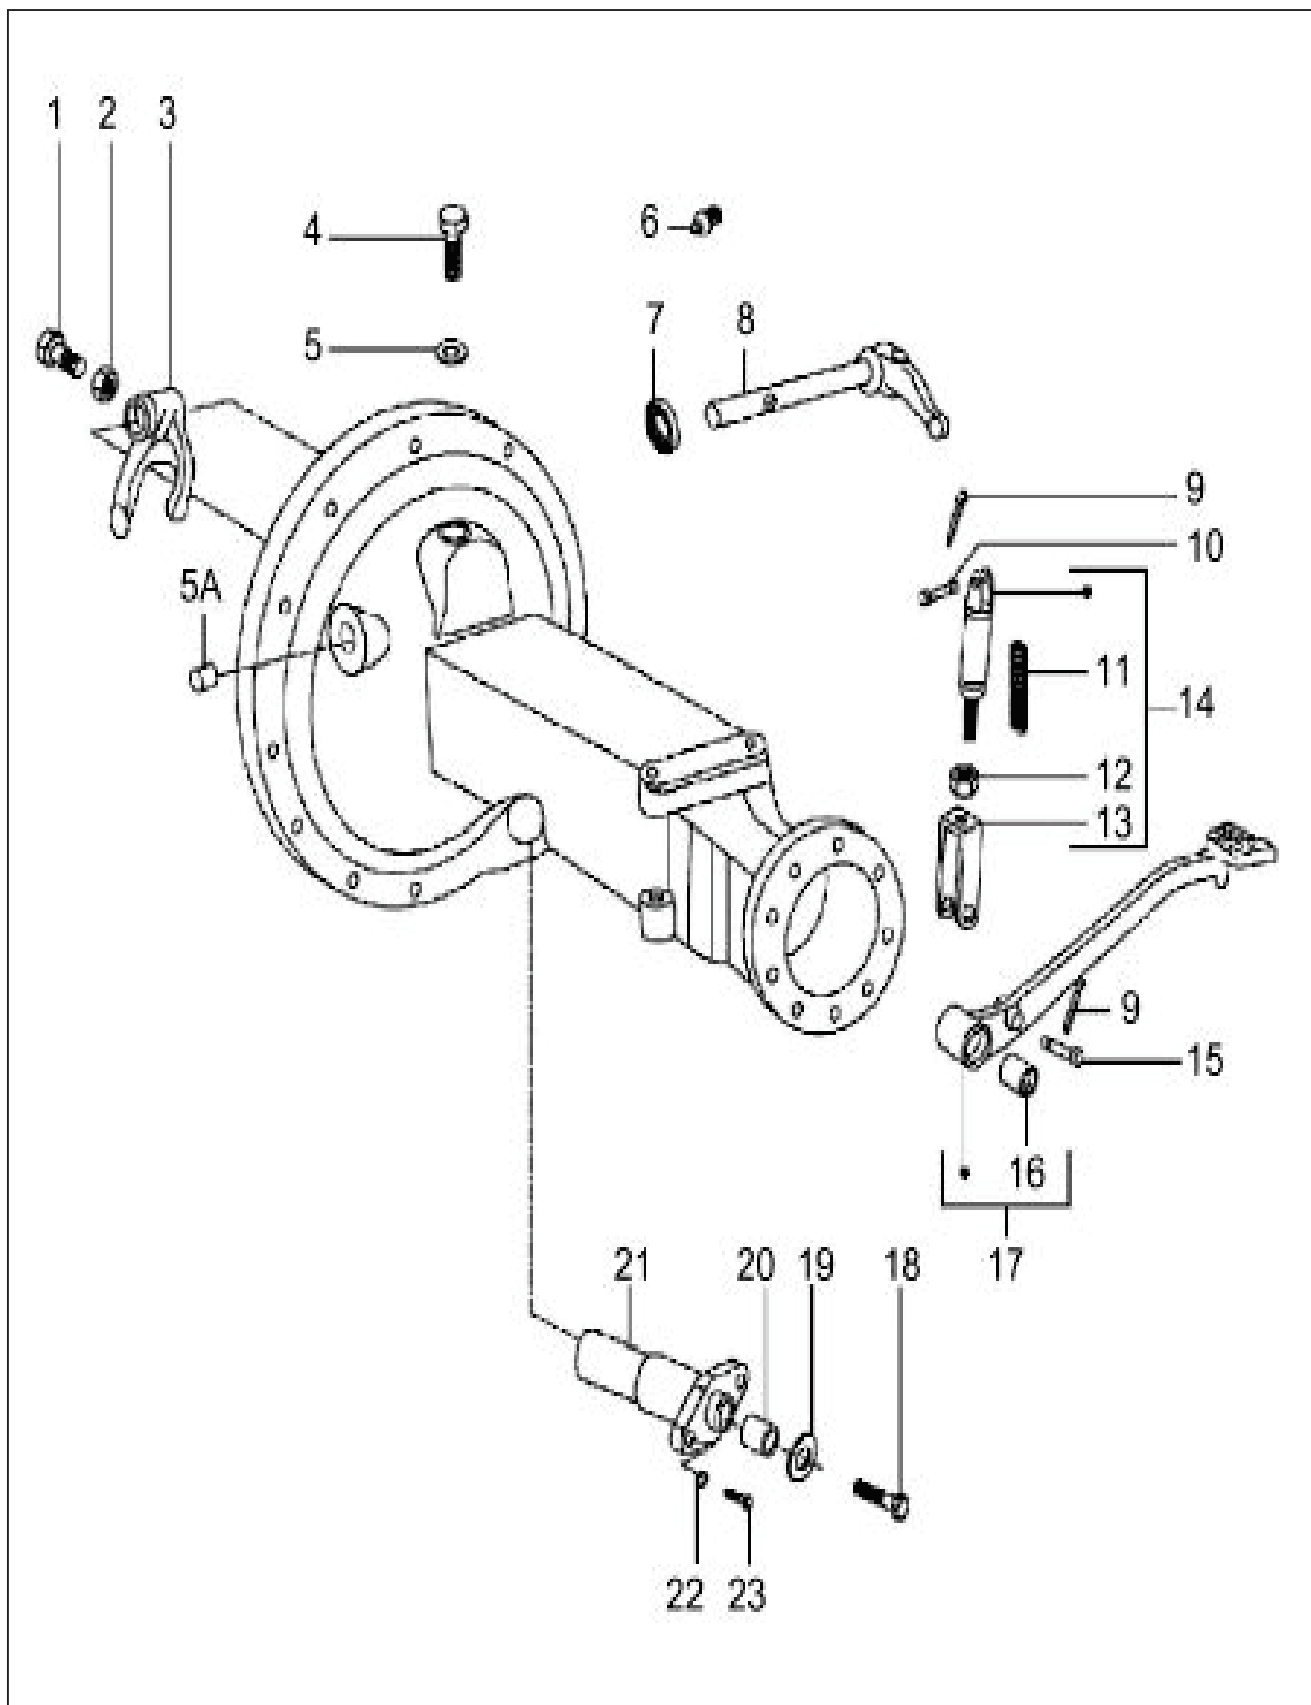


TABLE-35
REAR AXLE

Fig. No.	Part No.	Description	Qty
1	D10000550.9	SCREW TRANSMISSION CONNECTOR LOCK	1
2	D83000010.9	NUT 3/8"-24 HEX	1
3	D10095950.9	FORK DIFFERENTIAL LOCK (MACHINED)	1
4	D10002840.9	SCREW REAR AXLE DIFFERENTIAL LOCK FORK STOP	1
5	D83000020.9	NUT 3/8"-16 HEX	1
5A	D10002750.9	PLUG DIFFERENTIAL LOCK LEVER SHAFT RH REAR AXLE	1
6	D92500050.9	GREASE NIPPLE 1/4"-28 STRAIGHT FITTING	1
7	D10002760.9	SEAL DIFFERENTIAL LOCK LEVER SHAFT RH REAR AXLE	2
8	D10096840.9	SHAFT AND LEVER ASSEMBLY REAR AXLE DIFFERENTIAL LOCK	1
9	D10013460.9	PIN 1/8"X0.75" COTTER	1
10	D93400020.9	PIN 5/16"X.76" CLEVIS	1
11	D10012500.9	SPRING PEDAL DIFFERENTIAL LOCK	1
12	D10107770.9	NUT REAR AXLE DIFFERENTIAL LOCK ADJUSTING	1
13	D10107760.9	CLEVIS ASSEMBLY DIFFERENTIAL LOCK	1
14	D10013120.9	LINKAGE ASSEMBLY DIFFERENTIAL LOCK	1
15	D93400040.9	PIN 5/16"X1.24" CLEVIS	1
16	D10333570.9	BUSH DIFFERENTIAL LOCK PEDAL	1
17	D10256800.9	PEDAL ASSEMBLY REAR AXLE DIFFERENTIAL LOCK	1
18	D10012640.9	BOLT 5/8"-11X2.75" HEX HEAD (DIFFERENTIAL LOCK PEDAL)	1
19	D10012860.9	WASHER HYDRAULIC LOWER LINK	2
20	D10012630.9	SLEEVE PEDAL DIFFERENTIAL LOCK	1
21	D10013050.9	SHAFT LOWER LINK HYDRAULIC	2
22	D85000060.9	WASHER 5/8" FLAT	4
23	D81000060.9	BOLT 3/8"-16X1.00" HEX HEAD	2

TABLE-35
REAR DIFFERENTIAL ASSEMBLIES

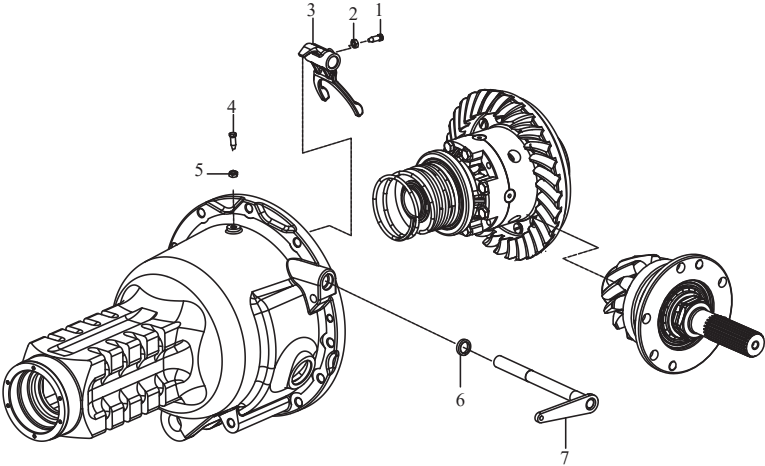


TABLE-35**REAR DIFFERENTIAL ASSEMBLIES**

Fig. No.	Part No.	Description	Qty
1	D10000550.9	SCREW TRANSMISSION CONNECTOR LOCK	1
2	D83000010.9	NUT 3/8"-24 HEX	1
3	D10095950.9	FORK DIFFERENTIAL LOCK (MACHINED)	1
4	D10002840.9	SCREW REAR AXLE DIFFERENTIAL LOCK FORK STOP	1
5	D83000020.9	NUT 3/8"-16 HEX	1
6	D10002760.9	SEAL DIFFERENTIAL LOCK LEVER SHAFT RH REAR AXLE	1
7	D10096840.9	SHAFT AND LEVER ASSEMBLY REAR AXLE DIFFERENTIAL LOCK	1

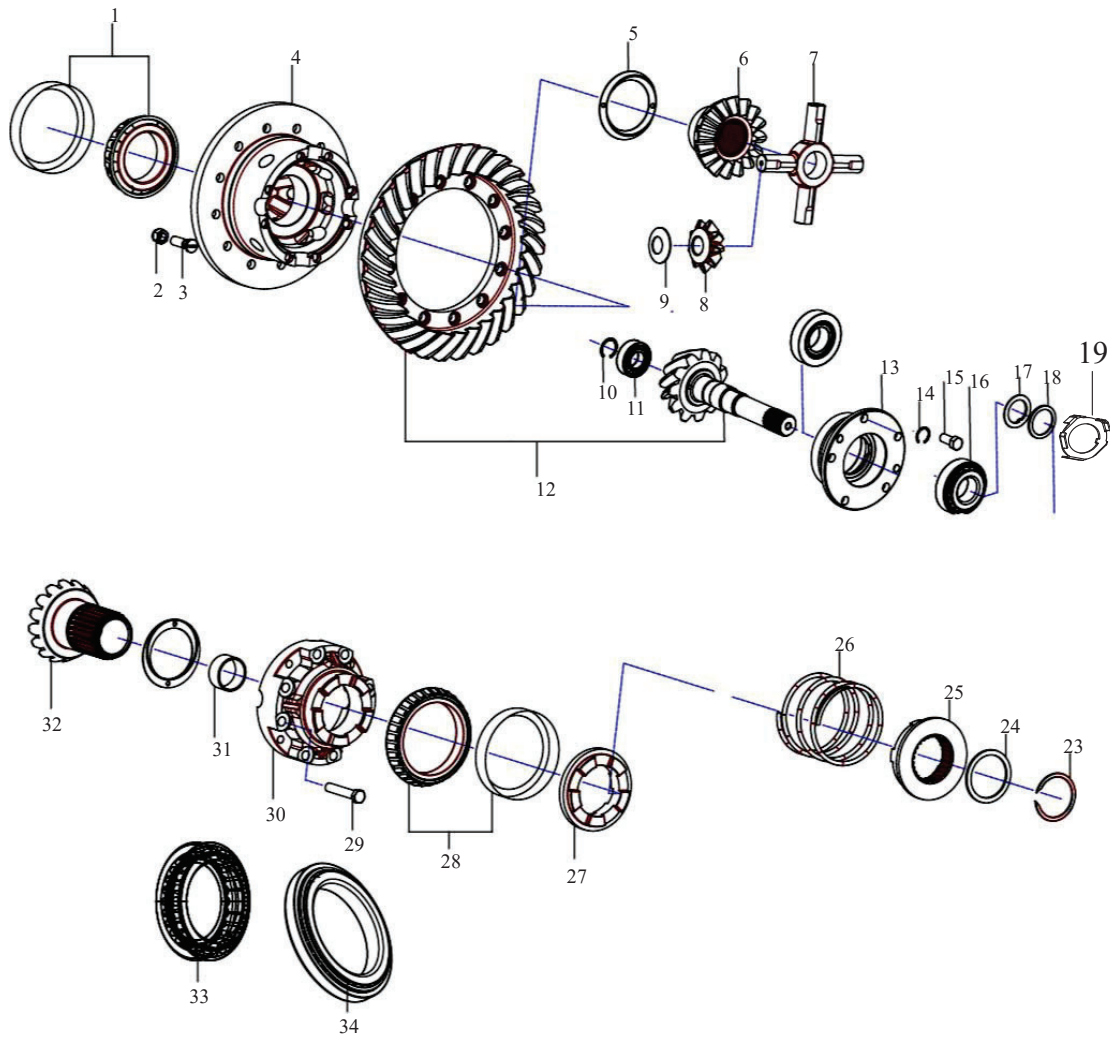
TABLE-36**REAR AXLE, DIFFERENTIAL AND RELATED PARTS**

TABLE-36**REAR AXLE, DIFFERENTIAL AND RELATED PARTS**

Fig. No.	Part No.	Description	Qty
1	D10032500.9	BEARING ASSEMBLY (32211)	1
2	D10003020.9	NUT 1/2"-20 NYLOCK HEX	12
3	D10003010.9	SCREW 1/2"-20X1.62" FLIP HEAD	12
4	D10084400.9	CASING ASSEMBLY REAR AXLE DIFFERENTIAL (MACHINED)	1
5	D10003050.9	WASHER REAR AXLE DIFFERENTIAL SUN GEAR THRUST	2
6	D10003030.9	GEAR REAR AXLE DIFFERENTIAL SIDE LH (Z-16)	1
7	D10003080.9	SPIDER SHAFT REAR AXLE DIFFERENTIAL	1
8	D10003090.9	PINION REAR AXLE DIFFERENTIAL (Z-9)	4
9	D10003100.9	WASHER REAR AXLE DIFFERENTIAL STAR GEAR THRUST	4
10	D10002660.9	RING REAR AXLE BEVEL PINION SHAFT SNAP	1
11	D10002650.9	BEARING REAR AXLE BEVEL PINION SHAFT PILOT	1
12	D10157610.9	GEAR SET BEVEL PINION AND CROWN WHEEL REAR AXLE	1
13	D10157600.9	RETAINER REAR AXLE DRIVE PINION GEAR BEARING (4WD)	1
14	D86000020.9	WASHER 7/16" SPRING LOCK	5
15	D81001380.9	BOLT 9/16-12X1.75 NC5	5
16	D10096140.9	CONE AND ROLLER ASSEMBLY REAR AXLE	2
17	D10093280.9	WASHER 41.7X58.4 THRUST	1
18	D10093240.9	NUT REAR AXLE DRIVE PINION	1
19	D10060940.9	WASHER DRIVE PINION NUT	1
23	D10003150.9	RING BULL PINION BEARING SNAP	1
24	D10003140.9	WASHER COUPLING DIFFERENTIAL LOCK REAR AXLE	1
25	D10003130.9	COUPLING REAR AXLE DIFFERENTIAL LOCK	1
26	D10003120.9	SPRING ADAPTOR REAR AXLE DIFFERENTIAL LOCK	1
27	D10003110.9	ADAPTOR REAR AXLE DIFFERENTIAL LOCK	1
28	D10087270.9	BEARING ASSEMBLY TAPER ROLLER (REAR AXLE)	1
29	D81000240.9	BOLT 1/2"-13X2.88" HEX HEAD LOCK	8
30	D10084400.9	CASING ASSEMBLY REAR AXLE DIFFERENTIAL (MACHINED)	1
31	D10003000.9	BUSH DIFFERENTIAL CASE REAR AXLE	2
32	D10003040.9	GEAR REAR AXLE DIFFERENTIAL SIDE RH (Z-16)	1
33	D10151720.9	CUP CARRIER HOUSING REAR AXLE EPICYCLIC	1
34	D10003070.9	CONE AND ROLLER ASSEMBLY REAR AXLE DIFFERENTIAL RH	1

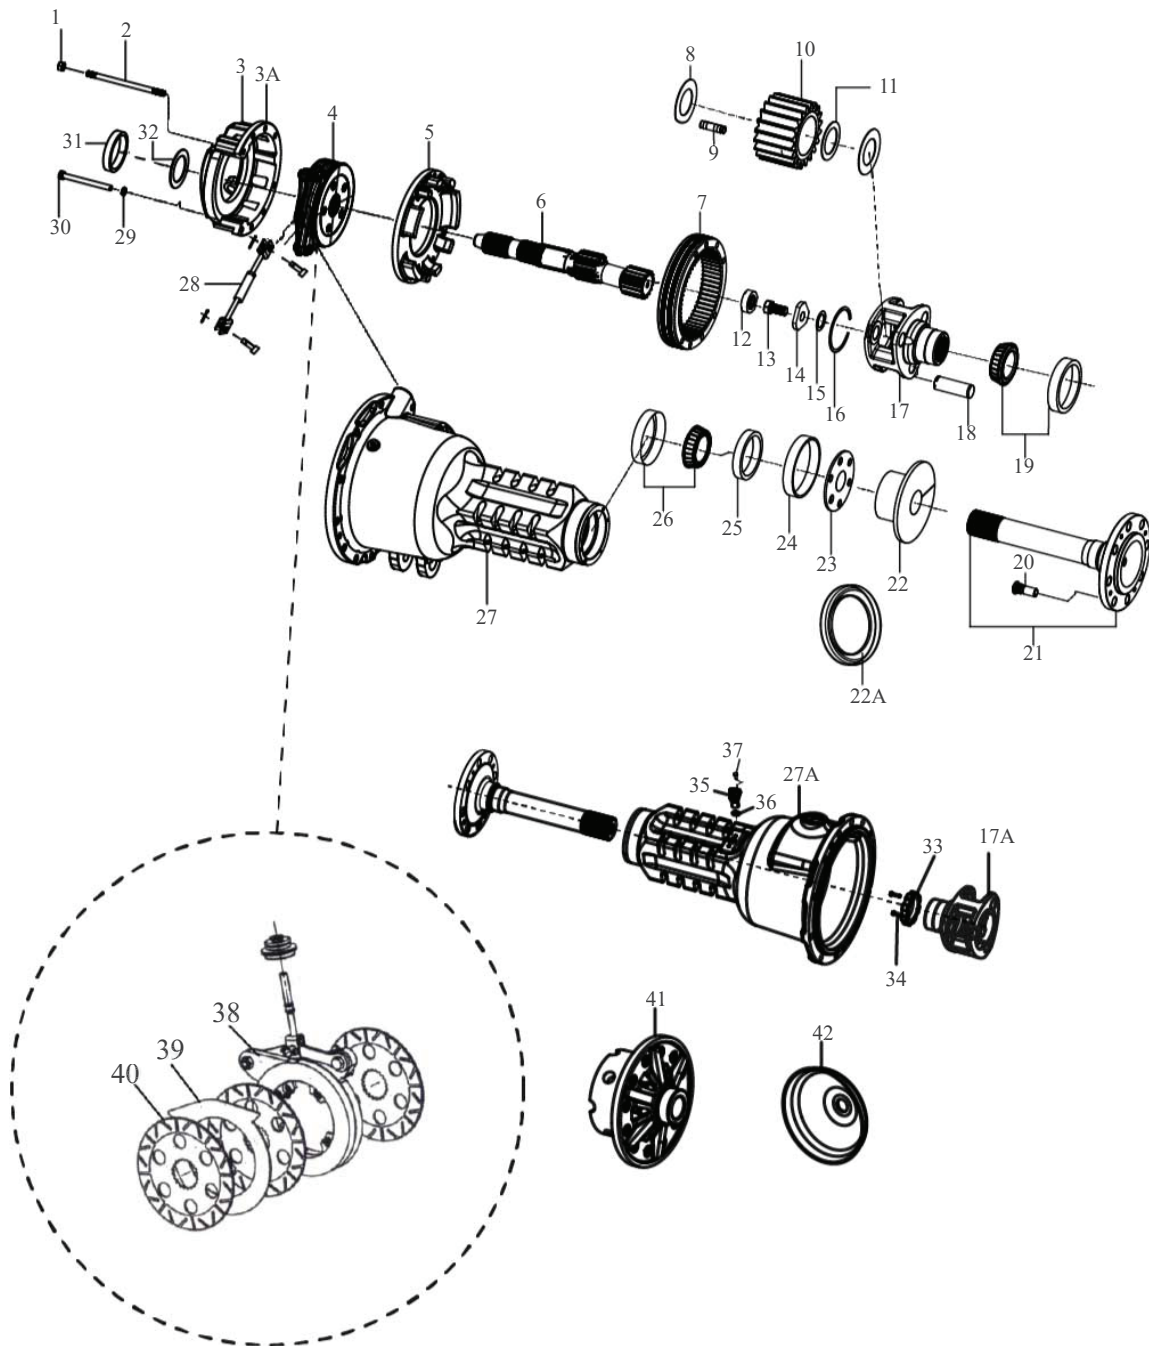
TABLE-38**REAR AXLE, DIFFERENTIAL AND RELATED PARTS**

TABLE-38**REAR AXLE, DIFFERENTIAL AND RELATED PARTS**

Fig. No.	Part No.	Description	Qty
1	D83500250.9	NUT M12X1.75-10 HEX	4
2	D84500050.9	STUD B M12X180-10.9	4
3	D10084370.9	HOUSING REAR AXLE BRAKE INNER RH	1
3A	D10084360.9	HOUSING REAR AXLE BRAKE INNER LH	1
4	D10084380.9	BRAKE ASSEMBLY REAR WHEEL (WET TYPE)	2
5	D10084350.9	HOUSING REAR AXLE BRAKE OUTER	2
6	D10084340.9	SHAFT PLANETARY SUN GEAR (Z-16)	1
7	D10084320.9	RING GEAR PLANETARY (Z-56)	2
8	D10096740.9	WASHER FINAL DRIVE PLANETARY GEAR CARRIER THRUST	12
8-1	D10096740AC.9	WASHER FINAL DRIVE PLANETARY GEAR CARRIER THRUST	1
9	D10096730.9	ROLLER FINAL DRIVE PLANETARY GEAR	192
10	D10096690.9	GEAR FINAL DRIVE REDUCTION PLANETARY (Z-20)	6
11	D10096750.9	WASHER FINAL DRIVE PLANETARY GEAR ROLLER THRUST	6
11-1	D10096750AC.9	WASHER FINAL DRIVE PLANETARY GEAR ROLLER THRUST	1
12	D10084330.9	LOCK CARRIER PLANETARY GEAR	2
13	D82500490.9	SCREW M20X1.50X40-10.9 HEX HEAD	2
14	D10096480.9	SPACER REAR AXLE SHAFT CARRIER	2
15	D10139790.9	SHIM REAR AXLE SHAFT (0.031")	AR
16	D10096930.9	RING PLANETARY GEAR CARRIER RETAINING	2
17	D10091930.9	CARRIER PLANETARY GEAR (MACHINED)	1
17A	D10254830.9	CARRIER PLANETARY GEAR	1
18	D10096720.9	SHAFT FINAL DRIVE PLANETARY GEAR	6
19	D10151730.9	CONE AND ROLLER ASSEMBLY CARRIER REAR AXLE EPICYCLIC	2
20	D10007030.9	BOLT REAR WHEEL HUB	16
21	D10363210.9	SHAFT REAR AXLE	2
21-1	D10363210AC.9	SHAFT REAR AXLE	2
22	D10083140.9	SEAL OIL REAR AXLE SHAFT OUTER	2
22-1	D10083140AE.9	SEAL OIL REAR AXLE SHAFT OUTER	2
22A	D10363220.9	SHIELD MUD REAR AXLE SHAFT	2
23	D10089000.9	GASKET RRW SHAFT OIL SEAL COVER	2
24	D10363200.9	COVER SEAL REAR AXLE	2
25	D10201990.9	SEAL OIL REAR AXLE COVER OUTER	2
25-1	D10201990AC.9	SEAL OIL REAR AXLE COVER OUTER	2
26	D10003500.9	BEARING ASSEMBLY REAR AXLE SHAFT OUTER	2
27	D10480100.9	HOUSING ASSEMBLY REAR AXLE RH	1
27A	D10569170.9	HOUSING REAR AXLE LH	1
28	D10113310.9	CONNECTOR FORK BRAKE	2
28-1	D10864550.9	CONNECTOR FORK BRAKE (8+2)	2
29	D86500020.9	WASHER M12 SPRING LOCK	16
30	D81501260.9	BOLT M12X1.75X130-10.9 HEX HEAD	12

TABLE-38
REAR AXLE, DIFFERENTIAL AND RELATED PARTS

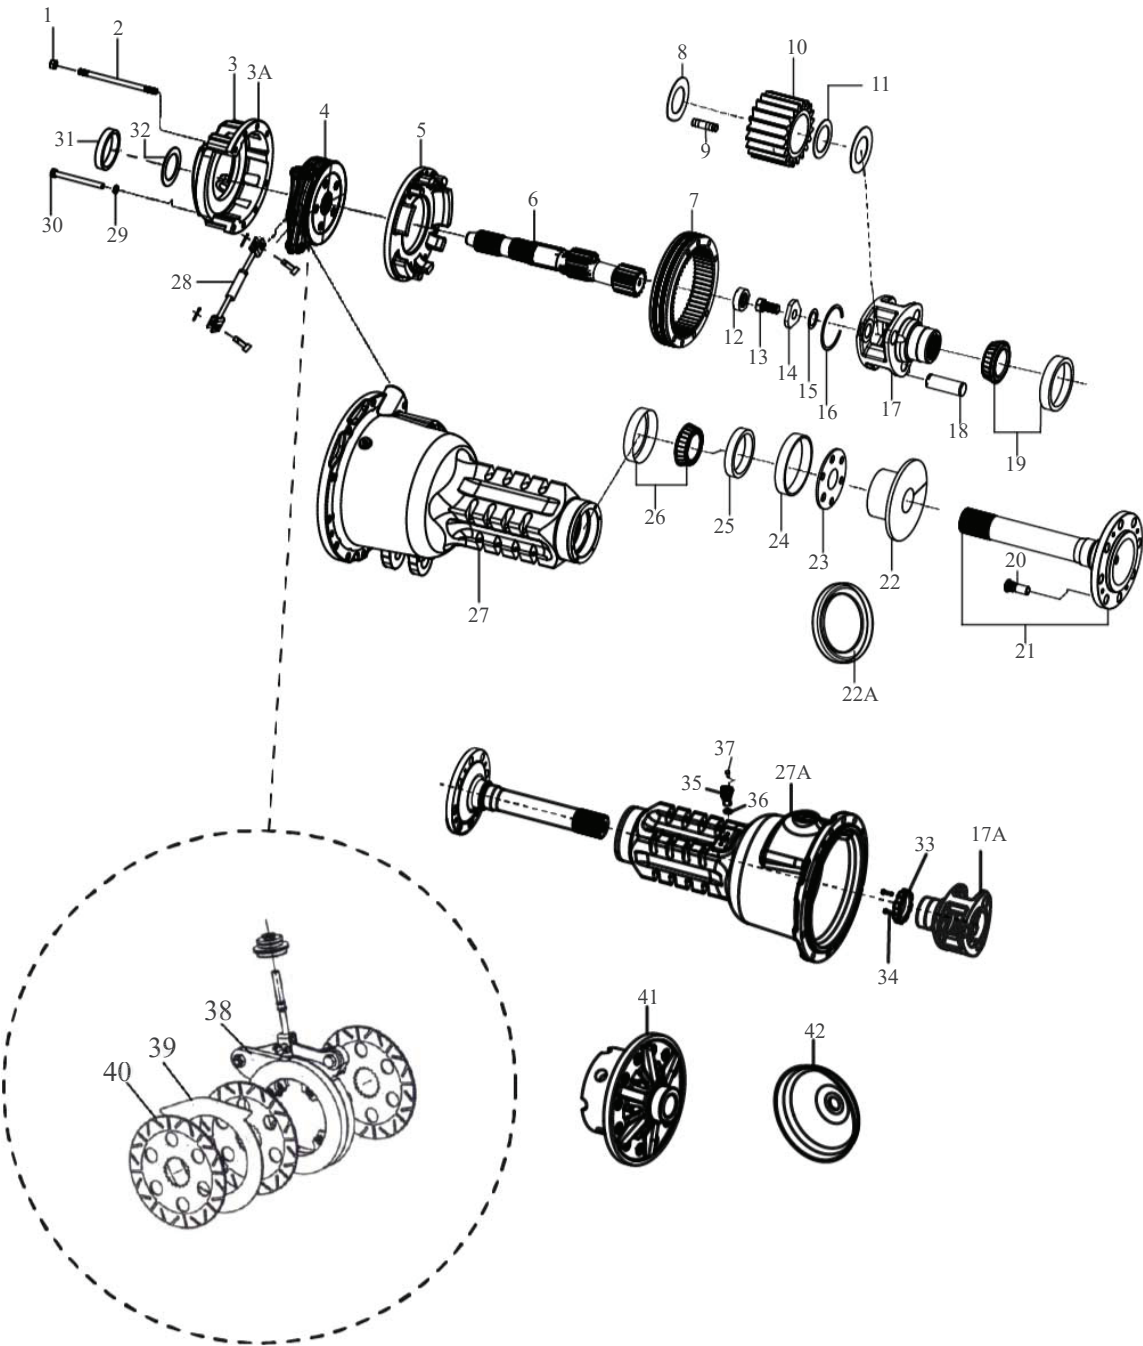


TABLE-38**REAR AXLE, DIFFERENTIAL AND RELATED PARTS**

Fig. No.	Part No.	Description	Qty
31	D10096480.9	SPACER REAR AXLE SHAFT CARRIER	2
32	D10139850.9	SHIM BEARING DIFFERENTIAL REAR AXLE EPI (0.031")	2
33	D10254780.9	GEAR DETECTION SPEEDOMETER SENSOR	1
34	D82500600.9	BOLT M5X0.80X25-8.8 HEX HEAD	2
35	D10327870.9	SENSOR SPEED VEHICLE	1
36	D10257790.9	SEAL O RING 1.25X16	1
37	D81500360.9	BOLT M6X1.00X16-9.8 HEX HEAD	1
38	D10181050.9	ACTUATING UNIT ASSEMBLY (M/S BRAKES INDIA LTD 29321203)	1
39	D10181070.9	DISC INTERMEDIATE (M/S BRAKES INDIA LTD 29320965)	1
40	D10181060.9	DISC FRICTION (M/S BRAKES INDIA LTD 29321202)	1
41	D10084410.9	CASING REAR AXLE DIFFERENTIAL LH	1
42	D10182190.9	GUARD RUBBER BOOT	2
42-1	D10863360AA.9	GUARD RUBBER BOOT EPI BRAKE	2

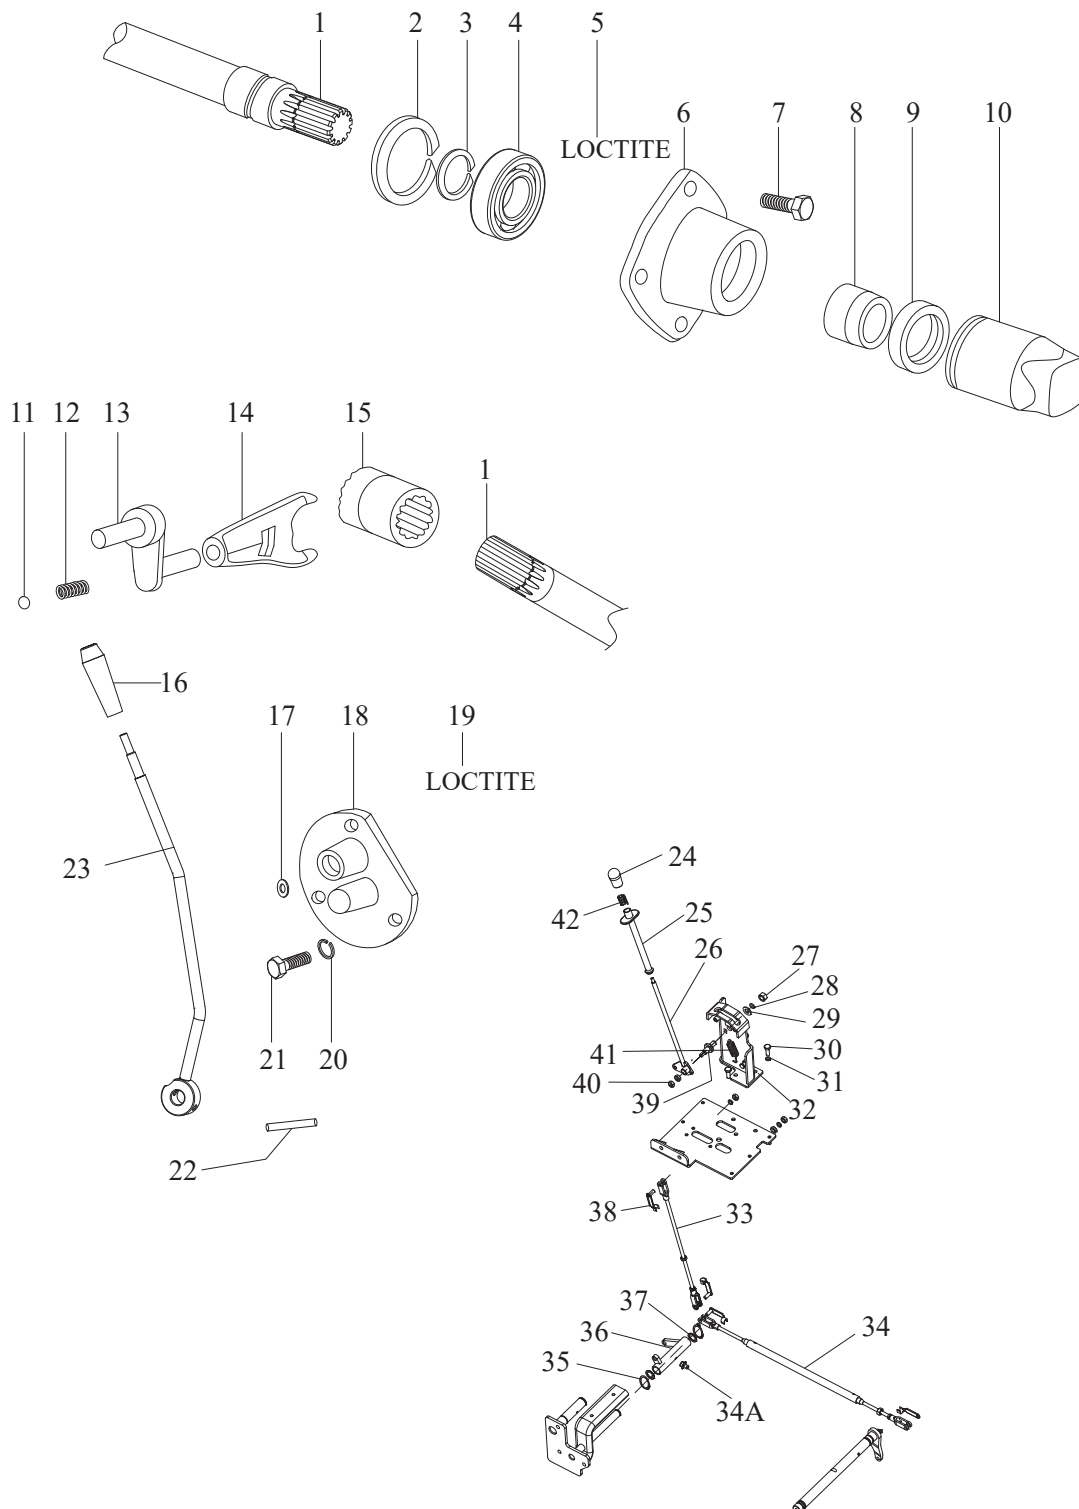
TABLE-39**POWER TAKE OFF ASSEMBLY**

TABLE-39**POWER TAKE OFF ASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10338050.9	SHAFT ASSEMBLY PTO REAR	1
1-1	D10216850.9	SHAFT ASSEMBLY PTO REAR	1
1-2	D10216850AE.9	SHAFT ASSEMBLY PTO REAR	1
1-3	D10807300AD.9	SHAFT ASSEMBLY PTO REAR	1
2	D10000980.9	RING PTO BEARING HOUSING SNAP	1
3	D90000110.9	CIRCLIP A35X2.5H	1
4	D10002140.9	BEARING BALL PTO SHAFT REAR AXLE	1
5	D95010840.9	LOCTITE ANAEROBIC L-5182	1
6	D10490400.9	COVER PTO REAR	1
7	D81000090.9	BOLT 7/16"-14X1.25" HEX HEAD	4
8	D10238270.9	SLEEVE PTO SHAFT REAR AXLE	1
9	D10002130.9	SEAL OIL PTO SHAFT REAR AXLE	1
10	D10042010.9	CAP PTO	1
11	D10000490.9	BALL 3/8" DIAMETER	1
12	D10000690.9	SPRING TRANSMISSION GEAR SHIFT	1
13	D10239390.9	ARM PTO SHIFTER (SIDE SHIFTING GEAR)	1
14	D10002300.9	FORK PTO SHIFTER REAR AXLE	1
15	D10080330.9	SLEEVE PTO SHIFTER	1
15-1	D11041720AA.9	SLEEVE PTO SHIFTER	1
16	D10288130.9	KNOB HAND THROTTLE CONTROL LEVER	1
17	D93600670.9	SEAL O RING 1.78X15.6	1
18	D10080320.9	PLATE PTO SHIFTER	1
19	D95010830.9	LOCTITE 5060	1
20	D86000020.9	WASHER 7/16" SPRING LOCK	3
21	D81000100.9	BOLT 7/16"-14X1.00" HEX HEAD	3
22	D87500320.9	PIN 6.35X40 SPRING DOWEL COMBINATION TYPE	1
22-1	D87000160.9	PIN 1/4"X1.50" SPRING DOWEL COMBINATION TYPE	1
23	D10306320.9	LEVER ASSEMBLY TRANSMISSION PTO SHIFTER	1
24	D10256590.9	KNOB ASSEMBLY (IPTO)	1
25	D10256680.9	CASING LEVER IPTO	1
26	D10256670.9	LEVER ASSEMBLY IPTO CONTROL	1
27	D83500100.9	NUT M14X1.50-6 HEX	1
28	D86500070.9	WASHER M14 SPRING LOCK	1
29	D10042730.9	WASHER 15.5X30 DIFFERENTIAL LOCK BUSH THRUST	1
30	D82500150.9	SCREW M10X1.50X25-8.8 HEX HEAD	3
31	D86500090.9	WASHER M10 SPRING LOCK	3
32	D10256560.9	PLATE AND PIN ASSEMBLY REAR (IPTO)	1
33	D10256530.9	ROD AND CLEVIS ASSEMBLY UPPER (IPTO)	1
33-1	D11057480AB.9	ROD AND ASSEMBLY UPPER (IPTO)	1
34	D10310350.9	ROD AND CLEVIS ASSEMBLY LOWER (INDEPENDENT PTO)	1

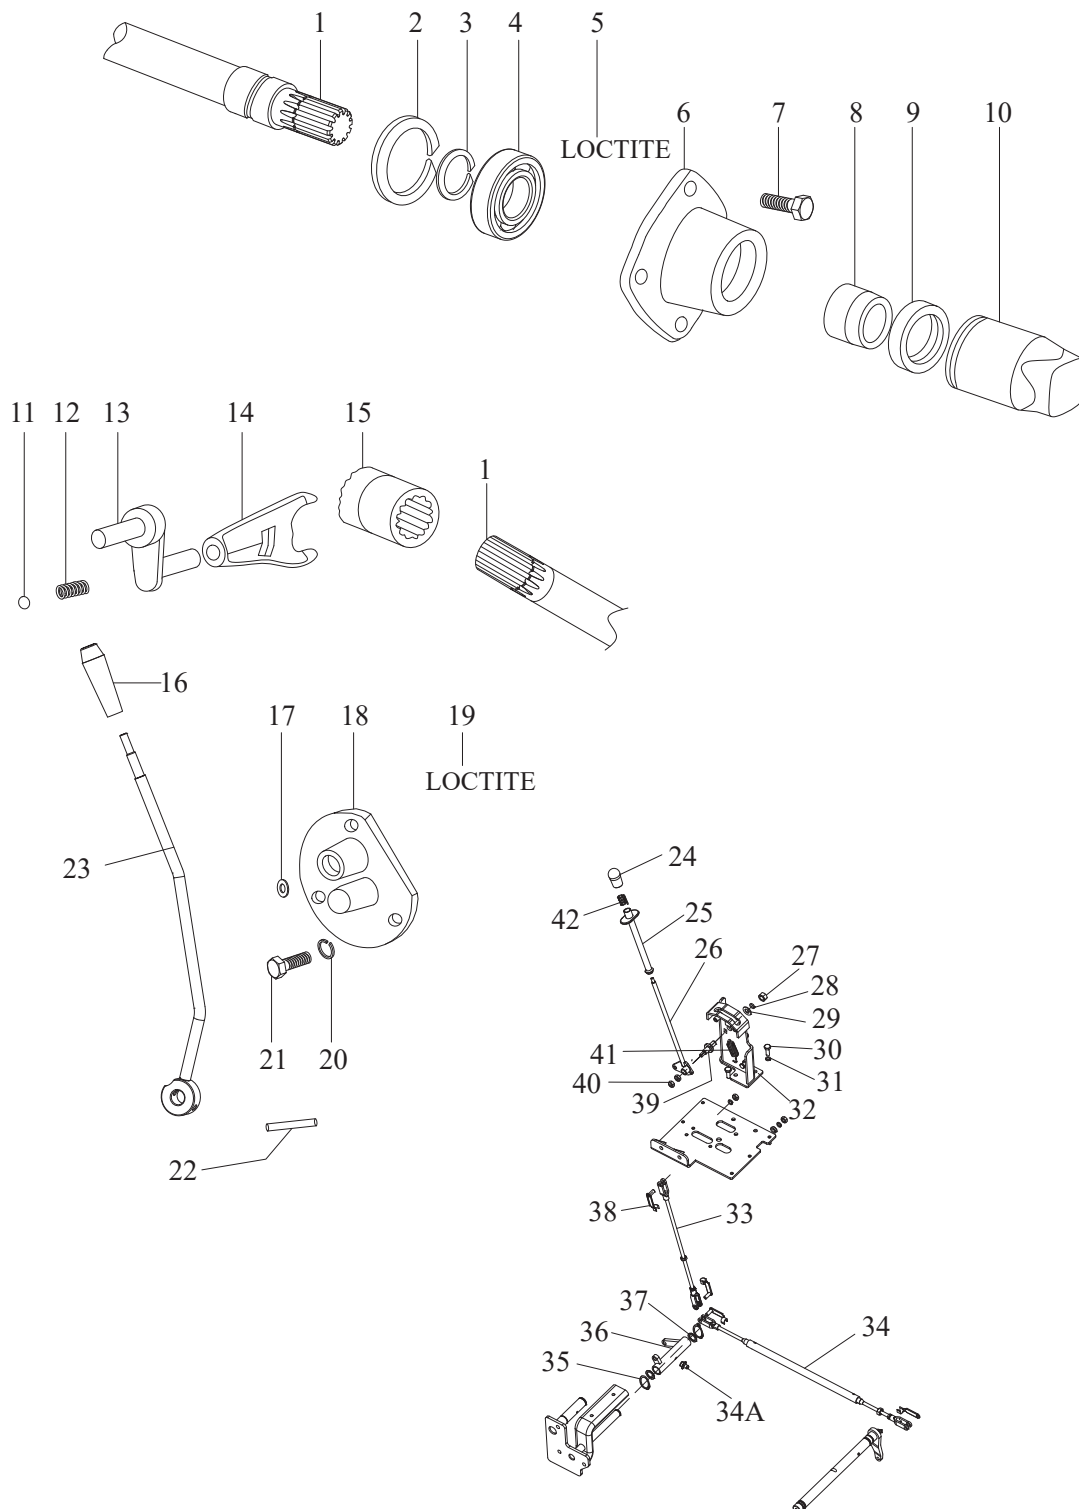
TABLE-39**POWER TAKE OFF ASSEMBLY**

TABLE-39**POWER TAKE OFF ASSEMBLY**

Fig. No.	Part No.	Description	Qty
34-1	D11057470AB.9	ROD AND CLEVIS ASSEMBLY LOWER [IPTO]	1
34A	D92500020.9	GREASE NIPPLE A M10X1	1
35	D90000060.9	CIRCLIP A22X1.2 N	2
36	D10256550.9	HUB AND LEVER ASSEMBLY (IPTO)	1
37	D10188010.9	WASHER THRUST IPTO BUSH	2
38	D10292730.9	PIN 3/8" CLEVIS	4
39	D10317370.9	PIN IPTO LEVER PIVOT	1
40	D83500080.9	NUT M10X1.00-8 HEX	2
41	D10012250.9	SPRING BRAKE PEDAL RETURN	1
42	D10256600.9	SPRING LEVER (IPTO)	1
43	D10195960.9	SPRING TRANSMISSION PTO SHIFTER PLATE	1
44	D10309310.9	SPRING PTO SHAFT CONTROL	1
45	D10309110.9	PLATE SPRING MOUNTING PTO SHAFT	1
46	D10309120.9	LEVER ASSEMBLY PTO SHAFT RETURN	1
47	D10306330.9	LEVER PTO SHIFTER	1

TABLE-40
REAR WHEELS

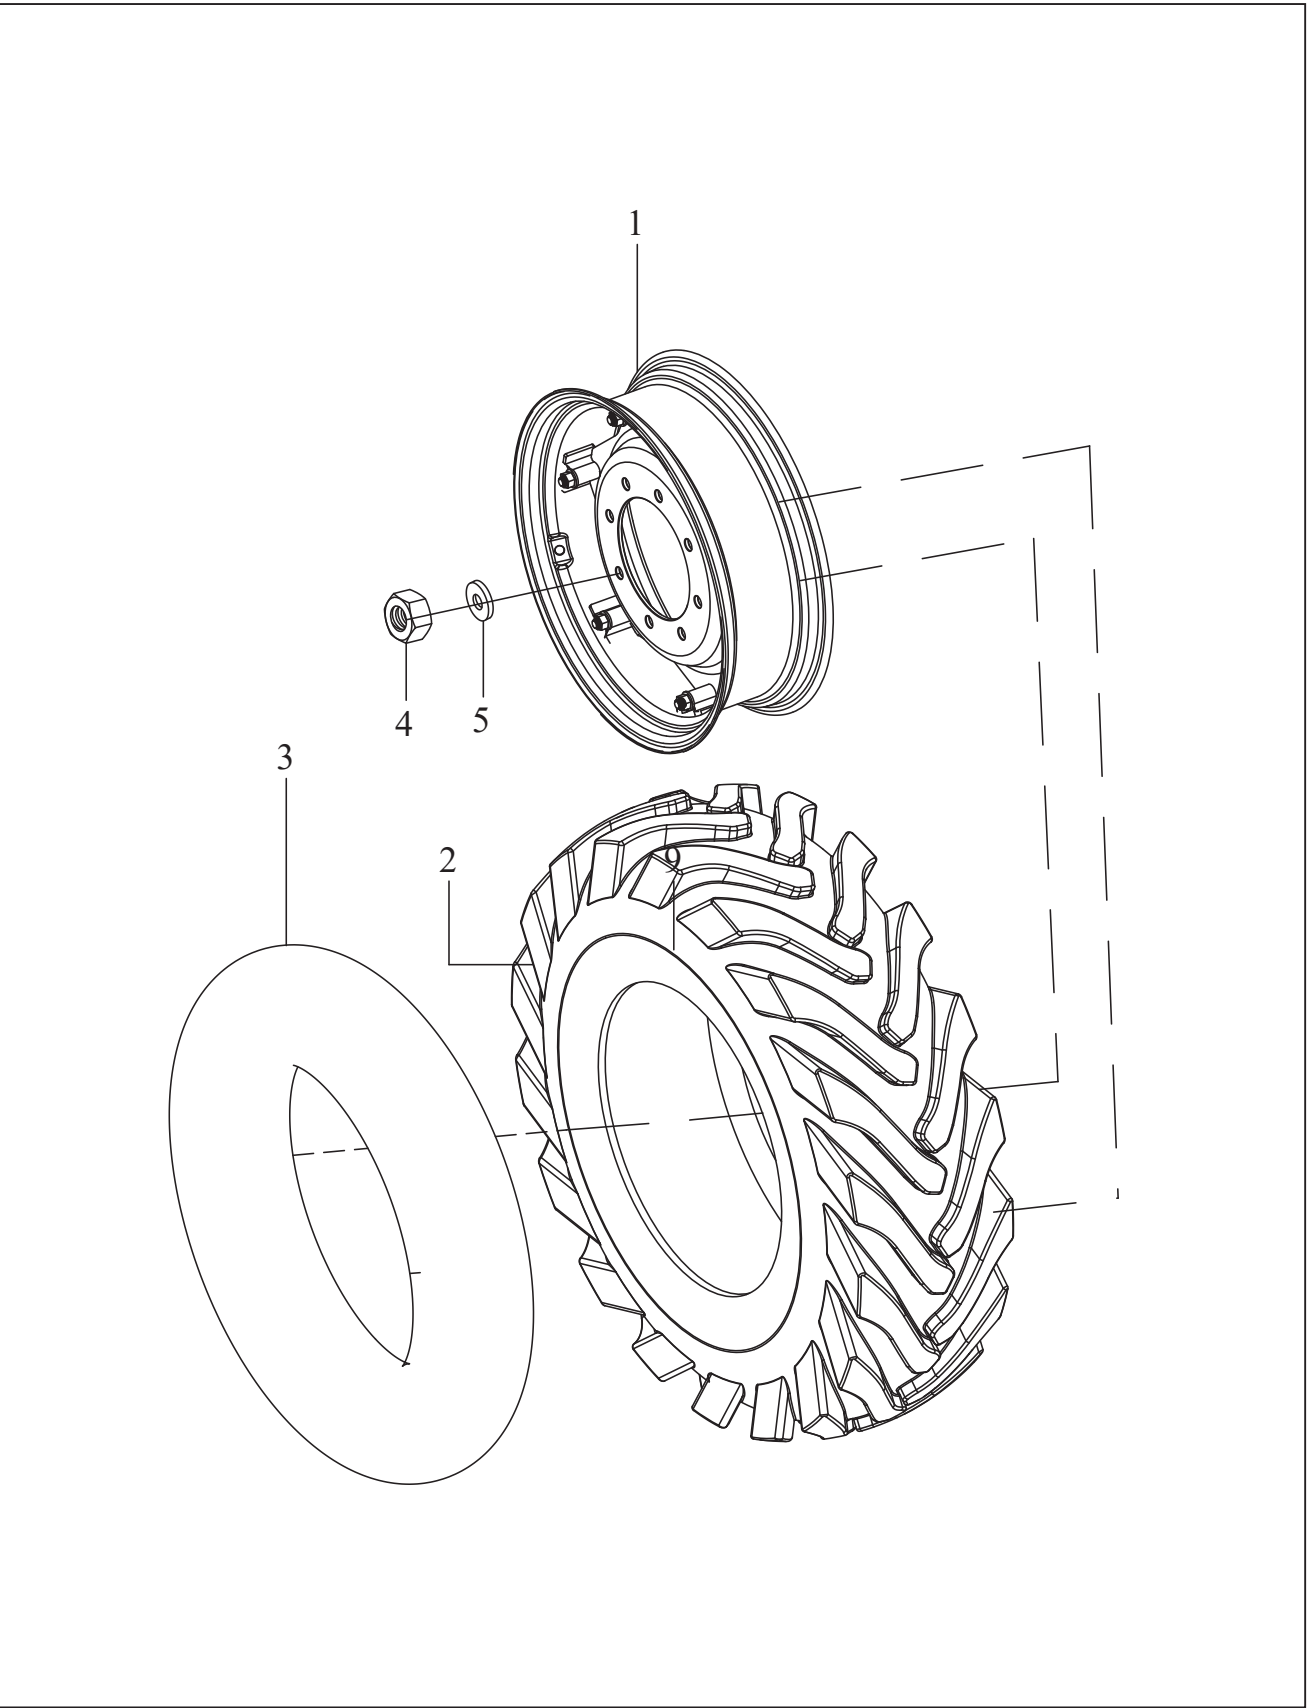


TABLE-40**REAR WHEELS**

Fig. No.	Part No.	Description	Qty
1	D10045420.9	WHEEL ASSEMBLY REAR W15X30 WITHOUT PRIMER	2
2	D10499250.9	TYRE ASSEMBLY REAR WHEEL 16.9X30	2
3	D10499260.9	TUBE ASSEMBLY REAR TYRE 16.9X30	2
4	D83500150.9	NUT M20X1.50-6P HEX	16
5	D86500080.9	WASHER M20 SPRING LOCK	16

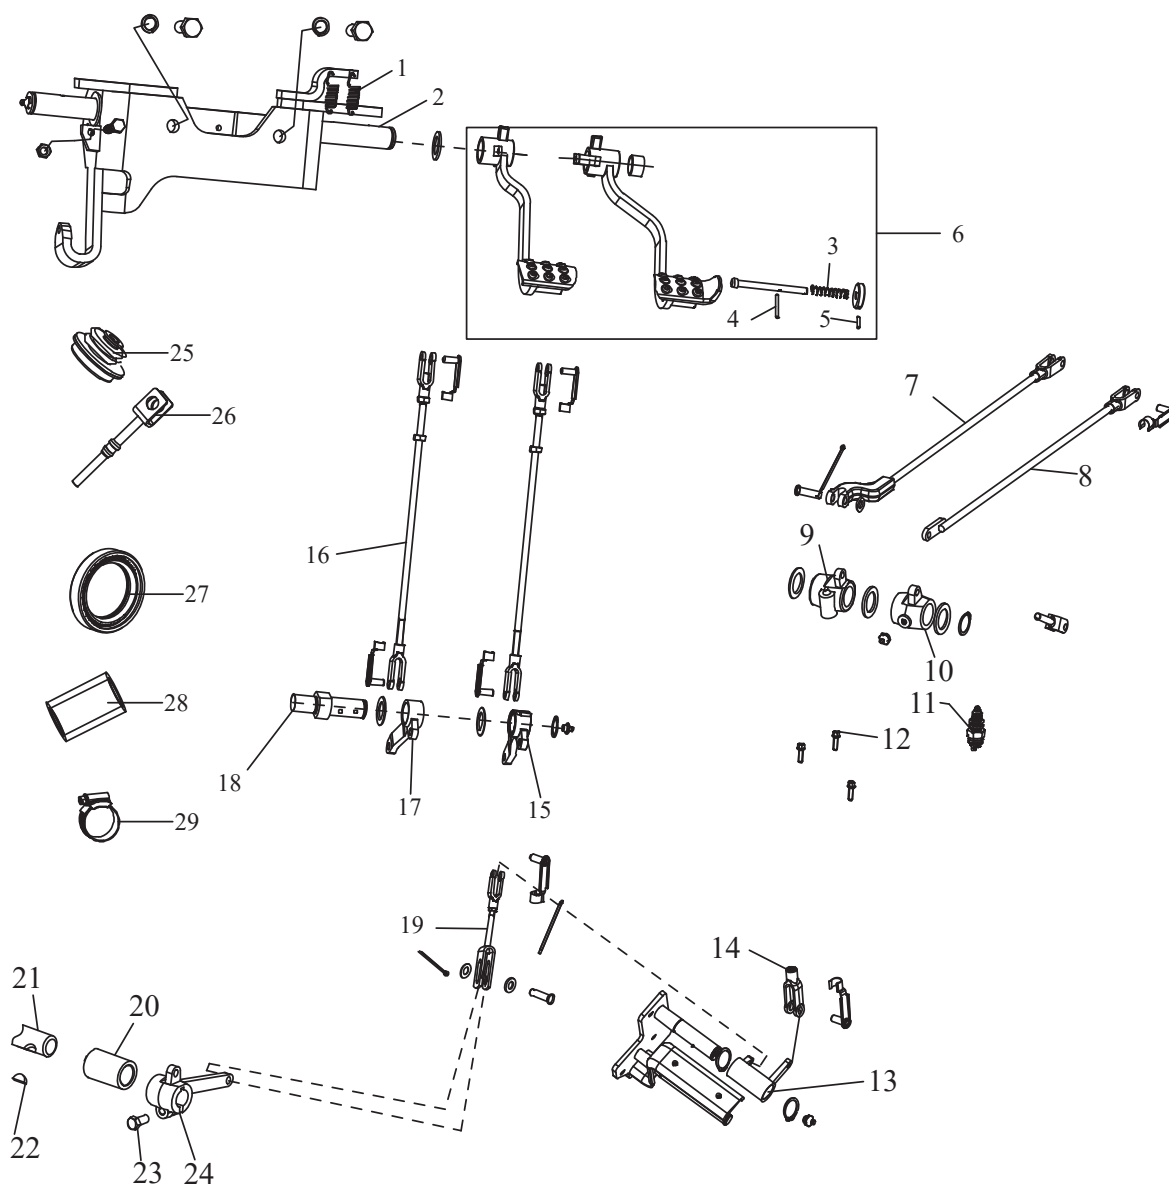
TABLE-41**BRAKES AND BRAKE CONTROLS (UPTO TSN:M6SB37W5GNF590752)**

TABLE-41**BRAKES AND BRAKE CONTROLS (UPTO TSN:M6SB37W5GNF590752)**

Fig. No.	Part No.	Description	Qty
1	D10012250.9	SPRING BRAKE PEDAL RETURN	2
2	D10255360.9	BRACKET ASSEMBLY BRAKE AND CLUTCH PEDAL MOUNTING	1
3	D10256180.9	SPRING BRAKE PEDAL LOCKING	8
4	D10280250.9	PIN 4.0X20.0 SPRING DOWEL	5
4-1	D87000050.9	PIN 3/16"X0.8125" SPRING DOWEL	5
5	D10280260.9	PIN 4.0X40.0 SPRING DOWEL	4
6	D10296660.9	PEDAL ASSEMBLY REAR WHEEL BRAKE (LH/RH SET)	1
7	D10314800.9	ROD AND CLEVIS ASSEMBLY BRAKE CONTROL LH	1
8	D10256190.9	ROD AND CLEVIS ASSEMBLY LOWER BRAKE RH	1
9	D10229900.9	BUSH BRAKE PEDAL	1
10	D10242460.9	HUB BRAKE PEDAL RH	8
11	D10279580.9	SWITCH ASSEMBLY STOP LAMP NC TYPE	1
12	D10011090.9	BOLT M6X1.00X20-6.6 HEX FLANGED (LUBE OIL PUMP)	1
13	D10258170.9	LEVER AND HUB ASSEMBLY PARKING BRAKE	4
15	D10256240.9	HUB AND LEVER ASSEMBLY BRAKE PEDAL RH	3
16	D10297260.9	ROD AND CLEVIS ASSEMBLY CLUTCH CONTROL	1
17	D10256230.9	HUB AND LEVER ASSEMBLY BRAKE PEDAL LH	1
18	D10288340.9	PIN BRAKE LEVER	1
19	D10233990.9	LINKAGE ASSEMBLY PARKING BRAKE CONTROL	3
20	D10234130.9	HUB BRAKE LH	1
21	D10012030.9	SHAFT BRAKE PEDAL	1
22	D91000070.9	KEY 1/4"X7/8" WOODRUFF	1
23	D81000070.9	BOLT 7/16"-14X0.875" HEX HEAD	1
24	D10234120.9	LEVER BRAKE OPERATING LH	1
25	D10181170.9	BOOT EXTERNAL REAR WHEEL BRAKE LINKAGE (DIA 50)	2
26	D10181190.9	FORK BRAKE CONTROL	1
26-1	D10863350.9	FORK BRAKE CONTROL	1
27	D10012560.9	SEAL ASSEMBLY BRAKE PEDAL SHAFT	1
28	D10234130.9	HUB BRAKE LH	1
29	D10243340.9	CLAMP ASSEMBLY RUBBER BOOT BRAKE	2

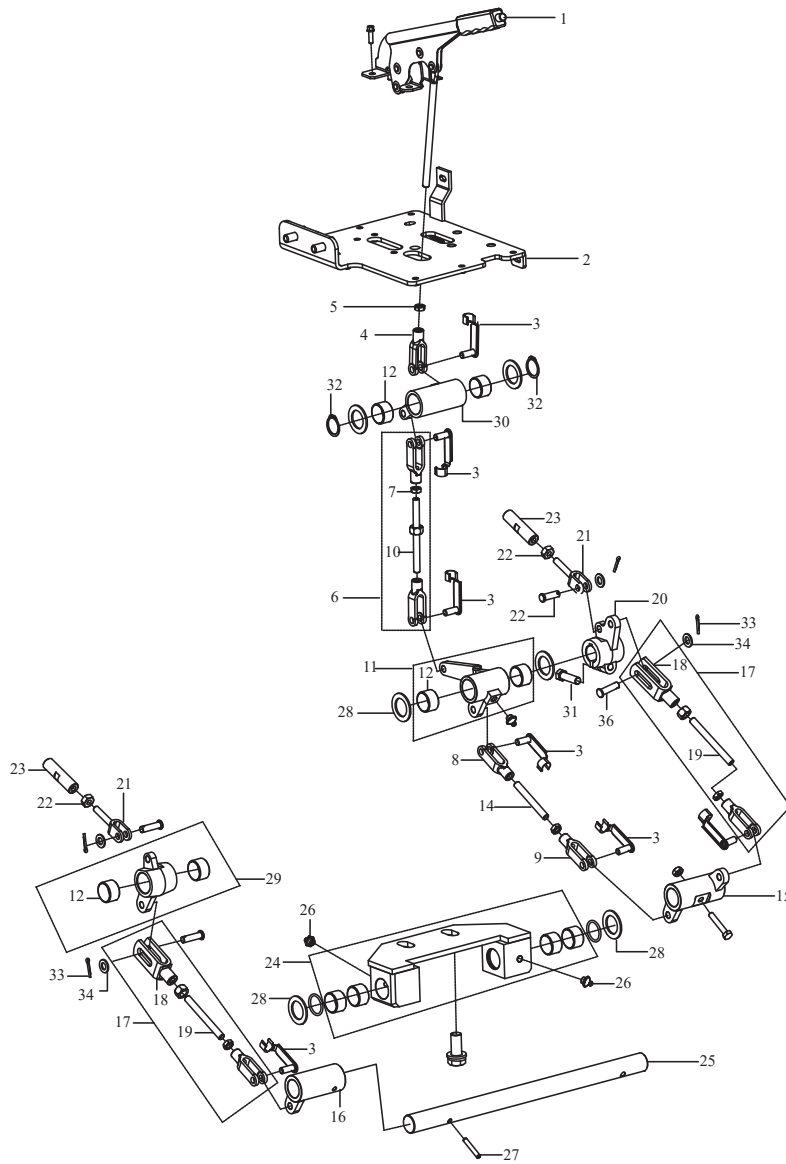
TABLE-42**INDEPENDENT PARKING BRAKE**

TABLE-42**INDEPENDENT PARKING BRAKE**

Fig. No.	Part No.	Description	Qty
1	D10255220.9	LEVER ASSEMBLY PARKING BRAKE	1
2	D10395700.9	BRACKET ASSEMBLY IPTO MOUNTING	1
3	D10292730.9	PIN 3/8" CLEVIS	8
4	D10102360.9	CLEVIS 3/8"	1
5	D83000010.9	NUT 3/8"-24 HEX	8
6	D10509190.9	ROD AND CLEVIS ASSEMBLY LOWER PARKING BRAKE	1
7	D10243650.9	NUT BRAKE CONTROL ROD	1
8	D10293150.9	CLEVIS 3/8" -24 LH THREAD	3
9	D10293160.9	CLEVIS 3/8"	3
10	D10509200.9	ROD LINKAGE LOWER PARKING BRAKE	1
11	D10509210.9	HUB AND LEVER ASSEMBLY BRAKE LH	1
12	D10062640.9	BUSHING CLUTCH PEDAL	2
13	D10509260.9	ROD AND CLEVIS ASSEMBLY BOTTOM PARKING BRAKE	1
14	D10509270.9	ROD BOTTOM PARKING BRAKE	1
15	D10509280.9	HUB AND LEVER ASSEMBLY PARKING BRAKE LEFT	1
16	D10509400.9	HUB AND LEVER ASSEMBLY PARKING BRAKE RIGHT	1
17	D10509310.9	ROD AND CLEVIS ASSEMBLY FRONT PARKING BRAKE	2
18	D10493790.9	FORK BRAKE CONTROL CLEVIS ASSEMBLY	2
19	D10509320.9	ROD FRONT PARKING BRAKE	2
20	D10509330.9	HUB AND LEVER ASSEMBLY BRAKE PEDAL SHAFT PARKING BRAKE LEFT	1
21	D10181100.9	ROD AND CLEVIS ASSEMBLY BRAKE CONTROL	2
22	D83500080.9	NUT M10X1.00-8 HEX	6
23	D10113310.9	CONNECTOR FORK BRAKE	2
24	D10509360.9	BRACKET AND BUSH ASSEMBLY PARKING BRAKE	2
25	D10509390.9	ROD INTERMEDIATE PARKING BRAKE	1
26	D92500020.9	GREASE NIPPLE A M10X1	3
27	D87500320.9	PIN 6.35X40 SPRING DOWEL COMBINATION TYPE	1
27-1	D87000160.9	PIN 1/4"X1.50" SPRING DOWEL COMBINATION TYPE	1
28	D10012260.9	WASHER BRAKE PEDAL CROSS SHAFT THRUST	5
29	D10509410.9	HUB AND LEVER ASSEMBLY BRAKE PEDAL SHAFT PARKING BRAKE RIGHT	1
30	D10258170.9	LEVER AND HUB ASSEMBLY PARKING BRAKE	1
31	D81000470.9	BOLT 7/16"-14X1.50" HEX HEAD	5
32	D90000570.9	CIRCLIP A28X1.5 N	2
33	D10013460.9	PIN 1/8"X0.75" COTTER	2
34	D85500140.9	WASHER M10 FLAT	2
35	D93400030.9	PIN 3/8"X1.14" CLEVIS	5
36	D10258180.9	PIN 10X35 CLEVIS	3

TABLE-43
HYDRAULIC LIFT COVER

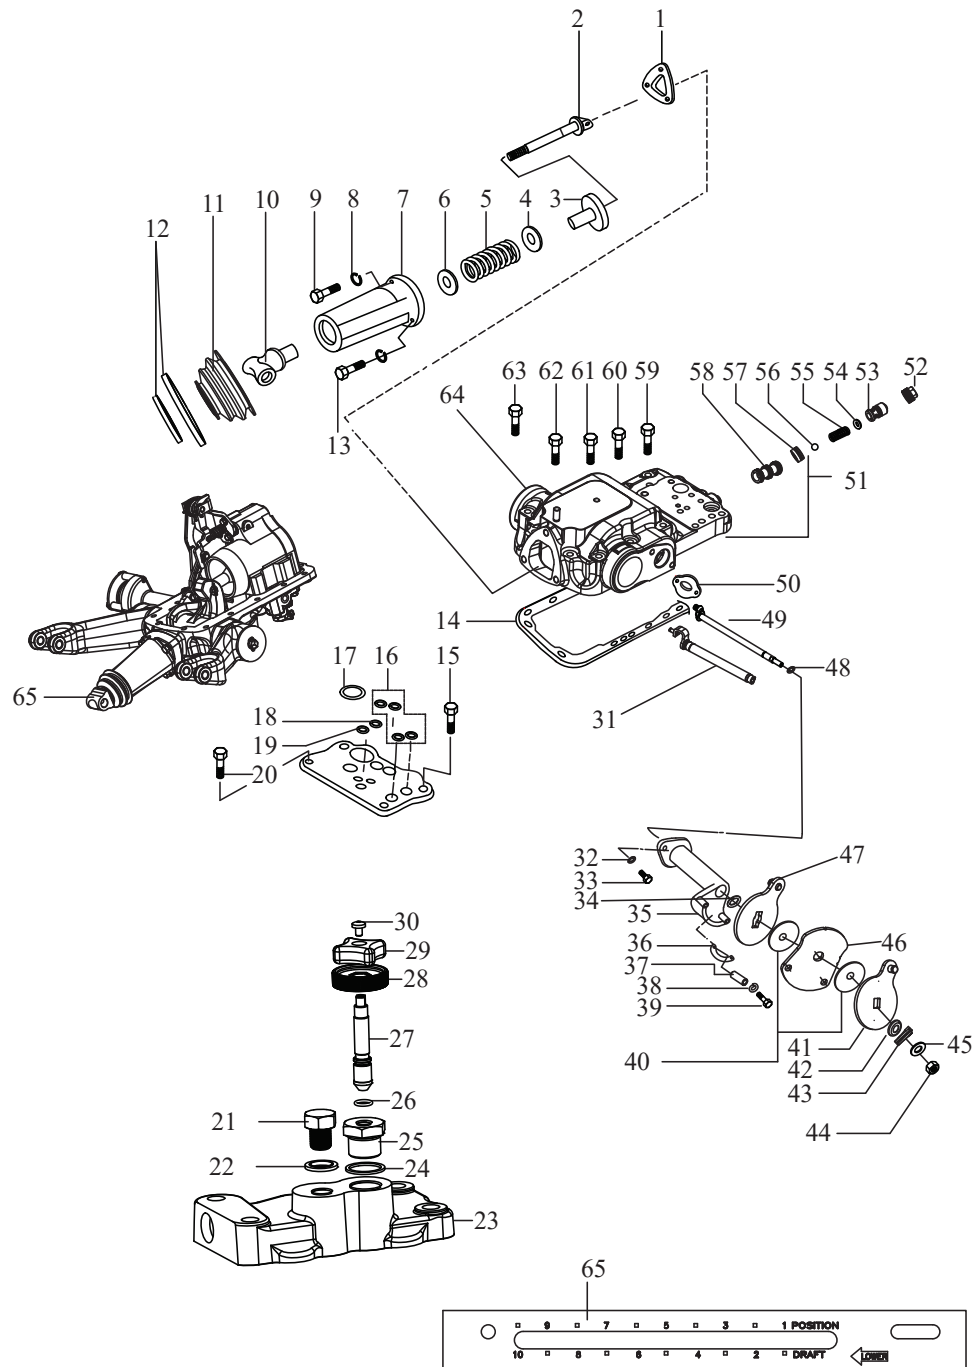


TABLE-43**HYDRAULIC LIFT COVER**

Fig. No.	Part No.	Description	Qty
1	D10072290.9	GASKET HOUSING HYDRAULIC LIFT	1
2	D10436210.9	PLUNGER HYDRAULIC LIFT DRAFT CONTROL	1
3	D10436220.9	SEAT DRAFT CONTROL SPRING HOUSING	1
4	D10059170.9	SHIM HYDRAULIC LIFT DRAFT CONTROL (0.0150")	AR
4A	D10059180.9	SHIM HYDRAULIC LIFT DRAFT CONTROL (0.0200")	AR
4B	D10059190.9	SHIM HYDRAULIC LIFT DRAFT CONTROL (0.0250")	AR
5	D10096860.9	SPRING HPL DRAFT CONTROL MAIN	1
5-1	D10368470.9	SPRING HPL DRAFT CONTROL MAIN	1
6	D10059510.9	SEAT HYDRAULIC LIFT DRAFT CONTROL SPRING	1
7	D10436910.9	HOUSING HYDRAULIC LIFT DRAFT CONTROL SPRING	1
8	D86000020.9	WASHER 7/16" SPRING LOCK	3
9	D10292860.9	BOLT 7/16"-14X1.75" HEX HEAD WITH HOLE	1
10	D10436200.9	YOKE HYDRAULIC LIFT	1
11	D10385440.9	BOOT HYDRAULIC LIFT YOKE	1
12	D10236610.9	CLAMP YOKE HYDRAULIC LIFT	2
13	D10292860.9	BOLT 7/16"-14X1.75" HEX HEAD WITH HOLE	2
14	D10012170.9	GASKET HYDRAULIC LIFT ASSEMBLY	1
15	D81001020.9	BOLT 5/16"-18X1.50" HEX HEAD	1
16	D93600190.9	SEAL O RING 0.103"X0.562"	5
17	D93600200.9	SEAL O RING 0.103"X0.812"	1
18	D93600050.9	SEAL O RING 0.070"X0.440"	1
19	D93600060.9	SEAL O RING 0.070"X0.500"	1
20	D10061110.9	BOLT 7/16"-14X1.38" HEX HEAD	2
21	D81001170.9	BOLT 9/16"-18X0.62 HEX HEAD	1
22	D10066820.9	SEAL 9/16" OIL PASSAGE PLUG	1
22-1	D93601400.9	SEAL BONDED M22 (DOWTY)	1
23	D10509750.9	COVER HYDRAULIC LIFT ACCESSORY (MACHINING)	1
24	D10186460.9	WASHER 22X27 FLAT COPPER	1
25	D10186470.9	ADAPTER M22X1.5 COVER HYDRAULIC LIFT ACCESSORY	1
26	D10186450.9	SEAL O RING 1.80X9.0	1
27	D10186510.9	SPOOL COVER HYDRAULIC LIFT ACCESSORY	1
28	D10186480.9	KNOB COVER HYDRAULIC LIFT ACCESSORY LOWER	1
29	D10228950.9	KNOB COVER HYDRAULIC LIFT ACCESSORY UPPER	1
30	D10186500.9	SCREW COVER HYDRAULIC LIFT ACCESSORY	1
31	D10289190.9	SUPPORT HYDRAULIC LIFT CONTROL QUADRANT	1
31-1	D10289190AF.9	SHAFT ASSEMBLY HYDRAULIC LIFT DRAFT CONTROL SELECTOR	1
32	D86000020.9	WASHER 7/16" SPRING LOCK	2
33	D81000100.9	BOLT 7/16"-14X1.00" HEX HEAD	2
34	D93600050.9	SEAL O RING 0.070"X0.440"	1
35	D10069400.9	SUPPORT HYDRAULIC LIFT CONTROL QUADRANT	1

TABLE-43
HYDRAULIC LIFT COVER

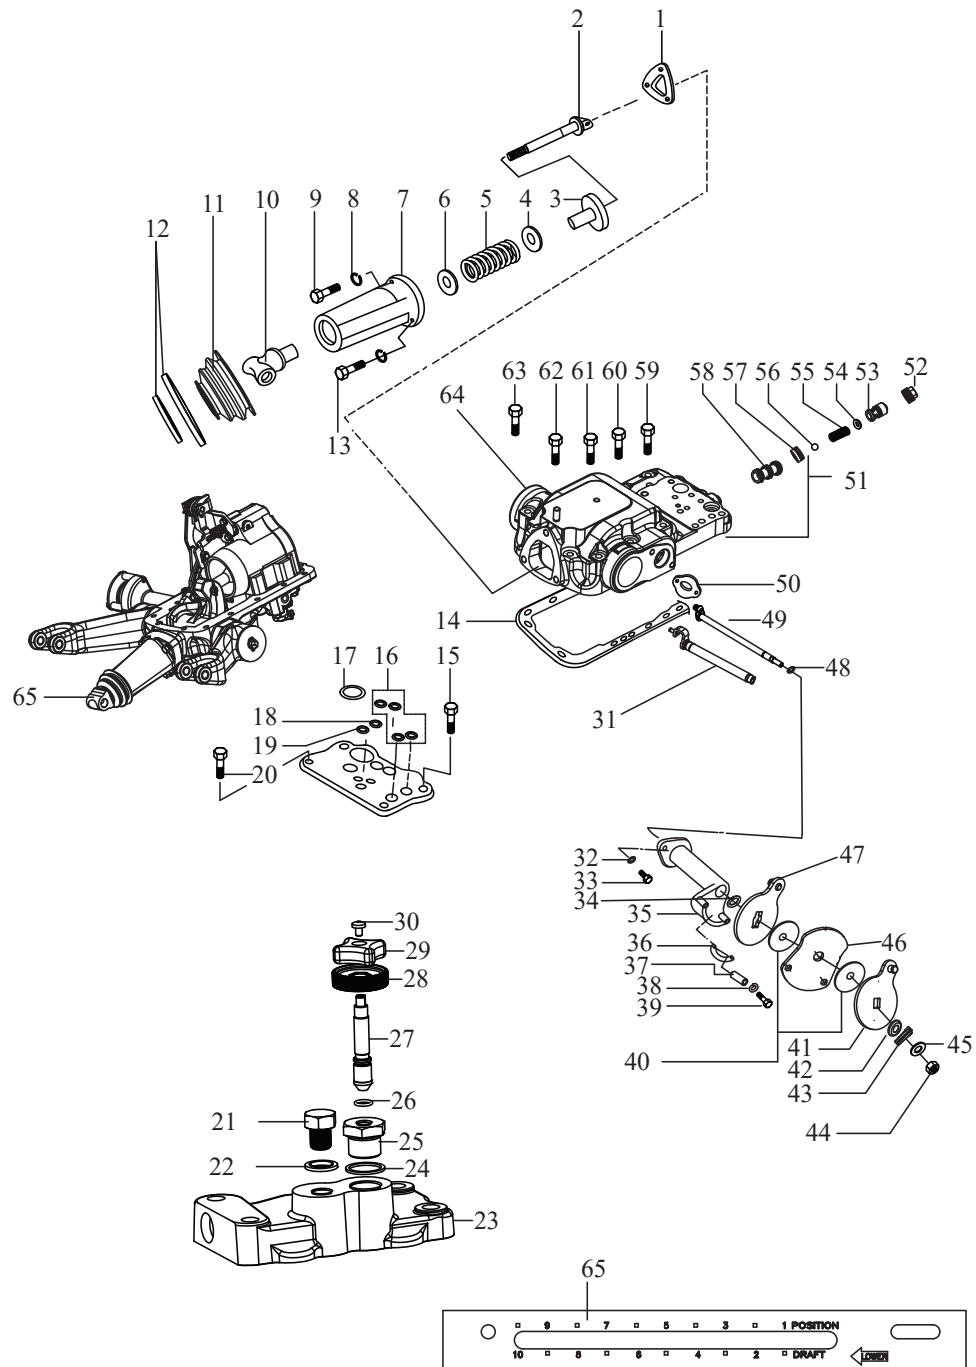


TABLE-43**HYDRAULIC LIFT COVER**

Fig. No.	Part No.	Description	Qty
36	D10060820.9	SPACER HYDRAULIC LIFT CONTROL LEVER	AR
37	D10258770.9	BUSH HYDRAULIC BODY EXTENTION	2
38	D86000010.9	WASHER 3/8" SPRING LOCK	2
39	D81001120.9	BOLT 3/8"-16X3.00" HEX HEAD	2
40	D10069270.9	DISC HYDRAULIC LIFT CONTROL FRICTION	2
41	D10258810.9	LEVER ASSEMBLY HYDRAULIC LIFT POSITION CONTROL	1
42	D10072300.9	WASHER LIFT CONTROL SHAFT CUP	1
43	D10072320.9	WASHER HYDRAULIC LIFT CONTROL SPRING	1
44	D83000100.9	NUT 7/16"-20 NYLOCK	1
45	D85500060.9	WASHER M12 FLAT	1
46	D10258820.9	DISC HYDRAULIC LIFT CONTROL	1
47	D10258800.9	LEVER ASSEMBLY HYDRAULIC LIFT DRAFT CONTROL	1
48	D10024070.9	SEAL O RING 2.40X25.00	1
49	D10280280.9	SHAFT HYDRAULIC LIFT CONTROL LEVER	1
50	D10058660.9	GASKET HYDRAULIC LIFT QUADRANT COVER	1
51	D10490170.9	COVER HYDRAULIC LIFT WITH SLEEVE ASSEMBLY	1
51-1	D10497400.9	COVER HYDRAULIC LIFT WITH SLEEVE ASSEMBLY	1
52	D10059150.9	PLUG HYDRAULIC LIFT CHECK VALVE	1
53	D10068910.9	RETAINER HYDRAULIC LIFT CHECK VALVE	1
54	D93600090.9	SEAL O RING 0.103"X0.625"	1
55	D10060590.9	SPRING HYDRAULIC LIFT CHECK VALVE	1
56	D10066970.9	BALL 15/32" DIAMETER	1
57	D10193040.9	SEAT HYDRAULIC LIFT CHECK VALVE AND SEAL ASSEMBLY	1
58	D10059320.9	SLEEVE HYDRAULIC LIFT CHECK VALVE SEAT	1
59	D81000470.9	BOLT 7/16"-14X1.50" HEX HEAD	4
60	D10067070.9	BOLT 7/16"-20X1.75" HEX HEAD	3
61	D81000480.9	BOLT 7/16"-14X2.00" HEX HEAD	1
62	D81000500.9	BOLT 7/16"-14X3.25" HEX HEAD	4
63	D81000510.9	BOLT 7/16"-14X3.50" HEX HEAD	5
64	D10077970.9	PIN PLUNGER GUIDE HYDRAULIC LIFT	1
65	D95009560.9	HYDRAULIC LIFT ASSEMBLY 1500KG	1

TABLE-44
HYDRAULIC LIFT CYLINDER

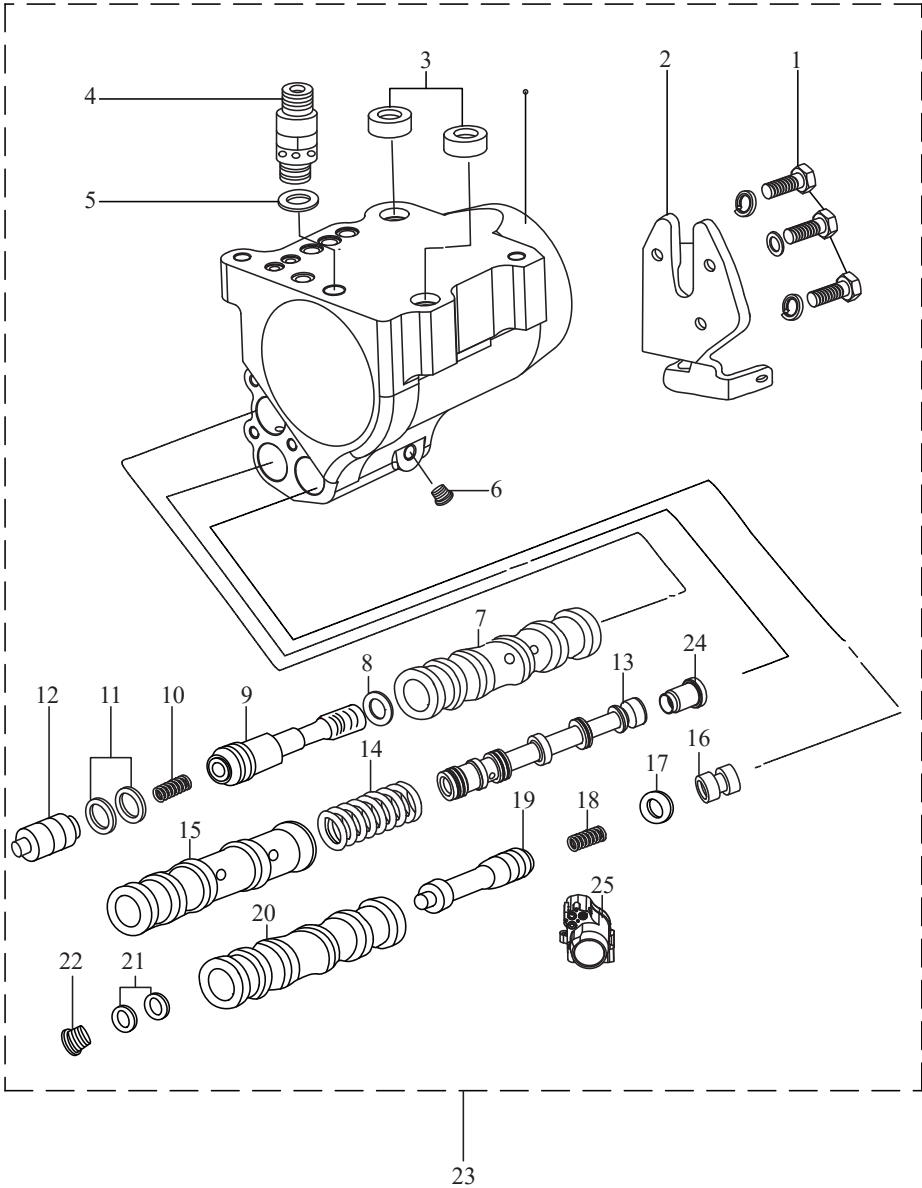


TABLE-44**HYDRAULIC LIFT CYLINDER**

Fig. No.	Part No.	Description	Qty
1	D10072280.9	BOLT 5/16"-18X0.75" HEX HEAD FLANGED	3
2	D10068990.9	PLATE HYDRAULIC LIFT VALVE RETAINING REAR	1
3	D10059200.9	RING HYDRAULIC CYLINDER DOWEL	2
4	D10194150.9	VALVE ASSEMBLY HYDRAULIC LIFT SAFETY	1
5	D10059580.9	GASKET HYDRAULIC LIFT SAFETY VALVE	1
6	D93100060.9	PLUG 1/"8-27 SOCKET HEX HEAD (STEEL)	4
7	D10068920.9	BUSHING HYDRAULIC LIFT UNLOADING VALVE REAR	1
8	D93600060.9	SEAL O RING 0.070"X0.500"	1
9	D10069000.9	VALVE HYDRAULIC LIFT UNLOAD	1
10	D10066650.9	SPRING HYDRAULIC LIFT UNLOAD VALVE	1
11	D93600170.9	SEAL O RING 0.070"X0.562"	2
12	D10060690.9	PLUG HYDRAULIC LIFT UNLOAD VALVE	1
13	D10077940.9	VALVE HYDRAULIC LIFT CONTROL	1
14	D10061760.9	SPRING HYDRAULIC LIFT CONTROL VALVE	1
14-1	D10061760AD.9	SPRING HYDRAULIC LIFT CONTROL VALVE	1
15	D10194520.9	BUSHING CONTROL VALVE HYDRAULIC LIFT	1
16	D10069040.9	PLUG HYDRAULIC LIFT VALVE BLOCK	1
17	D93600050.9	SEAL O RING 0.070"X0.440"	1
18	D10069030.9	SPRING HYDRAULIC LIFT FLOW CONTROL VALVE	1
19	D10069010.9	SPOOL HYDRAULIC LIFT PUMP FLOW CONTROL VALVE	1
20	D10077930.9	BUSHING HYDRAULIC LIFT FLOW CONTROL	1
21	D93600060.9	SEAL O RING 0.070"X0.500"	2
22	D10067770.9	PLUG HYDRAULIC LIFT VALVE BLOCK	1
23	D10414740.9	CYLINDER WITH VALVE AND PISTON ASSEMBLY HYDRAULIC LIFT	1
24	D10077950.9	SLEEVE HYDRAULIC LIFT CONTROL VALVE	1
25	D10414750.9	CYLINDER ASSEMBLY WITH BUSHING AND SPOOL VALVE HYDRAULIC LIFT	1
25-1	D10414750AC.9	CYLINDER ASSEMBLY WITH BUSHING AND SPOOL VALVE HYDRAULIC LIFT	1

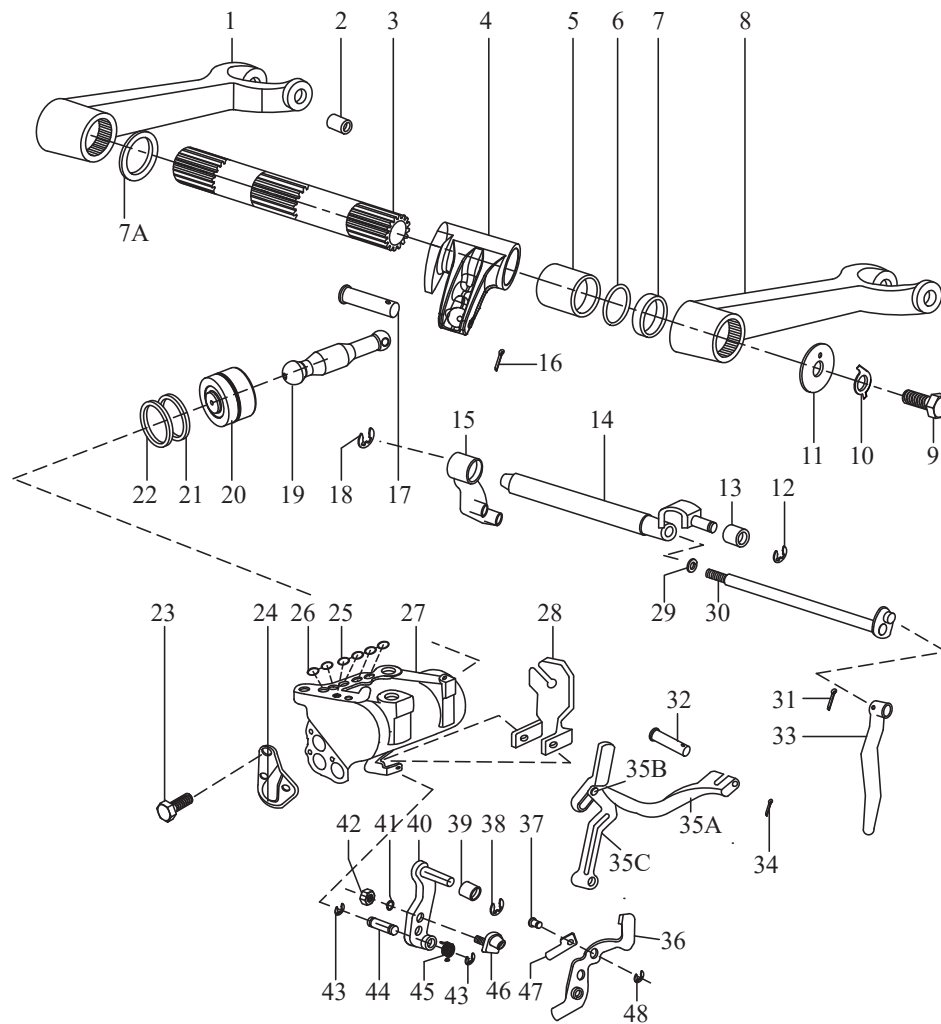
TABLE-45**HYDRAULIC LIFT SHAFTS HEAVY DUTY**

TABLE-45**HYDRAULIC LIFT SHAFTS HEAVY DUTY**

Fig. No.	Part No.	Description	Qty
1	D10436010.9	ARM ASSEMBLY HYDRAULIC LIFT RH	1
1-1	D10436010AD.9	ARM ASSEMBLY HYDRAULIC LIFT RH	1
1-2	D10436010AE.9	ARM ASSEMBLY HYDRAULIC LIFT RH	1
2	D10095850.9	BUSH HYDRAULIC POWER LIFT ARM	4
3	D10414800.9	SHAFT SERRATED HYDRAULIC LIFT	1
4	D10433420.9	ARM HYDRAULIC LIFT RAM	1
5	D10438780.9	BUSH HYDRAULIC LIFT SHAFT	2
6	D10095170.9	SEAL O RING 3.2X54.0	2
7	D10436050.9	BUSH HYDRAULIC LIFT SHAFT	2
7A	D10095220.9	WASHER HYDRAULIC LIFT SHAFT THRUST	1
8	D10436000.9	ARM ASSEMBLY HYDRAULIC LIFT LH	1
8-1	D10436000AD.9	ARM HYDRAULIC LIFT LH	1
8-2	D10436000AE.9	ARM HYDRAULIC LIFT LH	1
9	D81001010.9	BOLT 1/2"-20X1.00" HEX HEAD	2
10	D10058700.9	WASHER SHAFT HYDRAULIC LIFT LOCK	2
11	D10095210.9	WASHER SHAFT HYDRAULIC LIFT	2
12	D90000410.9	RING 3/8" RETAINING TYPE RC EXTERNAL	1
13	D10067730.9	ROLLER HYDRAULIC LIFT POSITION CAM FOLLOWER	1
14	D10289190.9	SUPPORT HYDRAULIC LIFT CONTROL QUADRANT	1
15	D10067590.9	LEVER AND ROLLER ASSEMBLY HYDRAULIC LIFT CONTROL	1
16	D10013460.9	PIN 1/8"X0.75" COTTER	1
17	D10066580.9	PIN 5/16"X2.00" CLEVIS	1
18	D90000430.9	RING 1" RETAINING TYPE RC EXTERNAL	1
19	D10095160.9	ROD HYDRAULIC LIFT CONNECTING	1
19-1	D10095160AD.9	ROD HYDRAULIC LIFT CONNECTING	1
20	D10095140.9	PISTON HYDRAULIC LIFT CYLINDER	1
21	D10281210.9	SEAL O RING PISTON HYDRAULIC LIFT	1
22	D10234190.9	RING HYDRAULIC LIFT PISTON SEAL	1
23	D10072280.9	BOLT 5/16"-18X0.75" HEX HEAD FLANGED	3
24	D10095200.9	BAFFLE HYDRAULIC LIFT CYLINDER OIL OUTER	1
25	D10072340.9	SEAL O RING 0.364"X0.066"	2
26	D10249630.9	SEAL RING 1.68X11.44 DIAMETER HYDRAULIC LIFT ACCESS COVER	4
27	D10095180.9	LEVER ASSEMBLY HYDRAULIC LIFT CONTROL VALVE	1
27-1	D10095180AC.9	LEVER ASSEMBLY HYDRAULIC LIFT CONTROL VALVE ACTUATING	1
28	D10068990.9	PLATE HYDRAULIC LIFT VALVE RETAINING REAR	1
29	D10067700.9	WASHER HYDRAULIC LIFT SHAFT THRUST	1
30	D10280280.9	SHAFT HYDRAULIC LIFT CONTROL LEVER	1
31	D93400140.9	PIN 1/8X0.75 SPRING ROLL	1
32	D10067060.9	PIN 3/8"X1.656" CLEVIS	1
33	D10067690.9	LEVER HYDRAULIC LIFT CONTROL	1

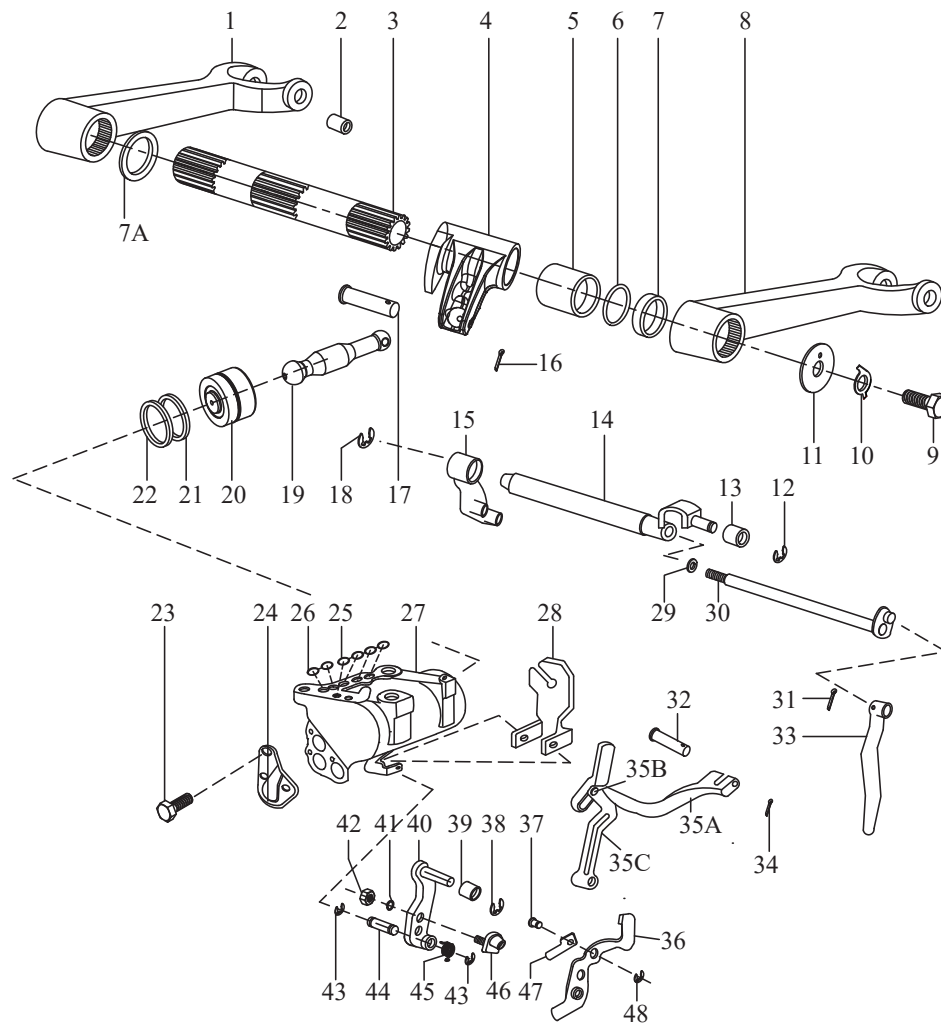
TABLE-45**HYDRAULIC LIFT SHAFTS HEAVY DUTY**

TABLE-45**HYDRAULIC LIFT SHAFTS HEAVY DUTY**

Fig. No.	Part No.	Description	Qty
34	D10013460.9	PIN 1/8"X0.75" COTTER	1
35A	D10286500.9	LINK HYDRAULIC LIFT DRAFT CONTROL CONNECTER	1
35B	D10077960.9	PIN PIVOT ACUATOR HYDRAULIC LIFT	1
35C	D10077850.9	LEVER HYDRAULIC LIFT DRAFT CONTROL	1
36	D10059910.9	LEVER HYDRAULIC LIFT CONTROL VALVE	1
37	D10067750.9	PIN HYDRAULIC LIFT ACTUATOR PIVOT	1
38	D90000220.9	RING 7/16" RETAINING TYPE RC EXTERNAL	2
39	D10067720.9	ROLLER HYDRAULIC LIFT POSITION CAM FOLLOWER	1
40	D10095180.9	LEVER ASSEMBLY HYDRAULIC LIFT CONTROL VALVE	1
41	D86000010.9	WASHER 3/8" SPRING LOCK	1
42	D83000020.9	NUT 3/8"-16 HEX	1
43	D10012440.9	RING 1/2" RETAINING TYPE RB EXTERNAL	2
44	D10067740.9	PIN HYDRAULIC LIFT ACTUATOR PIVOT	1
45	D10058250.9	SPRING HYDRAULIC LIFT POSITION CONTROL VALVE OVERTRAVEL	1
46	D10067680.9	SHAFT HYDRAULIC LIFT CONTROL LEVER	1
47	D10058580.9	ACTUATOR HYDRAULIC LIFT VALVE	1
48	D10066720.9	RING 5/16" RETAINING TYPE RB EXTERNAL	1

TABLE-44
HYDRAULIC FLOW SYSTEM

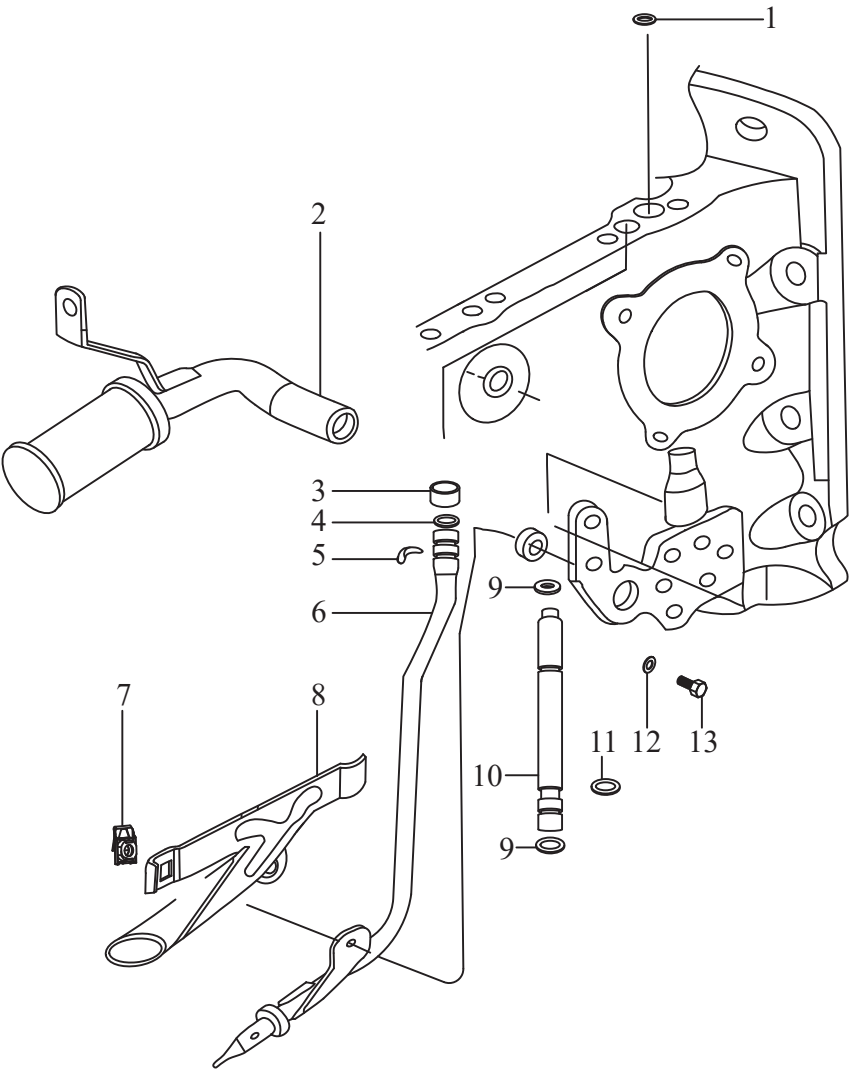


TABLE-44**HYDRAULIC FLOW SYSTEM**

Fig. No.	Part No.	Description	Qty
1	D93600060.9	SEAL O RING 0.070"X0.500"	2
2	D10160350.9	PIPE ASSEMBLY HYDRAULIC LIFT INTAKE FILTER	1
3	D10002380.9	SPACER HYDRAULIC LIFT OIL RETURN	1
4	D93600050.9	SEAL O RING 0.070"X0.440"	1
5	D10002390.9	RETAINER HYDRAULIC LIFT OIL RETURN	2
6	D10330060.9	TUBE ASSEMBLY HYDRAULIC LIFT OIL RETURN	1
7	D10002450.9	NUT HYDRAULIC PUMP RELIEF VALVE BAFFLE	1
8	D10093290.9	TUBE AND BRACKET ASSEMBLY	1
9	D93600060.9	SEAL O RING 0.070"X0.500"	1
10	D10199340.9	TUBE ASSEMBLY HYDRAULIC LIFT PRESSURE	1
11	D10002480.9	RING TUBE HYDRAULIC LIFT PRESSURE SNAP	1
12	D10002460.9	SEAL 5/16" DIAMETER HYDRAULIC OIL RETURN	1
13	D81000660.9	BOLT 5/16"-24X1.125" HEX HEAD	2

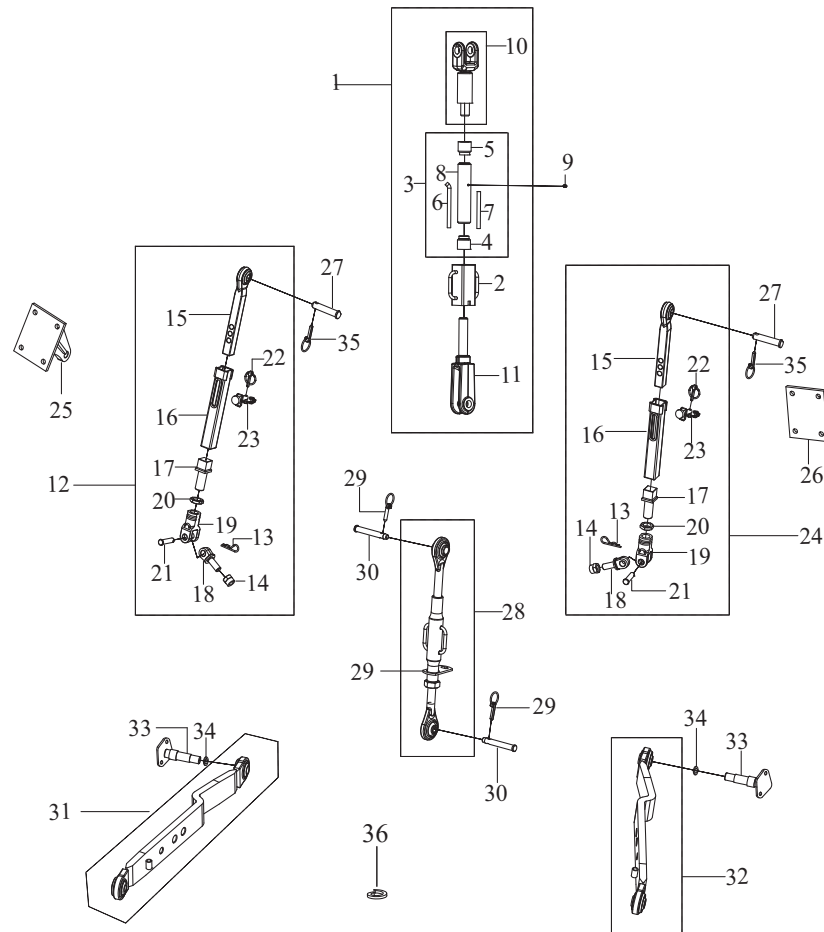
TABLE-47**HYDRAULIC LIFT LINKAGES**

TABLE-47**HYDRAULIC LIFT LINKAGES**

Fig. No.	Part No.	Description	Qty
1	D10418970.9	ROD ASSEMBLY HYDRAULIC LIFT LEVELLING RH	2
2	D10419940.9	BOX SLEEVE LOCKING ASSEMBLY	4
3	D10420020.9	SLEEVE HYDRAULIC LIFT LEVELLING ROD RH	2
4	D10432700.9	BUSH CENTRE TUBE LEVELLING ROD RH	2
5	D10432690.9	BUSH CENTRE TUBE LEVELLING ROD LH	2
6	D10432720.9	ROD SLIDING LOCKING HYDRAULIC LIFT LEVELLING RH	2
7	D10432730.9	ROD ROTATION LOCKING HYDRAULIC LIFT LEVELLING RH	2
8	D10420030.9	TUBE CENTRE SLEEVE HYDRAULIC LIFT LEVELLING ROD	2
9	D92500010.9	GREASE NIPPLE B M6	2
10	D10419930.9	LINK ASSEMBLY HYDRAULIC LIFT LEVELLING ROD	4
11	D10420040.9	ROD AND FORK ASSEMBLY HYDRAULIC LIFT LEVELLING (FLOAT TYPE)	4
12	D10446970.9	STAY BAR ASSEMBLY LH (SQUARE TYPE)	2
13	D87500440.9	PIN 4.0X75 SPRING R TYPE (IS:6483)	6
14	D83500670.9	NUT M20X2.50 HEX NYLOCK	4
15	D10447030.9	ROD AND BALL ASSEMBLY STAY BAR (SQUARE TYPE)	4
16	D10446990.9	CHANNEL OUTER AND ROD LINK ASSEMBLY STAY BAR (SQUARE TYPE)	2
17	D10418290.9	ROD LINK HOLLOW CHANNEL STAY BAR (SQUARE TYPE)	2
18	D10328780.9	EYE BOLT STAY BAR	4
19	D10324030.9	FORK STAY BAR (SQUARE TYPE)	4
20	D10295180.9	NUT M30X3 CHECK STAY BAR SQUARE TYPE	4
21	D10089640.9	PIN 15.8X61 CLEVIS (INDUCTION HARDENED)	4
22	D10448410.9	PIN AND RING ASSEMBLY LYNCH	4
23	D10448440.9	PIN AND CHAIN ASSEMBLY LOCKING STAYBAR	4
24	D10446980.9	STAY BAR ASSEMBLY RH (SQUARE TYPE)	2
25	D10418810.9	BRACKET STAY BAR MOUNTING LH	1
26	D10418820.9	BRACKET STAY BAR MOUNTING RH	1
27	D10418320.9	PIN STAY BAR (INDUCTION HARDENED)	2
28	D10367390.9	LINK ASSEMBLY HYDRAULIC UPPER LIFT (CAT-I)	1
28-1	D10387520.9	LINK ASSEMBLY HYDRAULIC UPPER LIFT	1
29	D10362240.9	BRACKET UPPER LINK HOLDING	2
30	D10148440.9	PIN DRAWBAR UPPER LINK CLEVIS	2
30-1	D10245510.9	PIN DRAWBAR HYDRAULIC UPPER LIFT LINK	2
31	D10418980.9	LINK ASSEMBLY HYDRAULIC LIFT LOWER LH	1
32	D10418990.9	LINK ASSEMBLY HYDRAULIC LIFT LOWER RH	1
33	D10490240.9	PIN ASSEMBLY LOWER LINK PIVOT HYDRAULIC LIFT	2
34	D10099510.9	WASHER LIFT LOWER LINK PIVOT THRUST	4
35	D10081260.9	PIN AND RING ASSEMBLY	4
36	D86500020.9	WASHER M12 SPRING LOCK	4

TABLE-46A
DCV TUBING-EXTERNAL CYLINDER

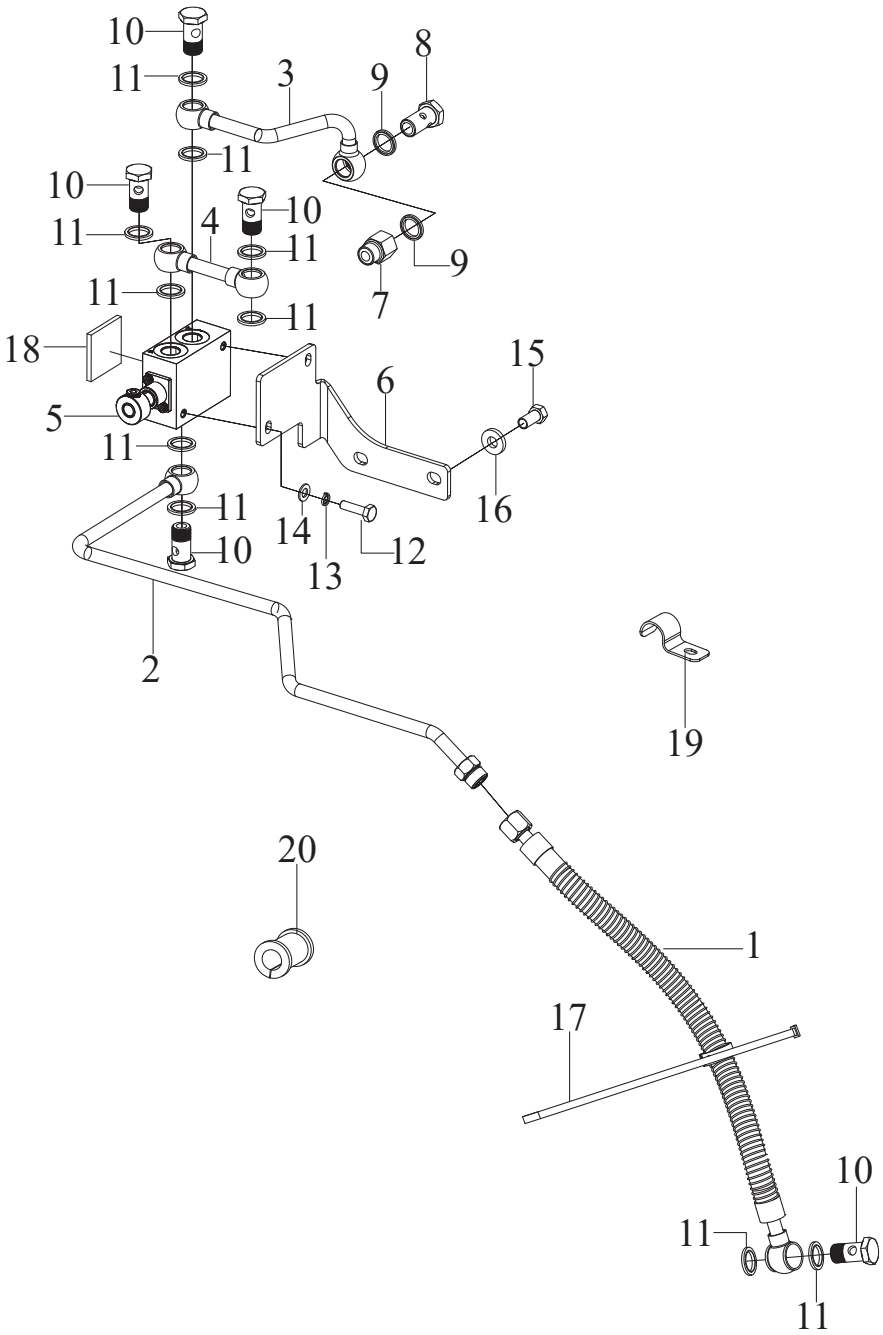


TABLE-46A**DCV TUBING-EXTERNAL CYLINDER**

Fig. No.	Part No.	Description	Qty
1	D10499830.9	HOSE ASSEMBLY DCV TO EXTERNAL CYLINDER	1
2	D10502090.9	TUBE ASSEMBLY DIRECTION CONTROL VALVE TO EXTERNAL CYLINDER	1
3	D10499810.9	TUBE ASSEMBLY DCV EXTERNAL CYLINDER TO LIFT RETURN	1
4	D10499790.9	TUBE ASSEMBLY HYDRAULIC LIFT TO DCV EXTERNAL CYLINDER PRESSURE	1
5	D10431240.9	VALVE ASSEMBLY HYDRAULIC 3/2 WAY DCV	1
6	D10502600.9	BRACKET DIRECTION CONTROL VALVE MOUNTING	1
7	D10528430.9	CONNECTOR M18X1.5 AND 3/4-16 UNF STUD END	1
8	D10174960.9	BOLT BANJO M18X1.50	1
8-1	D10174960AD.9	BOLT BANJO M18X1.50	1
9	D10174950.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	2
9-1	D10174950AD.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	1
10	D10305610.9	BOLT HYDRAULIC CONNECTION 3/4"-16	5
11	D10305620.9	WASHER SEALING 3/4"-16	10
12	D81500310.9	SCREW M8X1.25X30-8.8 HEX HEAD	2
13	D86500030.9	WASHER M8 SPRING LOCK	2
14	D85500050.9	WASHER M8 FLAT	2
15	D81000070.9	BOLT 7/16"-14X0.875" HEX HEAD	2
16	D85000090.9	WASHER 7/16" FLAT	2
16-1	D10011760.9	GASKET WATER OUTLET	2
17	D10445120.9	CLIP ROTABLE HOSE EXTERNAL CYLINDER	1
18	D10556020.9	DECAL SPOOL VALVE EXTERNAL CYLINDER	1
19	D10548020.9	CLAMP TUBE HOLDING DIA 12	1
20	D10413940.9	GROMMET TUBE RETURN STEERING MOTOR TO RESERVOIR	1

TABLE-46B
DOUBLE ACTING SPOOL VALVE

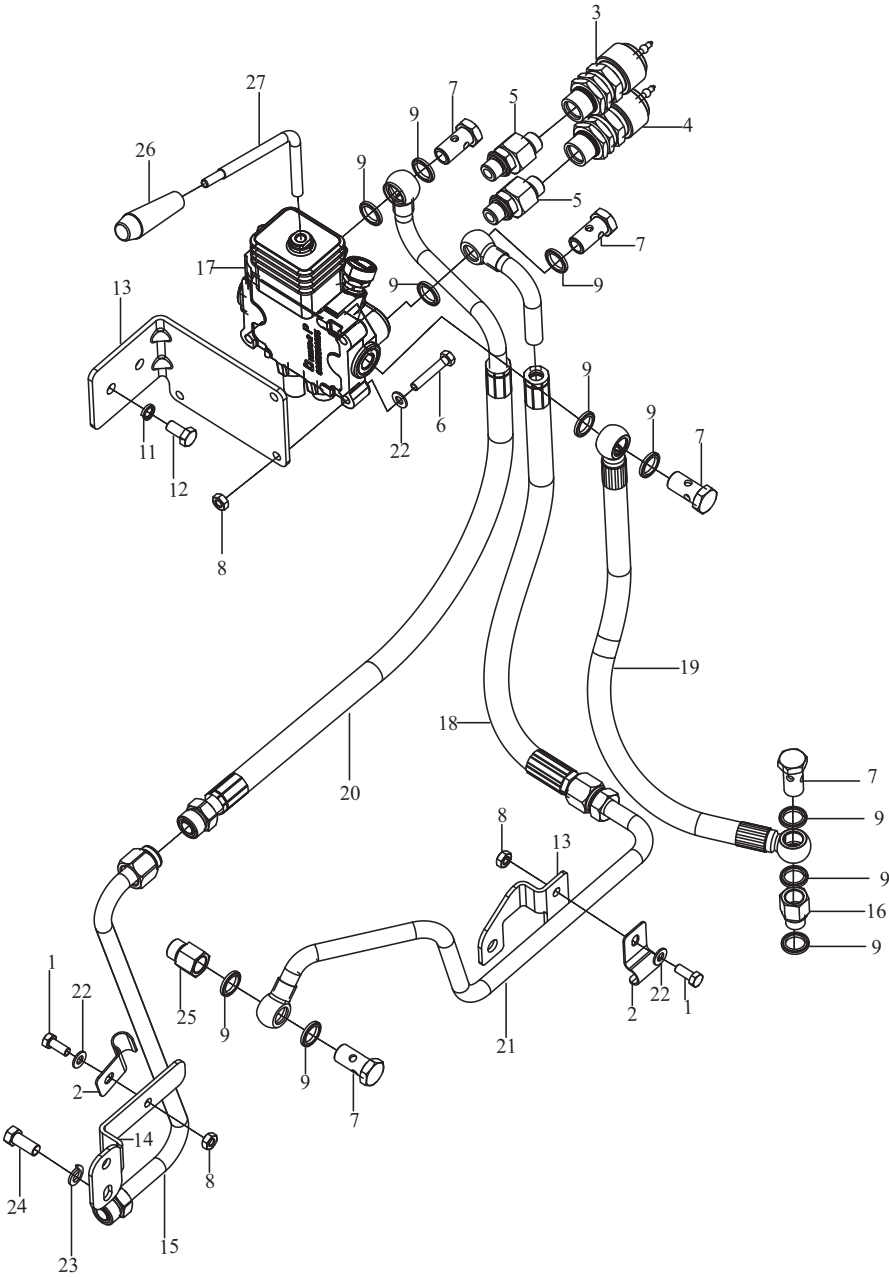


TABLE-46B**DOUBLE ACTING SPOOL VALVE**

Fig. No.	Part No.	Description	Qty
1	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	2
2	D10504270.9	CLAMP TUBE HOLDING DIA 16	2
3	D10193340.9	COUPLING ASSEMBLY VALVE HYDRAULIC REMOTE (POPPET TYPE)	2
4	D10193330.9	COUPLING ASSEMBLY VALVE HYDRAULIC REMOTE (POPPET TYPE)	2
5	D10514960.9	ADAPTOR 3/4"-16 UNF AND M18X1.50 (S TYPE)	4
6	D81501150.9	BOLT M8X1.25X45 HEX HEAD	3
6-1	D81500190.9	BOLT M8X1.25X45-8.8P HEX HEAD	3
6-2	D81505380AA.9	BOLT M8X1.25X50-8.8 HEX HEAD (WITH HOLE)	3
7	D10174960.9	BOLT BANJO M18X1.50	5
7-1	D10174960AD.9	BOLT BANJO M18X1.50	1
8	D83500060.9	NUT M8X1.25-6 HEX	3
9	D10174950.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	11
9-1	D10174950AD.9	SEAL BANJO BOLT DISTRIBUTOR TO CYLINDER TUBE	1
10	D10514120.9	BRACKET ASSEMBLY TUBE HOLDING SPOOL VALVE TO LIFT INLET	1
11	D86500050.9	WASHER M10 SPRING LOCK	2
12	D10035900.9	SCREW M10X1.50X20-6.6 HEX HEAD	2
12-1	D82500350.9	SCREW M10X1.50X20-6.6 HEX HEAD	2
13	D10515950.9	BRACKET SPOOL VALVE MOUNTING	1
14	D10501860.9	BRACKET ASSEMBLY PRESSURE TUBE HOLDING	1
15	D10499750.9	TUBE ASSEMBLY HYDRAULIC PRESSURE CONNECTOR TO SPOOL VALVE INLET	1
16	D10515960.9	CONNECTOR M18X1.50 AND M18X1.50 STUD END	1
16-1	D10515960AC.9	CONNECTOR M18X1.50 AND M18X1.50 STUD END	1
17	D10498980.9	VALVE ASSEMBLY HYDRAULIC CONTROL WITH CHANGE OVER KNOB TO SINGLE ACTING (DOUBLE SPOOL)	1
18	D10514720.9	HOSE ASSEMBLY SPOOL VALVE CONTROL TO HYDRAULIC LIFT	1
19	D10514700.9	HOSE ASSEMBLY RETURN SPOOL VALVE CONTROL TO REAR HOUSING	1
20	D10514680.9	HOSE ASSEMBLY SPOOL VALVE CONTROL INLET	1
21	D10499760.9	TUBE ASSEMBLY HYDRAULIC LIFT TO SPOOL PRESSURE PIPE	1
22	D85500130.9	WASHER M8 FLAT	5
23	D86000020.9	WASHER 7/16" SPRING LOCK	2
24	D81000100.9	BOLT 7/16"-14X1.00" HEX HEAD	2
25	D10528430.9	CONNECTOR M18X1.5 AND 3/4-16 UNF STUD END	1
26	D10288130.9	KNOB HAND THROTTLE CONTROL LEVER	1
26-1	D10215860.9	KNOB HAND THROTTLE CONTROL LEVER	1
27	D10515720.9	LEVER DIRECTION CONTROL VALVE	1

TABLE-50
TUBING HYDRAULIC ASSEMBLY

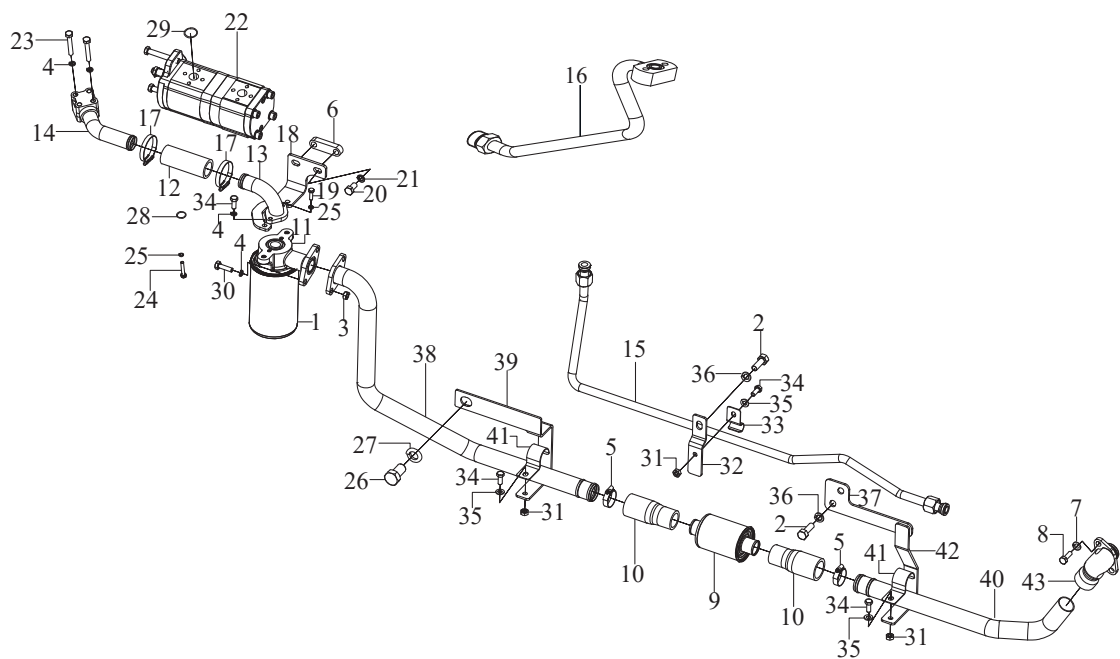


TABLE-50**TUBING HYDRAULIC ASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10026160.9	FILTER ASSEMBLY HYDRAULIC LIFT OIL	1
2	D81000090.9	BOLT 7/16"-14X1.25" HEX HEAD	2
3	D83500110.9	NUT M8X1.25-8 HEX	2
4	D86500030.9	WASHER M8 SPRING LOCK	6
5	D10013970.9	CLAMP HOSE 35A	2
6	D10561530.9	SPACER HYDRAULIC FILTER MOUNTING	1
7	D86000010.9	WASHER 3/8" SPRING LOCK	4
8	D81000060.9	BOLT 3/8"-16X1.00" HEX HEAD	4
9	D10297570.9	STRAINER ASSEMBLY HYDRAULIC OIL	1
10	D10498310.9	HOSE HYDRAULIC SUCTION TUBE TO STRAINER	2
11	D10284540.9	ADOPTER HYDRAULIC OIL FILTER	1
12	D10480740.9	HOSE HYDRAULIC SUCTION FILTER TUBE TO TANDUM PUMP TUBE	1
13	D10561570.9	TUBE ASSEMBLY HYDRAULIC FILTER TO TANDEM PUMP	1
14	D10561580.9	TUBE ASSEMBLY HYDRAULIC FILTER TO TANDEM PUMP	1
15	D10596880.9	TUBE ASSEMBLY HYDRAULIC PRESSURE CONNECTOR TO CONNECTOR	1
16	D10596860.9	TUBE ASSEMBLY HYDRAULIC PRESSURE TANDEM PUMP TO CONNECTOR	1
17	D10329500.9	CLAMP HOSE WORM DRIVE 55MM	2
17-1	D10017540.9	CLAMP RADIATOR HOSE UPPER	2
18	D10284530.9	BRACKET FILTER ADAPTER MOUNTING	1
19	D82500120.9	SCREW M6X1.00X20-6.6P HEX HEAD	2
20	D10035900.9	SCREW M10X1.50X20-6.6 HEX HEAD	2
21	D86500090.9	WASHER M10 SPRING LOCK	2
22	D10219030.9	PUMP ASSEMBLY HYDRAULIC LIFT OIL (TANDEM 22.5+11CC)	1
23	D10035840.9	BOLT M8X1.25X55-6.6 HEX HEAD	4
23-1	D81500260.9	BOLT M8X1.25X55-6.6P HEX HEAD	4
24	D81500340.9	BOLT M6X1.00X35-8.0 HEX HEAD	2
25	D86500040.9	WASHER M6 SPRING LOCK	4
26	D81001520.9	BOLT 3/4"-10X1.25" HEX HEAD	1
27	D86000150.9	WASHER 3/4" SPRING LOCK	1
27-1	D86500080.9	WASHER M20 SPRING LOCK	1
28	D93600670.9	SEAL O RING 1.78X15.6	1
29	D93600580.9	SEAL O RING 1.78X23.52	1
30	D81500310.9	SCREW M8X1.25X30-8.8 HEX HEAD	2
31	D83500060.9	NUT M8X1.25-6 HEX	4
32	D10504200.9	BRACKET ASSEMBLY HYDRAULIC PRESSURE TUBE HOLDING	1
33	D10504270.9	CLAMP TUBE HOLDING DIA 16	1
34	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	7
35	D85500050.9	WASHER M8 FLAT	4
36	D86000020.9	WASHER 7/16" SPRING LOCK	3
37	D10504160.9	PLATE HYDRAULIC TUBE HOLDING BRACKET	1

TABLE-50
TUBING HYDRAULIC ASSEMBLY

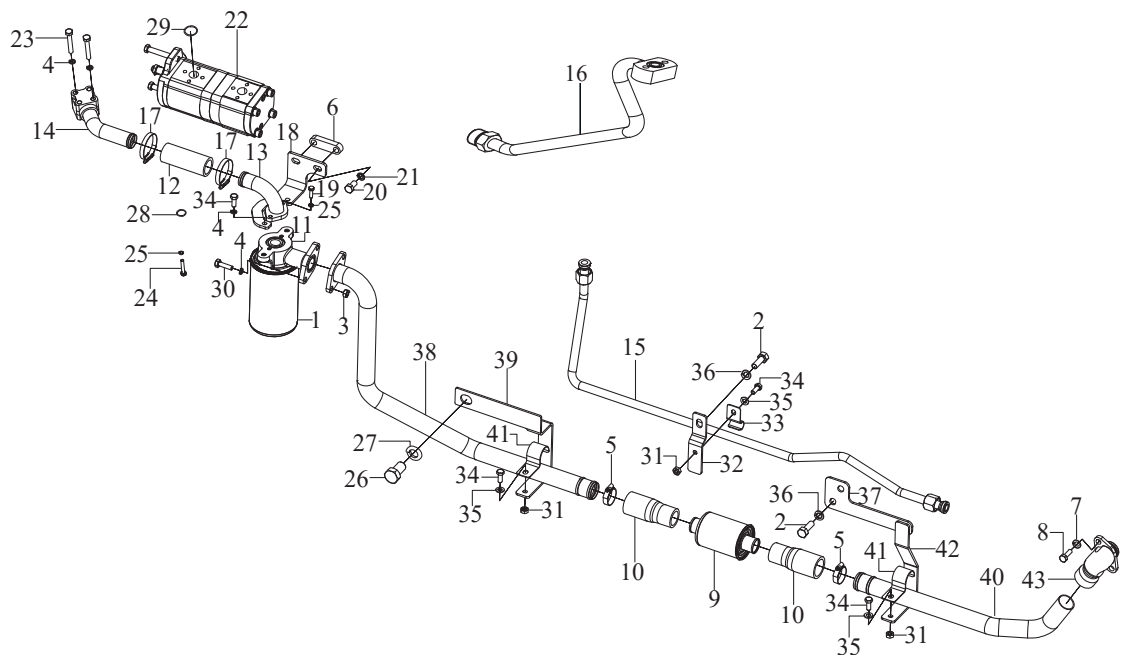


TABLE-50**TUBING HYDRAULIC ASSEMBLY**

Fig. No.	Part No.	Description	Qty
38	D10498320.9	TUBE ASSEMBLY HYDRAULIC SUCTION HOSE TO FILTER	1
39	D10504190.9	BRACKET HYDRAULIC SUCTION TUBE HOLDING	1
40	D10498300.9	TUBE HYDRAULIC SUCTION CENTER HOUSING TO HOSE	1
41	D10504290.9	CLAMP TUBE HOLDING DIA 35	2
42	D10504170.9	BRACKET HYDRAULIC TUBE HOLDING	1
43	D10451920.9	FLANGE TUBE HYDRAULIC SUCTION	1
44	D10511560.9	TUBE ASSEMBLY HYDRAULIC SUCTION	1
45	D10498320.9	TUBE ASSEMBLY HYDRAULIC SUCTION HOSE TO FILTER	1
46	D86500150.9	WASHER M8 SPRING LOCK	2
47	D10013890.9	CONNECTOR 1.125"-16X37	1
48	D85500010.9	WASHER M10 FLAT	2
49	D10285480.9	BRACKET SUCTION PIPE SUPPORT	1
50	D81000100.9	BOLT 7/16"-14X1.00" HEX HEAD	1
51	D10511670.9	CLAMP SUCTION TUBE HOLDING	2
52	D10330820.9	BRACKET ASSEMBLY SUCTION PIPE HOLDING REAR AXLE	1
53	D93600020.9	SEAL O RING 0.139"X1.250"	1
54	D93600080.9	SEAL O RING 0.139"X1.125"	2

TABLE-51
BATTERY AND BATTERY SUPPORT

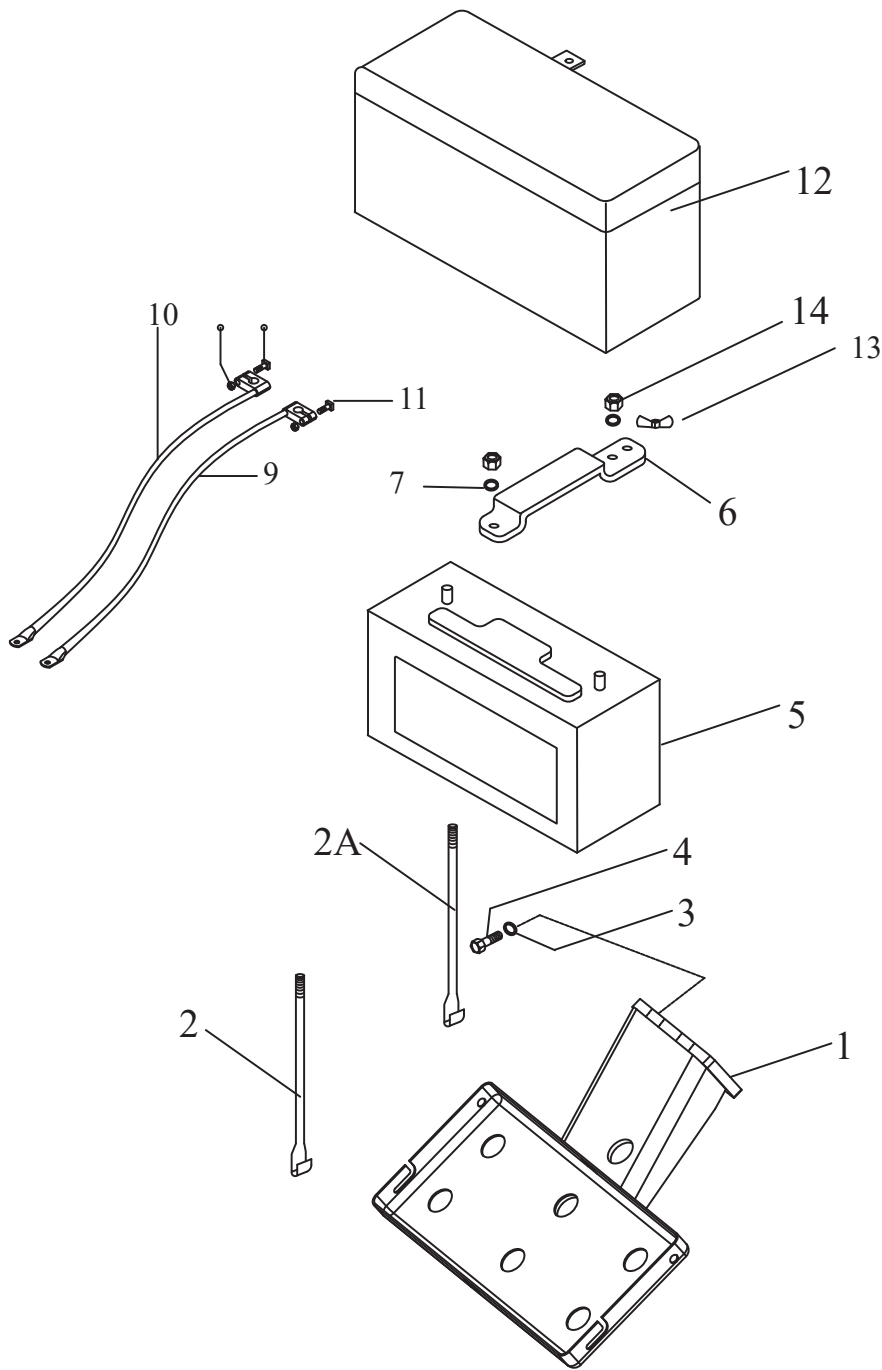


TABLE-51**BATTERY AND BATTERY SUPPORT**

Fig. No.	Part No.	Description	Qty
1	D10258430.9	TRAY BATTERY AND BRACKET SUPPORT ASSEMBLY	1
2	D10208590.9	ROD BATTERY HOLD DOWN RH	1
2A	D10208600.9	ROD BATTERY HOLD DOWN LH	1
3	D86000150.9	WASHER 3/4" SPRING LOCK	2
3-1	D86500080.9	WASHER M20 SPRING LOCK	2
4	D81000880.9	BOLT 3/4"-10X1.75" HEX HEAD	2
5	D10082850.9	BATTERY ASSEMBLY MAINTENANCE FREE TYPE 12V 88AH	1
6	D10208610.9	BRACKET TOP BATTERY HOLD	1
7	D10018690.9	WASHER 5/16" FLAT	2
9	D10034200.9	CABLE ASSEMBLY BATTERY TO GROUND	1
10	D10242180.9	CABLE ASSEMBLY BATTERY TO STARTER SOLENOID	1
11	D83000150.9	NUT 5/16"-18 HEX LOCK	2
12	D10208580.9	COVER ASSEMBLY BATTERY	1
13	D10018710.9	NUT 5/16"-18 WING	1
14	D10015990.9	STRIP FELT BATTERY REST	2

TABLE-52
ELECT.SWITCHES & CONTROL

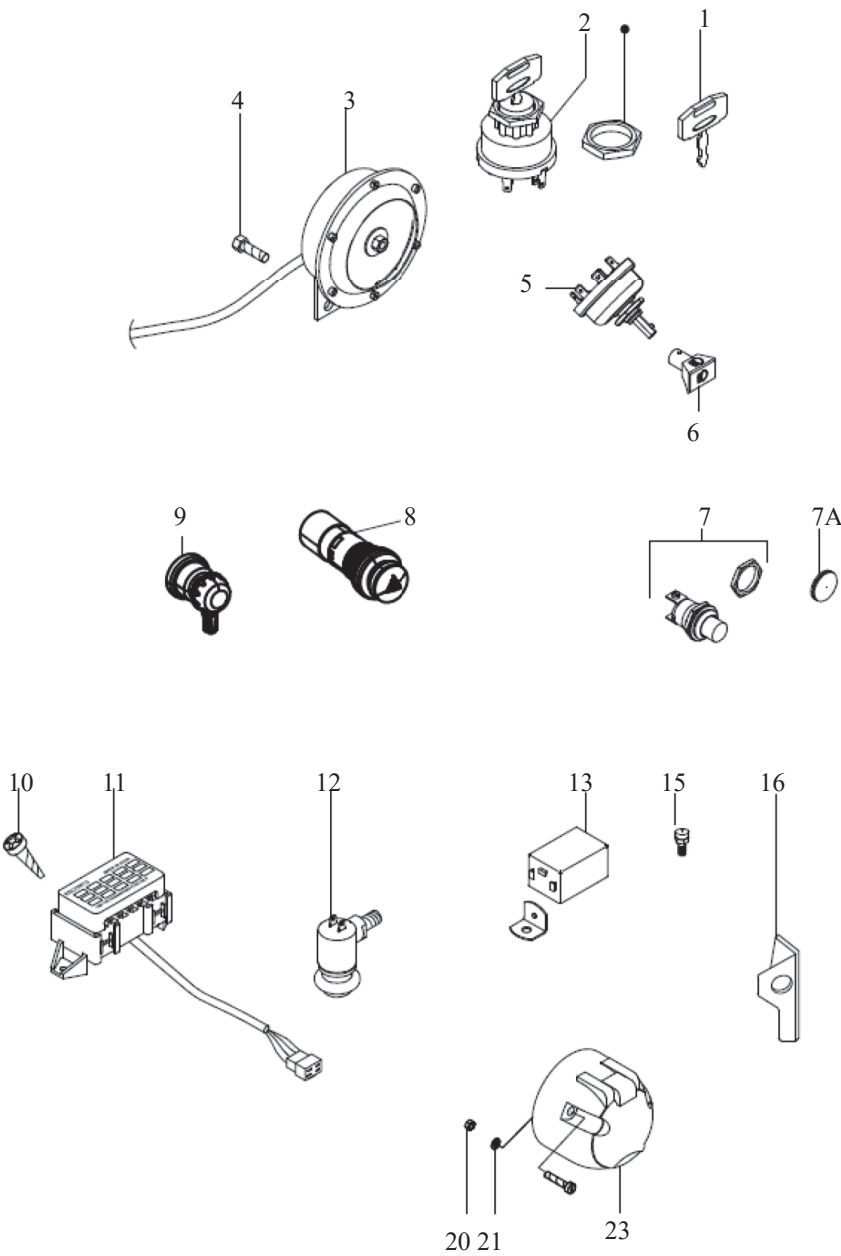


TABLE-52**ELECT.SWITCHES & CONTROL**

Fig. No.	Part No.	Description	Qty
1	D10206690.9	KEY IGNITION LOCK FARMTRAC	1
2	D10287550.9	SWITCH ASSEMBLY HEATER AND STARTER	1
3	D10028020.9	HORN AND BRACKET ASSEMBLY	1
4	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	1
5	D10026500.9	SWITCH ASSEMBLY LIGHTING	1
6	D10113120.9	KNOB LIGHT SWITCH	1
7	D10016460.9	SWITCH ASSEMBLY HORN BLOWING	1
7A	D10017940.9	GROMMET 0.53X0.75 ROUND FLANGE	1
8	D10291520.9	SWITCH ASSEMBLY EMERGENCY WARNING	1
9	D10291530.9	SWITCH ASSEMBLY TURN SIGNAL	AR
10	D82500050.9	SCREW M6X1.00X12-6.8 HEX HEAD	2
11	D10080830.9	WIRE ASSEMBLY FUSE BOX	1
11A	D10243580.9	FUSE 40 AMPERE (SLOW BLOW)	1
12	D10279580.9	SWITCH ASSEMBLY STOP LAMP NC TYPE	1
13	D10019350.9	FLASHER ASSEMBLY INDICATOR	1
14	D10432650.9	BRACKET ASSEMBLY TRAILOR SOCKET	1
15	D10179030.9	SWITCH ASSEMBLY OIL PRESSURE	1
16	D83000130.9	NUT #10-24 HEX	4
17	D86500050.9	WASHER M10 SPRING LOCK	4
18	D82000030.9	SCREW #10-24X0.62" PAN HEAD	4
19	D10135490.9	SOCKET ASSEMBLY TRAILER ELECTRICAL	1
20	D10238530.9	BRACKET FUSE BOX MOUNTING	1
21	D10018410.9	WASHER FUSE JUNCTION CHANNEL MOUNTING	2
23	D10135520.9	HARNESS ASSEMBLY TRAILER SOCKET	1
24	D10209970.9	CHARGER MOBILE	1
24-1	D10299950.9	RELAY ASSEMBLY ELECTRICAL CIRCUIT	1
25	D10293350.9	SWITCH ASSEMBLY LED	1

TABLE-49
INSTRUMENT CLUSTER

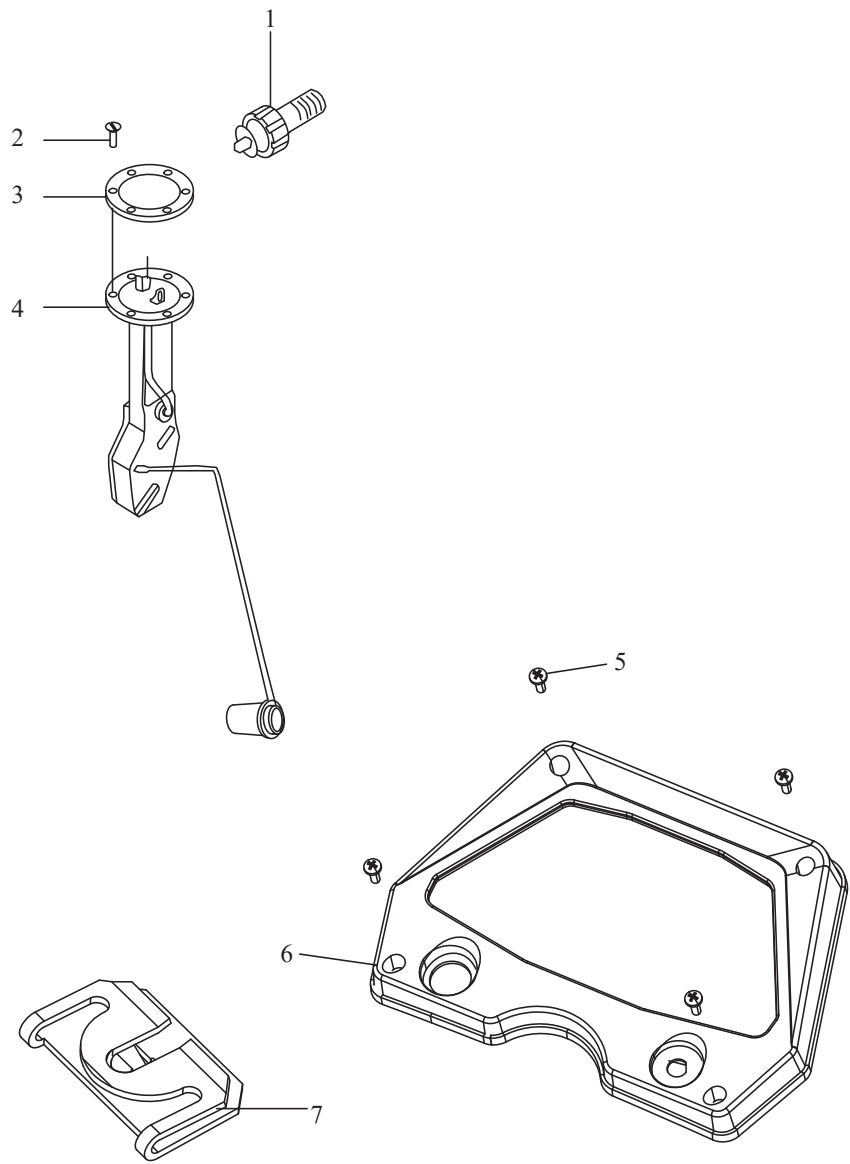


TABLE-49**INSTRUMENT CLUSTER**

Fig. No.	Part No.	Description	Qty
1	D10179030.9	SWITCH ASSEMBLY OIL PRESSURE	1
2	D10026030.9	SCREW #10-32X0.625" HEX HEAD	5
3	D10021980.9	GASKET FUEL TANK SENDER	1
4	D10042440.9	FLOAT ASSEMBLY FUEL TANK (PRICOL PART NO 806650)	1
4-1	D10042440AG.9	FLOAT ASSEMBLY FUEL TANK (PRICOL PART NO 806650)	1
5	D10039900.9	SCREW 1/4"-28X1.50" PAN HEAD	4
6	D10341390.9	CLUSTER ASSEMBLY INSTRUMENT	1
6-1	D10341390AF.9	CLUSTER ASSEMBLY INSTRUMENT	1
7	D10016820.9	NUT INSTRUMENT CLUSTER RETAINING	4

TABLE-54
WIRING HARNESS

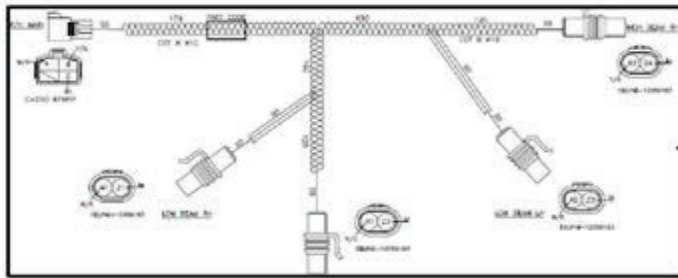
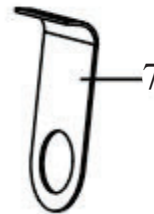
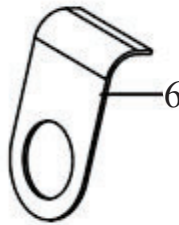
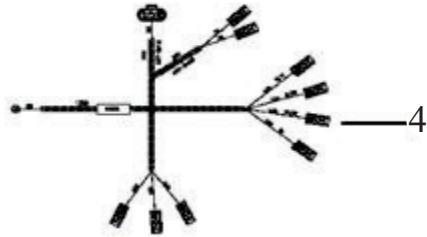
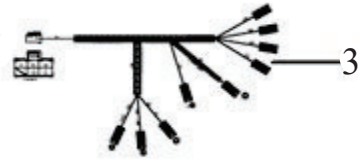

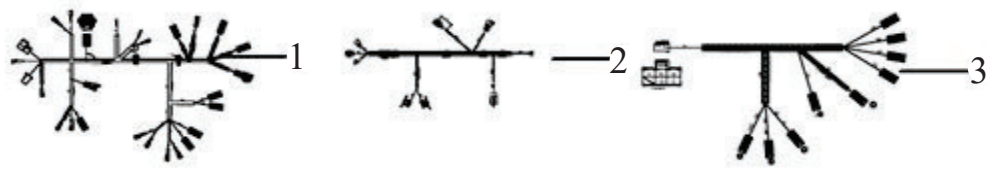


TABLE-54
WIRING HARNESS

Fig. No.	Part No.	Description	Qty
1	D10383280.9	HARNESS ASSEMBLY ELECTRICAL MAIN	1
2	D10623270.9	HARNESS ASSEMBLY INSTRUMENT PANEL TO RUNNING BOARD	1
3	D10437330.9	HARNESS ASSEMBLY REAR FENDER RH	1
4	D10483570.9	HARNESS ASSEMBLY REAR FENDER LH	1
5	D10341410.9	HARNESS ASSEMBLY INSTRUMENT PANEL	1
6	D10004170.9	CLIP WIRING HARNESS LH	1
7	D10004160.9	CLIP WIRING HARNESS RH	1
8	D10012990.9	CLIP HARNESS	1
9	D10338530.9	WIRE ASSEMBLY HEAD LAMP PROJECTOR	1
10	D10396790.9	HARNESS ASSEMBLY GLOW PLUG	1
10-1	D10396790AC.9	HARNESS ASSEMBLY GLOW PLUG	1
11	D10623260.9	HARNESS ASSEMBLY CANOPY WITH RELAY	1
12	D10293340.9	CLAMP WIRING HARNESS CONDUIT	1
13	D10293330.9	CLAMP WIRING HARNESS CONDUIT	6
14	D10001920.9	HARNESS ASSEMBLY TRANSMISSION	1
15	D10028490.9	HARNESS SAFETY START SWITCH TO DASH BOARD	1
16	D10018230.9	CLIP HARNESS	1
17	D10018400.9	CLIP BATTERY CABLE	1
18	D10017420.9	STRAP BATTERY CABLE	1

TABLE-55
HEAD LAMP AND WORK LAMP

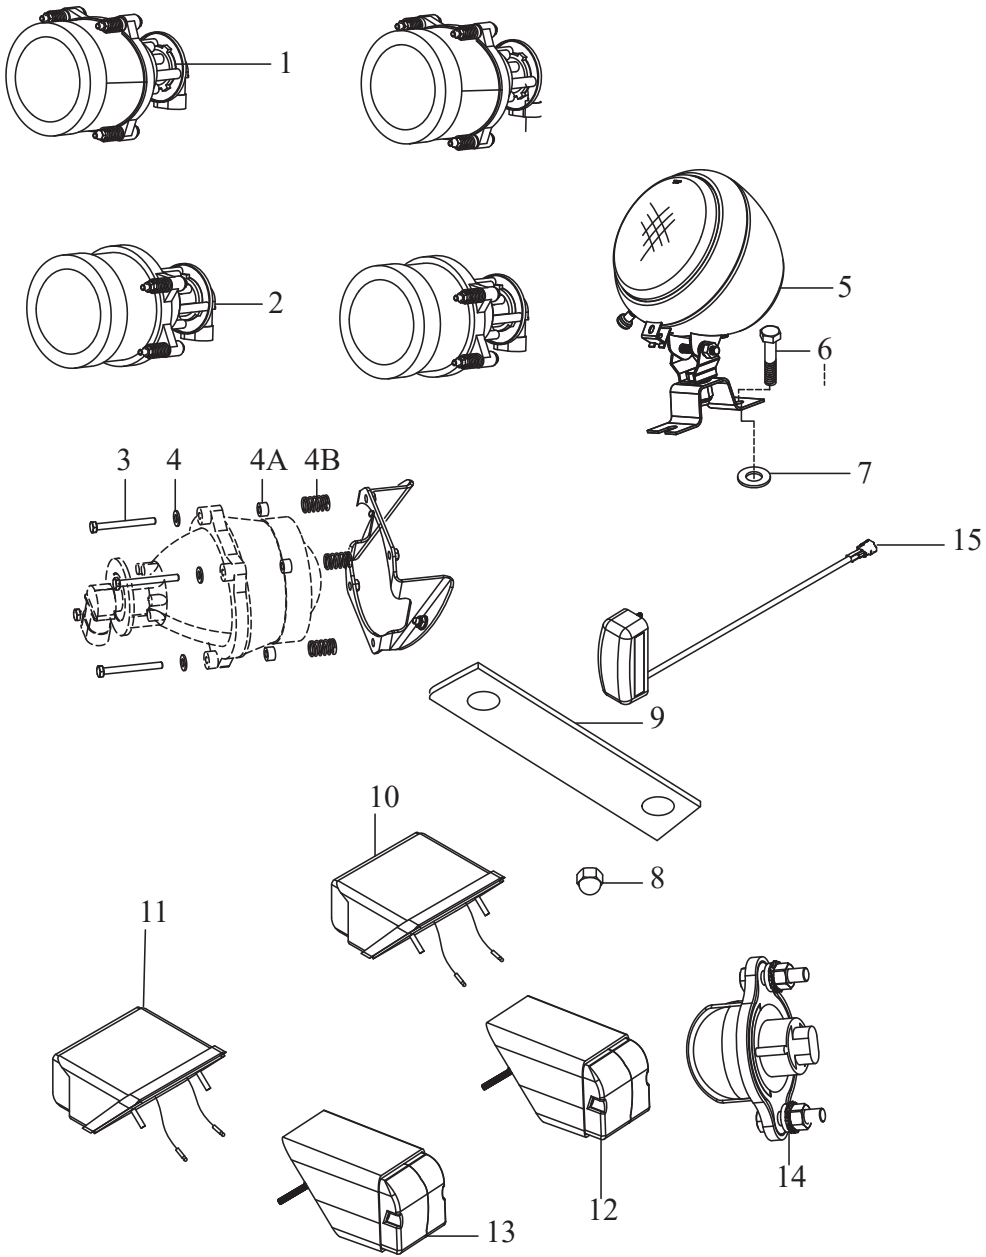


TABLE-55**HEAD LAMP AND WORK LAMP**

Fig. No.	Part No.	Description	Qty
1	D10338500.9	HEAD LAMP ASSEMBLY (LOW BEAM PROJECTOR)	2
2	D10338490.9	HEAD LAMP ASSEMBLY (HIGH BEAM PROJECTOR)	2
3	D81502140.9	BOLT M4X30-8.8 HEX HEAD	16
4	D85500190.9	WASHER M4.0 FLAT	16
5	D10389890.9	LAMP ASSEMBLY PLOUGH	1
5-1	D10939400AA.9	LAMP ASSEMBLY PLOUGH	1
6	D10018380.9	BOLT 3/8"-24X0.87" DRIVER SEAT HINGE TO SPRING	2
7	D85000010.9	WASHER 3/8" FLAT	2
8	D10016890.9	NUT 3/8"-24 HEX	2
9	D10389890.9	LAMP ASSEMBLY PLOUGH	1
9-1	D10939400AA.9	LAMP ASSEMBLY PLOUGH	1
10	D10372580.9	LAMP ASSEMBLY PARKING LH	2
11	D10372560.9	LAMP ASSEMBLY PARKING RH	2
12	D10372590.9	LAMP ASSEMBLY FENDER REAR LH	2
13	D10372570.9	LAMP ASSEMBLY FENDER REAR RH	2
14	D10345870.9	LAMP ASSEMBLY VEHICLE REGISTRATION PLATE	1

TABLE-56
SHEET METAL

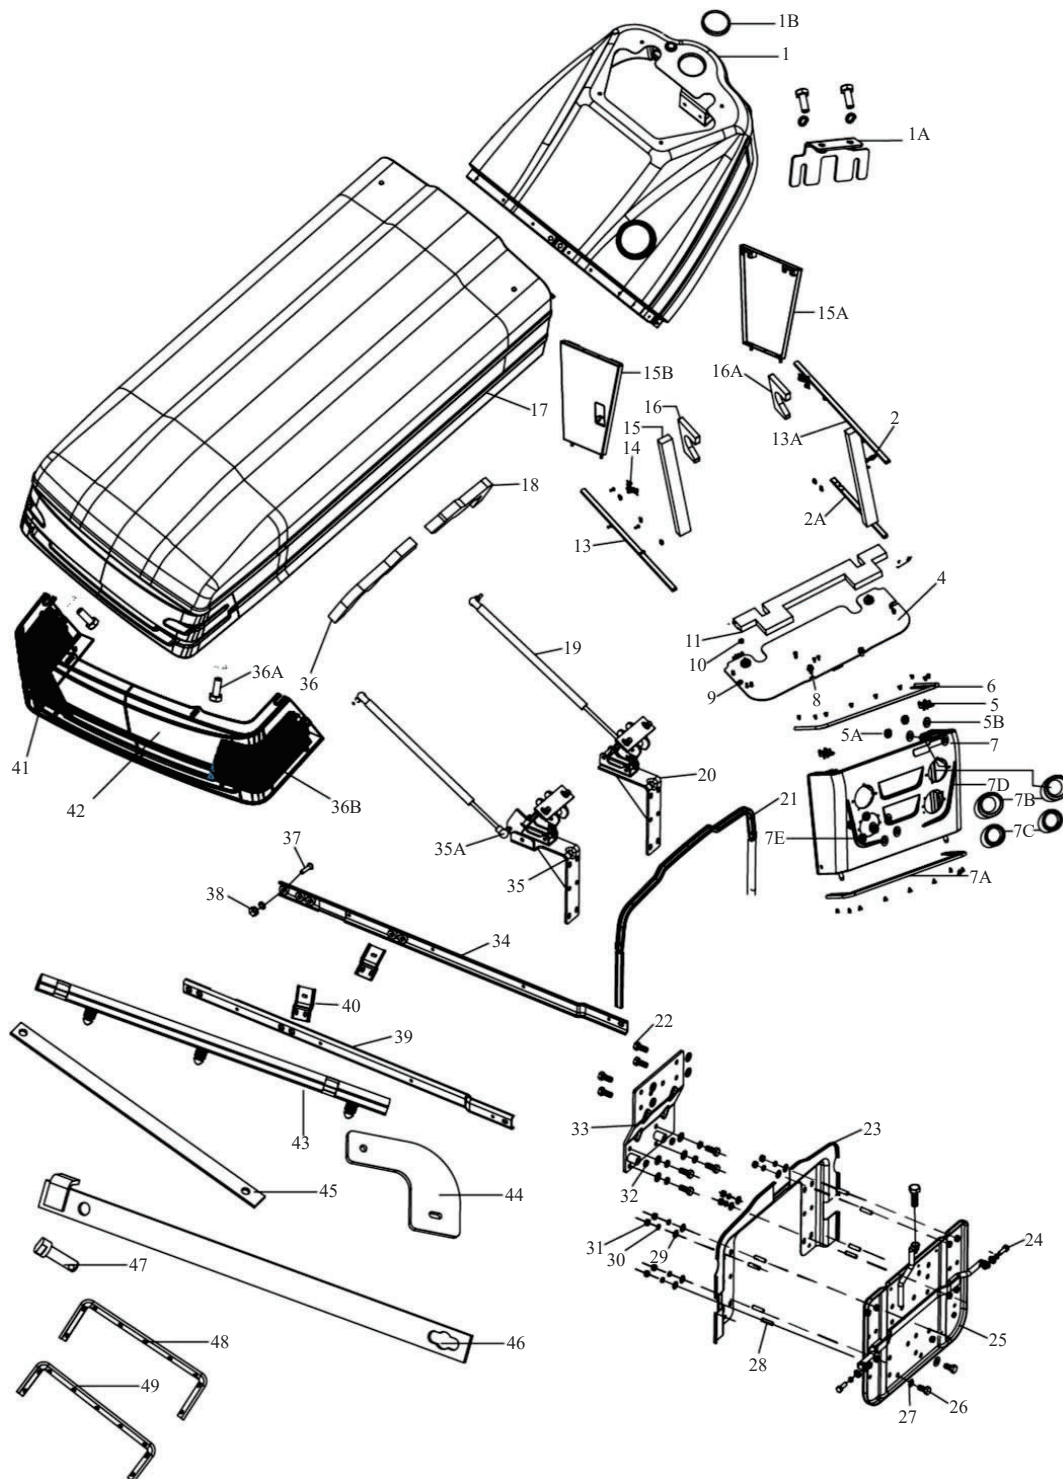


TABLE-56
SHEET METAL

Fig. No.	Part No.	Description	Qty
1	D10326470.9	PANEL ASSEMBLY HOOD REAR	1
1A	D10294850.9	BRACKET PANEL HOOD REAR MOUNTING	1
2	D10306490.9	PIN LOCK SIDE GUARD	2
2A	D10309390.9	SEALING ASSEMBLY SIDE GUARD LOWER LH	1
4	D10376810.9	BAFFLE FRONT AXLE SUPPORT	1
5	D10016980.9	LATCH ASSEMBLY HOOD	2
5A	D10017000.9	NUT M4X0.70 NYLOCK	20
5B	D85500190.9	WASHER M4.0 FLAT	20
6	D10340450.9	SEALING FRONT GRILL UPPER	1
7	D10340330.9	GRILL ASSEMBLY FRONT	1
7A	D10340460.9	SEALING FRONT GRILL LOWER	1
7B	D10340410.9	BEZEL HEAD LAMP LOW BEAM	2
7C	D10340420.9	BEZEL HEAD LAMP HIGH BEAM	2
7D	D10340430.9	BEZEL LH FRONT GRILL	1
7E	D10340440.9	BEZEL RH FRONT GRILL	1
8	D82500230.9	SCREW M8X1.25X20-8.8 HEX HEAD FLANGED	2
9	D10035370.9	SCREW M8X1.25X20 COUNTERSUNK HEAD	2
10	D10018100.9	NUT M5X0.80 NYLOCK	2
11	D10308400.9	FOAM SEALING BAFFLE PLATE	1
13	D10308680.9	SEALING ASSEMBLY SIDE GUARD LOWER	1
13A	D10308670.9	SEALING ASSEMBLY SIDE GUARD UPPER	2
14	D10311740.9	STRIP LOCK SIDE GUARD	2
14-1	D10311740AD.9	STRIP LOCK SIDE GUARD	2
15	D10292620.9	FOAM SEALING SIDE GUARD	2
15A	D10342140.9	GUARD ASSEMBLY SIDE LH	1
15B	D10341710.9	GUARD ASSEMBLY SIDE RH	1
16	D10310250.9	FOAM SEALING HEAD LAMP RH	1
16A	D10310260.9	FOAM SEALING HEAD LAMP LH	1
17	D10804510.9	PANEL ASSEMBLY HOOD TOP FRONT (PAINT TSA DELPHINIUM BLUE)	1
18	D10321420.9	FOAM SEALING FRAME UPPER RH	1
19	D10194500.9	STRUT BONNET OPENING	2
20	D10316680.9	HINGE ASSEMBLY WITH LEVER AND BRACKET PANEL HOOD TOP FRONT RH	1
21	D10308690.9	SEALING ASSEMBLY REAR HOOD	1
22	D10101750.9	BOLT M10X1.50X25-8.8 HEX HEAD	4
23	D10281430.9	BAFFLE ASSEMBLY HOT AIR	1
23-1	D10959600AA.9	BAFFLE PLATE HOT AIR	1
24	D81500590.9	BOLT M8X1.25X25-6.6 HEX HEAD	5
25	D10223190.9	SUPPORT AND BRACKET ASSEMBLY HOOD REAR	1
26	D81500200.9	BOLT M10X1.50X20-6.6 HEX HEAD	6
27	D85500010.9	WASHER M10 FLAT	10

TABLE-56
SHEET METAL

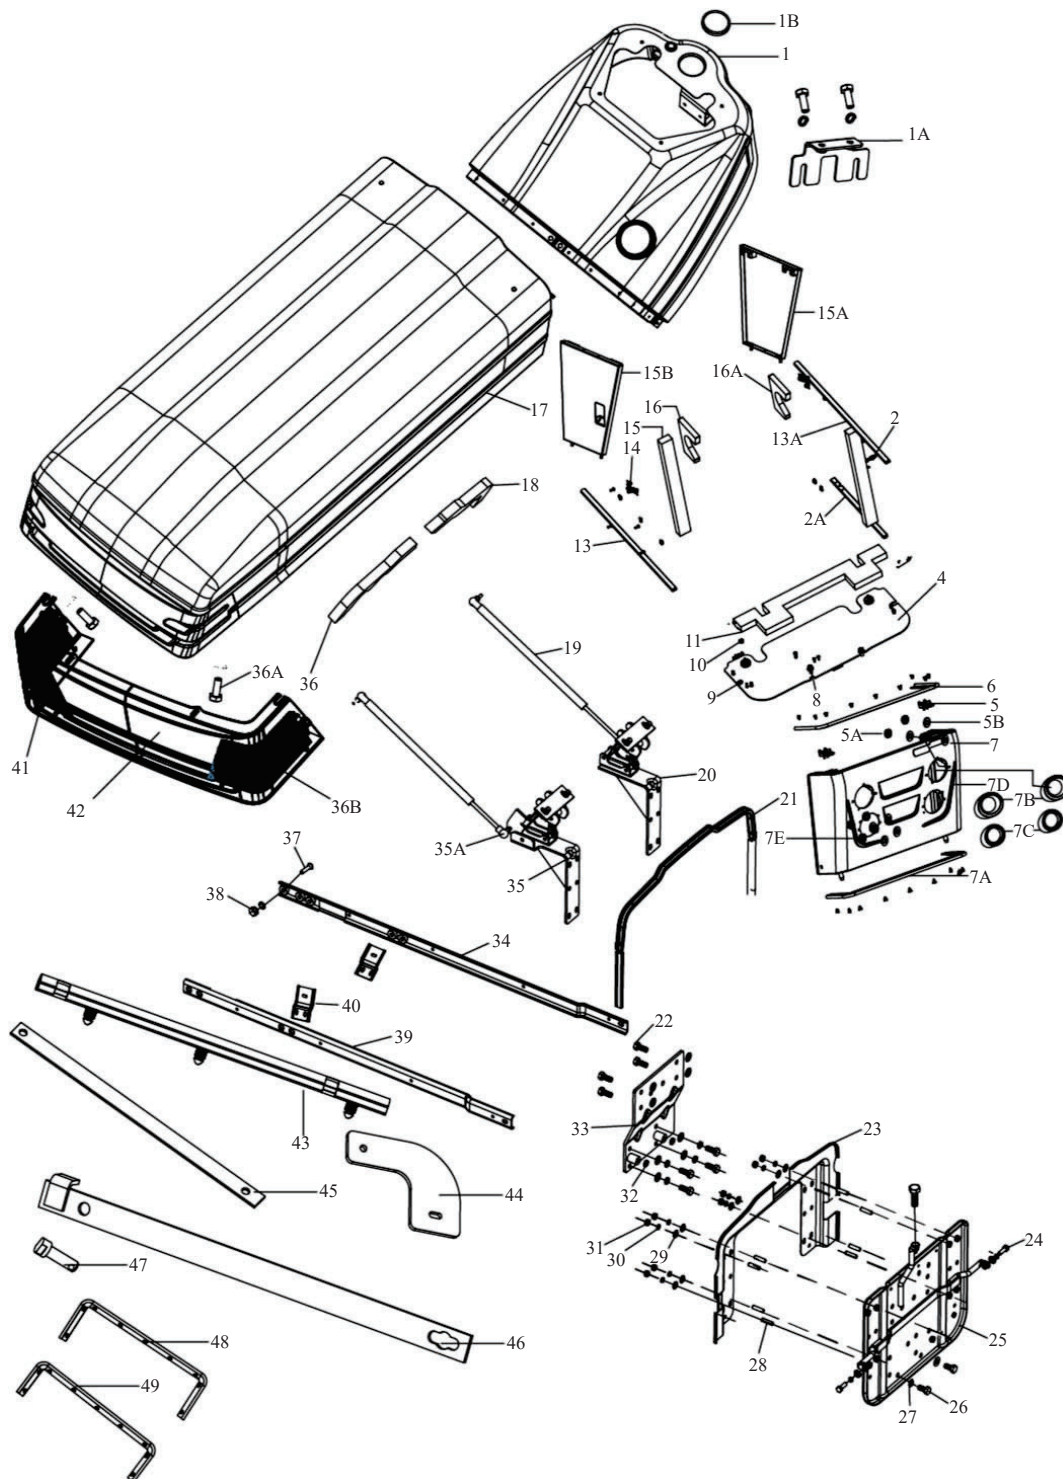


TABLE-56
SHEET METAL

Fig. No.	Part No.	Description	Qty
28	D10022010.9	STUD B M8X1.25X35-8.8P	8
29	D10034590.9	WASHER M8 FLAT	12
30	D86500030.9	WASHER M8 SPRING LOCK	13
31	D83500280.9	NUT M8X1.25 HEX	8
31-1	D83500060.9	NUT M8X1.25-6 HEX	8
32	D86500050.9	WASHER M10 SPRING LOCK	10
33	D10212920.9	PLATE ASSEMBLY HOOD REAR	1
34	D10341790.9	SUPPORT ASSEMBLY RADIATOR LH	1
35	D10316670.9	HINGE ASSEMBLY WITH LEVER AND BRACKET PANEL HOOD TOP FRONT LH	1
35A	D10311250.9	END ASSEMBLY GAS STRUT	4
36	D10321410.9	FOAM SEALING FRAME UPPER LH	1
36A	D81500270.9	BOLT M6X1.00X25-9.8 HEX HEAD	4
36A-1	D10034960.9	SCREW M6X1.00X25-6.6 HEX HEAD	4
36B	D10307020.9	PANEL HOOD FRONT LH	1
37	D82500880.9	SCREW M8X1.25X55-6.8 COUNTERSUNK HEAD ZINC PLATED	1
38	D83500160.9	NUT M8X1.25 NYLOCK HEX	1
39	D10341800.9	SUPPORT ASSEMBLY RADIATOR RH	1
40	D10342400.9	BRACKET SIDE GUARD MOUNTING	2
41	D10307030.9	PANEL HOOD FRONT RH	1
42	D10283490.9	HOOD ASSEMBLY FRONT (PLASTIC)	1
43	D10319000.9	SEALING ASSEMBLY SIDE GUARD LOWER RH (FT6050)	1
44	D10316440.9	BRACKET AIR FAN DEFLECTOR UPPER	1
45	D10318340.9	STRIP PANEL HOOD STOPPER UPPER	1
46	D10318350.9	STRIP PANEL HOOD STOPPER LOWER	1
47	D10318360.9	PIN PANEL HOOD STOPPER STRIP	1
48	D10342410.9	SEALING ASSEMBLY FRONT GRILL UPPER	1
49	D10342420.9	SEALING ASSEMBLY FRONT GRILL LOWER	1

TABLE-57
FENDERS

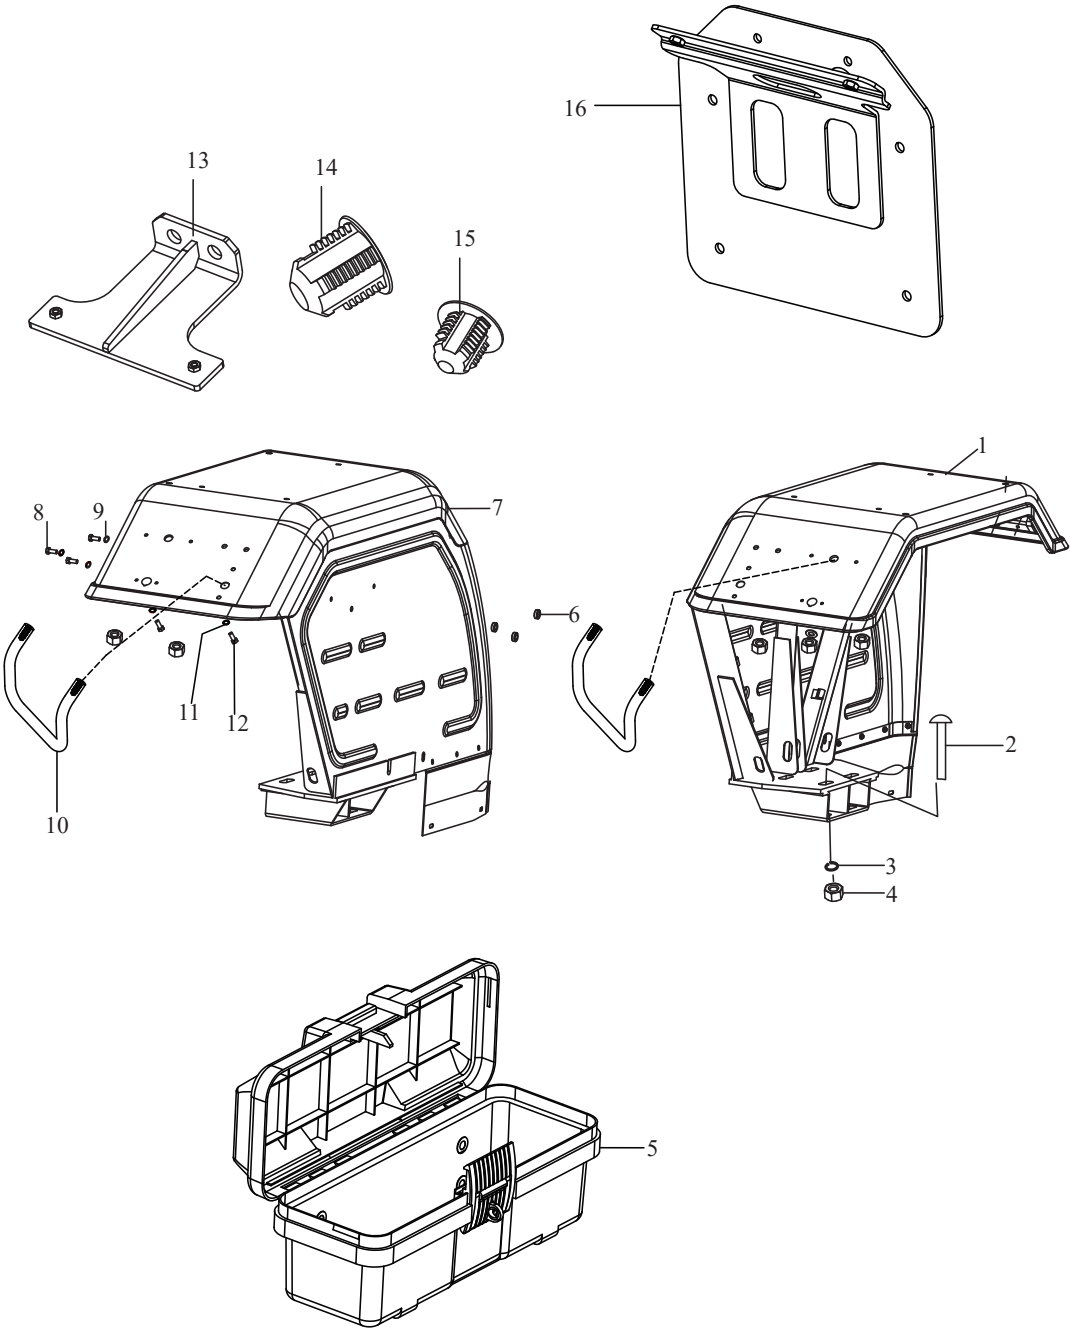


TABLE-57
FENDERS

Fig. No.	Part No.	Description	Qty
1	D10779360.9	FENDER ASSEMBLY REAR RH (ANTIQUE SILVER)	1
2	D81501960.9	BOLT 5/8"-18X12" CARRIAGE	8
3	D86000120.9	WASHER 5/8" SPRING LOCK	8
4	D83000160.9	NUT 5/8"-18 HEX	8
5	D10477810.9	BOX ASSEMBLY TOOL (PLASTIC)	1
6	D10256790.9	BUSH CLUTCH PEDAL UPPER	3
7	D10779350.9	FENDER ASSEMBLY REAR LH (ANTIQUE SILVER)	1
8	D81000200.9	BOLT 5/16"-18X0.75 HEX HEAD	3
9	D86000040.9	WASHER 5/16" SPRING LOCK	3
10	D10281470.9	HOLD DOWN	2
11	D86000040.9	WASHER 5/16" SPRING LOCK	4
12	D10018380.9	BOLT 3/8"-24X0.87" DRIVER SEAT HINGE TO SPRING	4
13	D10492980.9	BRACKET ASSEMBLY TOOL BOX MOUNTING	1
14	D10430200.9	PLUG FENDER DIA 13 (ANTIQUE SILVER)	10
15	D10430190.9	PLUG FENDER DIA 11 (ANTIQUE SILVER)	8
16	D10557630.9	BRACKET ASSEMBLY REGISTRATION PLATE MOUNTING	1

TABLE-55
DRIVER SHEET

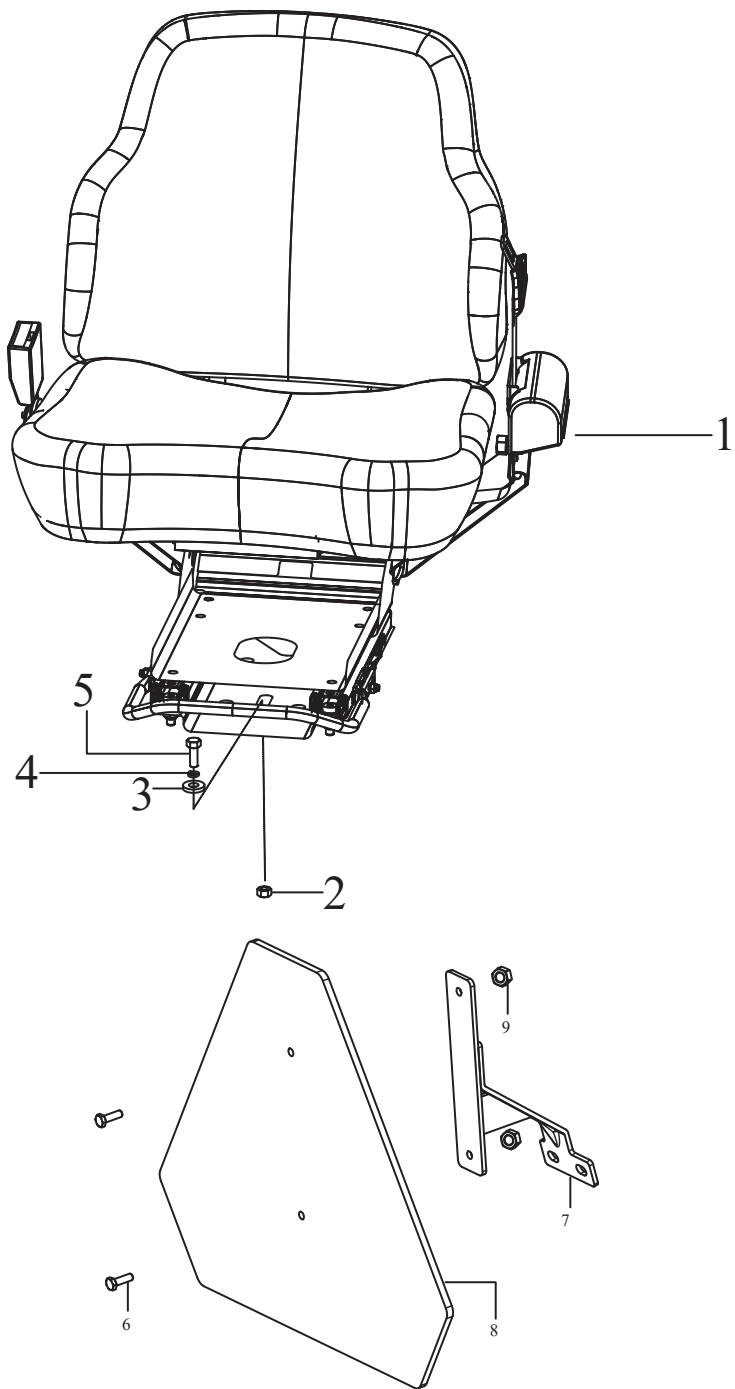


TABLE-55
DRIVER SHEET

Fig. No.	Part No.	Description	Qty
1	D10479730.9	SEAT ASSEMBLY DRIVER WITH SEAT BELT	1
2	D83000180.9	NUT 7/16"-20 HEX	1
3	D85000180.9	WASHER 7/16" FLAT	2
4	D86000020.9	WASHER 7/16" SPRING LOCK	2
5	D81000090.9	BOLT 7/16"-14X1.25" HEX HEAD	1
6	D81500490.9	BOLT M6X1.00X20-9.8 HEX HEAD	2
7	D10521910.9	BRACKET ASSEMBLY EMBLEM MOUNTING	1
8	D10511460.9	EMBLEM SLOW MOVING VEHICLE	1
9	D83500070.9	NUT M6X1.00-6 HEX	2

TABLE-56
FRONT WHEEL WEIGHT

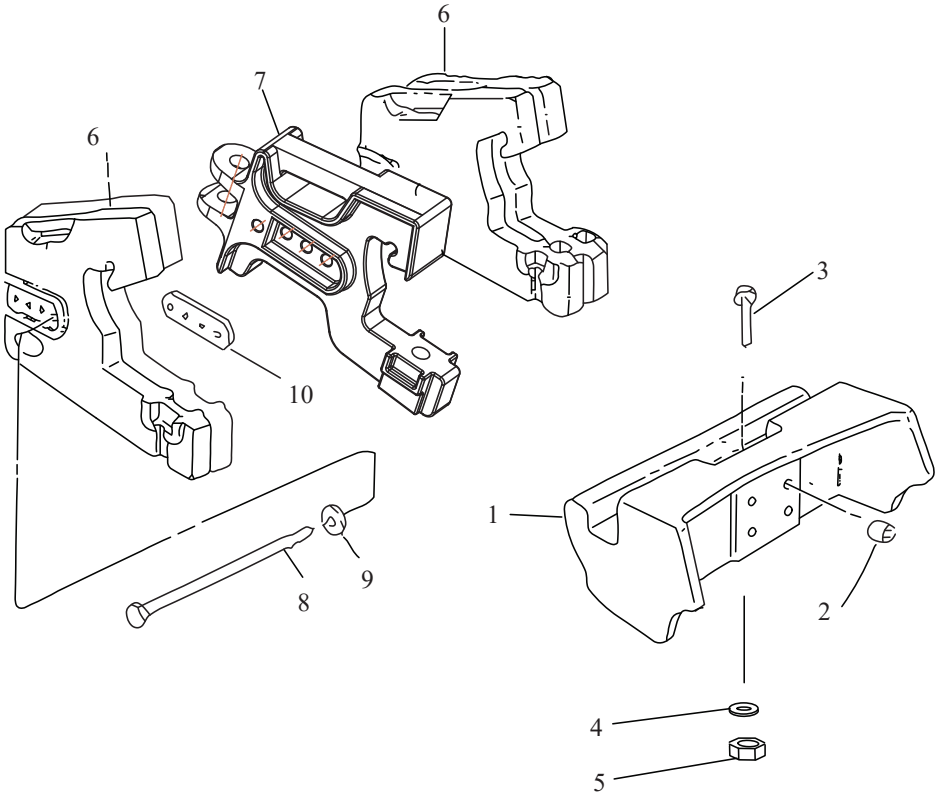


TABLE-56**FRONT WHEEL WEIGHT**

Fig. No.	Part No.	Description	Qty
1	D10193120.9	CARRIER FRONT END WEIGHT	1
2	D10042830.9	SPACER BATTERY TRAY	4
3	D81501570.9	BOLT M20X2.5X170 HEX HEAD	4
4	D10032940.9	WASHER M20 SPRING LOCK	1
5	D83500670.9	NUT M20X2.50 HEX NYLOCK	1
6	D10324240.9	WEIGHT FRONT END	4
7	D10193130.9	WEIGHT TOWING HOOK FRONT	1
8	D81501590.9	BOLT M16X2.0X200-8.8 HEX HEAD	4
9	D85500030.9	WASHER M16 FLAT MACHINED	4
10	D10042800.9	PLATE FRONT END WEIGHT	2

TABLE-56A
REAR END WEIGHT

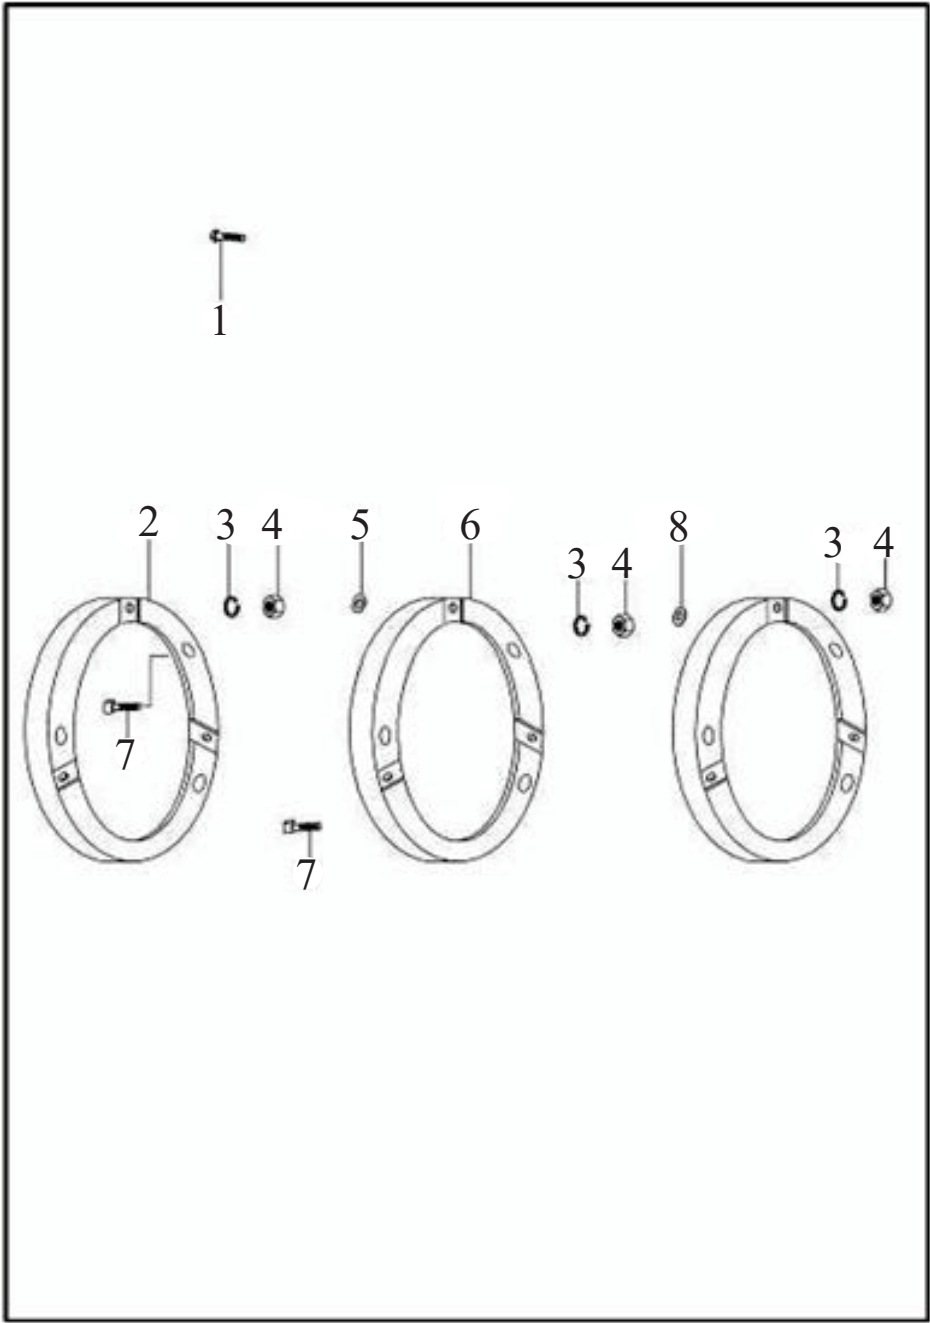


TABLE-56A
REAR END WEIGHT

Fig. No.	Part No.	Description	Qty
1	D81000980.9	BOLT 5/8"-18X2.28" HEX HEAD	8
2	D10087690.9	WEIGHT REAR WHEEL MAIN	2
3	D86000120.9	WASHER 5/8" SPRING LOCK	8
4	D83000160.9	NUT 5/8"-18 HEX	8
5	D10045770.9	WASHER REAR WHEEL WEIGHT BOLT RETAINING	16
6	D10087700.9	WEIGHT REAR WHEEL AUXILLARY	4
7	D81000970.9	BOLT 5/8"-11X3.00" SQUARE HEAD	16
8	D10045770.9	WASHER REAR WHEEL WEIGHT BOLT RETAINING	16
9	D83500160.9	NUT M8X1.25 NYLOCK HEX	4

TABLE-61

DECAL

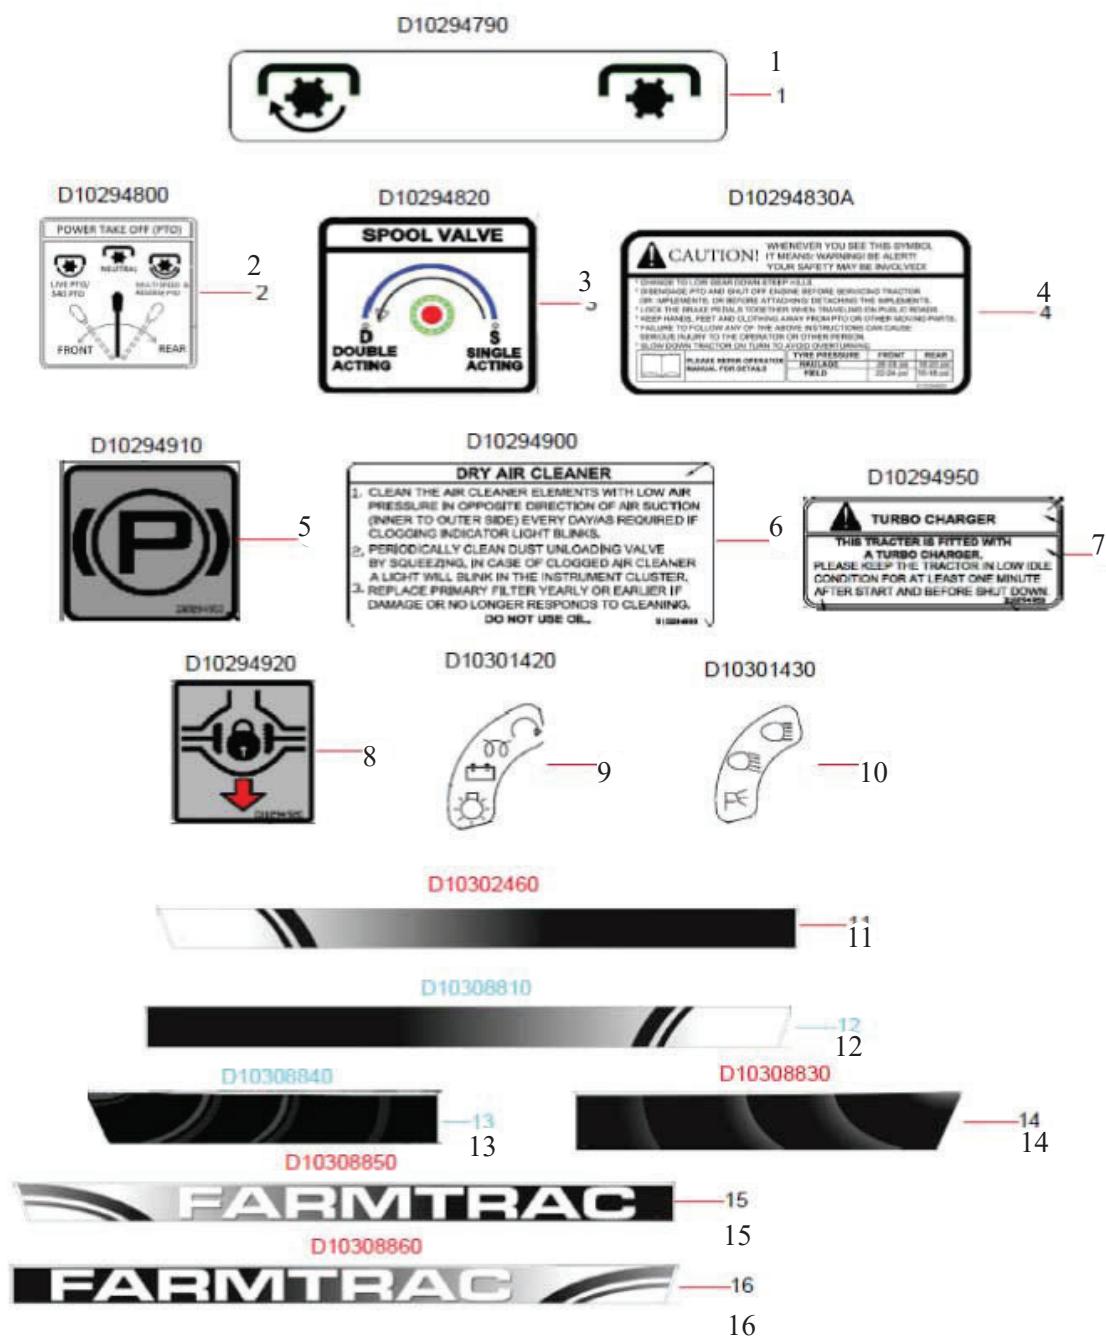


TABLE-61**DECAL**

Fig. No.	Part No.	Description	Qty
1	D10294790.9	DECAL PTO CONTROL	1
2	D10294800.9	DECAL MULTISPEED POWER TAKE OFF	1
3	D10213630.9	DECAL SPOOL VALVE	1
4	D10294830.9	DECAL TRACTOR SAFETY INSTRUCTIONS	1
5	D10294910.9	DECAL PARKING	1
6	D10294900.9	DECAL AIR FILTER	1
7	D10294950.9	DECAL VEHICLE WARNING (TURBO CHARGER)	1
8	D10294920.9	DECAL DIFFERENTIAL LOCK	1
9	D10301420.9	DECAL IGNITION KEY POSITION	1
10	D10301430.9	DECAL SWITCH ELECTRICAL POSITION	1
11	D10302460.9	DECAL BONNET CENTER DOWN LH	1
12	D10308810.9	DECAL BONNET DOWN RH	1
13	D10308840.9	DECAL REAR HOOD WAVESLH	1
14	D10308830.9	DECAL REAR HOOD WAVES RH	1
15	D10308850.9	DECAL MODEL IDENTIFICATION BONNET LH	1
16	D10308860.9	DECAL MODEL IDENTIFICATION BONNET RH	1

TABLE-62

DECAL

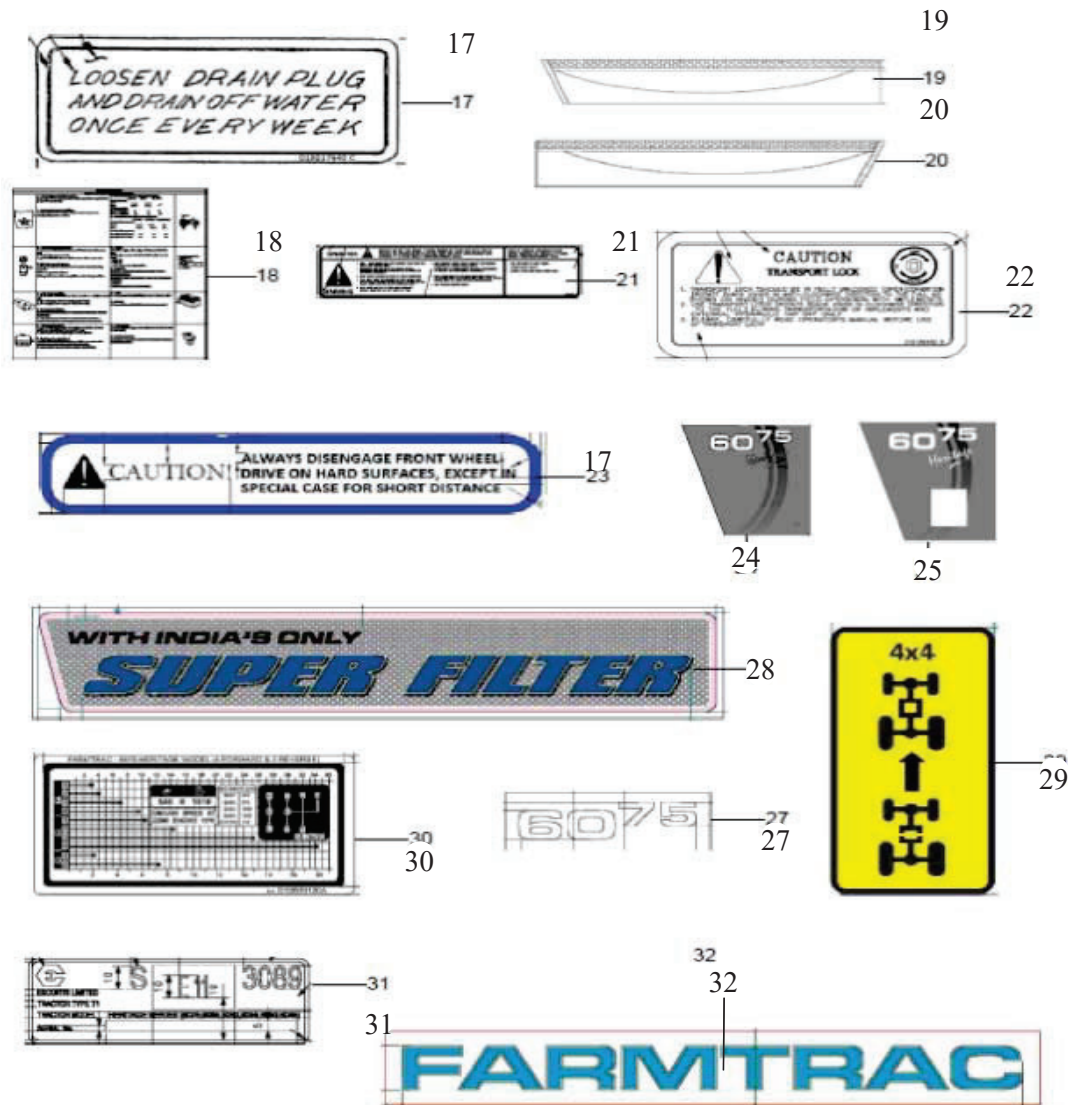


TABLE-62**DECAL**

Fig. No.	Part No.	Description	Qty
17	D10017640.9	DECAL FILTER CLEANER	1
18	D10019110.9	DECAL TRACTOR MAINTENANCE SERVICE	1
19	D10217280.9	DECAL REAR HOOD RH	1
20	D10217270.9	DECAL REAR HOOD LH	1
21	D10019210.9	DECAL TRACTOR SAFETY INSTRUCTIONS	1
22	D10185450.9	DECAL WARNING TRANSPORT LOCK	1
23	D10325410.9	DECAL CAUTION 4WD	1
24	D10341730.9	DECAL SIDE GUARD LH	1
25	D10341740.9	DECAL SIDE GUARD RH	1
27	D10341720.9	BADGE FRONT (FT 6075)	1
28	D10346590.9	DECAL SUPER FILTER	1
29	D10364790.9	DECAL 4WD ENGAGE DISENGAGE SYMBOL	1
30	D10509120.9	DECAL TRACTOR SPEEDS FT6075 HERITAGE	1
31	D10457140.9	DECAL ROPS E-MARKED	1
32	D10303010.9	BADGE FRONT FARMTRAC (BLUE)	1
33	D10019220.9	DECAL PTO CONTROL	1
34	D10213630.9	DECAL SPOOL VALVE	1

TABLE-58
REAR VIEW MIRROR

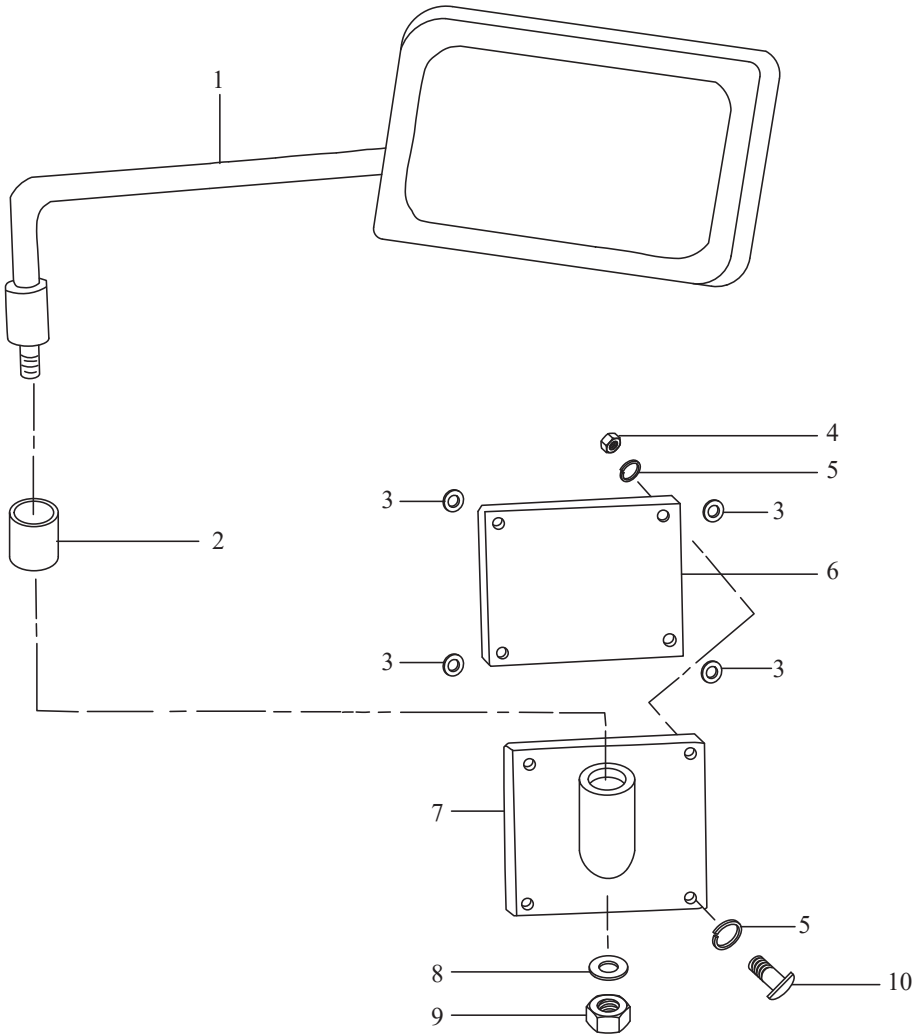


TABLE-58**REAR VIEW MIRROR**

Fig. No.	Part No.	Description	Qty
1	D10397280.9	MIRROR AND ROD ASSEMBLY REAR VIEW LH (E MARKED)	1
1A	D10397290.9	MIRROR AND ROD ASSEMBLY REAR VIEW RH (E MARKED)	1
1A-1	D10151990.9	MIRROR AND ROD ASSEMBLY REAR VIEW	1
2	D10016680.9	BUSH REAR VIEW MIRROR	2
3	D10016490.9	GROMMET HOOD SUPPORT	4
4	D83500190.9	NUT M5X0.80 NYLOCK HEX	8
4-1	D10018100.9	NUT M5X0.80 NYLOCK	8
5	D85500090.9	WASHER M5 FLAT	4
6	D10016660.9	PLATE REAR VIEW MIRROR	2
7	D10016690.9	BRACKET ASSEMBLY REAR VIEW MIRROR	1
8	D85500110.9	WASHER M6 FLAT	1
9	D83500350.9	NUT M6X1.00 NYLOCK HEX	1
10	D10016630.9	SCREW M5X0.80X25 CROSS RECESSED PAN HEAD	4
10-1	D10216680.9	SCREW M5X0.80X20 CROSS RECESSED PAN HEAD	4

TABLE-59
HITCH REAR SUBASSEMBLY

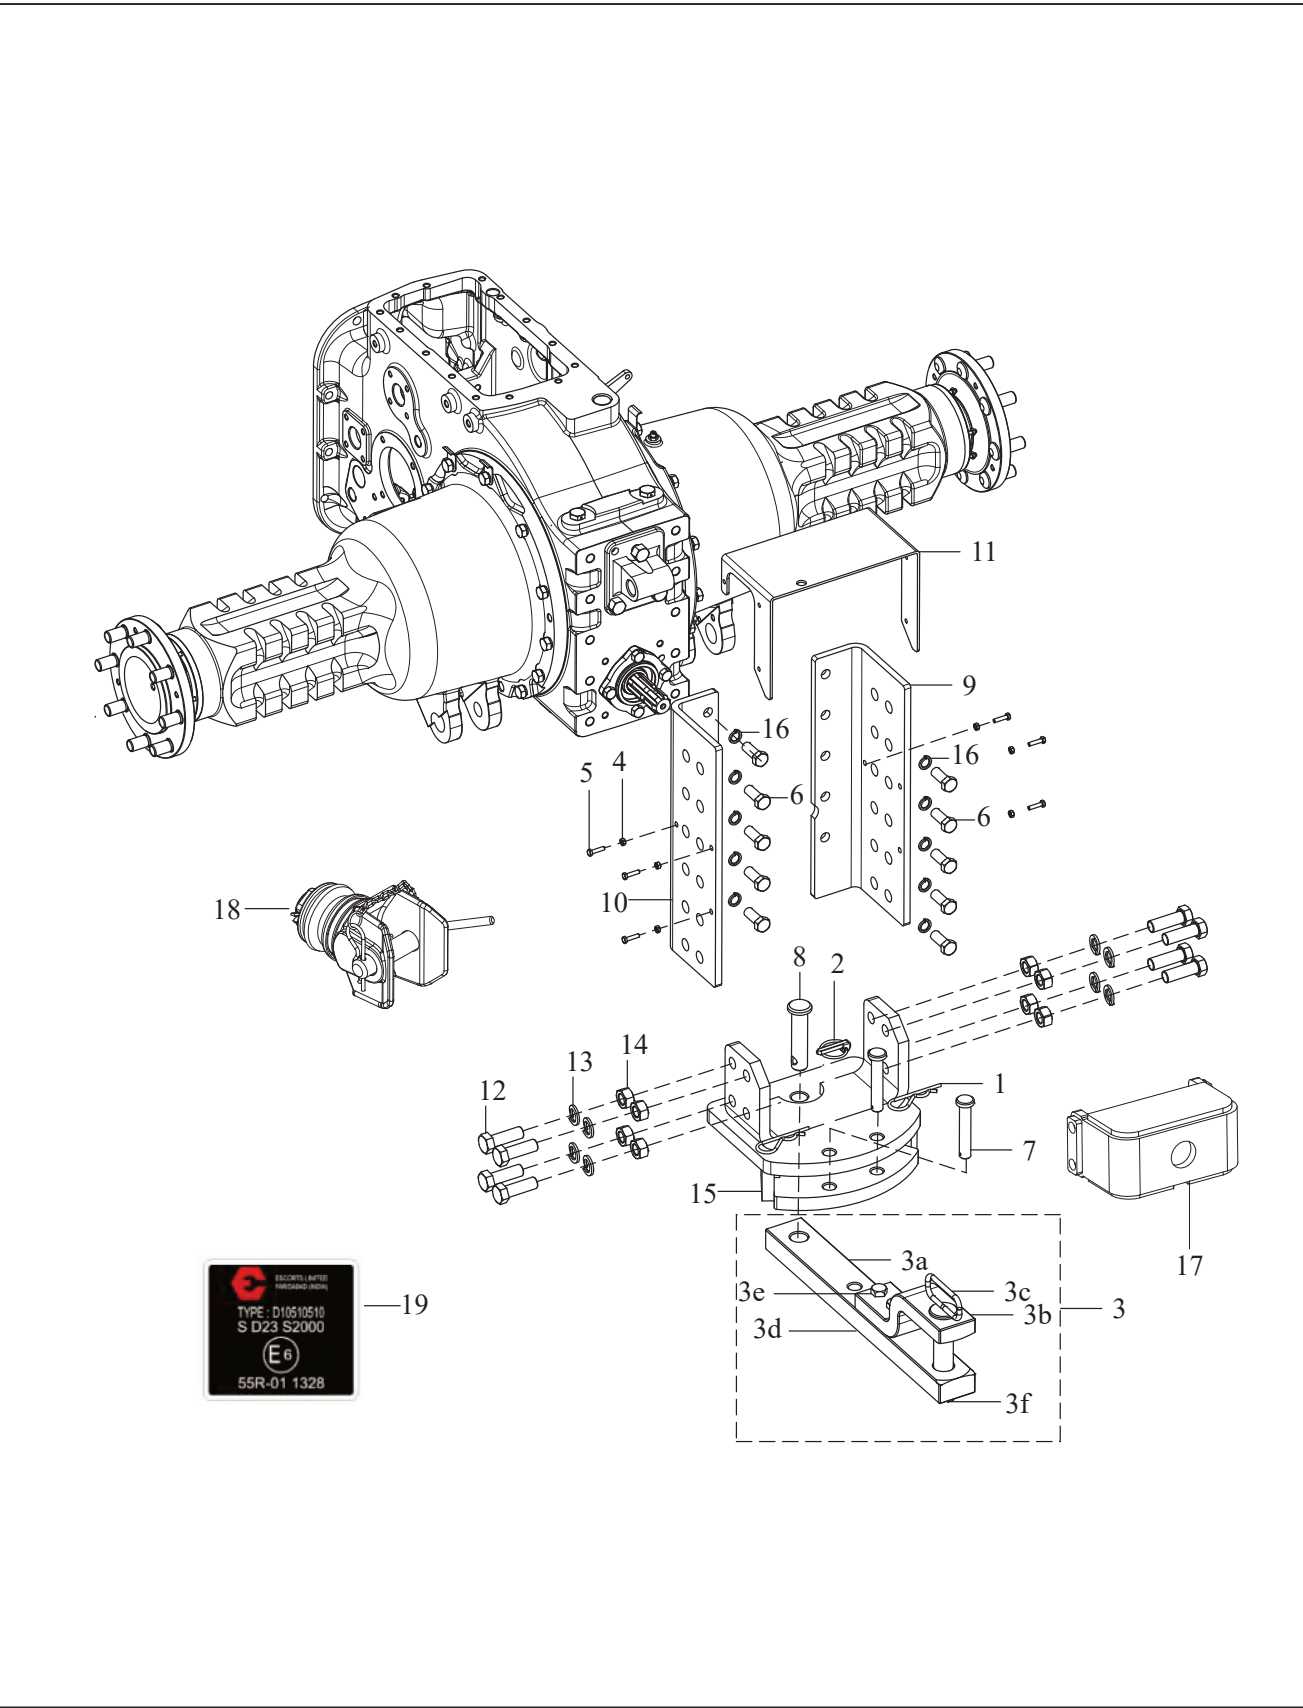


TABLE-59**HITCH REAR SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D87500390.9	PIN 5X105 SPRING R TYPE (IS:6483)	2
2	D10014880.9	PIN AND RING ASSEMBLY LOWER LIFT LINK LYNCH	1
3	D10498150.9	SWINGING DRAWBAR ASSEMBLY	1
3a	D10498950.9	BAR LOWER SWINGING DRAWBAR	1
3b	D10498960.9	BAR UPPER SWINGING DRAWBAR	1
3c	D10498970.9	PIN HITCH SWINGING DRAWBAR	1
3d	D83500720.9	NUT M16X2.00-6 HEX (WHITE PASSIVATED)	2
3e	D10046850.9	BOLT M16X2.0X95-8.8 HEX HEAD	2
3f	D10081260.9	PIN AND RING ASSEMBLY	1
4	D83500220.9	NUT M6X1.00-5 HEX	6
5	D81500270.9	BOLT M6X1.00X25-9.8 HEX HEAD	6
5-1	D10034960.9	SCREW M6X1.00X25-6.6 HEX HEAD	6
6	D81500070.9	BOLT M16X2.00X40-8.8 HEX HEAD	10
7	D10500720.9	PIN SWINGING DRAWBAR MOUNTING FRONT	2
8	D10513310.9	PIN SWINGING DRAWBAR MOUNTING REAR	1
9	D10717340.9	BRACKET REAR TOW HOOK MOUNTING RH	1
10	D10717890.9	BRACKET ASSEMBLY REAR TOW HOOK MOUNTING LH	1
11	D10510480.9	GUARD PTO REAR	1
12	D81503140.9	BOLT M20X2.5X60-12.9 HEX HEAD	8
12A	D81503410.9	BOLT M20X2.5X65-12.9 HEX HEAD	8
13	D86500080.9	WASHER M20 SPRING LOCK	8
14	D83500640.9	NUT M20X2.5 LOCK	8
14-1	D83500670.9	NUT M20X2.50 HEX NYLOCK	8
14-2	D83500670.9	NUT M20X2.50 HEX NYLOCK	8
15	D10510510.9	BRACKET ASSEMBLY SWINGING DRAWBAR	1
16	D86500060.9	WASHER M16 SPRING LOCK	10
17	D10529030.9	PLATE SUPPORT MOUNTING FRONT TOW HOOK ASSEMBLY	1
18	D10466180.9	TOW HOOK ASSEMBLY ROTATING (FTES ZACZEP ZM04-900-500.00)	1
19	D10580420.9	DECAL SWINGING DRAWBAR	1

TABLE-60
CANOPY ASSEMBLY

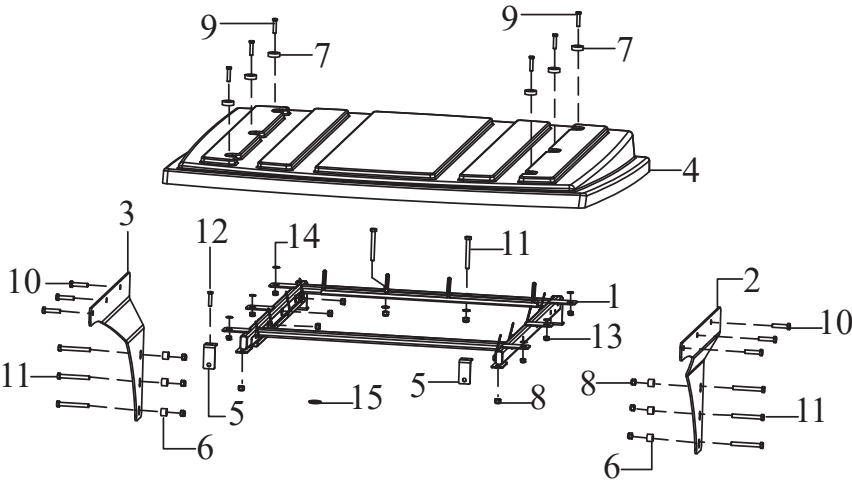


TABLE-60
CANOPY ASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10490990.9	FRAME ASSEMBLY CANOPY	1
2	D10491010.9	BRACKET FRAME ASSEMBLY CANOPY LH	1
3	D10491020.9	BRACKET FRAME ASSEMBLY CANOPY RH	1
4	D10474740.9	CANOPY	1
5	D10473920.9	BRACKET WORK LAMP MOUNTING	2
6	D10497010.9	SPACER CANOPY MOUNTING BRACKET	6
7	D10326280.9	PAD CANOPY FRAME (RUBBER)	6
8	D83500180.9	NUT M12X1.75 NYLOCK HEX	18
9	D81500160.9	BOLT M10X1.50X45-10.9 HEX HEAD	6
10	D81500170.9	BOLT M12X1.75X55-10.9 HEX HEAD	2
11	D10007160.9	BOLT M12X1.75X105-10.9 HEX HEAD	8
12	D81500540.9	BOLT M12X1.75X40-9.8 HEX HEAD	4
13	D83500170.9	NUT M10X1.50 NYLOCK HEX	6
14	D85500060.9	WASHER M12 FLAT	1
15	D85500140.9	WASHER M10 FLAT	2

TABLE-66
ROPS

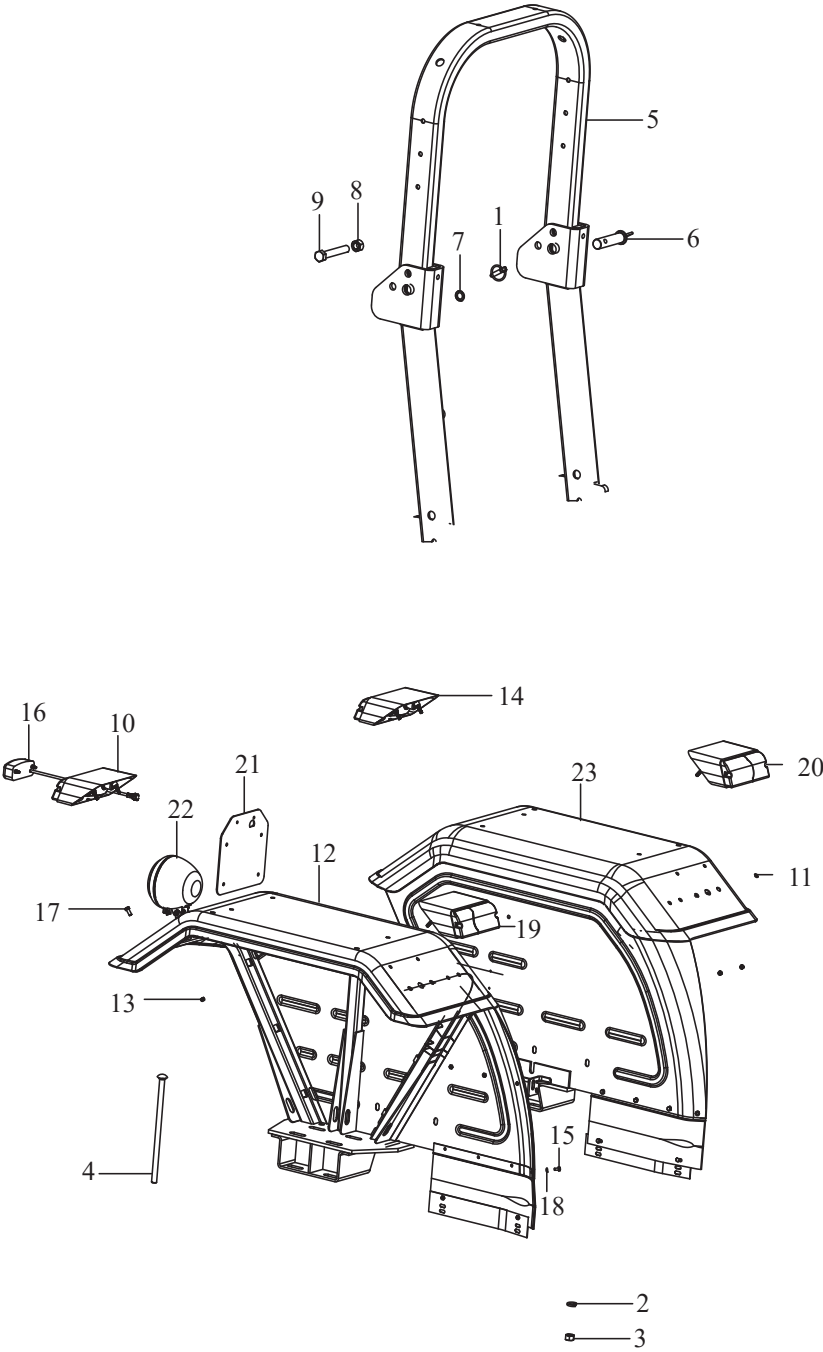


TABLE-66**ROPS**

Fig. No.	Part No.	Description	Qty
1	D10014880.9	PIN AND RING ASSEMBLY LOWER LIFT LINK LYNCH	2
2	D86000120.9	WASHER 5/8" SPRING LOCK	8
3	D83000160.9	NUT 5/8"-18 HEX	8
4	D81001730.9	BOLT 5/8"-18X13" CARRIAGE	8
5	D10434620.9	ROPS FOLDABLE	1
6	D10333900.9	PIN ROPS MOUNTING	2
7	D85500210.9	WASHER M20 FLAT	2
8	D83500150.9	NUT M20X1.50-6P HEX	2
9	D81502340.9	BOLT M20X2.5 ROPS MOUNTING	2
10	D10372570.9	LAMP ASSEMBLY FENDER REAR RH	1
11	D85500040.9	WASHER M6 FLAT	8
12	D10342100.9	FENDER ASSEMBLY REAR RH	1
12-1	D10342100AH.9	FENDER ASSEMBLY REAR RH	1
12-2	D10342100AI.9	FENDER ASSEMBLY REAR RH	1
13	D83500350.9	NUT M6X1.00 NYLOCK HEX	8
14	D10372590.9	LAMP ASSEMBLY FENDER REAR LH	1
15	D81500980.9	BOLT M6X12	2
16	D10345870.9	LAMP ASSEMBLY VEHICLE REGISTRATION PLATE	1
17	D81000200.9	BOLT 5/16"-18X0.75 HEX HEAD	2
18	D85500110.9	WASHER M6 FLAT	2
19	D10372560.9	LAMP ASSEMBLY PARKING RH	1
20	D10372580.9	LAMP ASSEMBLY PARKING LH	1
21	D10557630.9	BRACKET ASSEMBLY REGISTRATION PLATE MOUNTING	1
22	D10389890.9	LAMP ASSEMBLY PLOUGH	1
22-1	D10939400AA.9	LAMP ASSEMBLY PLOUGH	1
23	D10779350.9	FENDER ASSEMBLY REAR LH (ANTIQUE SILVER)	1

TABLE-101
KIT ENGINE VALVES INLET AND EXHAUST

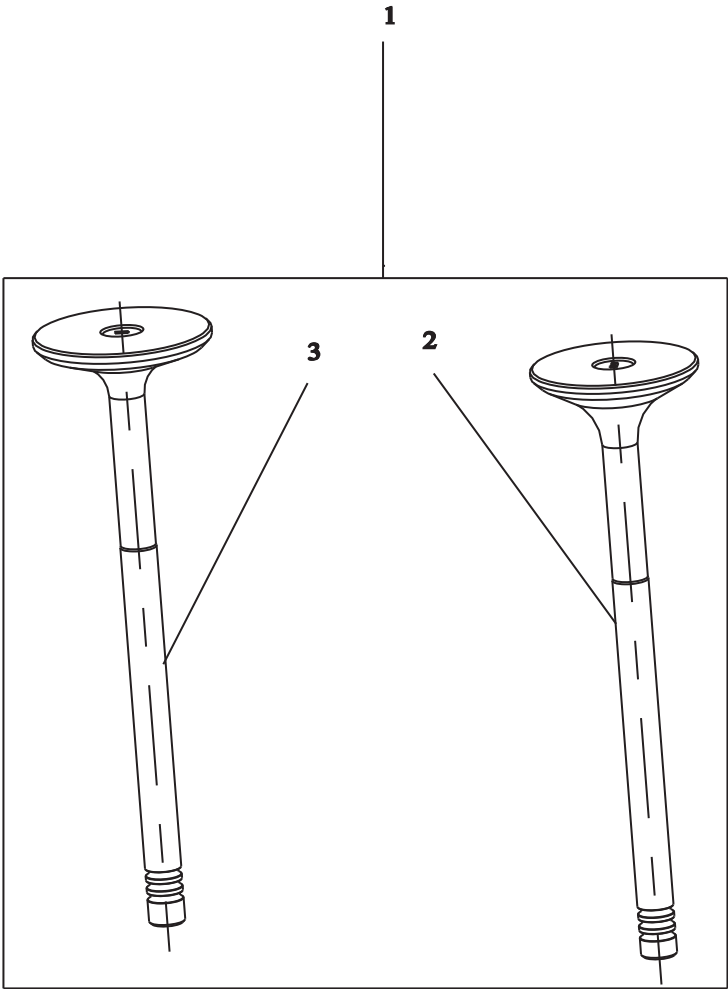


TABLE-101**KIT ENGINE VALVES INLET AND EXHAUST**

Fig. No.	Part No.	Description	Qty
1	D10074180.9	KIT ENGINE VALVES INLET AND EXHAUST (E-430/435)	1
2	D10008720.9	VALVE EXHAUST 35MM GAUGE	3
3	D10008730.9	VALVE AIR INTAKE 37.9MM GAUGE	3

TABLE-102
KIT ENGINE VALVES INLET AND EXHAUST

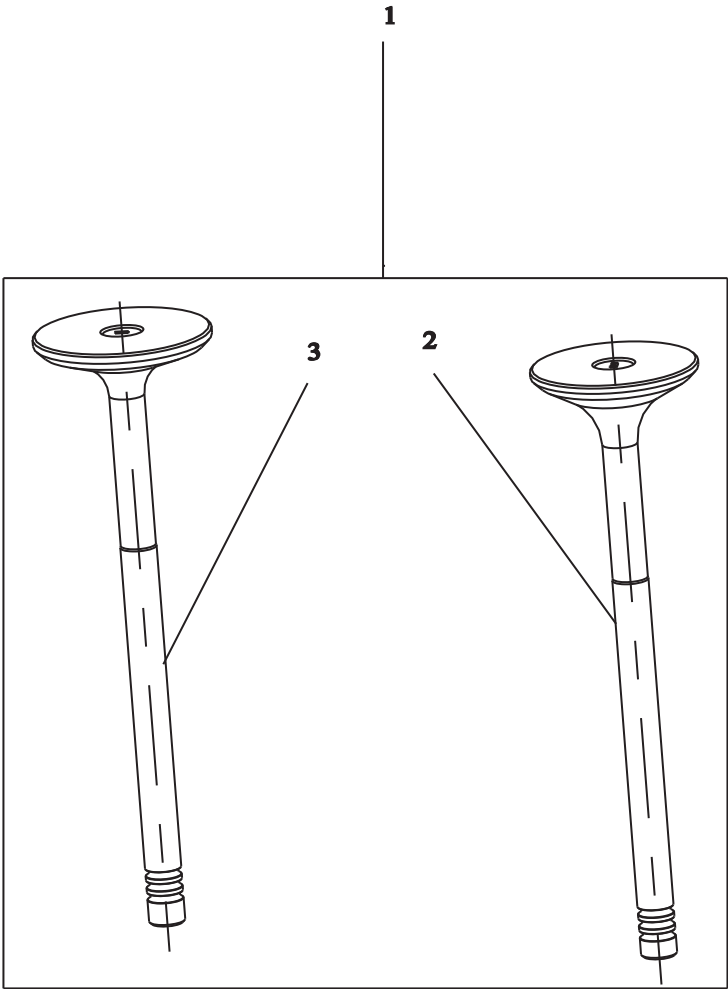


TABLE-102**KIT ENGINE VALVES INLET AND EXHAUST**

Fig. No.	Part No.	Description	Qty
1	D10203850.9	KIT ENGINE VALVES INLET AND EXHAUST (E4455PT)	1
2	D10008720.9	VALVE EXHAUST 35MM GAUGE	4
3	D10008730.9	VALVE AIR INTAKE 37.9MM GAUGE	4

TABLE-152
KIT ENGINE SET OF PISTON CIRCLIP PIN PISTON

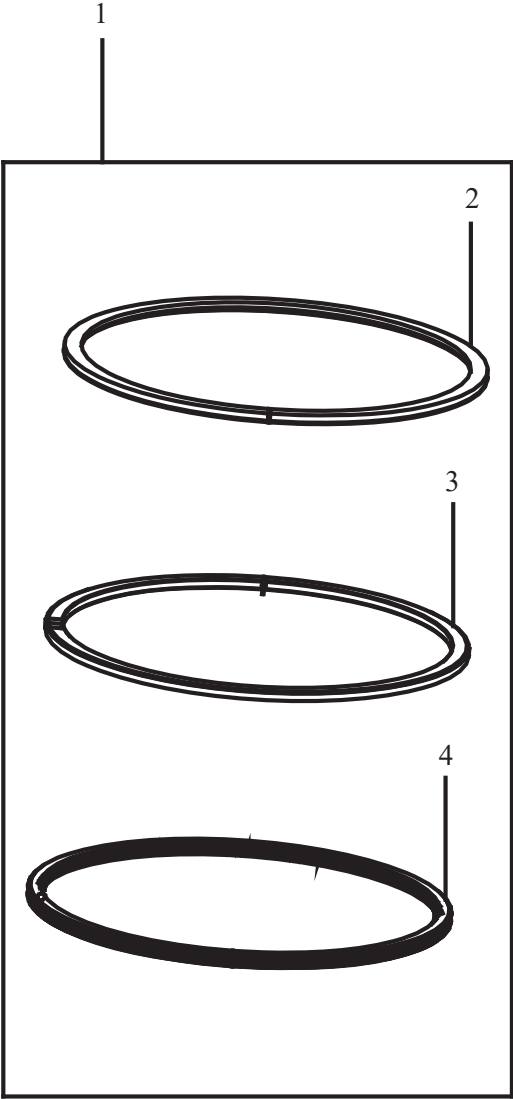


TABLE-152**KIT ENGINE SET OF PISTON CIRCLIP PIN PISTON**

Fig. No.	Part No.	Description	Qty
1	D10203900.9	KIT ENGINE PISTON RING SET (E4455PT)	1
2	D10009730.9	RING ASSEMBLY PISTON OIL CONTROL	4
3	D10009740.9	RING PISTON COMPRESSION LOWER	4
4	D10009750.9	RING PISTON COMPRESSION UPPER	4

TABLE-1
KIT GEAR BOX BALL AND SPRING

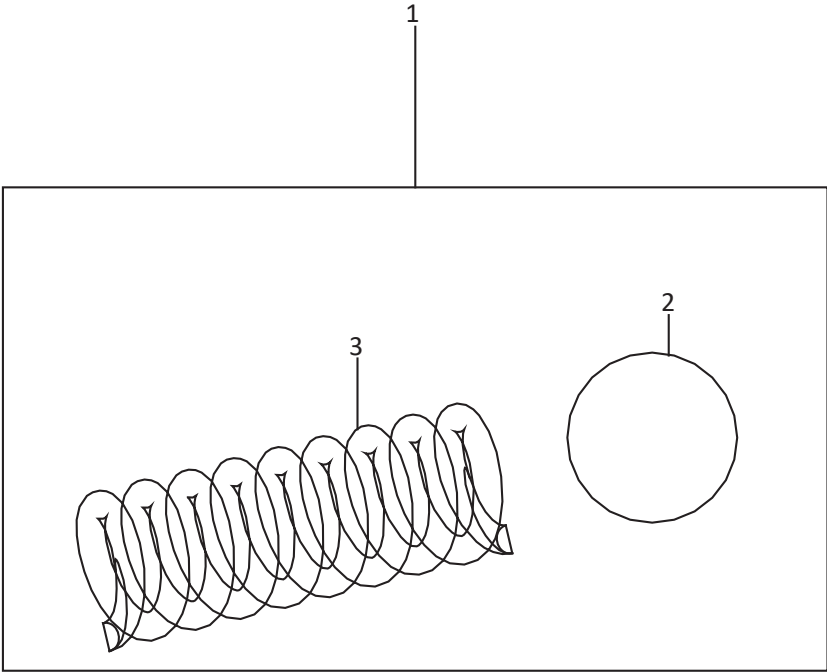


TABLE-1**KIT GEAR BOX BALL AND SPRING**

Fig. No.	Part No.	Description	Qty
1	D10112880.9	KIT GEAR BOX BALL AND SPRING (FARMTRAC)	1
2	D10000490.9	BALL 3/8" DIAMETER	4
3	D10195960.9	SPRING TRANSMISSION PTO SHIFTER PLATE	4

TABLE-57
RUNNING BOARD

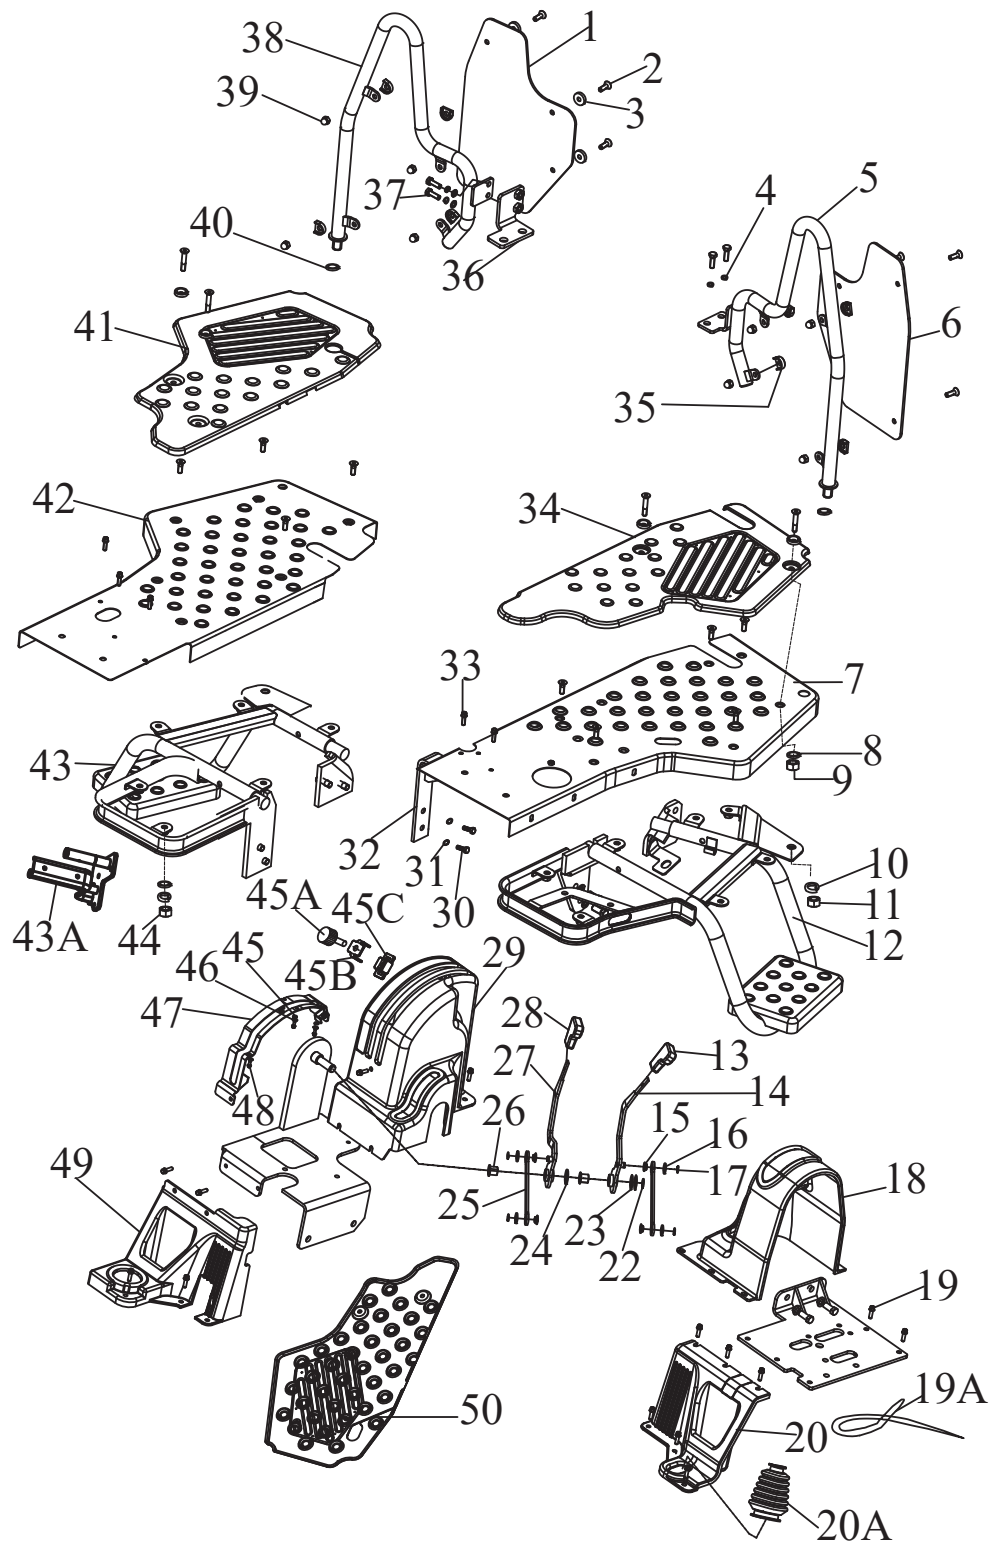


TABLE-57
RUNNING BOARD

Fig. No.	Part No.	Description	Qty
1	D10255160.9	SHIELD HEAT PROTECTION RH (FIBER GLASS)	1
2	D82500760.9	SCREW M8X1.25X25-12.9 COUNTERSUNK HEAD	20
3	D10279860.9	PAD NYLON HEAT SHIELD MOUNTING	12
4	D86500150.9	WASHER M8 SPRING LOCK	17
5	D10255280.9	FRAME ASSEMBLY SHIELD HEAT PROTECTION RH	1
6	D10255150.9	SHIELD HEAT PROTECTION LH (FIBER GLASS)	1
7	D10361830.9	BOARD ASSEMBLY RUNNING RH	1
8	D85500050.9	WASHER M8 FLAT	13
9	D83500160.9	NUT M8X1.25 NYLOCK HEX	4
10	D86500070.9	WASHER M14 SPRING LOCK	2
11	D83500100.9	NUT M14X1.50-6 HEX	2
12	D10574830.9	FOOT STEP ASSEMBLY RUNNING BOARD RH	1
13	D10288150.9	KNOB HYDRAULIC LIFT DRAFT CONTROL	1
14	D10255130.9	HANDLE ASSEMBLY HYDRAULIC LIFT DRAFT CONTROL	1
15	D10292750.9	BUSH HYDRAULIC CONTROL LINK	4
16	D85500140.9	WASHER M10 FLAT	4
17	D10006220.9	CIRCLIP C8X1.00 N	4
18	D10254970.9	CONSOLE REAR IPTO LEVER	1
19	D10011090.9	BOLT M6X1.00X20-6.6 HEX FLANGED (LUBE OIL PUMP)	17
19A	D10028500.9	STRAP WIRING 250 MM IC MAKE	1
20	D10254940.9	CONSOLE REAR HIGH LOW GEAR LEVER	1
20A	D10286490.9	BOOT TRANSMISSION HIGH LOW LEVER	1
22	D90000180.9	CIRCLIP A15X0.90 SB	1
23	D10310890.9	WASHER THRUST HYDRAULIC LEVER	2
24	D10042730.9	WASHER 15.5X30 DIFFERENTIAL LOCK BUSH THRUST	1
25	D10258830.9	LINK HYDRAULIC LIFT LEVER	2
26	D10292740.9	BUSH HYDRAULIC CONTROL LEVER	2
27	D10258760.9	HANDLE ASSEMBLY HYDRAULIC LIFT POSITION CONTROL	1
28	D10288140.9	KNOB POSITION CONTROL	1
29	D10343190.9	CONSOLE REAR HYDRAULIC LEVER	1
30	D81000470.9	BOLT 7/16"-14X1.50" HEX HEAD	10
31	D86000020.9	WASHER 7/16" SPRING LOCK	10
32	D10279850.9	BRACKET ASSEMBLY RUNNING BOARD REAR RH	1
33	D82500230.9	SCREW M8X1.25X20-8.8 HEX HEAD FLANGED	8
34	D10280220.9	FOOT MAT RUNNING BOARD RH	1
35	D10279880.9	PAD RUBBER HEAT SHIELD MOUNTING	8
36	D10318390.9	BRACKET HEAT SHIELD SUPPORT	1
37	D82500080.9	SCREW M8X1.25X25-8.8 HEX HEAD	6
38	D10255170.9	FRAME ASSEMBLY SHIELD HEAT PROTECTION LH	1
39	D10292720.9	NUT CAP M8X1.25X6	8

TABLE-57
RUNNING BOARD

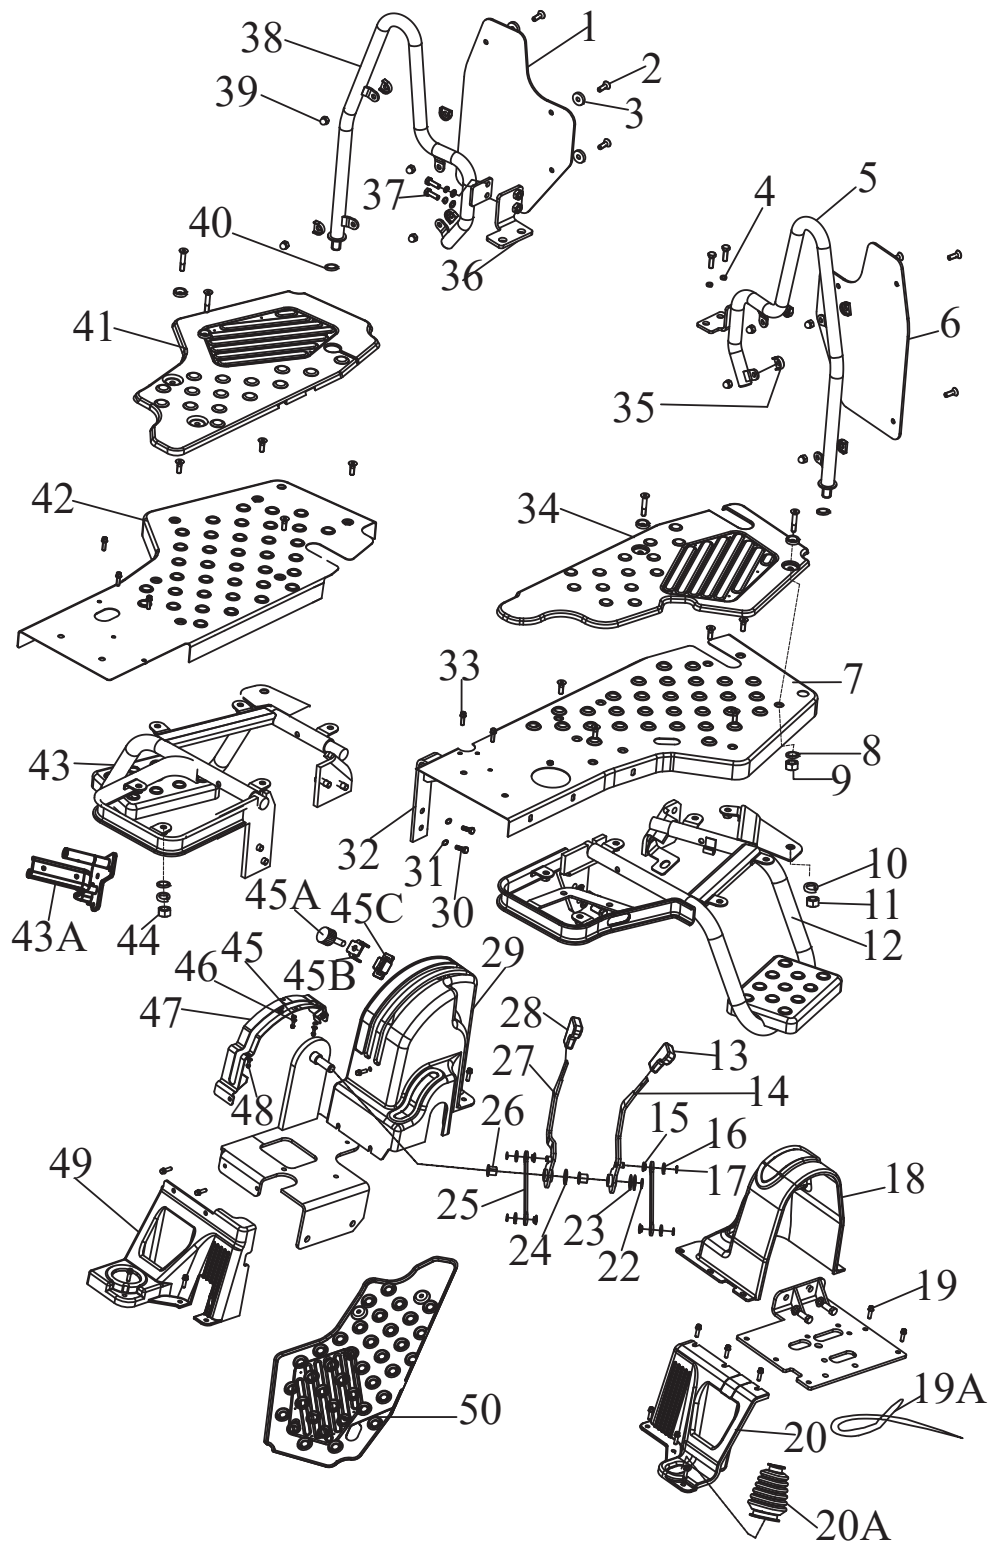


TABLE-57
RUNNING BOARD

Fig. No.	Part No.	Description	Qty
39-1	D10292720AC.9	NUT CAP M8X1.25X6	8
40	D10323100.9	WASHER 15X35 NYLON	2
41	D10280210.9	FOOT MAT RUNNING BOARD LH	1
42	D10575580.9	BOARD RUNNING ASSEMBLY LH	1
43	D10574790.9	FOOT STEP ASSEMBLY RUNNING BOARD LH	1
43-1	D10258160.9	BRACKET ASSEMBLY RUNNING BOARD REAR LH	1
44	D10574790.9	FOOT STEP ASSEMBLY RUNNING BOARD LH	9
45	D86500010.9	WASHER M5 SPRING LOCK	4
45A	D10017590.9	KNOB HYDRAULIC LIFT CONTROL LEVER STOP	2
45B	D10343070.9	STOPPER HYDRAULIC LEVER LOWER	1
45C	D10343080.9	STOPPER HYDRAULIC LEVER UPPER	1
46	D85500090.9	WASHER M5 FLAT	4
47	D10343060.9	BRACKET HYDRAULIC LEVER GUIDE	1
48	D81500730.9	SCREW M4X0.70X10-9.8 HEX HEAD FLANGED	4
49	D10254950.9	CONSOLE REAR MAIN GEAR LEVER	1
49A	D10432430.9	BOOT TRANSMISSION MAIN GEAR LEVER COVER	1
50	D10280210.9	FOOT MAT RUNNING BOARD LH	1

TABLE-114

CONSUMABLES SUBASSEMBLY

D95000170.9	D95015380.9
1	2
D95000320.9	D95000410.9
3	4
D95004560.9	D95000130.9
5	6
D95013590.9	D95001140.9
7	8
D95013250.9	D95000340.9
9	10
D95000120.9	D95000060 .9
11	12

TABLE-114**CONSUMABLES SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D95000170.9	DIESEL HIGH SPEED	1
2	D95015380.9	OIL TRANSMISSION ENI MULTITECH THT	1
3	D95000320.9	FEVICOL (SR-998)	1
4	D95000410.9	LOCTITE 574	1
5	D95004560.9	LOCTITE 542	1
6	D95000130.9	LOCTITE CAT - 577	1
7	D95013590.9	OIL POWER STEERING (TRANSFLUID III H)	1
8	D95001140.9	RUST INHIBITOR , ZERO-R (VEEDOL)	1
9	D95013250.9	SEALANT LIQUID ANAEROBIC (HIGHER STRENGTH)	1
10	D95000340.9	GREASE EP-2	1
11	D95000120.9	GENERAL GREASE	1
12	D95000060.9	GREASE HIGH TEMPERATURE WATERPROOF	1

TABLE-73
DIFFERENTIAL LOCK

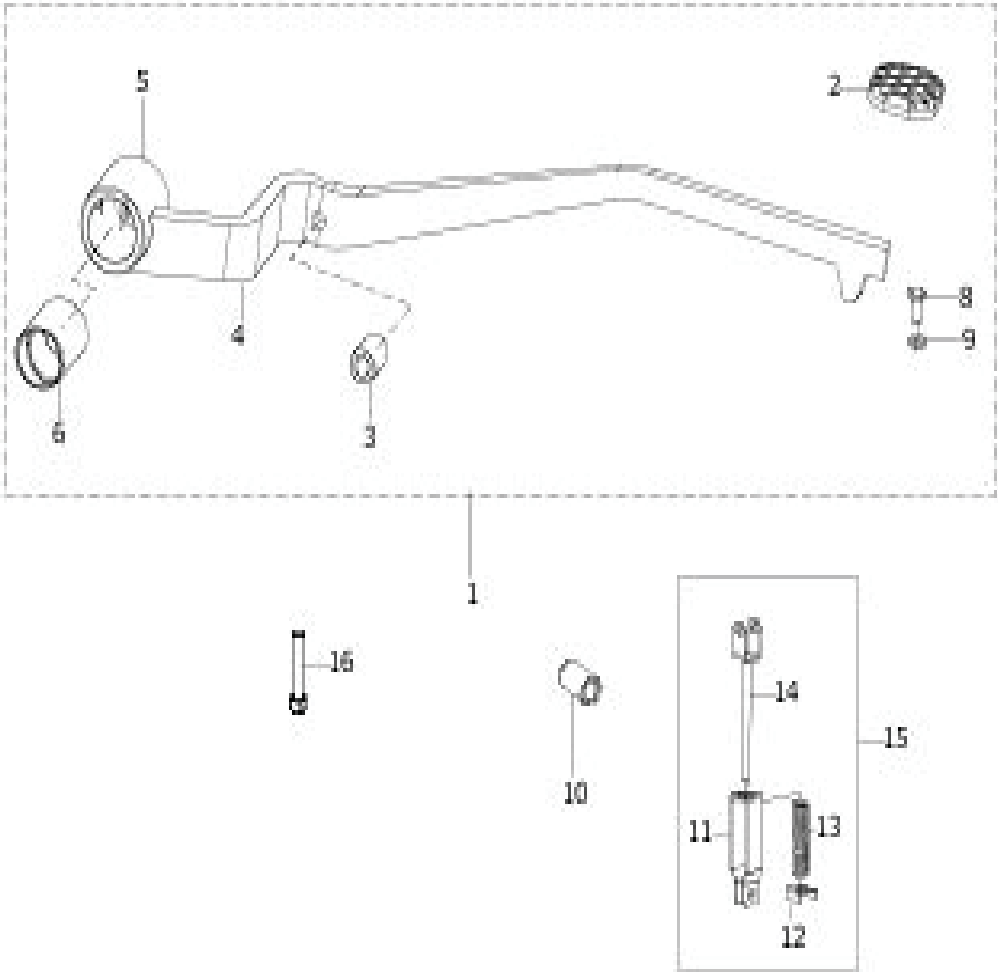


TABLE-73**DIFFERENTIAL LOCK**

Fig. No.	Part No.	Description	Qty
1	D10256800.9	PEDAL ASSEMBLY REAR AXLE DIFFERENTIAL LOCK	1
2	D10333550.9	PLATE DIFFERENTIAL LOCK PEDAL	1
3	D10333570.9	BUSH DIFFERENTIAL LOCK PEDAL	1
4	D10333560.9	SHANK DIFFERENTIAL LOCK PEDAL	1
5	D10333580.9	HUB DIFFERENTIAL LOCK PEDAL	1
6	D10068070.9	BUSH	1
8	D81503030.9	BOLT M16X2.0X170-8.8 HEX HEAD	2
9	D86000120.9	WASHER 5/8" SPRING LOCK	6
10	D10012630.9	SLEEVE PEDAL DIFFERENTIAL LOCK	1
11	D10107760.9	CLEVIS ASSEMBLY DIFFERENTIAL LOCK	1
12	D10107770.9	NUT REAR AXLE DIFFERENTIAL LOCK ADJUSTING	1
13	D10012500.9	SPRING PEDAL DIFFERENTIAL LOCK	1
14	D10107780.9	ROD AND CLEVIS ASSEMBLY DIFFERENTIAL LOCK	1
15	D10013120.9	LINKAGE ASSEMBLY DIFFERENTIAL LOCK	1
16	D10012640.9	BOLT 5/8"-11X2.75" HEX HEAD (DIFFERENTIAL LOCK PEDAL)	1

TABLE-74

CLAMP & HOSES TURBOCHARGER

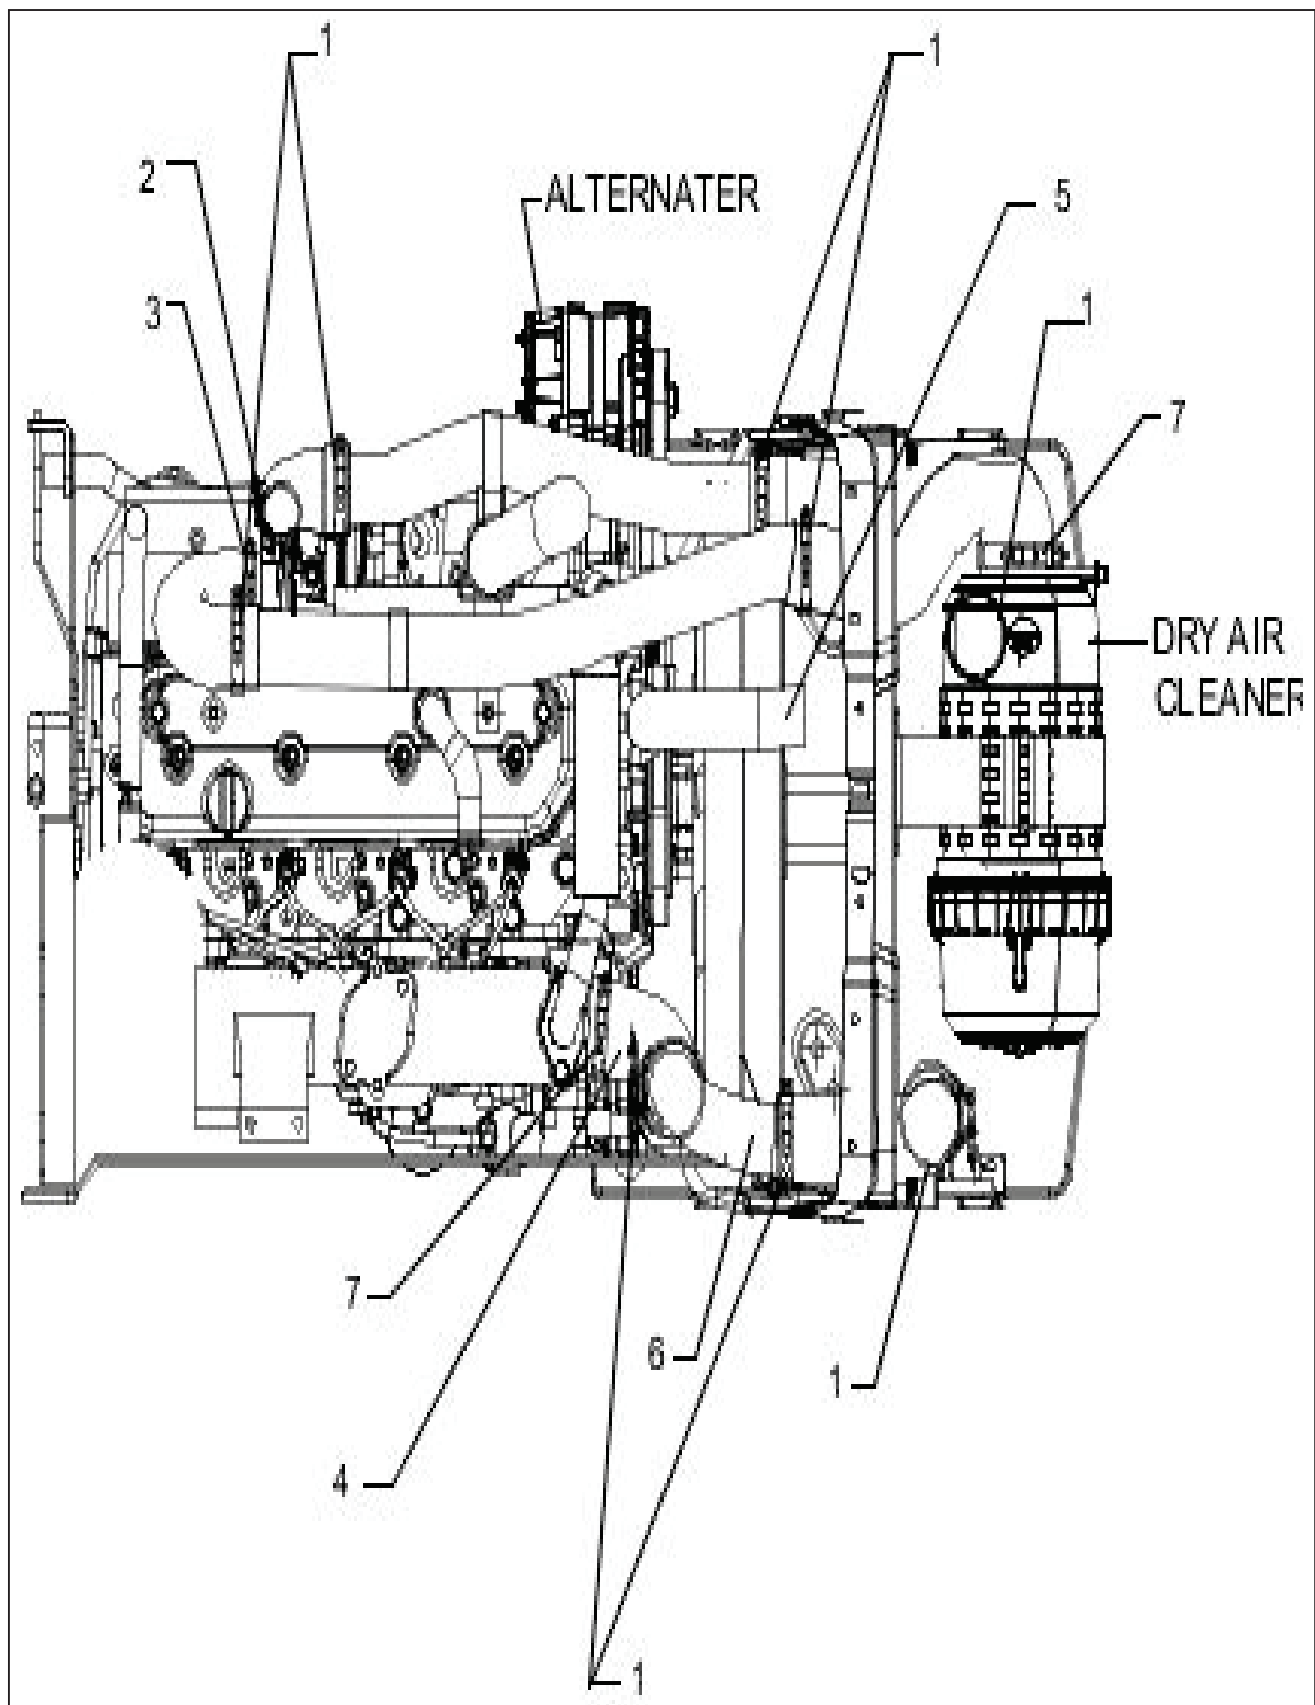


TABLE-74**CLAMP & HOSES TURBOCHARGER**

Fig. No.	Part No.	Description	Qty
1	D10401770.9	CLAMP ASSEMBLY HOSE (TB40)	8
2	D10245040.9	CLAMP ASSEMBLY HOSE (TB26)	1
3	D10201200.9	CLAMP ASSEMBLY HOSE (TB32)	1
4	D10244530.9	HOSE INTAKE MANIFOLD	1
5	D10174670.9	HOSE WATER PUMP TO RADIATOR INLET	1
6	D10370320.9	TUBE INTERCOOLER TO INTAKE MAN	1
7	D10401780.9	CLAMP ASSEMBLY HOSE (TB50)	1

TABLE-68
ACCESSORIES SUBASSEMBLY

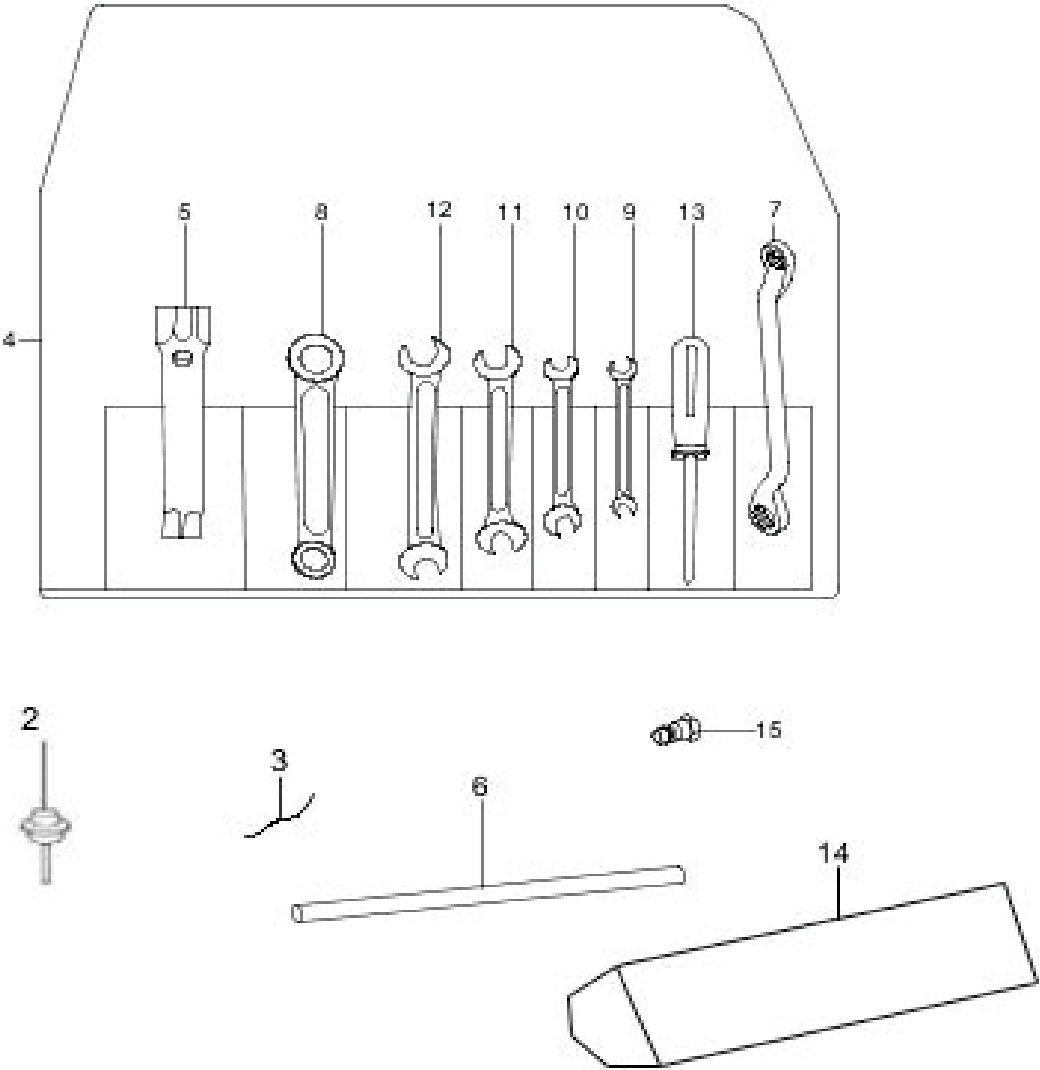


TABLE-68**ACCESSORIES SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D95015820.9	MANUAL OPERATOR FT6090 XPRO	1
2	D10289910.9	SEAL TRANSPORT LOCK WITH BLUE COLOR	8
3	D10009960.9	WIRE LOCKING	1
4	D10371280.9	TOOL KIT	1
4-1	D10371280AC.9	TOOL KIT	1
4-2	D10371280AD.9	TOOL KIT	1
5	D10370940.9	SPANNER WHEEL 21X30	1
6	D10370950.9	ROD EXTENSION SPANNER WHEEL	1
7	D10370910.9	SPANNER RING 19X24	1
8	D10370920.9	SPANNER WHEEL 27	1
9	D10018280.9	SPANNER D/E 3/8"X5/16"	1
10	D10018290.9	SPANNER D/E 1/2"X7/16"	1
11	D10018300.9	SPANNER D/E 5/8"X9/16"	1
12	D10018310.9	SPANNER D/E 3/4"X11/16"	1
13	D10018320.9	SCREW DRIVER	1
14	D10374900.9	BAG TOOL KIT	1
15	D10173630.9	ADAPTOR VALVE HYDRAULIC REMOTE	4

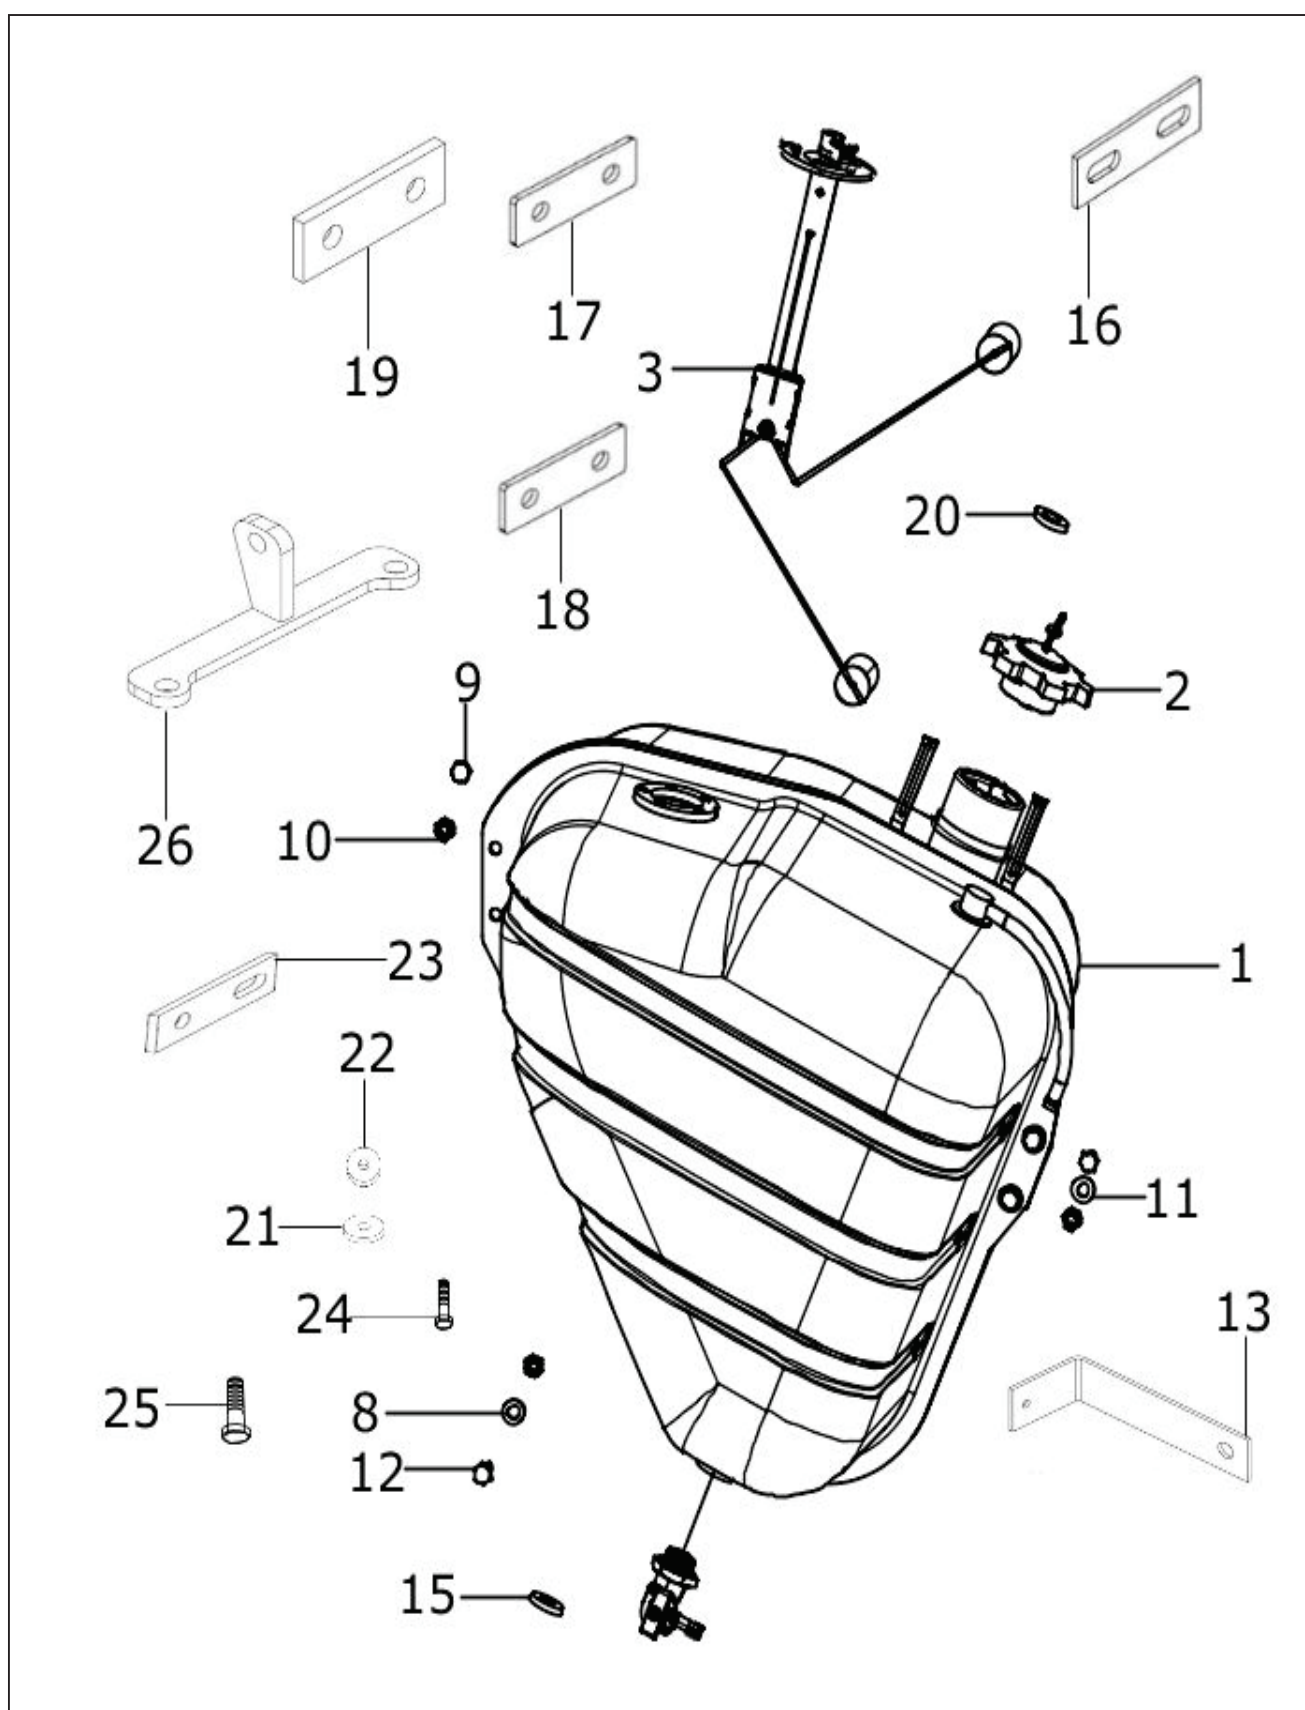
TABLE-12**FUEL TANK SUBASSEMBLY**

TABLE-12**FUEL TANK SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10401680.9	TANK ASSEMBLY FUEL	1
2	D10019100.9	CAP AND KEY ASSEMBLY FUEL TANK	1
3	D10042440.9	FLOAT ASSEMBLY FUEL TANK (PRICOL PART NO 806650)	1
3-1	D10042440AG.9	FLOAT ASSEMBLY FUEL TANK (PRICOL PART NO 806650)	1
8	D85000040.9	WASHER 5/16" FLAT	6
9	D81000420.9	BOLT 5/16"-18X0.88" HEX HEAD	4
10	D83000080.9	NUT 5/16"-18 HEX	3
11	D86000110.9	WASHER 5/16" LOCK EXTERNAL TOOTH	2
12	D81000670.9	BOLT 5/16"-24X1.25" SQUARE HEAD	1
13	D10043110.9	BRACKET FOOT THROTTLE	1
15	D10003580.9	WASHER 1/2" FLAT	4
16	D10378250.9	PLATE PAD RUBBER SUPPORT FUEL TANK UPPER FRONT	2
17	D10401650.9	PLATE SUPPORT RUBBER PAD FUEL TANK	2
18	D10401670.9	PAD RUBBER FRONT FUEL TANK	1
19	D10401660.9	PAD RUBBER REAR FUEL TANK	1
20	D86500180.9	WASHER 8.5X30 FLAT	1
21	D10375010.9	PAD RUBBER FUEL TANK BOTTOM RH	1
21-1	D10375010AE.9	PAD RUBBER FUEL TANK BOTTOM RH	1
22	D10375020.9	PAD RUBBER FUEL TANK BOTTOM LH	1
23	D10432870.9	PAD RUBBER FUEL TANK MOUNTING	2
23-1	D10432870AD.9	PAD RUBBER FUEL TANK MOUNTING	1
24	D81501390.9	BOLT M8X40 SQUARE HEAD	1
25	D10068840.9	BOLT M8X1.25X30-8.8 HEX HEAD	2
26	D10080950.9	BRACKET FUEL TANK MOUNTING (FT-60DLX)	1

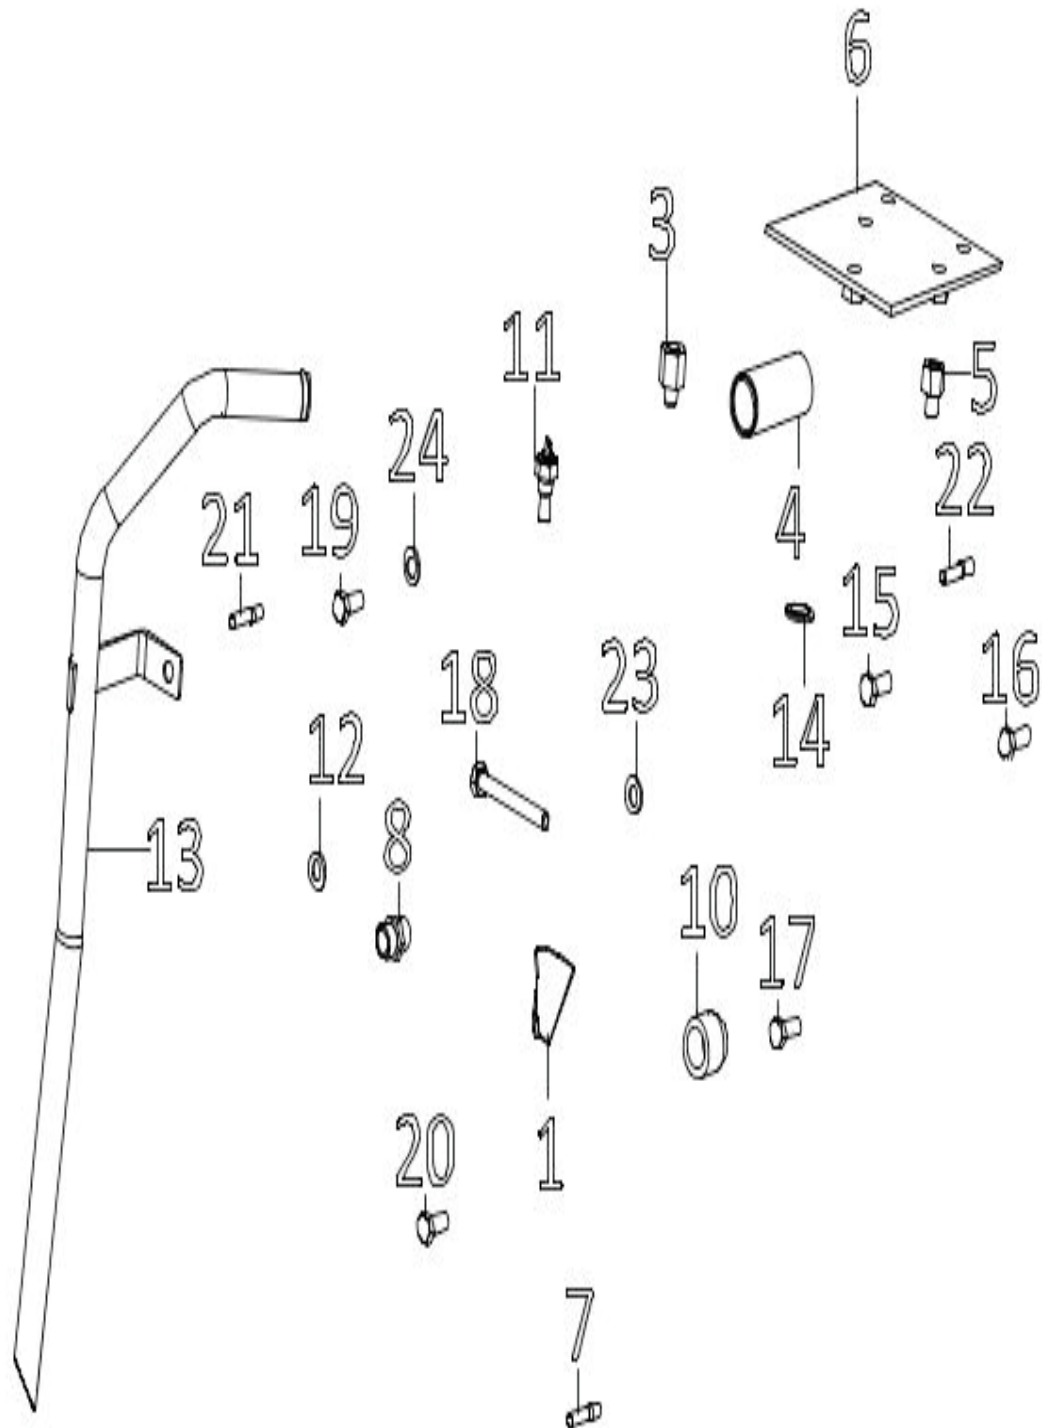
TABLE-17**ACCESSORIES E4.368NA ENGINE SUBASSEMBLY**

TABLE-17**ACCESSORIES E4.368NA ENGINE SUBASSEMBLY**

Fig. No.	Part No.	Description	Qty
1	D10009960.9	WIRE LOCKING	AR
3	D10323860.9	ADOPTER OIL PRESSURE 1/4"-18 NPTF AND M12	1
4	D10015850.9	HOSE CRANK CASE VENTILATION	1
5	D10033390.9	ADAPTER COMPRESSOR PIPE	1
6	D10208300.9	BRACKET BAFFLE PLATE MOUNTING	1
7	D84500170.9	STUD B M8X1.25X42-8.8	2
7-1	D84500420.9	STUD B M8X25-8.8	2
8	D10405550.9	INSERT OIL FILTER MOUNTING	1
10	D10188440.9	CAP WATER PUMP ASSEMBLY	1
11	D10035700.9	SENSOR UNIT WATER TEMPERATURE GAUGE	1
11-1	D10739160.9	SENSOR UNIT WATER TEMPERATURE GAUGE	1
12	D10007280.9	WASHER COPPER SEALING	2
13	D10321540.9	TUBE ASSEMBLY CRANK CASE VENTILATION (E4.286 TCI)	1
14	D10010080.9	SEAL LEAD 3/8"	2
15	D81500260.9	BOLT M8X1.25X55-6.6P HEX HEAD	3
16	D10042970.9	BOLT M8X1.25X100 (CLUTCH COVER)	12
17	D10013810.9	BOLT 3/8"-16X2.75" HEX HEAD	2
18	D10006480.9	BOLT HYDRAULIC CONNECTION M18X1.5X30-S8	1
19	D81500460.9	BOLT M10X1.50X75 HEX HEAD	5
20	D82500100.9	SCREW M8X1.25X40-6.6 HEX HEAD	1
21	D84500040.9	STUD B M8X22-8.8	3
22	D84500110.9	STUD B M8X35-10.9	3
23	D10020910.9	WASHER 9X17 FLAT	2
24	D10045150.9	WASHER FUEL INJECTOR TUBE	2

TABLE-33
CENTER HOUSING

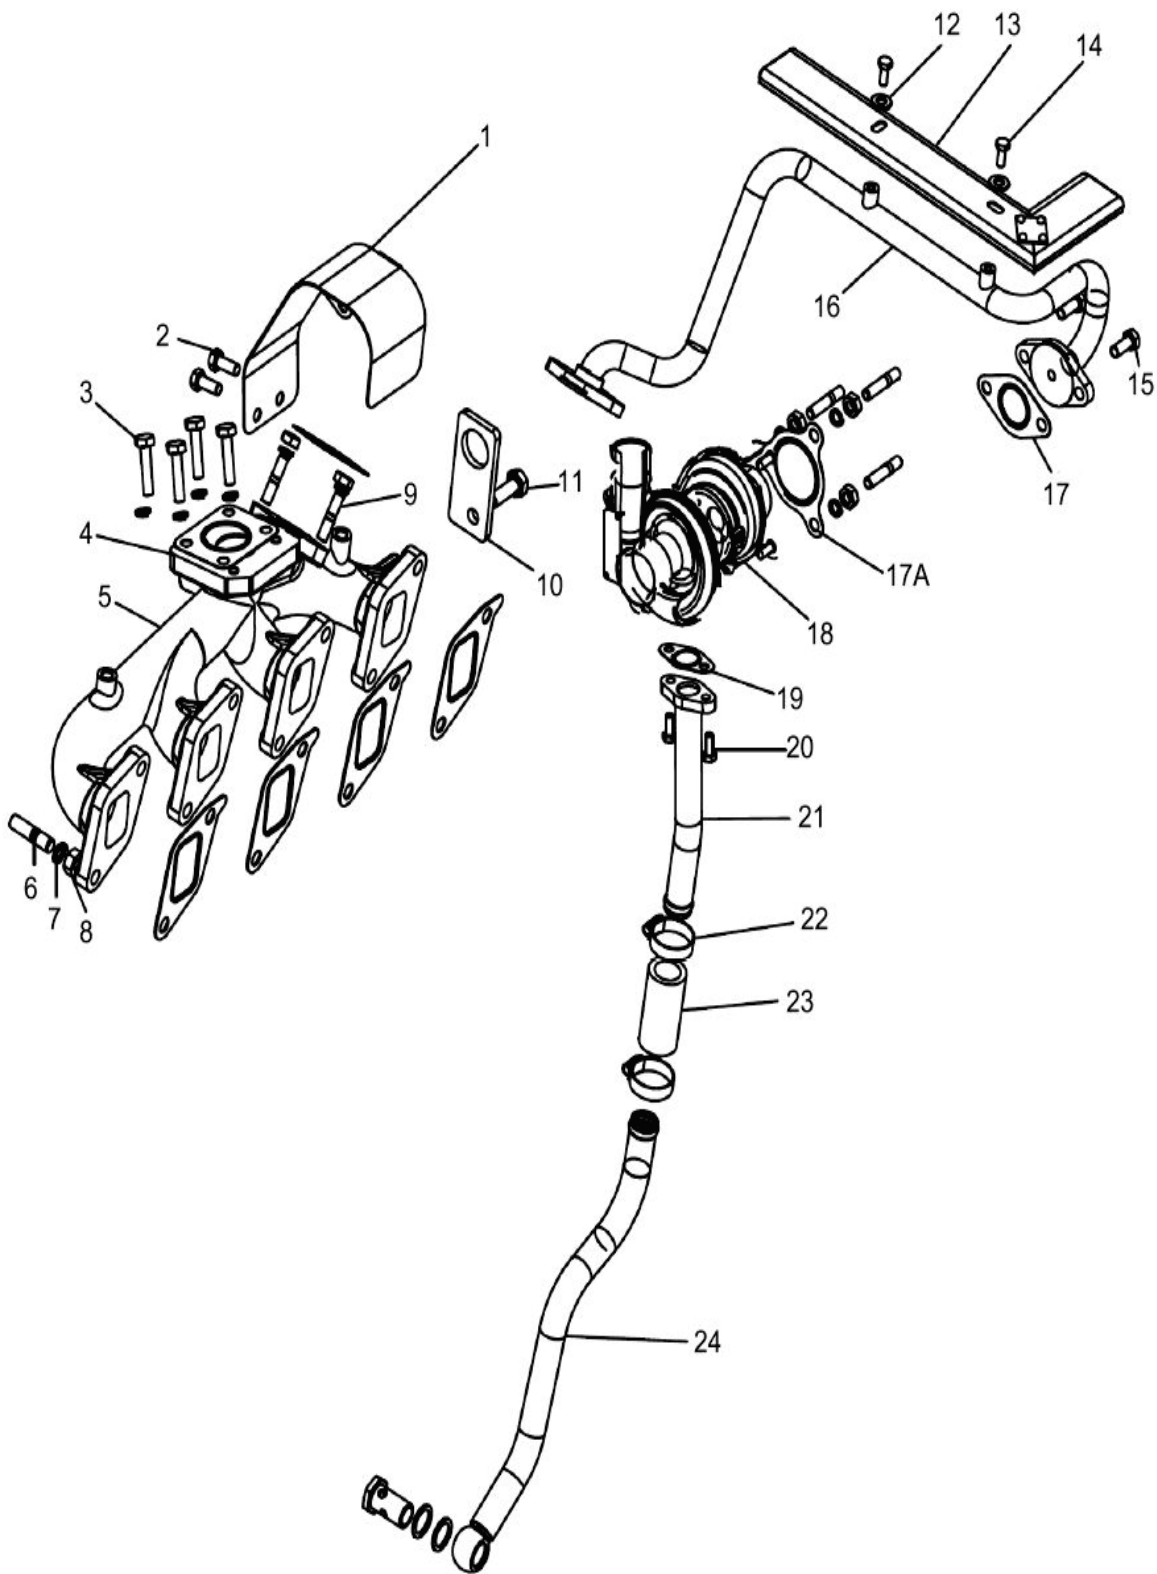


TABLE-33
CENTER HOUSING

Fig. No.	Part No.	Description	Qty
4	D81000360.9	BOLT 1/2"-13X2.00"HEX HEAD	1
5	D81000370.9	BOLT 1/2"-13X2.25" HEX HEAD	3
6	D83000430.9	NUT 1/2"-13 HEX (GRADE 8)	6
7	D81000530.9	BOLT 9/16"-12X2.50" HEX HEAD	2
8	D81000350.9	BOLT 1/2"-13X1.75" HEX HEAD	1
9	D10292770.9	KNOB TRANSMISSION MAIN GEAR SHIFT LEVER	1
10	D10379150.9	LEVER ASSEMBLY TRANSMISSION MAIN GEAR SHIFT	1
11	D87000160.9	PIN 1/4"X1.50" SPRING DOWEL COMBINATION TYPE	1
12	D81000730.9	BOLT 3/8"-16X1.25" HEX HEAD	6
13	D86000010.9	WASHER 3/8" SPRING LOCK	10
14	D10000550.9	SCREW TRANSMISSION CONNECTOR LOCK	2
15	D83000010.9	NUT 3/8"-24 HEX	2
16	D10220310.9	BUSH ROD LINK ASSEMBLY MAIN GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
17	D10290460.9	LEVER CONNECTOR ASSEMBLY MAIN GEAR SHIFT (SIDE SHIFTING GEAR)	1
18	D10220370.9	GASKET HOUSING MAIN GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
19	D87500030.9	PIN 10X22 DOWEL	2
20	D93100010.9	PLUG 1/4"-18 PIPE	1
21	D10002040.9	BUSH BRAKE PEDAL SHAFT	2
21A	D10346110.9	BRACKET ASSEMBLY SENSOR (4WD)	1
21B	D10346100.9	BRACKET ASSEMBLY SENSOR HOLDING (4WD)	1
21C	D86000020.9	WASHER 7/16" SPRING LOCK	2
21D	D81000090.9	BOLT 7/16"-14X1.25" HEX HEAD	2
21E	D86500030.9	WASHER M8 SPRING LOCK	1
21F	D81500660.9	BOLT M8X1.25X20-9.8 HEX HEAD	1
21F-1	D81500110.9	BOLT M8X1.25X20-8.8 HEX HEAD	1
21G	D10279580.9	SWITCH ASSEMBLY STOP LAMP NC TYPE	1
22	D10004120.9	VALVE ASSEMBLY HYDRAULIC LIFT PUMP RELIEF	1
23	D10213110.9	PLUG DRAIN 3/4-14 NPTF (MAGNETIC)	1
24	D10000090.9	DOWEL 1/2"X0.8125" PLAIN	2
25	D81500250.9	BOLT M16X2.00X35-8.8P HEX HEAD	3
26	D10252830.9	BRACKET ROCKER HYDRAULIC LIFT MOUNTING	1
27	D10002070.9	GASKET HAND BRAKE OPENING COVER	1
28	D10002060.9	COVER HAND BRAKE OPENING	1
29	D81000100.9	BOLT 7/16"-14X1.00" HEX HEAD	2
30	D85000090.9	WASHER 7/16" FLAT	2
30-1	D10011760.9	GASKET WATER OUTLET	2
31	D10292780.9	KNOB TRANSMISSION SELECTOR LEVER	1
32	D83500290.9	NUT M12X1.75 HEX	2
33	D10255030.9	LEVER ASSEMBLY TRANSMISSION HIGH LOW GEAR SHIFT (SIDE SHIFTING GEAR)	1
34	D10220420.9	SEAL OIL 18X30X7	2

TABLE-33
CENTER HOUSING

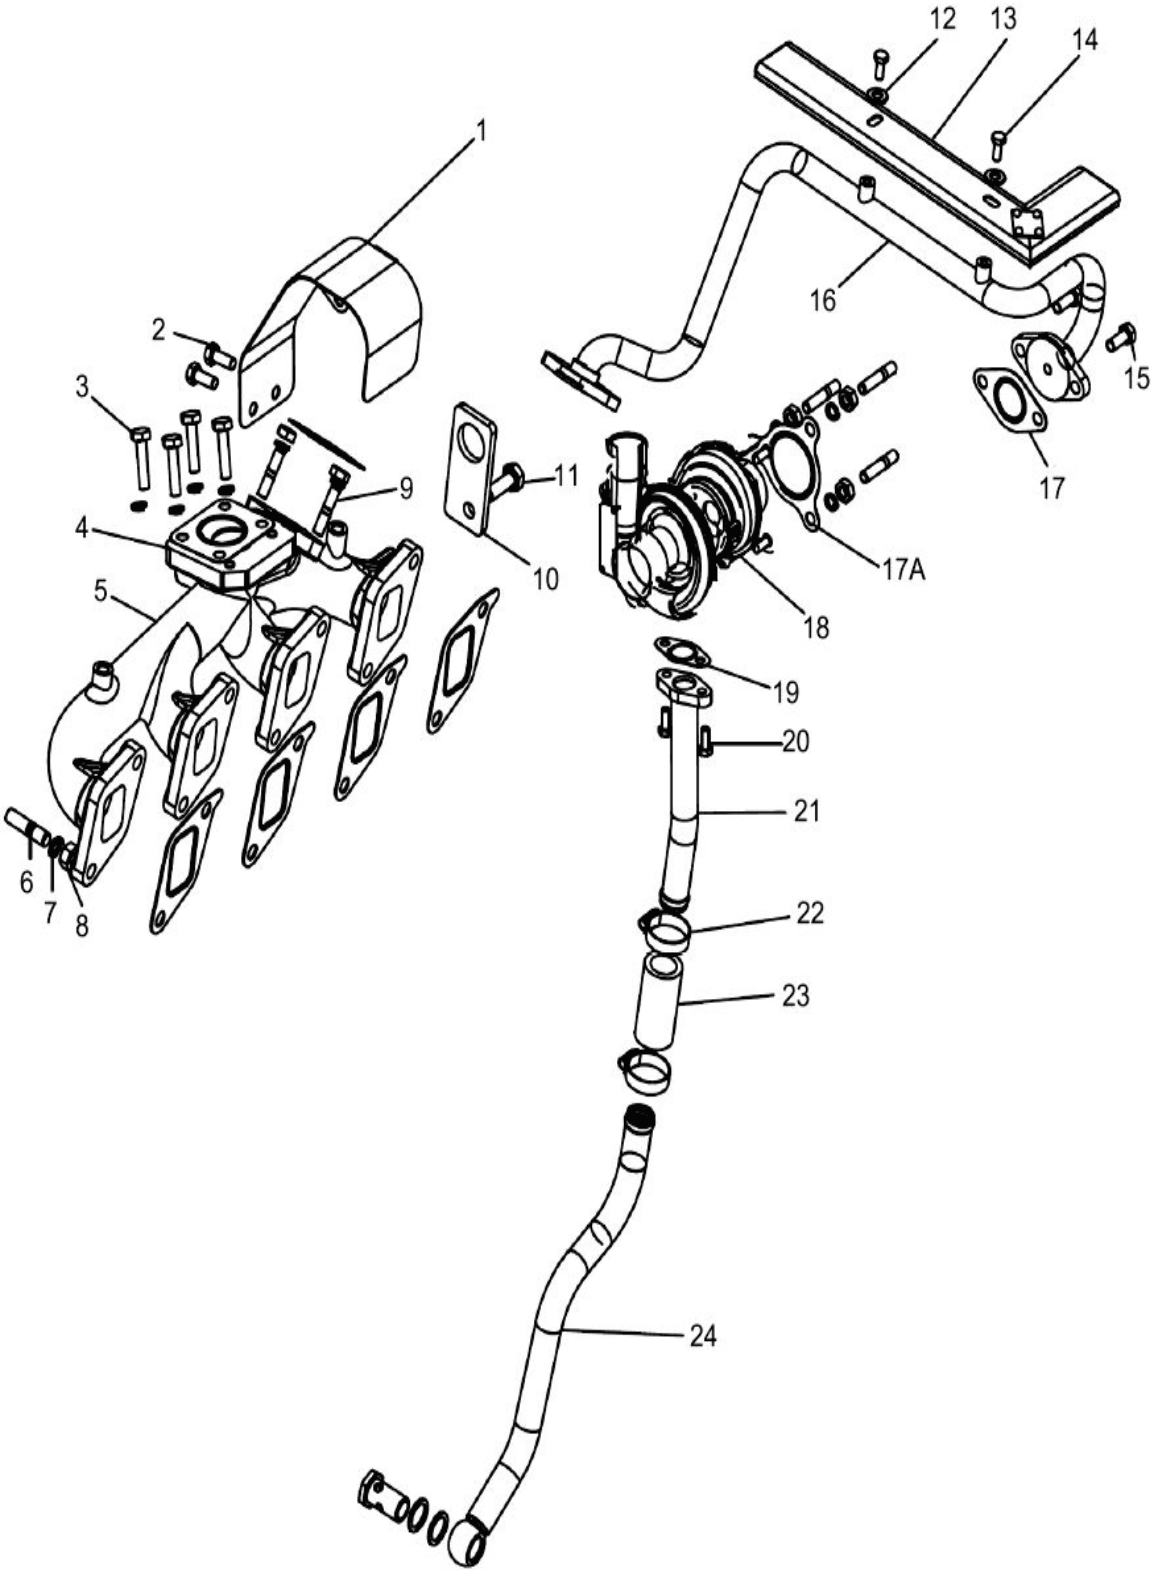


TABLE-33
CENTER HOUSING

Fig. No.	Part No.	Description	Qty
35	D81000020.9	BOLT 3/8"-16X1.125" HEX HEAD	4
36	D10221410.9	HOUSING ASSEMBLY TRANSMISSION HIGH LOW GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
37	D10223350.9	GASKET HOUSING HIGH LOW GEAR SHIFT LEVER (SIDE SHIFTING GEAR)	1
38	D10257500.9	ROD TRANSMISSION GEAR HIGH LOW SHIFT (SIDE SHIFTING)	1
38A	D10004030.9	BREATHER ASSEMBLY TRANSMISSION OIL FILLER	1
38A-1	D11251550AA.9	BREATHER ASSEMBLY TRANSMISSION	1
39	D10491060.9	HOUSING ASSEMBLY REAR AXLE CENTRE 4WD (EPI)	1
39-1	D10686810.9	HOUSING ASSEMBLY REAR AXLE CENTRE 4WD (EPI)	1
40	D10257510.9	SHIFTER TRANSMISSION GEAR HIGH LOW (SIDE SHIFTING)	1
41	D83500140.9	NUT M14X1.50-8P HEX	1
42	D83000420.9	NUT 9/16"-12 HEX (GRADE 8)	4

TABLE-1A
ENGINE ASSEMBLY

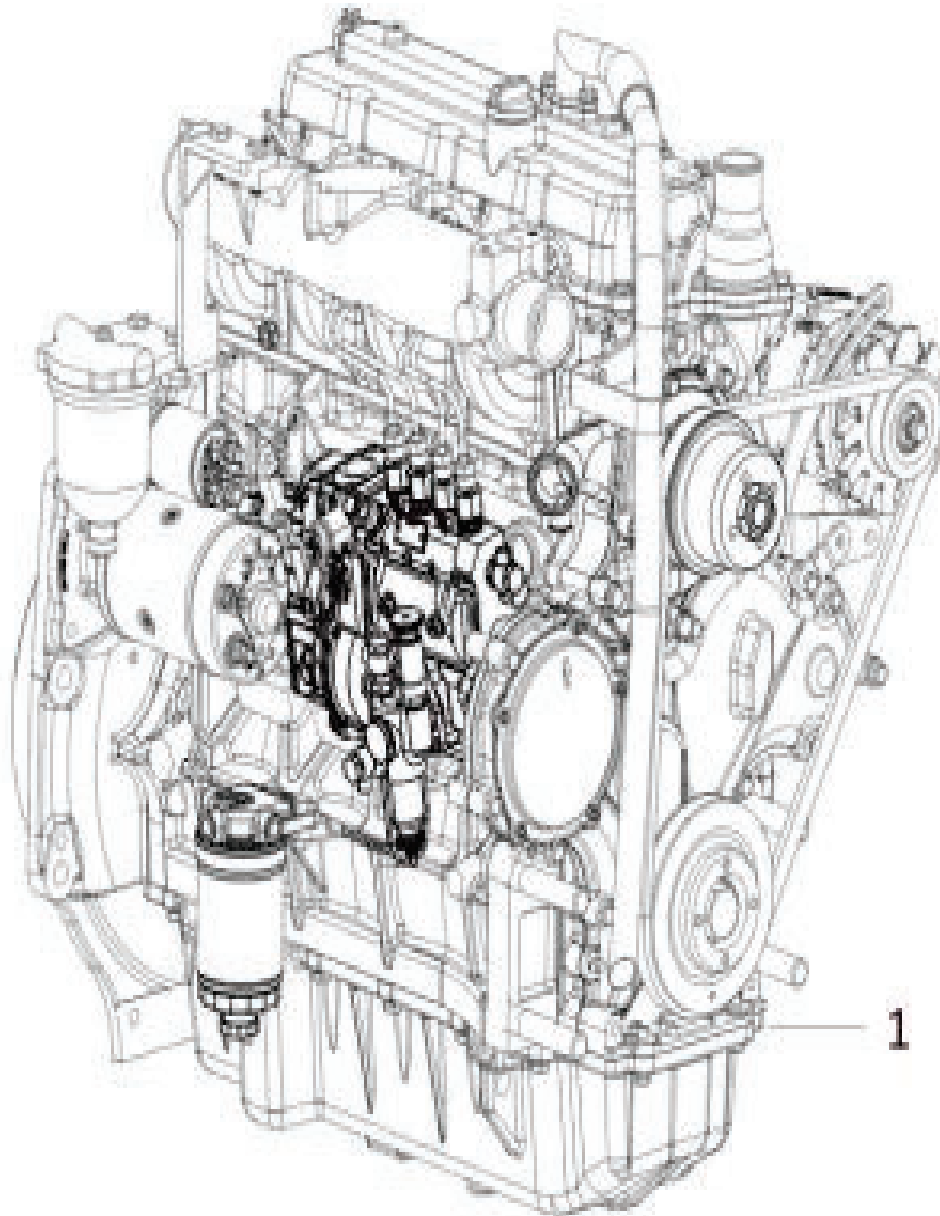


TABLE-1A
ENGINE ASSEMBLY

Fig. No.	Part No.	Description	Qty
1	D10626680.9	ENGINE ASSEMBLY AE4.286D TCI DUAL CLUTCH 11"X11" DRESSED UP (EXPORT)	1

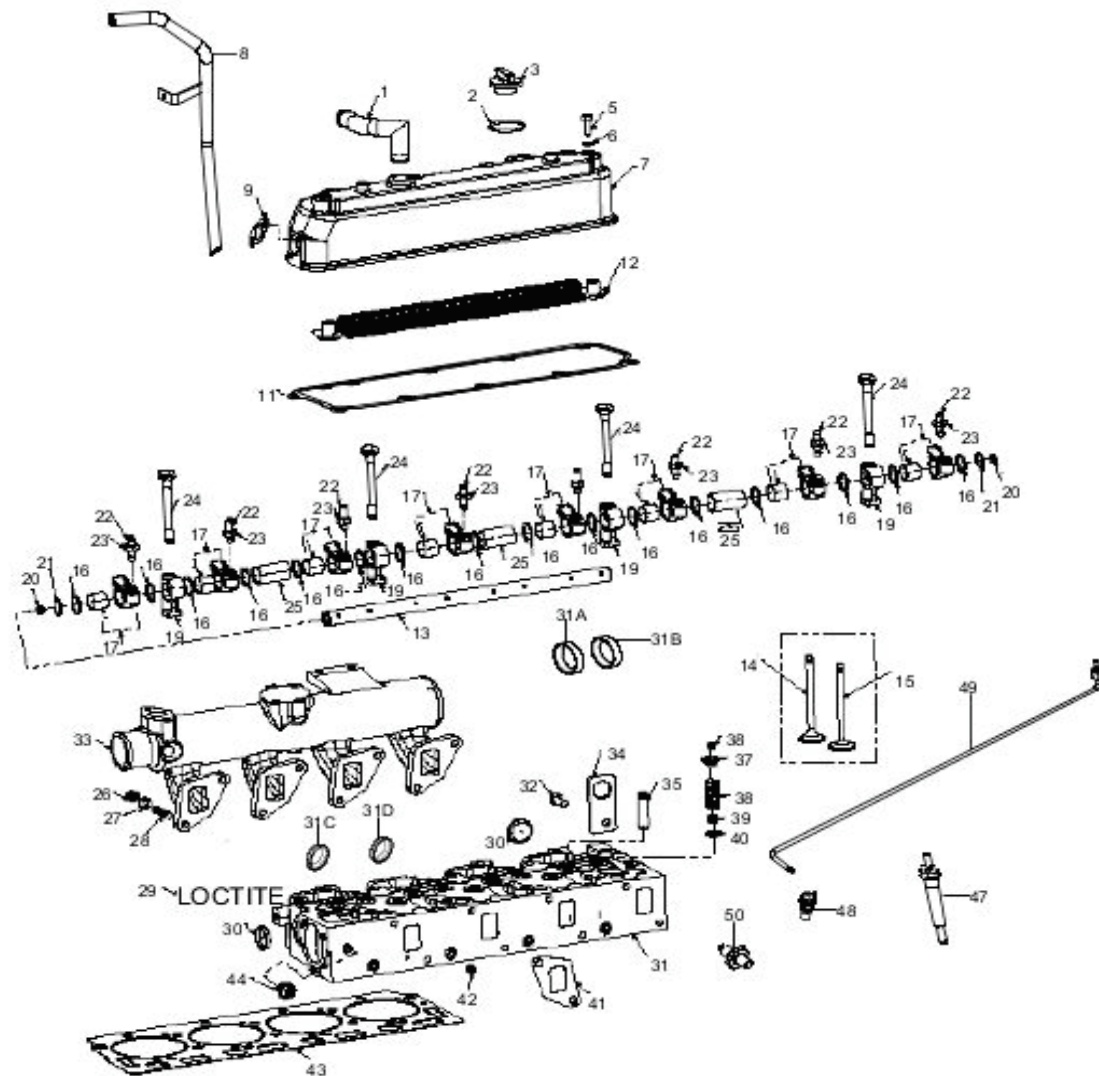
TABLE-1**INTAKE MANIFOLD, CYL. HEAD ASSY**

TABLE-1**INTAKE MANIFOLD, CYL. HEAD ASSY**

Fig. No.	Part No.	Description	Qty
1	D10312420.9	TUBE ROCKER COVER CRANKCASE VENTILATION (E4.286 NA)	1
2	D10010020.9	SEAL O RING 3.00X28.00	1
3	D10039090.9	CAP OIL FILLING	1
5	D82500140.9	SCREW M8X1.25X25-6.6P HEX HEAD	7
6	D10007460.9	SEAL BONDED DRAFT CONTROL	2
7	D10312440.9	COVER CYLINDER HEAD E4.286 NA	1
8	D10239370.9	TUBE ROCKER COVER BLOW BY E4.286 TCI	1
9	D10309530.9	GASKET TUBE ROCKER COVER	1
11	D10239270.9	GASKET CYLINDER HEAD COVER (E4.286)	1
12	D10433080.9	BAFFLE ASSEMBLY CYLINDER HEAD OIL PROTECTION	1
13	D10134800.9	SHAFT ASSEMBLY ROCKER ARM E4.286	1
14	D10008730.9	VALVE AIR INTAKE 37.9MM GAUGE	4
14-1	D10008730AE.9	VALVE AIR INTAKE 37.9MM GAUGE	4
15	D10008720.9	VALVE EXHAUST 35MM GAUGE	4
15-1	D10008720AF.9	VALVE AIR EXHAUST 35 MM GAUGE	4
16	D10008830.9	WASHER ROCKER ARM SHAFT	16
17	D10189570.9	ARM ROCKER VALVE E3.215	8
19	D10008570.9	BRACKET ROCKER ARM SHAFT E3.215	4
20	D10105240.9	PLUG 14MM WELCH	2
21	D90000060.9	CIRCLIP A22X1.2 N	2
22	D10009030.9	SCREW M10X1.00 ROCKER ARM ADJUSTING	8
23	D83500080.9	NUT M10X1.00-8 HEX	8
24	D10177980.9	BOLT ROCKER ARM BRACKET	4
25	D10008560.9	SPACER ROCKER ARM SHAFT E3.215	3
26	D83500090.9	NUT M10X1.50-8 HEX	8
27	D86500050.9	WASHER M10 SPRING LOCK	14
28	D84500020.9	STUD B M10X26-6.8 ZINC PASSIVATED	17
29	D95010840.9	LOCTITE ANAEROBIC L-5182	AR
30	50.10148.9	WLECH PLUG	5
31	D10316040.9	HEAD ASSEMBLY CYLINDER WITHOUT VALVE E4.286 TCI	1
31A	D10053470.9	RING INTAKE VALVE SEAT	4
31B	D10053460.9	RING EXHAUST VALVE SEAT	4
31C	D10079400.9	PLUG 20MM WELCH	3
31D	D10483560.9	PLUG 32MM WELCH	3
32	D82500150.9	SCREW M10X1.50X25-8.8 HEX HEAD	1
33	D10383610.9	MANIFOLD ASSEMBLY ENGINE AIR INTAKE (E4.286 EXPORT)	1
34	D10008600.9	PLATE HOOK ENGINE LIFTING	1
35	D10049520.9	GUIDE ENGINE VALVE (E-430/435)	8
36	D10008690.9	LOCK VALVE SPRING DISC	16
37	D10115020.9	RETAINER VALVE SPRING E4.286 TURBO CHARGED/TCI	8

TABLE-1
INTAKE MANIFOLD, CYL. HEAD ASSY

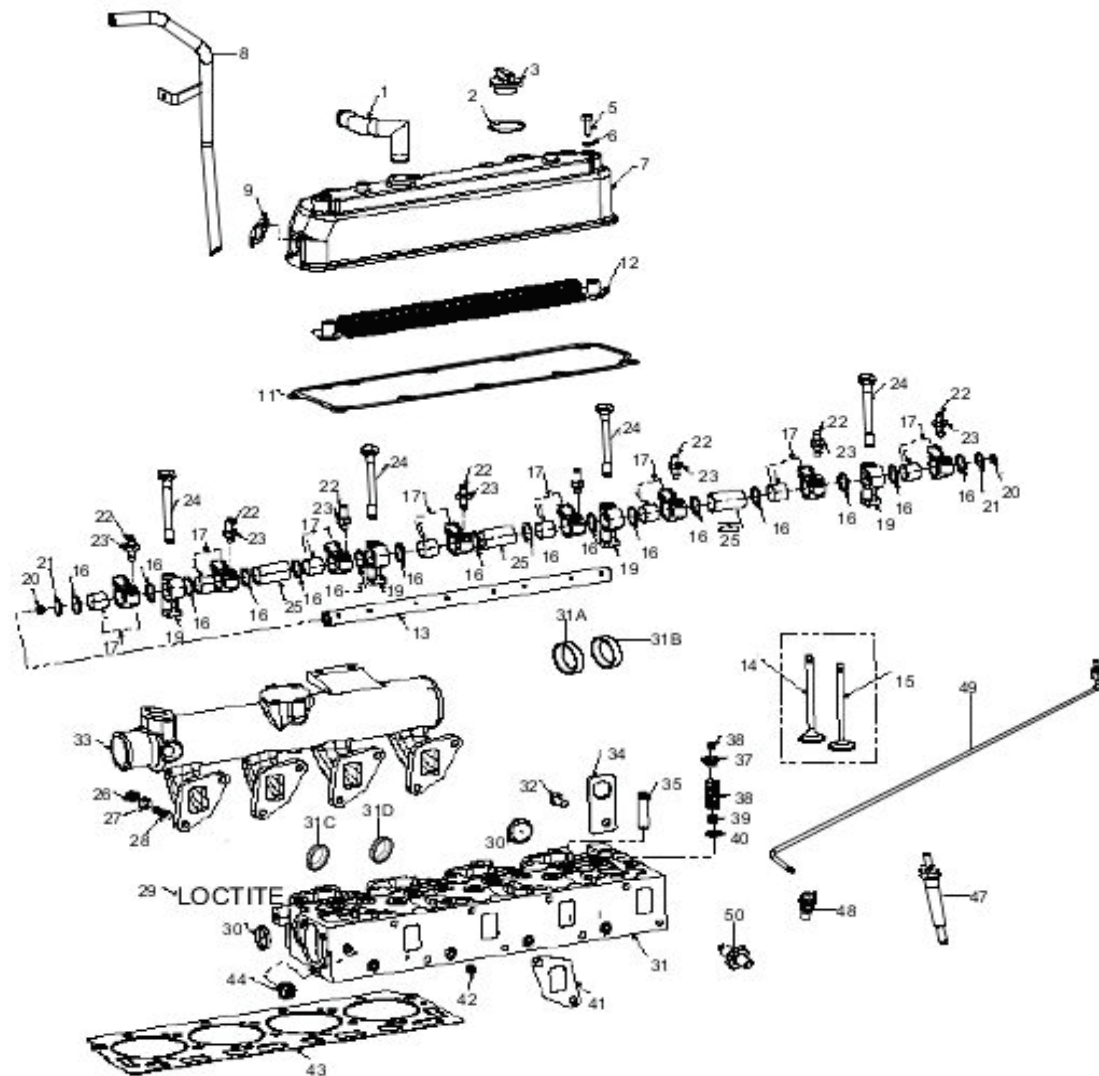


TABLE-1**INTAKE MANIFOLD, CYL. HEAD ASSY**

Fig. No.	Part No.	Description	Qty
37-1	D10115020AF.9	RETAINER VALVE SPRING E4.286 TURBO CHARGED/TCI	8
38	D10139630.9	SPRING VALVE E4.286 TURBO CHARGED/TCI	8
39	D10115010.9	SEAT VALVE SPRING E4.286	8
40	D10008740.9	SEAL VALVE STEM 8MM DIAMETER (M/S FENNER PART NO 7935)	8
41	D10008650.9	GASKET EXHAUST MANIFOLD	4
42	D10035650.9	PLUG OIL GALLERY	5
43	D10119170.9	GASKET ASSEMBLY CYLINDER HEAD E4.286 TC AND TCI (NON ASBESTOS)	1
44	D10035700.9	SENSOR UNIT WATER TEMPERATURE GAUGE	1
44-1	D10739160.9	SENSOR UNIT WATER TEMPERATURE GAUGE	1
45	D10046730.9	CLAMP ASSEMBLY INTAKE MANIFOLD	1
46	D10417930.9	KIT ENGINE VALVES INLET AND EXHAUST (FT- 6065)	1
47	D10177380.9	GLOW PLUG ENGINE	4
48	D10096420.9	THERMOSTART ENGINE	1
48-1	D10405970.9	THERMOSTART ENGINE	1
49	D10395880.9	TUBE ASSEMBLY THERMO START	1
50	D10026550.9	SWITCH ASSEMBLY OIL PRESSURE	1