

Quick Start Guide -ProLogicSeries L02-L90



Congratulations on the purchase of your new SECURAM ProLogic Series Safe Lock! This Quick Start guide will help you set up your ProLogic for use. **Note: All programming must be completed with the safe door open. The safe lock system is powered by (1) 9V alkaline battery. Duracell or Energizer brands are recommended.**

The ProLogic comes with (2) default codes:

ID00 or the Super Code is set to 111111

ID01 or the Manager Code is set to 123456

It is recommended to change both codes to unique codes immediately.

Step 1: Decide on Code Length and Number of Users

The ProLogic has a maximum of 30 available user codes - 2 Manager codes and up to 28 User Codes. In addition you can set the code length as either 6 digits or 8 digits. By default, the ProLogic keypad is reset with P/WL-6; Users 10.

Number of users and code length should be decided

Before any other programming takes place, operation must be performed with the safe door open with access to the back of the lock, as a mechanical reset must be performed during this programming sequence.

There are three different modes in this regard as follows:

- P/W L = 6 digits; Users = 10 (default mode)

- P/W L = 8 digits; Users = 30

- P/W L = 6 digits; Users = 30

Select the desired mode as follows:

Press the Menu/OK button. The LCD screen will display

"Select Menu", press the ▼ button, until you see the menu selection "System Menu". Press OK. Enter the Super Code or Manager Code; the display will show "IDXX Verified" and then "Select Menu" will appear. Press the ▼ button, until you see the menu selections related to Code Length and User Codes and press Menu/OK to select.



Note: if you select P/WL=8; Users=30, then the resulting default codes would be as follows:

ID00 or the Super Code is set to 11111100

ID01 or the Manager Code is set to 12345600

Step 2: Change the Default Codes (P/W L = 6)


Press the Menu/OK button. The LCD screen will display

"Select Menu", press the ▼ button, until you see the menu selection "System Menu".


Press OK

Enter the default Super Code 111111; display will show "ID00 Verified" and then "Select Menu" Screen will appear.


Press the ▼ button, until you see the menu selection "Change Code".

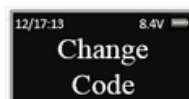


Press Menu/OK

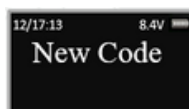

Enter a 6 digit code

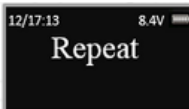

Repeat 6 digit code

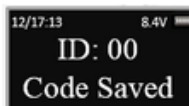


ID00 Code is now saved


Follow the same procedure to change the Manager Code. Use the default Manager Code 123456.

Step 3: To Open Lock

~~Just enter a valid code:~~

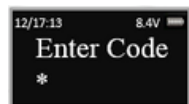

Enter valid digit code



Valid code will be verified and the lock will open for 6 seconds, after which it will automatically relock.

Step 4: Enrolling a New User Code

With the ProLogic you can add up to 28 User Codes. Follow these steps:

Press the Menu/OK button. The LCD screen will display

"Select Menu", press the ▼ button, until you see the menu selection "System Menu". Press OK.

Enter the Super Code or Manager Code; the display will show "IDXX Verified" and then "Select Menu" will appear.

Press the ▲ button, until you see the menu selection "Enroll New User".

Press Menu/OK.

Continued on next page...

SECURAM