

**romeo ferraris**   
*style and power on demand*

M I L A N O



SPARE PARTS LIST



**GIULIETTA**

**TCR**  
International Series

# INDEX

MAIN GROUP	SECONDARY GROUP	Page
<b>ENGINE</b>		
	RF01-01-00641 ENGINE AIR INTAKE	5
	RF01-09-00846 ENGINE WATER COOLING SYSTEM	6
	RF01-09-00485 AIR INLET ASSY	7
	RF01-16-01032 COMPLETE FAN	8
	RF01-26-00400 ENGINE ASSY	9
	RF01-10-01086 DROP LINK TURBO	10
	RF01-10-01059 EXHAUST COMPLETE	11
<b>BODY</b>		
	RF01-02-00518 CHASSIS COMPLETE	12
	RF01-03-00454 FRONT BUMPER ASSY	13
	RF01-03-00456 FRONT BULL-BAR ASSY	14
	RF01-03-00431 SPLITTER ASSY	15
	RF01-03-00437 BONNET ASSY	16
	RF01-03-00441 FRONT FENDER ASSY LH	17
	RF01-03-00442 FRONT FENDER ASSY RH	17
	RF01-03-00433 SIDE SKIRT ASSY LH	18
	RF01-03-00434 SIDE SKIRT ASSY RH	18
	RF01-03-00449 REAR BODYSIDE WIDENING PNLS LH	19
	RF01-03-00448 REAR BODYSIDE WIDENING PNLS RH	19
	RF01-03-00446 REAR BUMPER ASSY	20
	RF01-03-00728 REAR BULL-BAR ASSY	21
	RF01-03-00424 REAR WING ASSY	22
	RF01-03-00425 REAR WING COMPLETE	23
	RF01-03-00718 FRONT DOOR RH	24
	RF01-03-00719 FRONT DOOR LH	24
	RF01-03-00918 REAR DOOR RH	28
	RF01-03-00918 REAR DOOR LH	28

# INDEX

MAIN GROUP	SECONDARY GROUP	Page
<b>FRONT AXLE</b>		
	RF01-04-00491 FRONT SUSPENSION COMPLETE	31
	RF01-04-01035 FRONT LEFT WISHBONE ASSY	32
	RF01-04-01034 FRONT RIGHT WISHBONE ASSY	32
	RF01-04-00495 UPRIGHT FRONT COMPLETE LH	33
	RF01-04-00494 UPRIGHT FRONT COMPLETE RH	33
	RF01-04-00497 CALIPER SUPPORT COMPLETE	34
	RF01-08-00792 FRONT BRAKE DISC ASSY LH	35
	RF01-08-00793 FRONT BRAKE DISC ASSY RH	35
	RF01-04-00537 TOP MOUNT ASSY LH	36
	RF01-04-00536 TOP MOUNT ASSY RH	36
	RF01-04-00489 FRONT DAMPER COMPLETE LH	37
	RF01-04-00488 FRONT DAMPER COMPLETE RH	37
	RF01-06-00900 FRONT ARB ASSY	38
	RF01-06-00990 FRONT DROP LINK ARB ASSY	39
	RF01-07-01065 STEERING SYSTEM ASSEMBLY	40
	RF01-07-00786 STEERING RACK COMPLETE	41
<b>REAR AXLE</b>		
	RF01-05-00627 REAR SUSPENSION ASSY	42
	RF01-05-00796 UPRIGHT REAR ASSY LH	43
	RF01-05-00797 UPRIGHT REAR ASSY RH	43
	RF01-05-00733 REAR UPRIGHT LH COMPLETE	44
	RF01-05-00734 REAR UPRIGHT RH COMPLETE	44
	RF01-08-00514 REAR BRAKE DISC ASSY	45
	RF01-05-00617 REAR WISHBONE UPPER ASSY LH	46
	RF01-05-00618 REAR WISHBONE UPPER ASSY RH	46


# INDEX

MAIN GROUP	SECONDARY GROUP	Page
	RF01-05-00625 REAR WISHBONE LOWER ASSY	47
	RF01-05-00876 REAR DAMPER COMPLETE	48
	RF01-06-00643 REAR ARB ASSY	49
	RF01-06-00725 REAR DROP LINK ARB ASSY	50
<b>BRAKE AND WHEEL</b>		
	RF01-08-01051 HYDRAULIC SYSTEM BRAKE AND CLUTCH	51
	RF02-08-00600 HANDBRAKE	54
	RF01-20-00677 WHEEL ASSY	55
<b>POWERTRAIN</b>		
	RF01-12-00820 TRANSMISSION ASSY	56
	RF01-12-00806 MIDSHAFT SUPPORT ASSY	57
	RF01-12-00716 GEARBOX ASSY	58
	RF01-12-00552 TIE ANTITORQUE ASSY	61
<b>OIL SYSTEM</b>		
	RF01-14-00698 CATCH TANK ASSY	62
<b>INTERIOR EQUIPMENT</b>		
	RF01-17-00669 INTERIOR EQUIPMENT	63
	RF01-17-01100 PEDALBOX WITH PUMP	65
	RF01-17-01040 EXTINGUISHING SYSTEM	66
	RF01-18-00565 DRIVER SEAT ASSY	67
	RF01-22-01022 AIRJACK SYSTEM	68
<b>ELECTRICAL SYSTEM</b>		
	WIRING	69
	WIRING	70

# INDEX


MAIN GROUP	SECONDARY GROUP	Page
<b>ENGINE SYSTEMS</b>		
	RF01-19-01076 FUEL SYSTEM ASSY	71
	RF01-19-01110 FUEL SYSTEM	72
	RF01-19-00887 TANK ASSY	73

RF01-01-00641 ENGINE AIR INTAKE

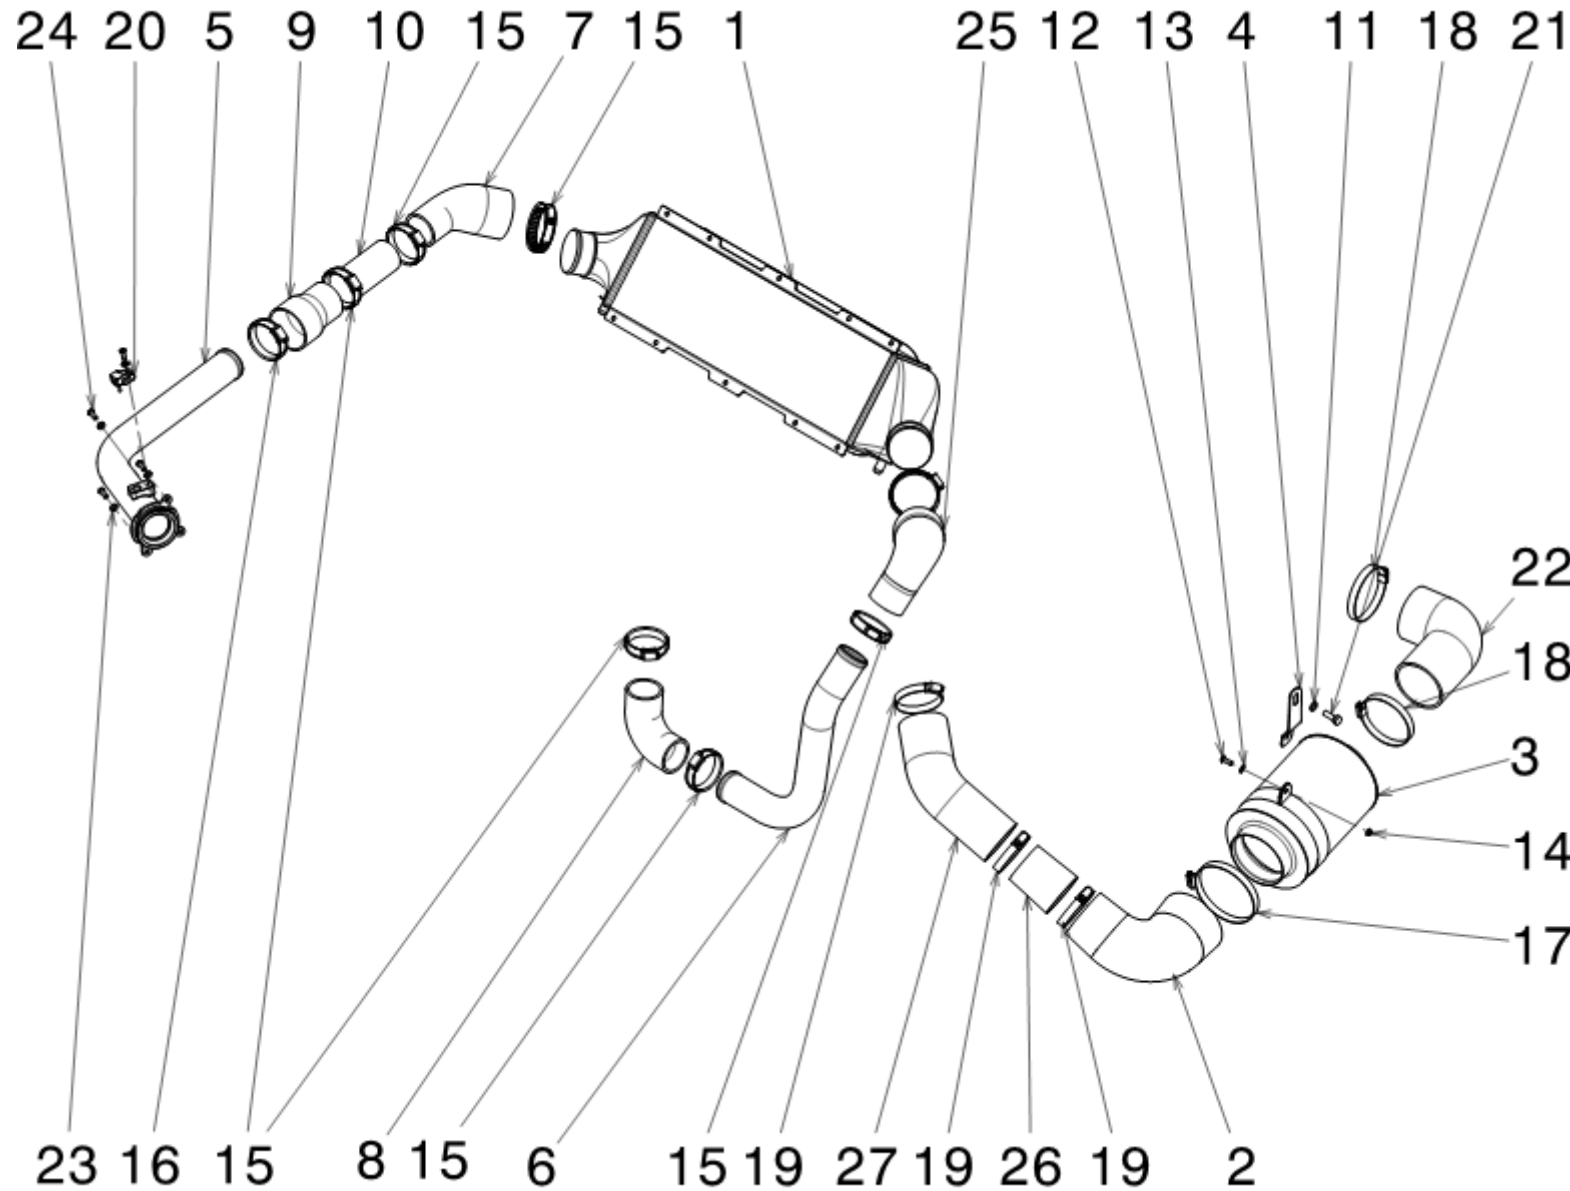


Pos	Part no.	Description	Q.ty
1	RF01-01-00439	INTERCOOLER	1
2	R102-76	ADAPTER CURVE 90° SILICON 102-76	1
3	RF01-01-01034	FILTER HOUSING COMPLETE	1
4	RF01-01-00805	BRACKET AIR FILTER	1
5	RF01-01-00840	AIR PRESSURE PLUMBING INTERCOOLER-THROT	1
6	RF01-01-00484	AIR PRESSURE PLUMBING INTERCOOLER-TURBO	1
7	RF01-01-00945	CURVE 45° SILICON 57	1
8	RF01-01-00991	ADAPTER CURVE 90° SILICON 51-57	1
9	RF01-01-00957	ADAPTER SILICON 70-57	1
10	RF01-01-01045	AIR PRESSURE PLUMBING 45° DIAM57	1
11		SPRING WASHER 8X15	1
12		BUTTON SOCKET CAP SCREW M6X16	1
13		PLAIN WASHER 6X12	1
14		NUT ASTORI M6	1
15	5535065	CABLE TIES ABA 50-65	7
16	5536885	CABLE TIES ABA 58-85	1
17	FM87-102	CABLE TIES 87-112	1
18	ABA77-95	CABLE TIES ABA77-95	2
19	FM65-85	CABLE TIES FM65-85	3
20		AIR SENSOR BOSCH 02-81002845	1
21		HEX SCREW M8X25	1
22	RF01-01-00913	90° SILICON ELBOW D80	1
23		PLAIN WASHER 6X	4
24		BUTTON SOCKET CAP SCREW M6X ST	4
25	RF01-01-00990	ADAPTER CURVE 90 SILICON 57	1
26	RF02-01-00703	STRAIGHT ALUMINIUM REDUCER 76-70	1
27	A4570	CURVE 45 SILICON 70	1

**RF01-09-00846 ENGINE WATER COOLING SYSTEM**

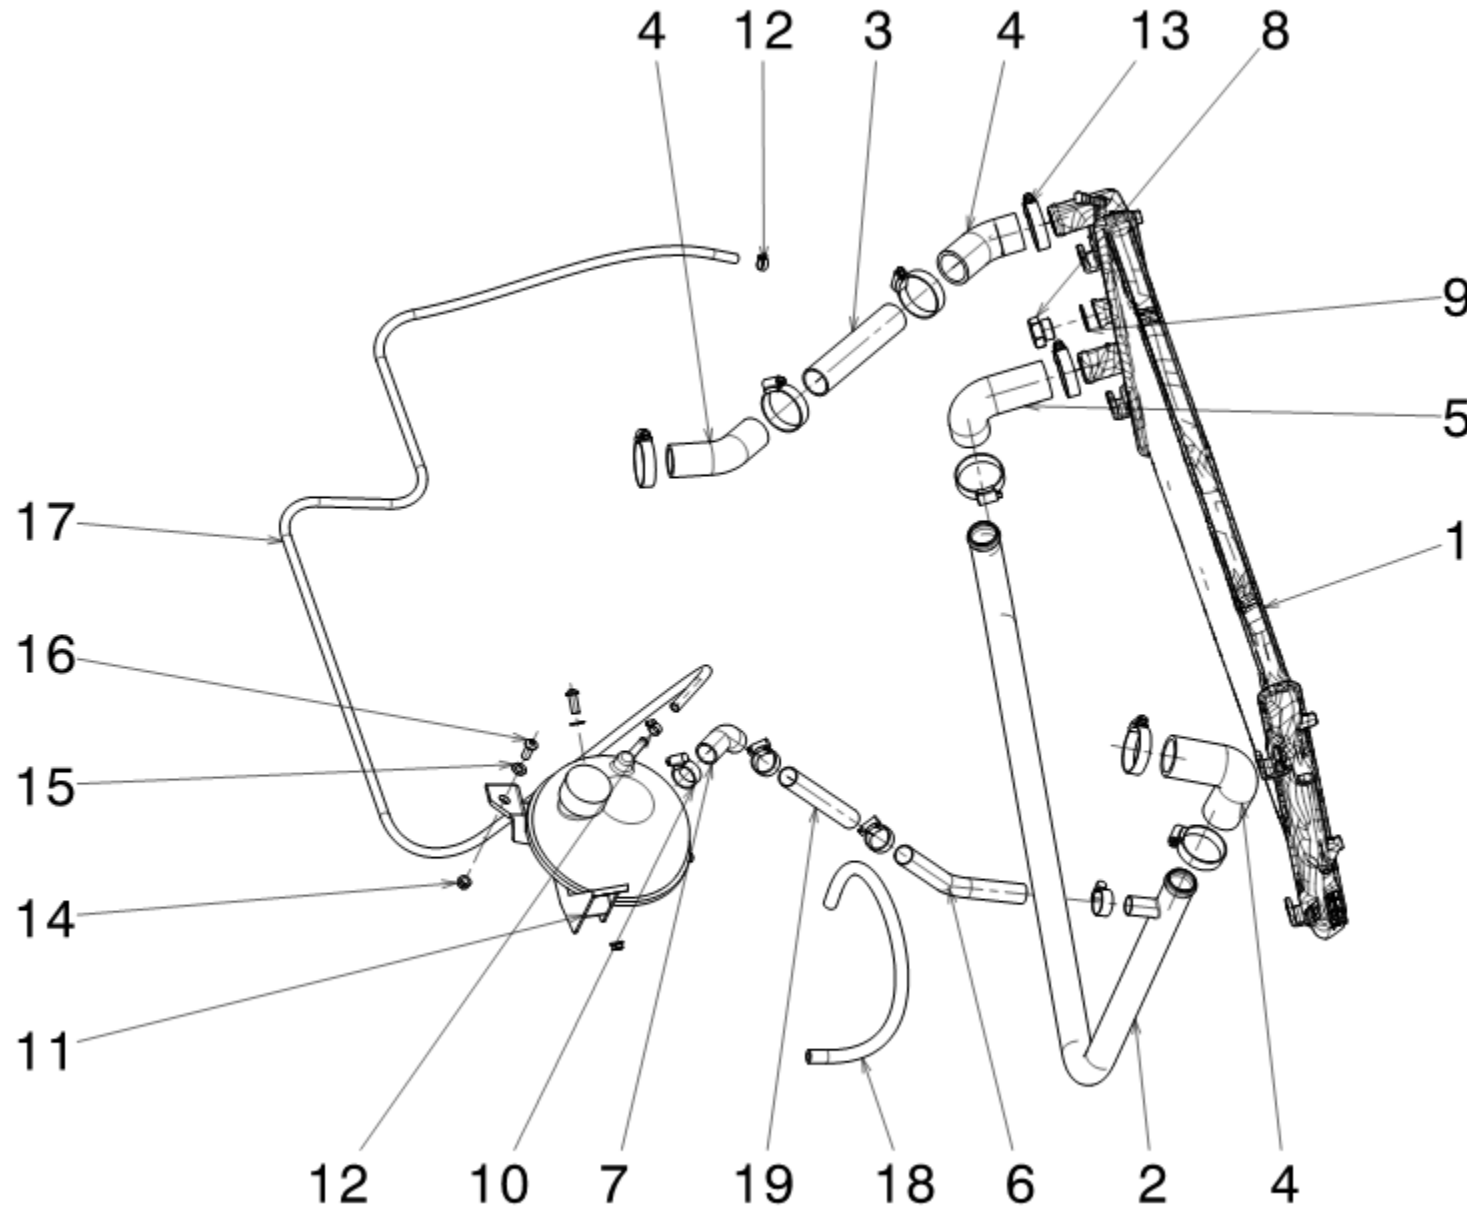

Pos	Part no.	Description	Q.ty
1	RF01-09-00487	RADIATOR H2O	1
2	RF01-09-00869	WATER PIPE RADIATOR-THERMOSTAT ALU D32	1
3	RF01-09-00868	WATER PIPE RADIATOR-ENGINE HEAD ALU D32	1
4	RF01-09-00990	45° SILICON ELBOW D32	3
5	RF01-09-00870	90° SILICON ELBOW D32	1
6	RF01-09-01001	STRAIGHT SILICON HOSE D21	1
7	RF01-09-01002	45° SILICON ELBOW D21	1
8	RF01-09-00834	WATER RADIATOR CAP	1
9	-	COPPER WASHER 22X28	1
10	-	WATER PIPE CLAMP 16-27	4
11	50544422	WATER BOWL	1
12	ABA 15	CLAMP ABA 15	2
13	-	ZEBRA CLAMP 32-50	8
14	ASTORI M8	NUT ASTORI M8	3
15	-	SPRING WASHER 8X15	3
16	-	BUTTON HEAD SOCKET SCREW M8X20	3
17	RF01-01-00988	PIPE BOWL-SENSOR	1
18	RF01-01-00989	PIPE BOWL-TURBOCHARGER	1
19	RF01-01-00987	PIPE ALU D21 BOWL-RADIATOR H2O	1


**RF01-09-00485 AIR INLET ASSY**

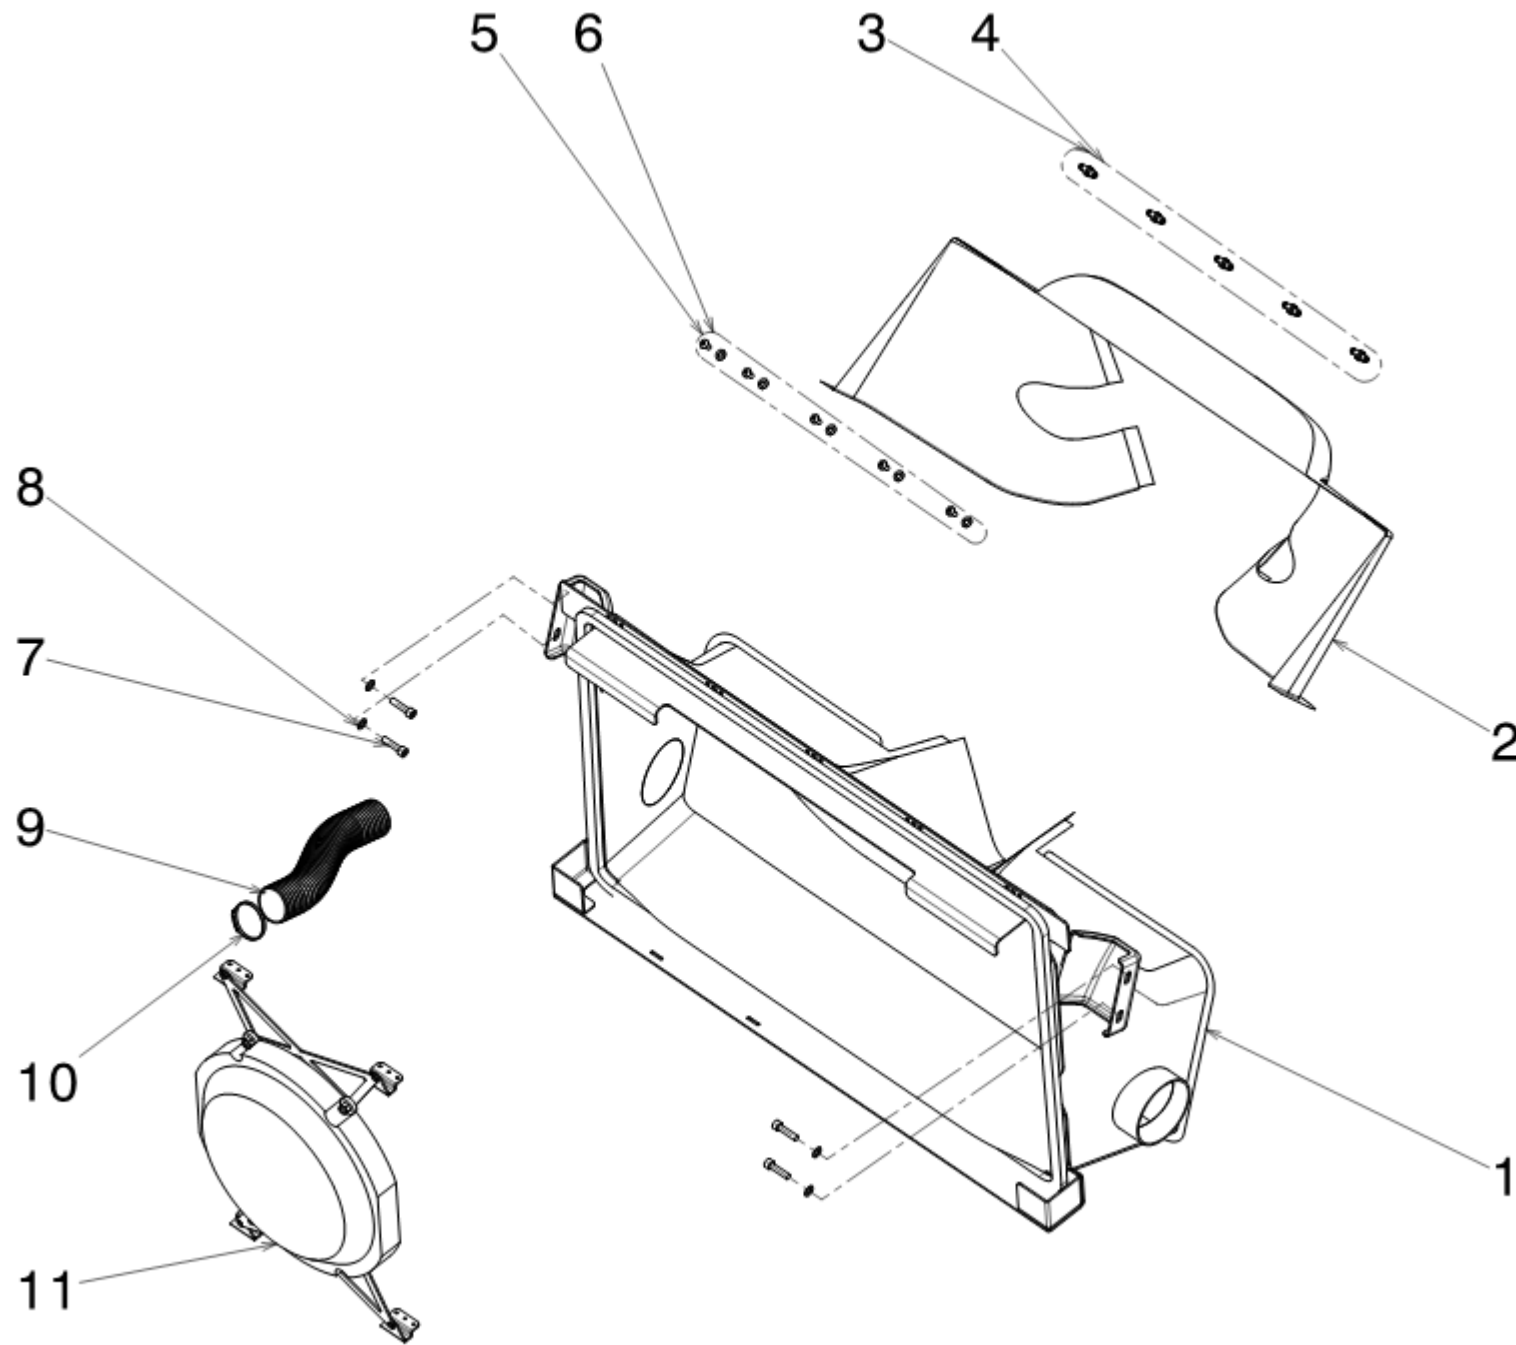

Pos	Part no.	Description	Q.ty
1	RF01-09-01041	RADIATOR AIR INLET	1
2	RF01-09-01040	INTERCOOLER AIR INLET	1
3		RIV. A STRAPPO A T. S. DIA2_4xL5	10
4		UN OLIVETTA M5	5
5		SPRING WASHER 5x11	5
6		BUTTON HEAD BOLT M5x16	5
7		HEX SOCKET SCREWM6x25	4
8		SPRING WASHER 6x12	4
9		ARMOURED TUBE DIA 37	1
10		TY-RAP DIA 37	1
11	RF01-16-01032	COMPLETE FAN	1




**RF01-16-01032 COMPLETE FAN**

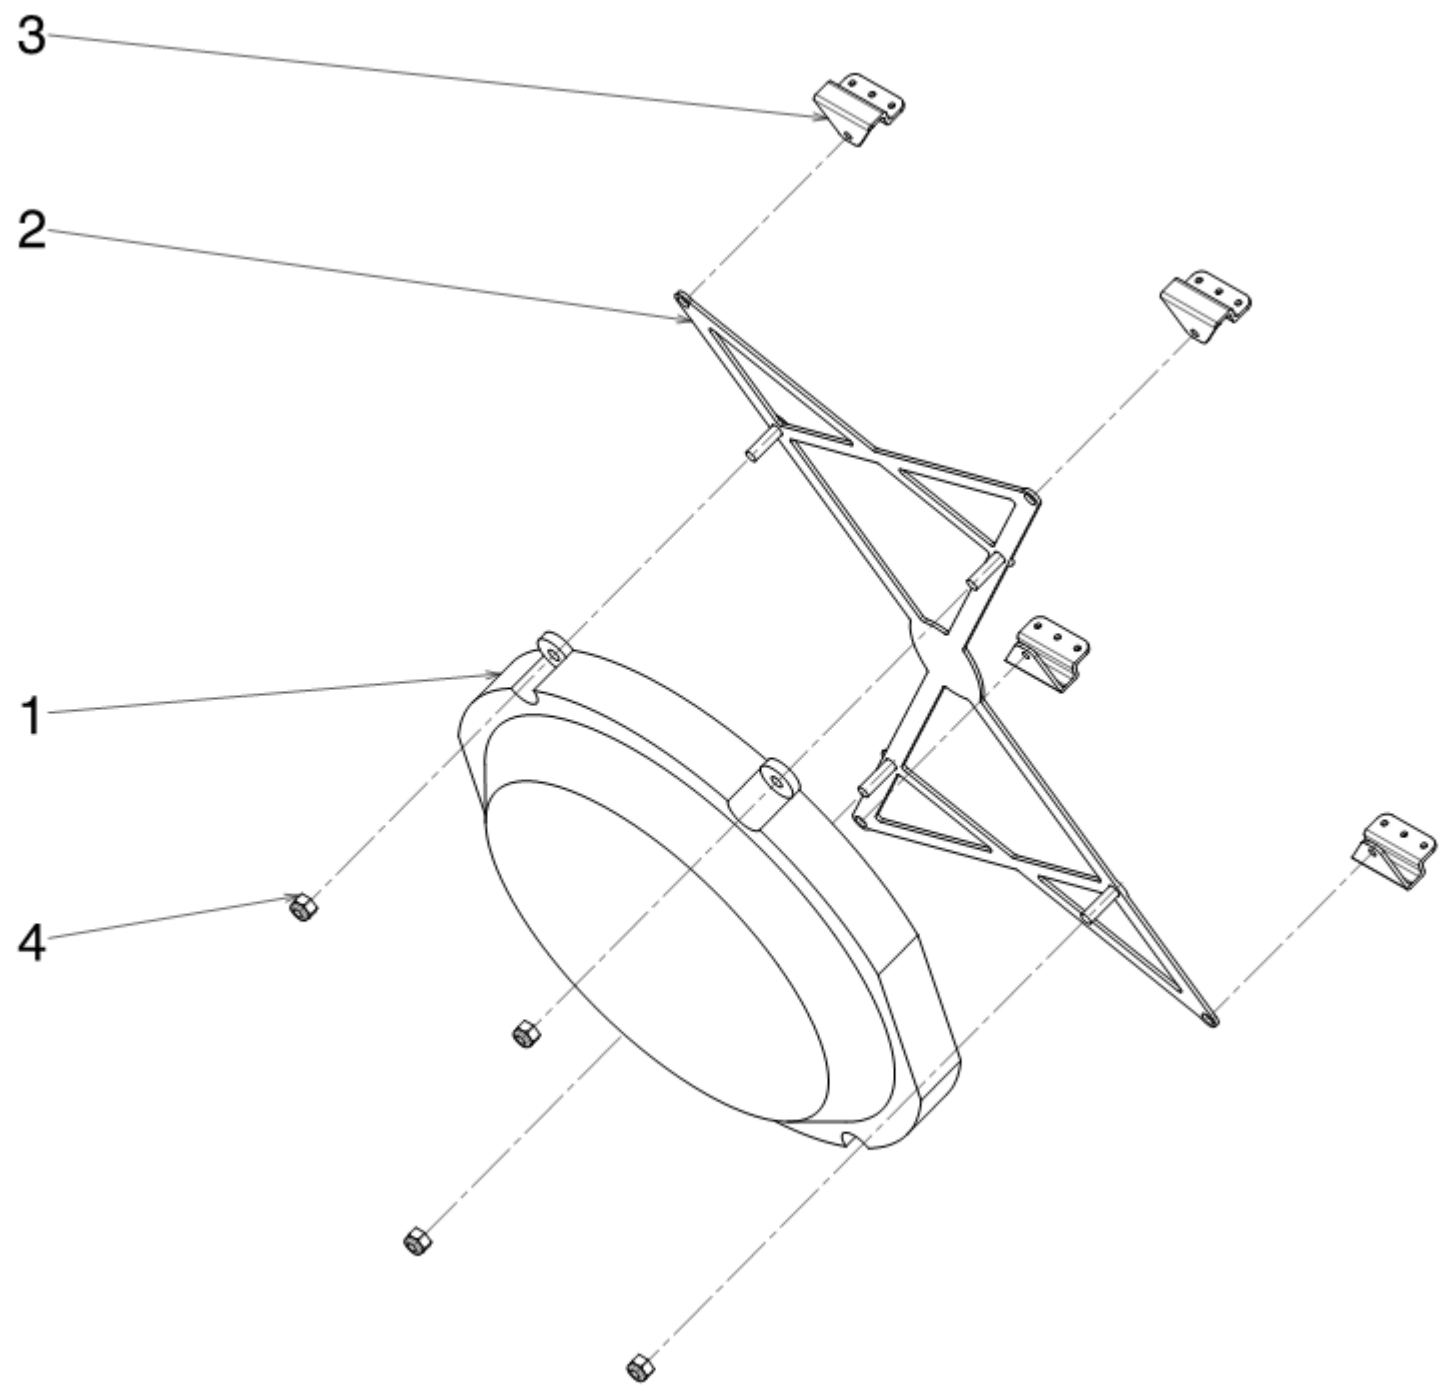

Pos	Part no.	Description	Q.ty
1	<b>RF01-16-01305</b>	COOLING FAN	1
2	RF02-16-00994	SUPPORT COOLING FAN	1
3	RF02-16-00995	PLATE SUPPORT COOLING FAN	4
4		SELF BLOCKING NUT M6	4


**RF01-26-00400 ENGINE ASSY**

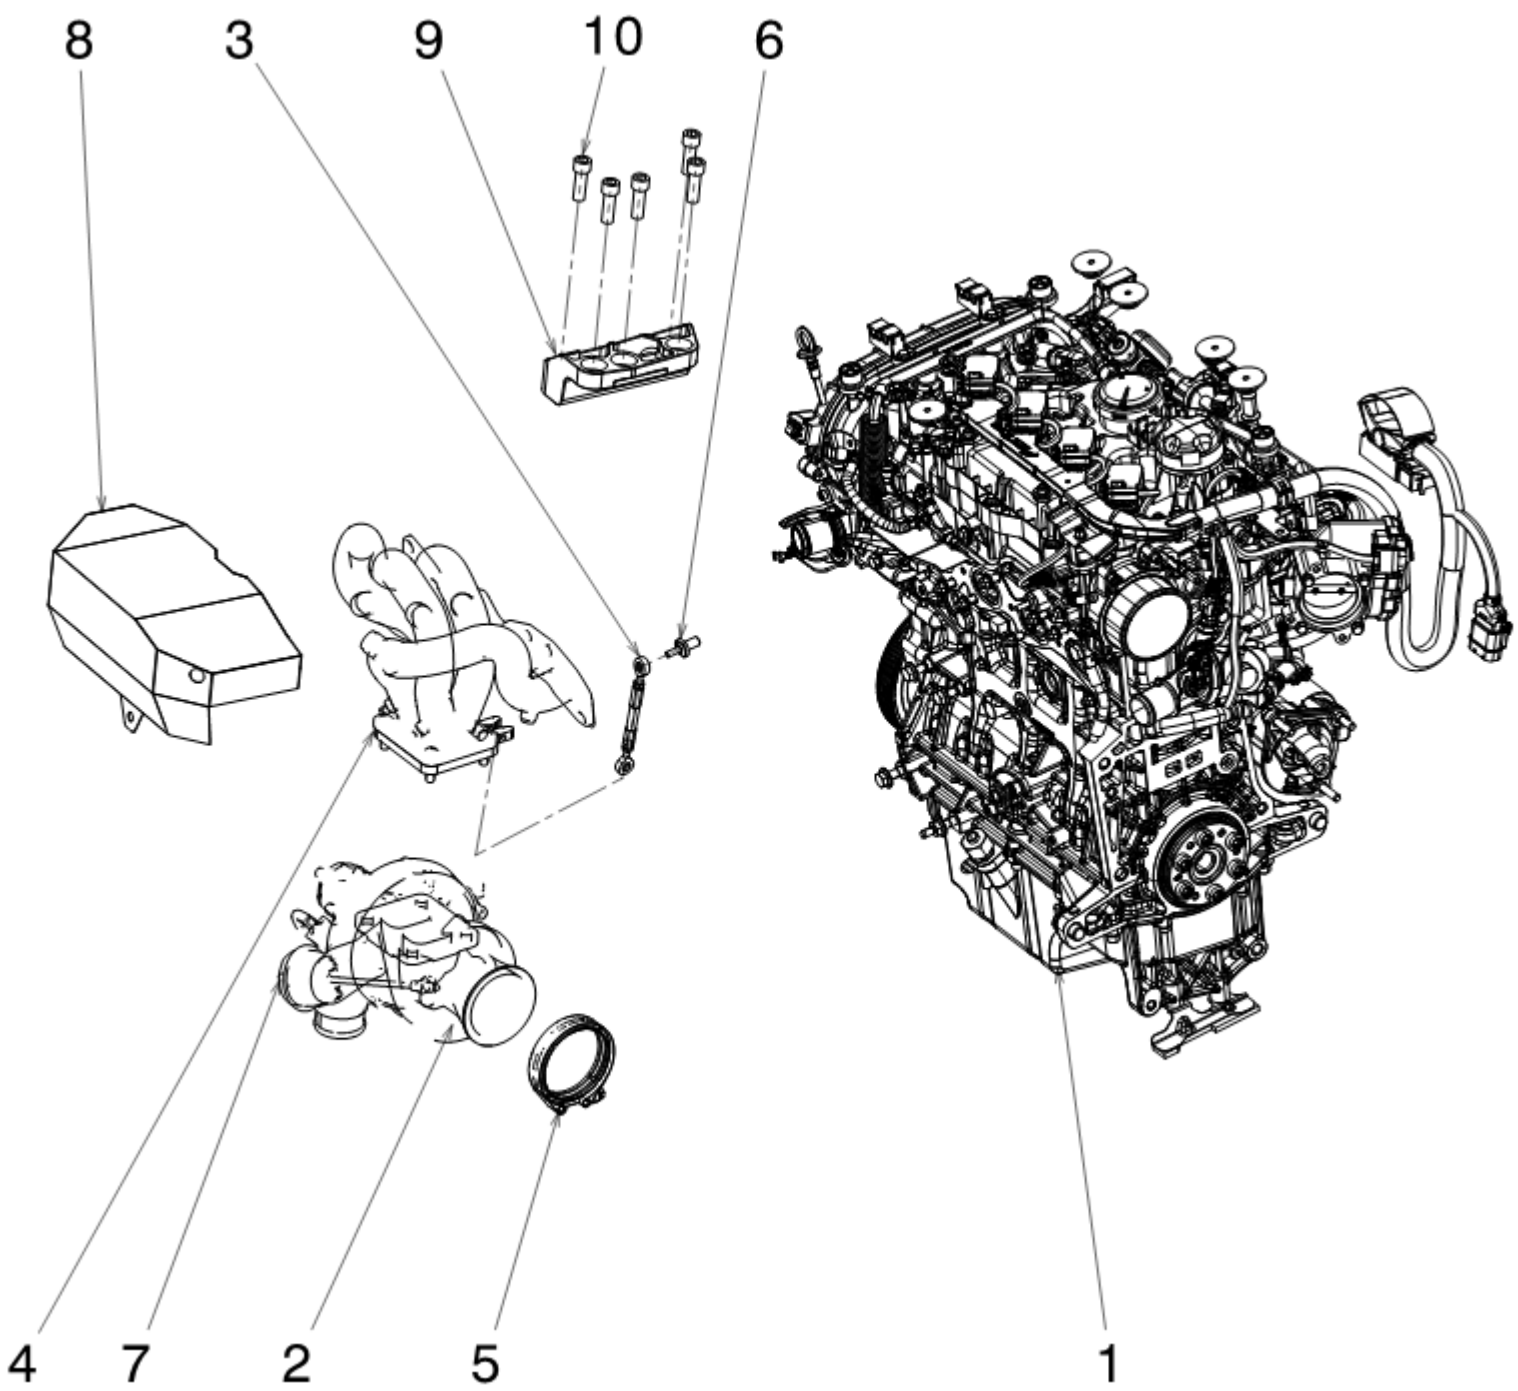

Pos	Part no.	Description	Q.ty
1	RF01-26-00401	ENGINE	1
2	RF01-10-01084	TURBO	1
3	RF01-10-01086	DROP LINK TURBO	1
4	RF01-10-00691	EXHAUST MANIFOLD	1
5	V-BAND 80mm	V BAND PER VM-D63.6-80-9	1
6	RF01-10-00835	STUD DROP LINK TURBO	1
7	TS0620114	WASTEGATE	1
8	RF01-10-00696	BULKHEAD HEAT EXHAUST MANIFOLD	1
9	RF01-26-00566	ENGINE SUPPORT	1
10		HEX SOCKET SCREW M12X1.25 L35	5

**In attesa di modifiche**


**RF01-10-01086 DROP LINK TURBO**

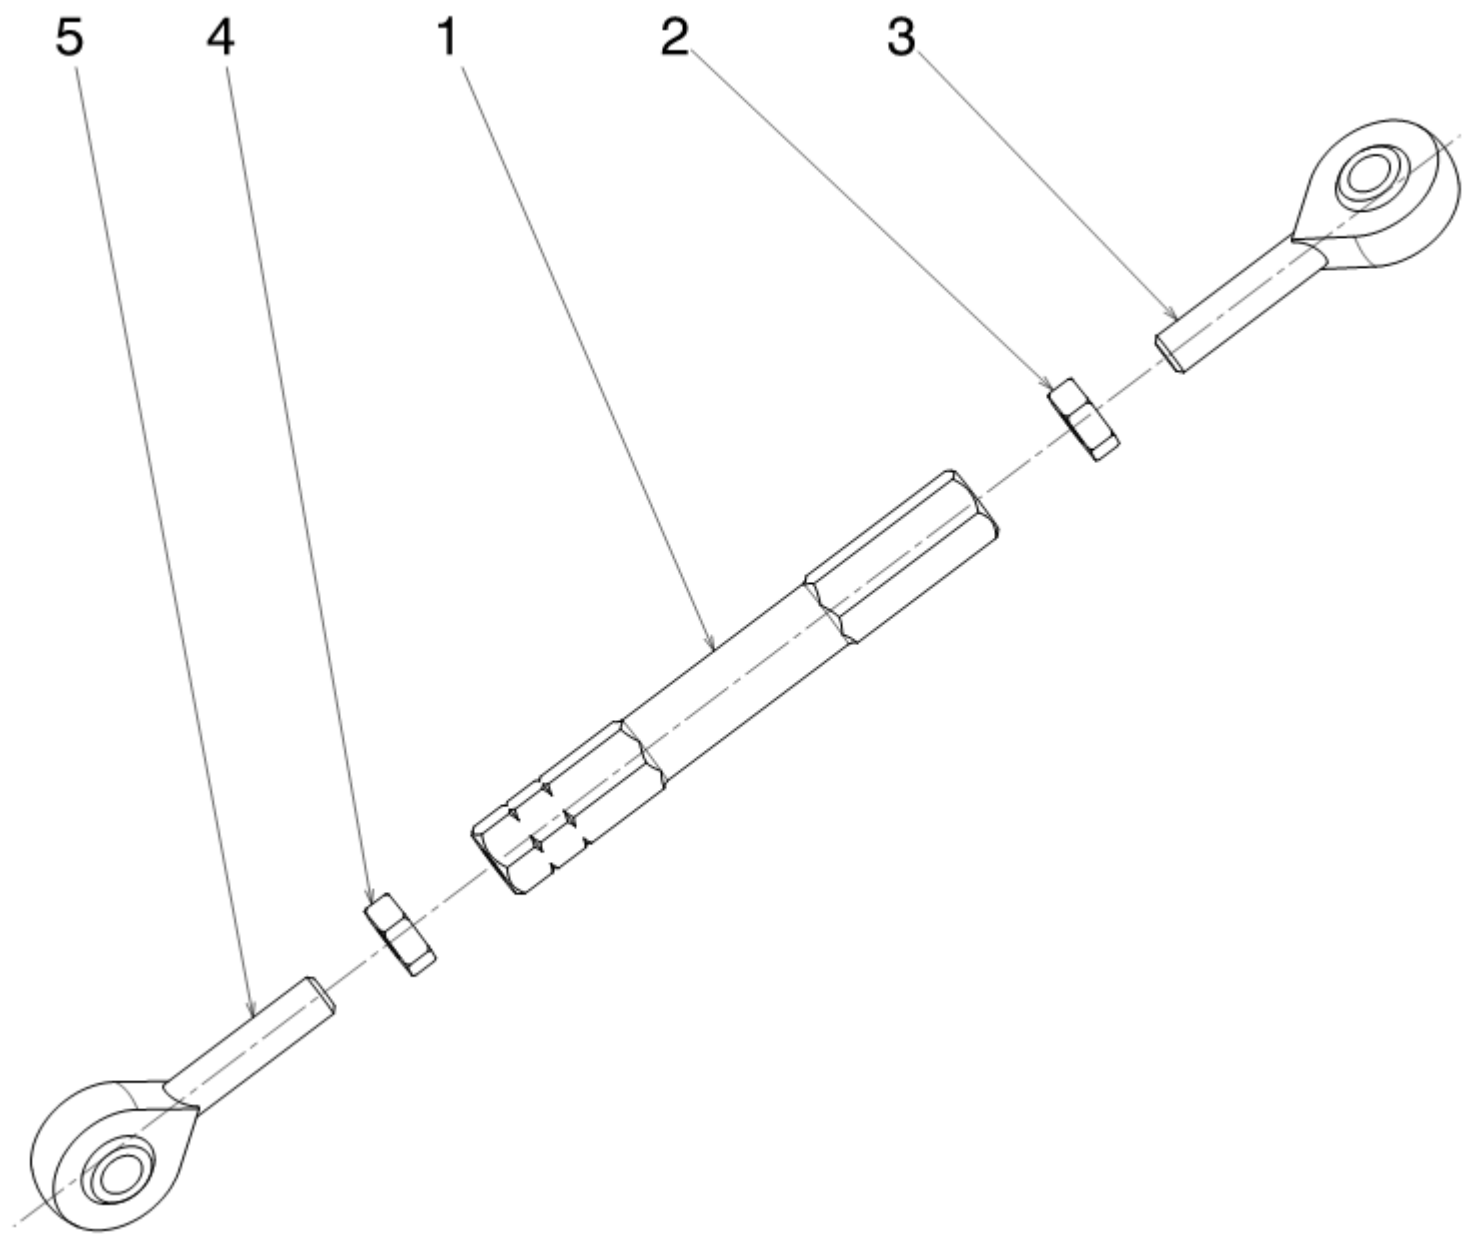

Pos	Part no.	Description	Q.ty
1	RF01-10-01085	TURBO DROP LINK	1
2		HEX NUT M6 LH	1
3	KAL 06 D	MALE BALL JOINT M6 LEFT	1
4		HEX NUT M6	1
5	KA 06 D	MALE BALL JOINT M6	1


**In attesa di modifiche**

**RF01-10-01059 EXHAUST COMPLETE**

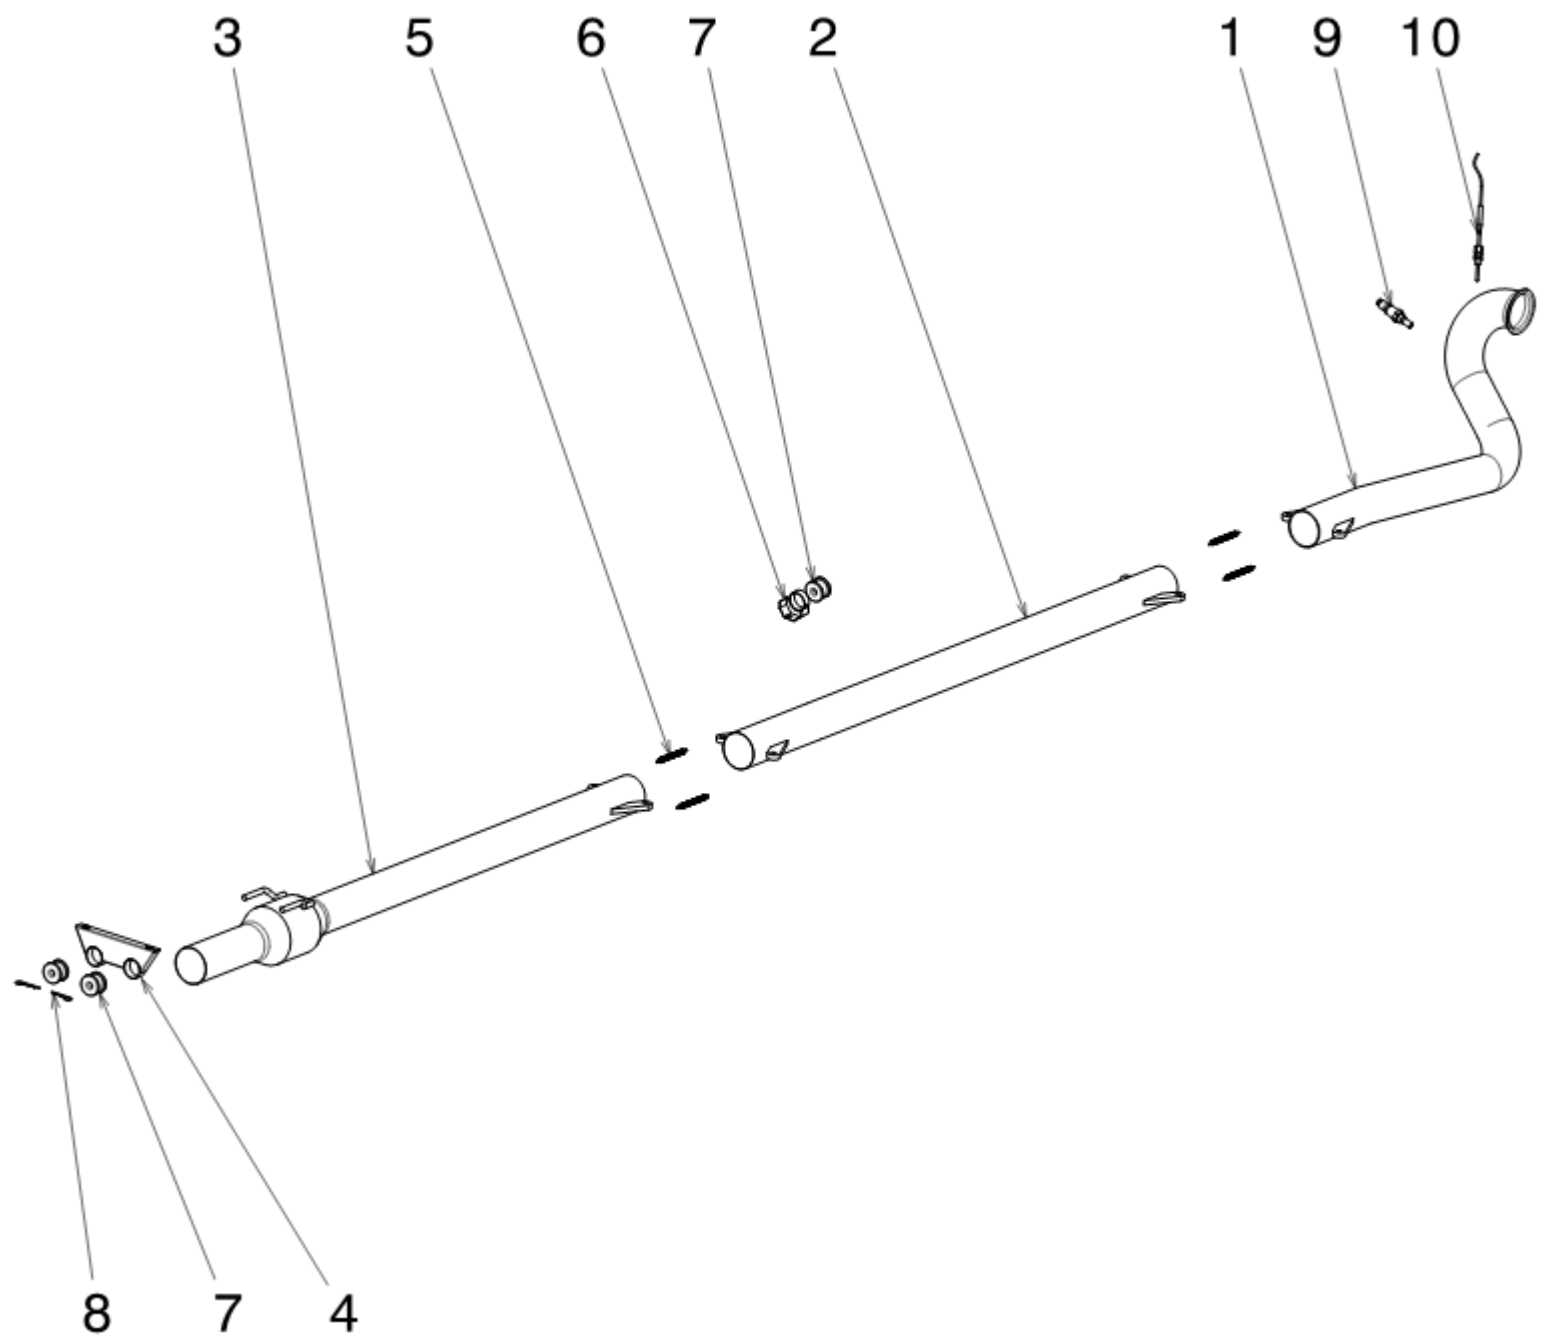


Pos	Part no.	Description	Q.ty
1	RF02-10-01088-1	DOWNPIPE	1
2	RF01-10-01060	CENTRAL EXHAUST PIPE	1
3	RF01-10-01062	REAR EXHAUST PIPE	1
4	RF01-10-01073	REAR EXHAUST PIPE SUPPORT	1
5	90600512	EXHAUST SPRING	4
6	RF01-10-01077	CENTRAL SUPPORT EXHAUST	1
7	443253149B	RUBBER EXHAUST MOUNTING	3
8	CLIP-2X53	SAFETY CLIP	2
9	RF01-16-00904	LAMBDA SENSOR	1
10	RF01-16-01309	THERMOCOUPLE	1

RF01-02-00518 CHASSIS COMPLETE

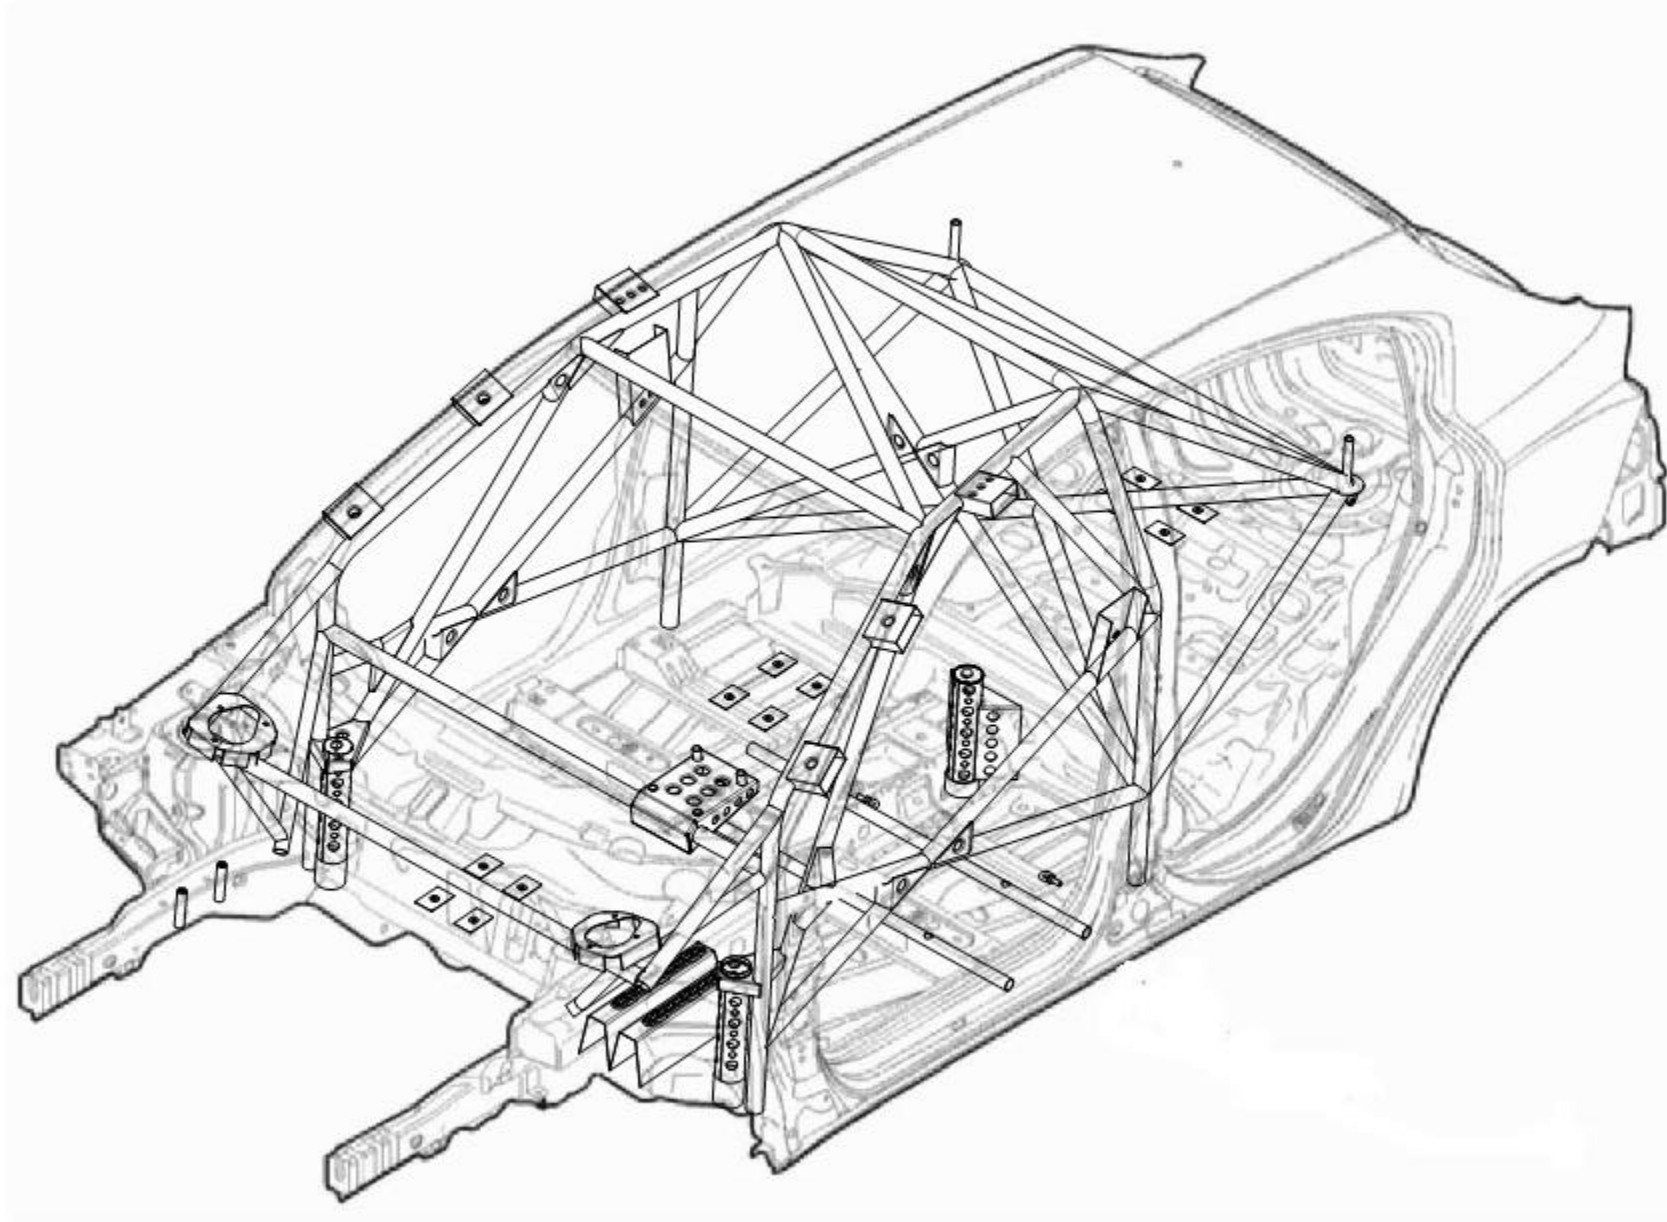


**WINDSCREEN**

Pos	Part no.	Description	Q.ty
1	52055982	WINDSCREEN	1
2	156098941	CENTRAL MIRROR	1
3	71730189	GLUE KIT	1

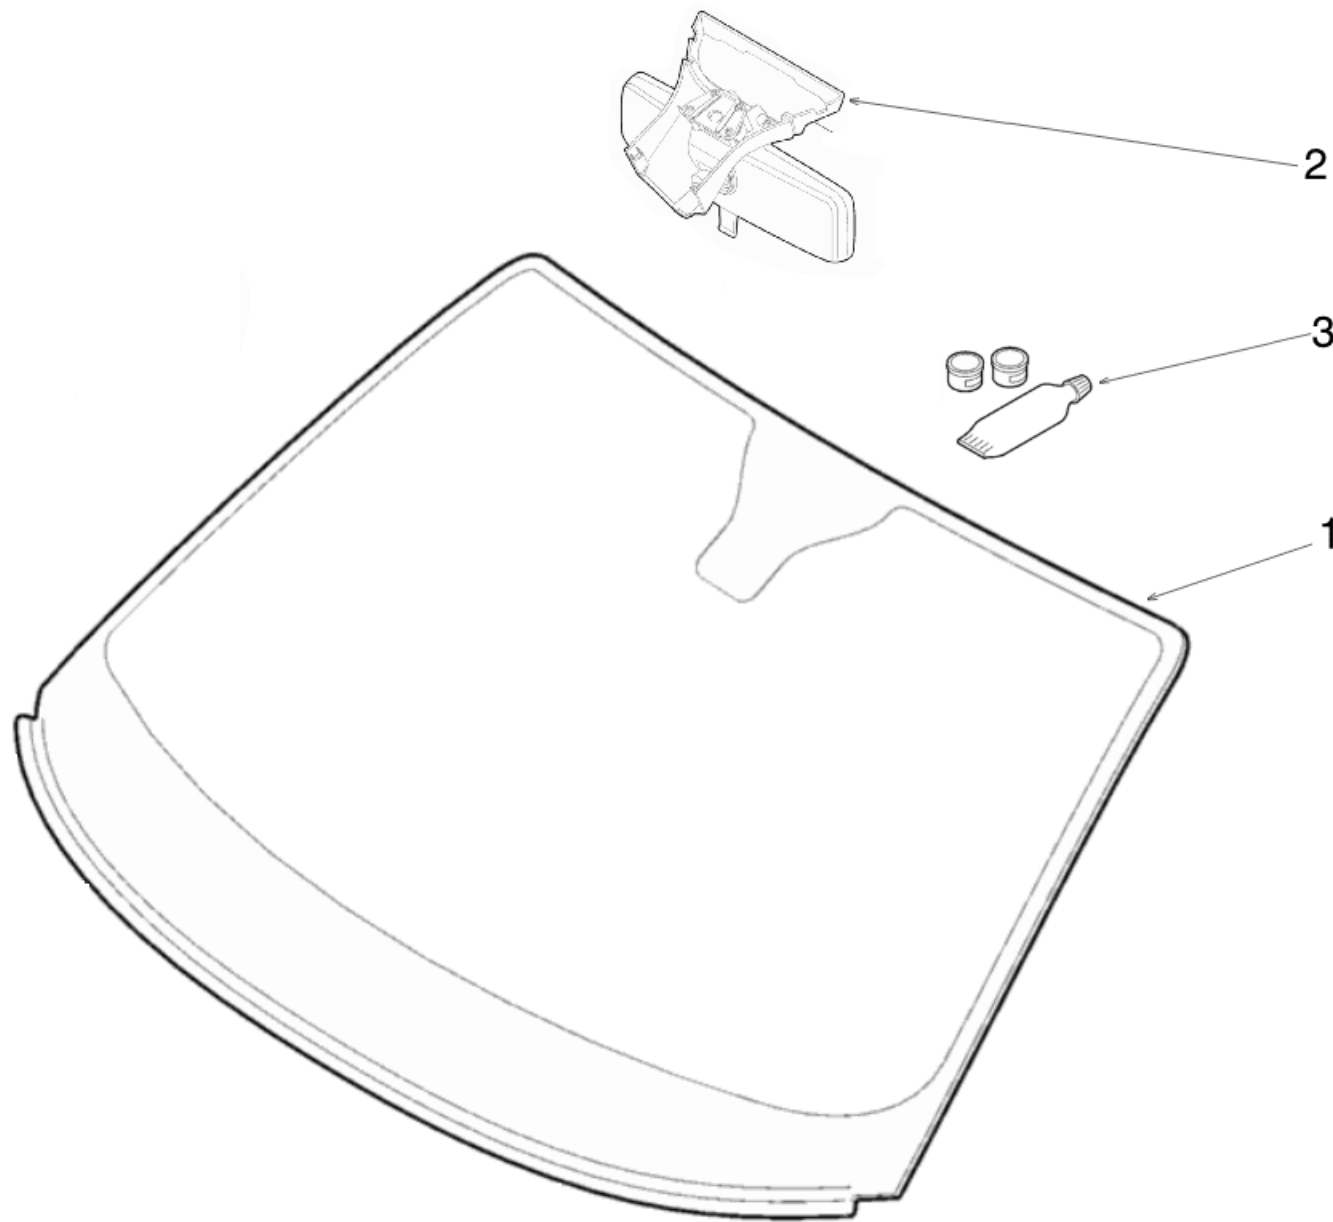


**RF01-03-00454 FRONT BUMPER ASSY**

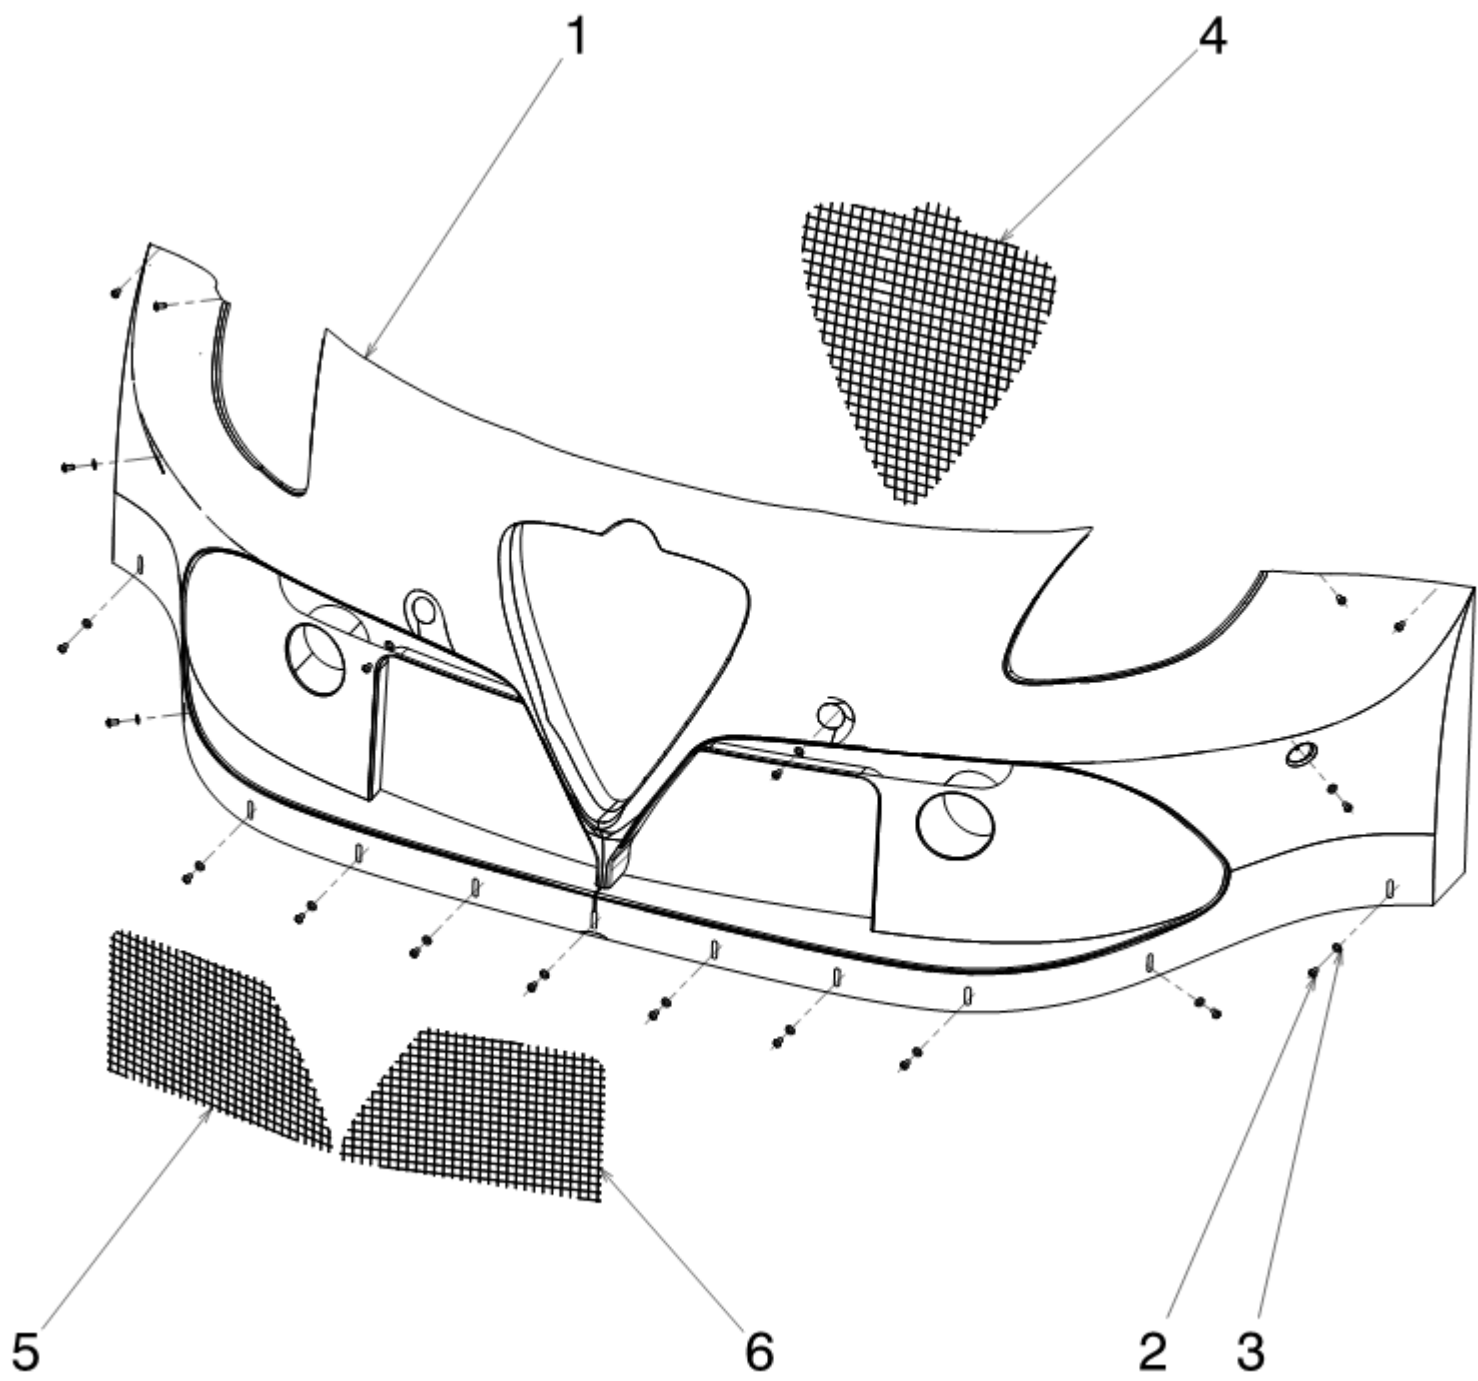

Pos	Part no.	Description	Q.ty
1	RF01-03-00455	FRONT BUMPER	1
2	-	BUTTON HEAD BOLT M6X12	19
3	-	SPRING WASHER 6X12	15
4	RF01-03-01082	INTERCOOLER GRILL	1
5	RF01-03-01080	RADIATOR GRILL RH	1
6	RF01-03-01081	RADIATOR GRILL LH	1


**RF01-03-00456 FRONT BULL-BAR ASSY**

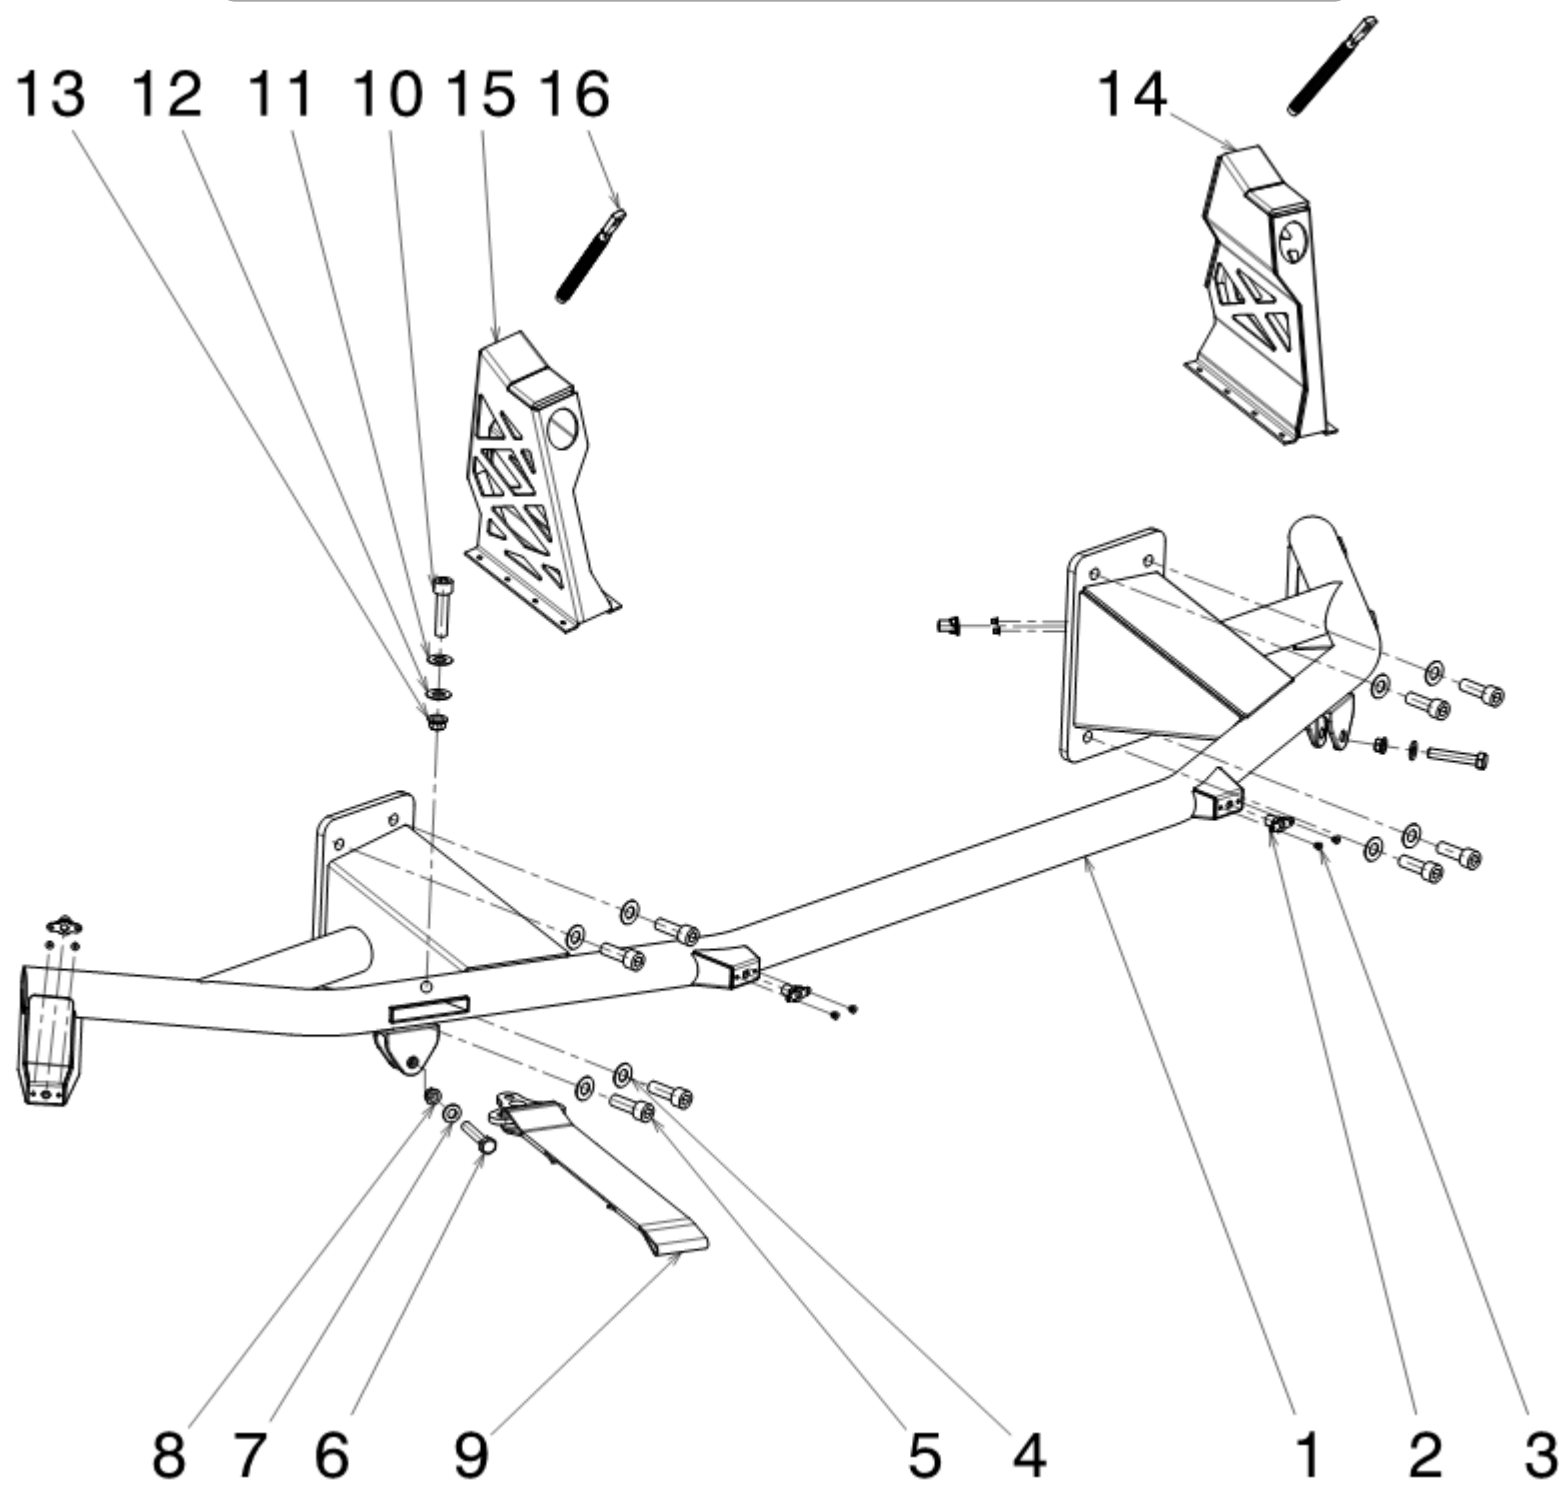

Pos	Part no.	Description	Q.ty
1	RF01-03-00457	BULLBAR COMPLETE	1
2	-	UN OLIVETTA M6	4
3	-	RIVET DIA2.4 L5	8
4	-	SPRING WASHER 10x20	8
5	-	HEX SOCKET SCREW M10X1.25 L20	8
6	-	NAS M8X1.25 L35	2
7	-	PLANE WASHER 8X16	2
8	-	ASTORI NUT M8	2
9	EB 578 R	TOWING STRAP	1
10	-	HEX SOCKET SCREW M10X1.25 L60	1
11	-	PLANE WASHER 10X20	1
12	-	PLANE WASHER 10X20	1
13	-	NUT ASTORI M10	1
14	RF01-03-01051	SUPPORT CATCH BONNET LH	1
15	RF01-03-01052	SUPPORT CATCH BONNET RH	1
16	EB492N	QUICK RELEASE BONNET KIT	1




RF01-03-00431 SPLITTER ASSY

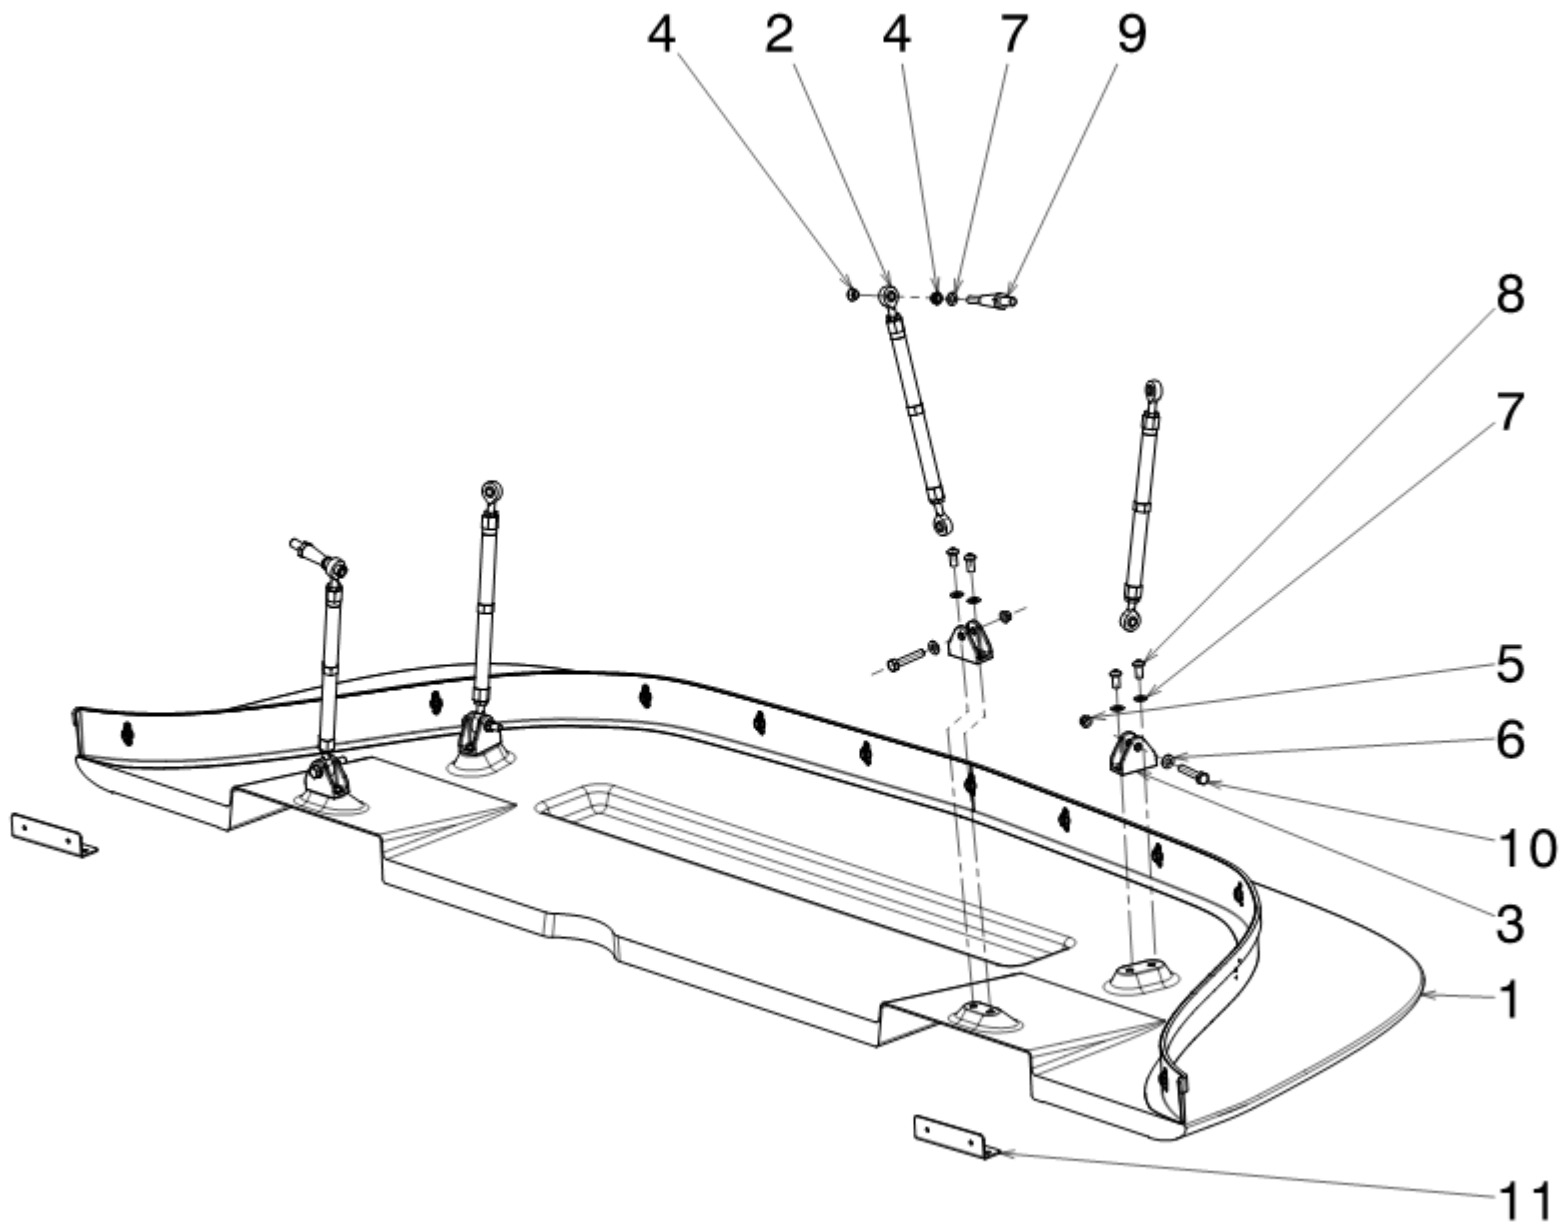


Pos	Part no.	Description	Q.ty
1	RF01-03-00432	SPLITTER	1
2	RF01-03-00780	SPLITTER ADJUS. ROD ASSEMBLY	4
3	RF01-03-00774	SPLITTER DAMPER BRACKET	4
4	RF01-06-00730	REAR BUSHING ARB	4
5	-	ASTORI NUT M8	4
6	-	PLANE WASHER 8X16	4
7	-	SPRING WASHER 8X15	10
8	-	HEX SOCKET SCREW M8X16	8
9	RF01-03-00819	SPLITTER ADJUS. ROD ASSEMBLY CONICAL PIN	2
10	-	NAS M8X1.25 L40 PARTIALLY THREADED	4
11	RF01-03-01102	SPLITTER/FRONT WHEEL ARCH BRACKET	2

**RF01-03-00780 DROP LINK SPLITTER**

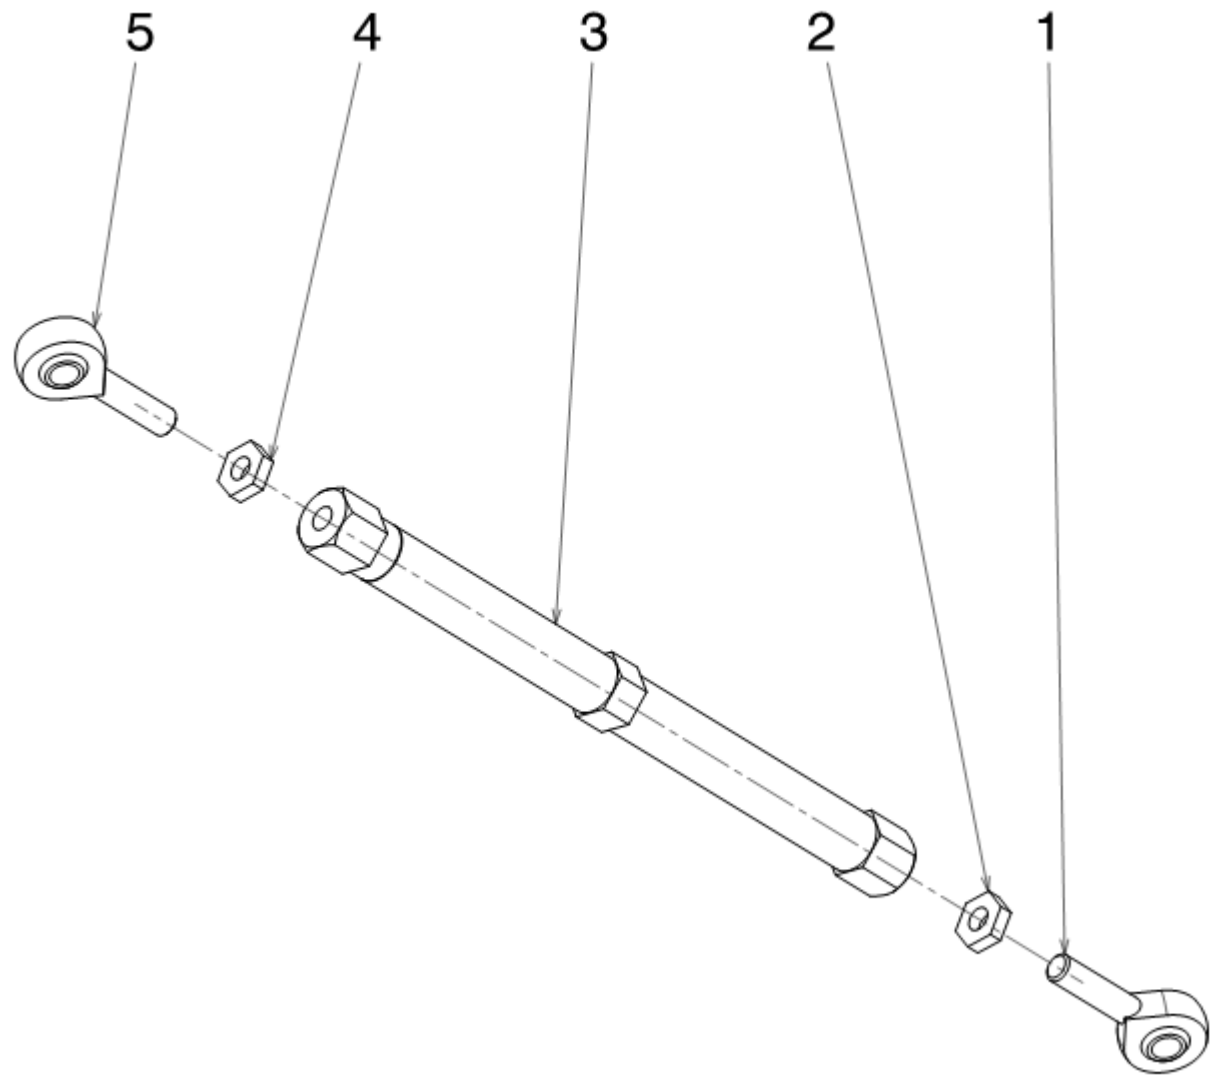

Pos	Part no.	Description	Q.ty
1	KA 08 450	MALE BALL JOINT M8 RH	1
2		NUT M8 RH	1
3	RF01-03-00781	SPLITTER ADJUS. ROD	1
4		NUT M8 LH	1
5	KAL 08 450	MALE BALL JOINT M8 LH	1


RF01-03-00437 BONNET ASSY

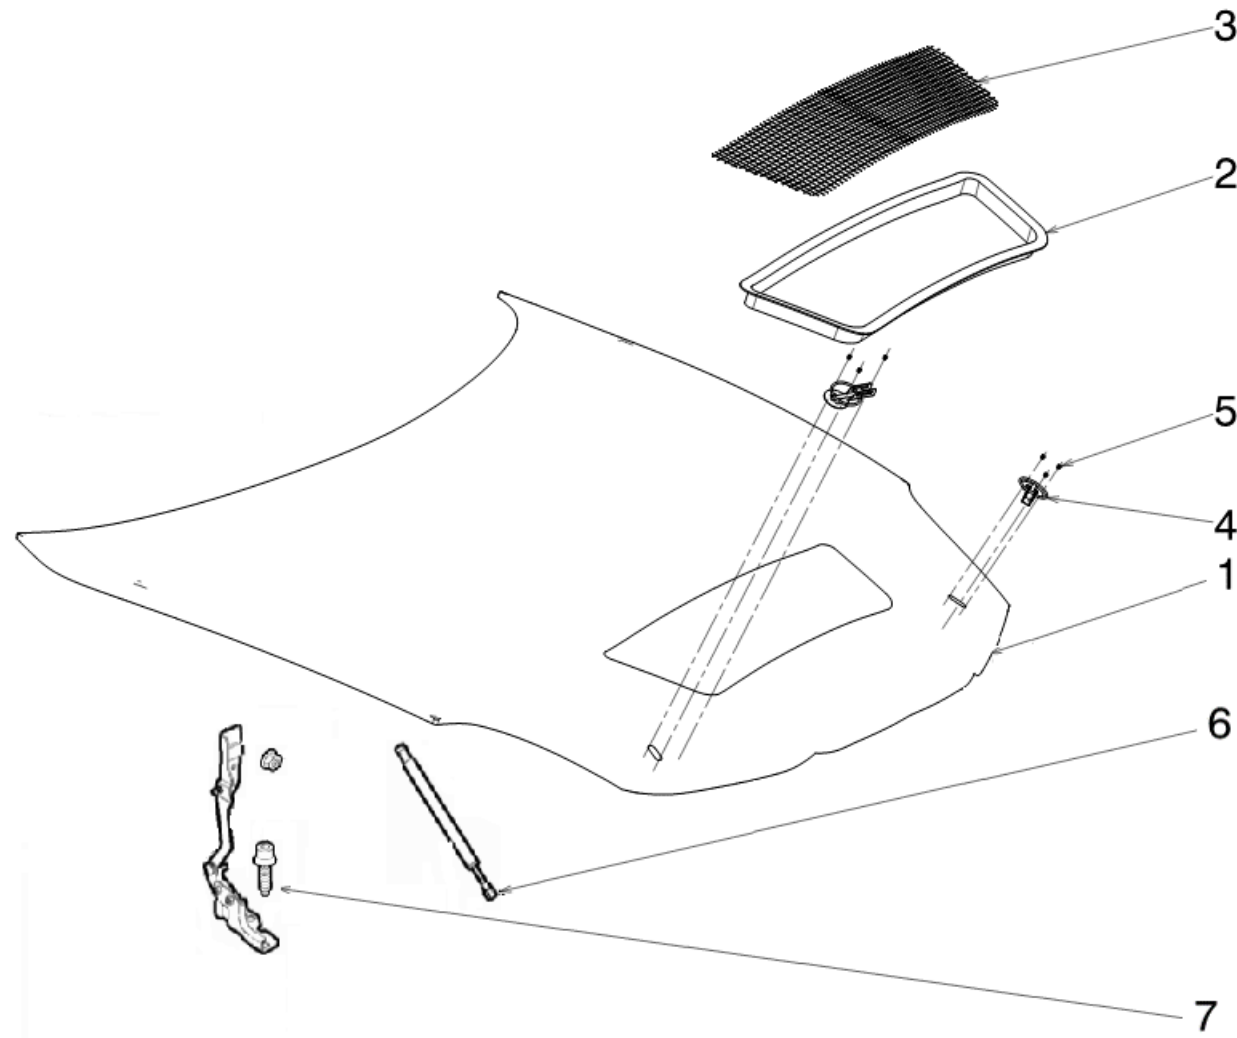

Pos	Part no.	Description	Q.ty
1	RF01-03-00438	BONNET	1
2	RF01-03-01002	AIR INTAKE	1
3	RF01-03-01003	NET BONNET	1
4	EB492N	QUICK RELEASE BONNET KIT	1
5	-	RIVET DIA3.2 L9	6
6	50519970	BONNET ROD	2
7	71765596	BONNET FIXING KIT	1


RF01-03-00441 FRONT FENDER ASSY LH  
 RF01-03-00442 FRONT FENDER ASSY RH

Pos	Part no.	Description	Q.ty
1	RF01-03-00443	FRONT FENDER LH	1
2	RF01-03-00444	FRONT FENDER RH	1
3	-	BUTTON HEAD BOLT M6X12	7
4	-	BUTTON HEAD BOLT M5X12	2
5	-	SPRING WASHER 6X12	7
6	-	UN OLIVETTA M5	1
7	-	UN OLIVETTA M6	2
8	-	RIVET DIA2.4 L5	6

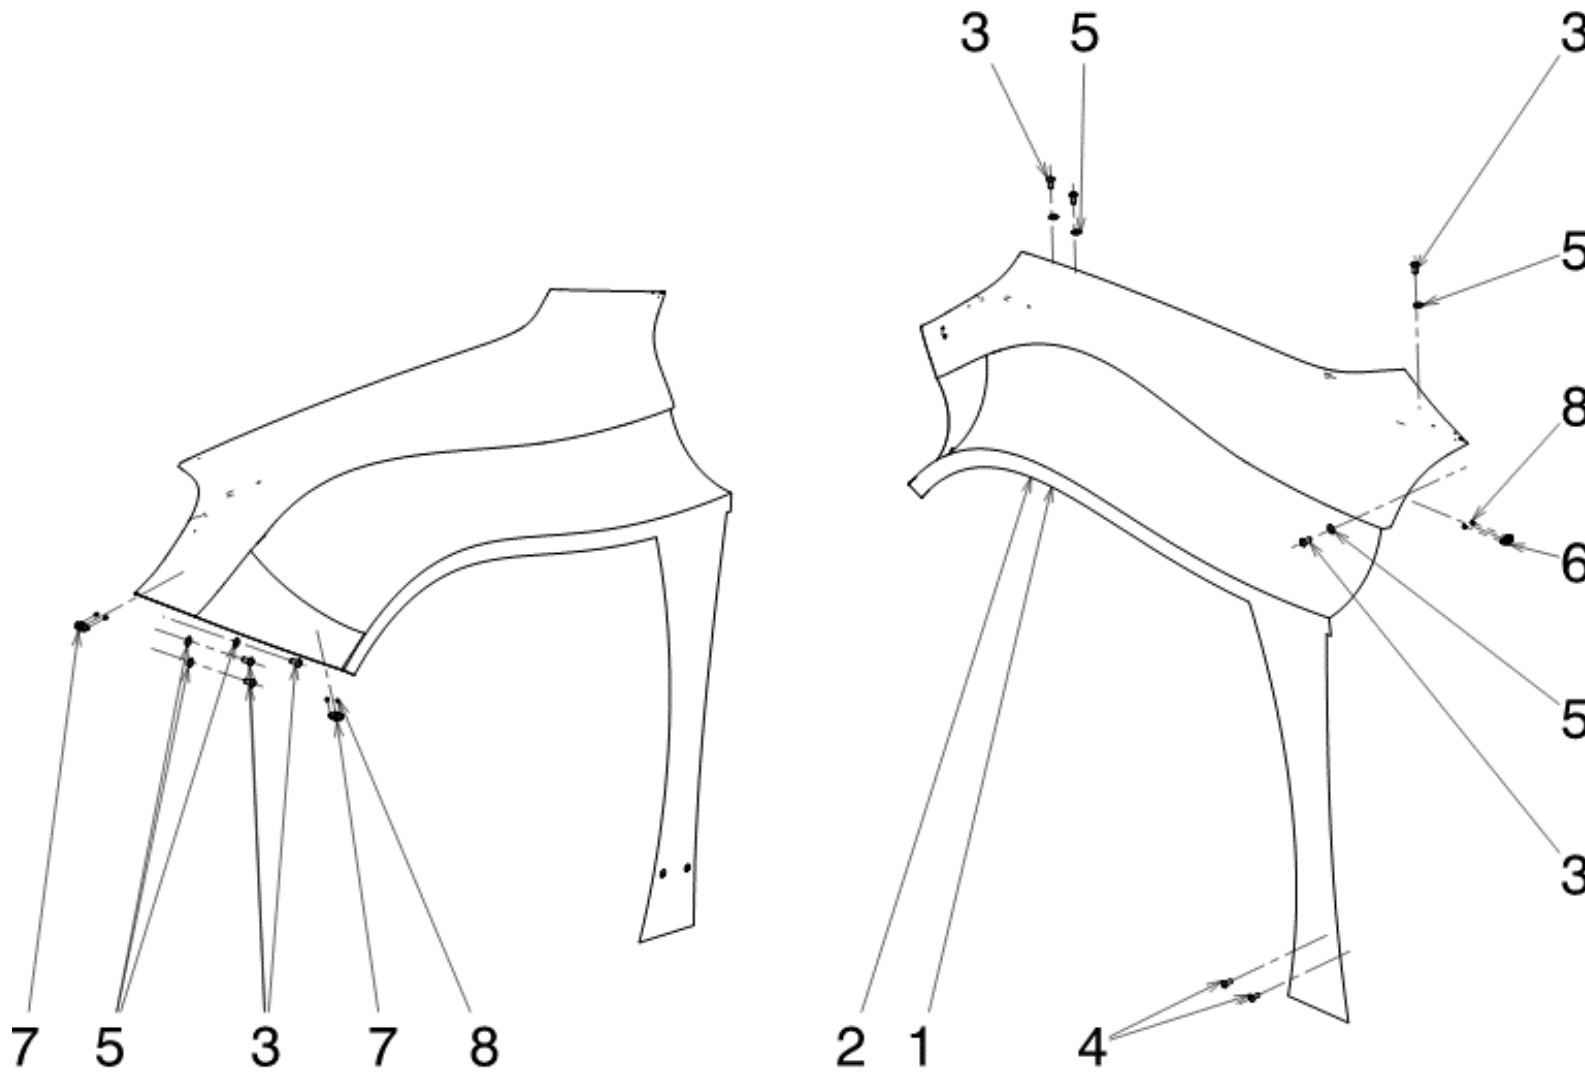


RF01-03-00433 SIDE SKIRT ASSY LH  
 RF01-03-00434 SIDE SKIRT ASSY RH

Pos	Part no.	Description	Q.ty
1	RF01-03-00435	SKIRT LH	1
2	RF01-03-00436	SKIRT RH	1
3	-	BUTTON HEAD BOLT M5X12	32
4	-	SPRING WASHER 5X11	32
5	-	UN OLIVETTA M5	4
6	-	RIVET DIA2.4 L 6	8

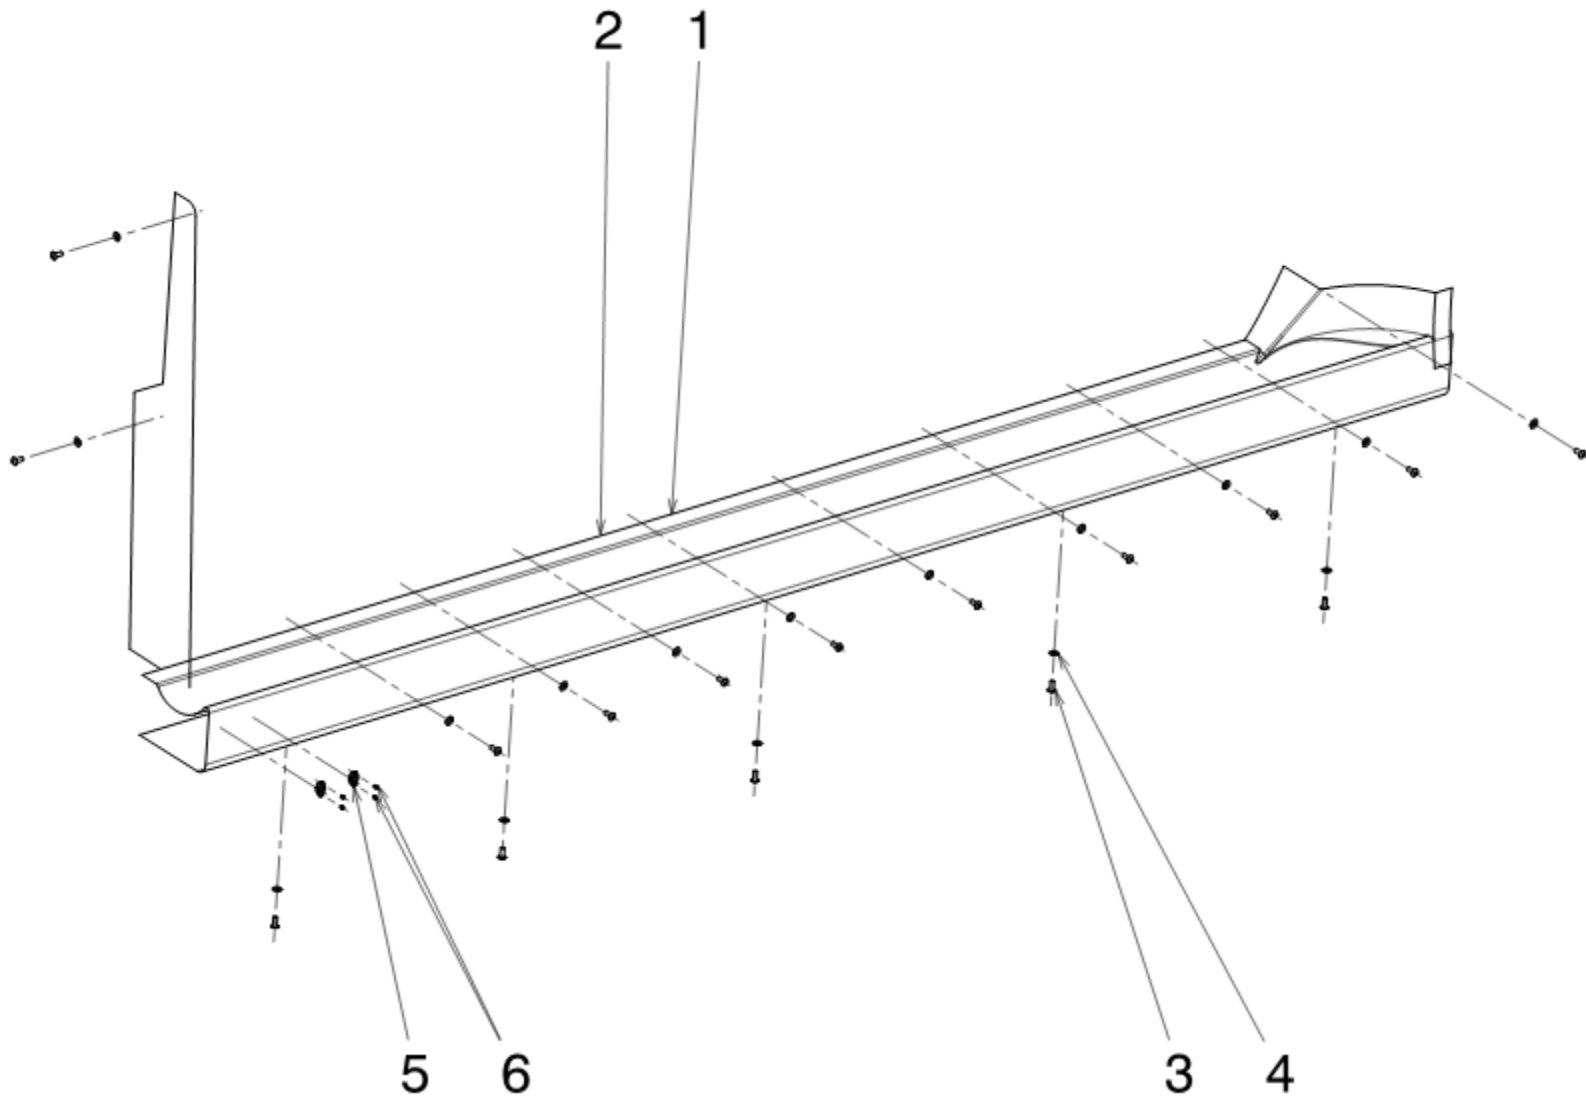


RF01-03-00449 REAR BODYSIDE WIDENING PNLS LH  
 RF01-03-00448 REAR BODYSIDE WIDENING PNLS RH

Pos	Part no.	Description	Q.ty
1	RF01-03-00451	LH BODYSIDE WIDENING PNL	1
2	RF01-03-00450	RH BODYSIDE WIDENING PNL	1
3	RF01-03-00881	LH RR DOOR WIDENING PNL	1
4	RF01-03-00882	RH RR DOOR WIDENING PNL	1
5		REAR WIDENING RIVETS KIT	1

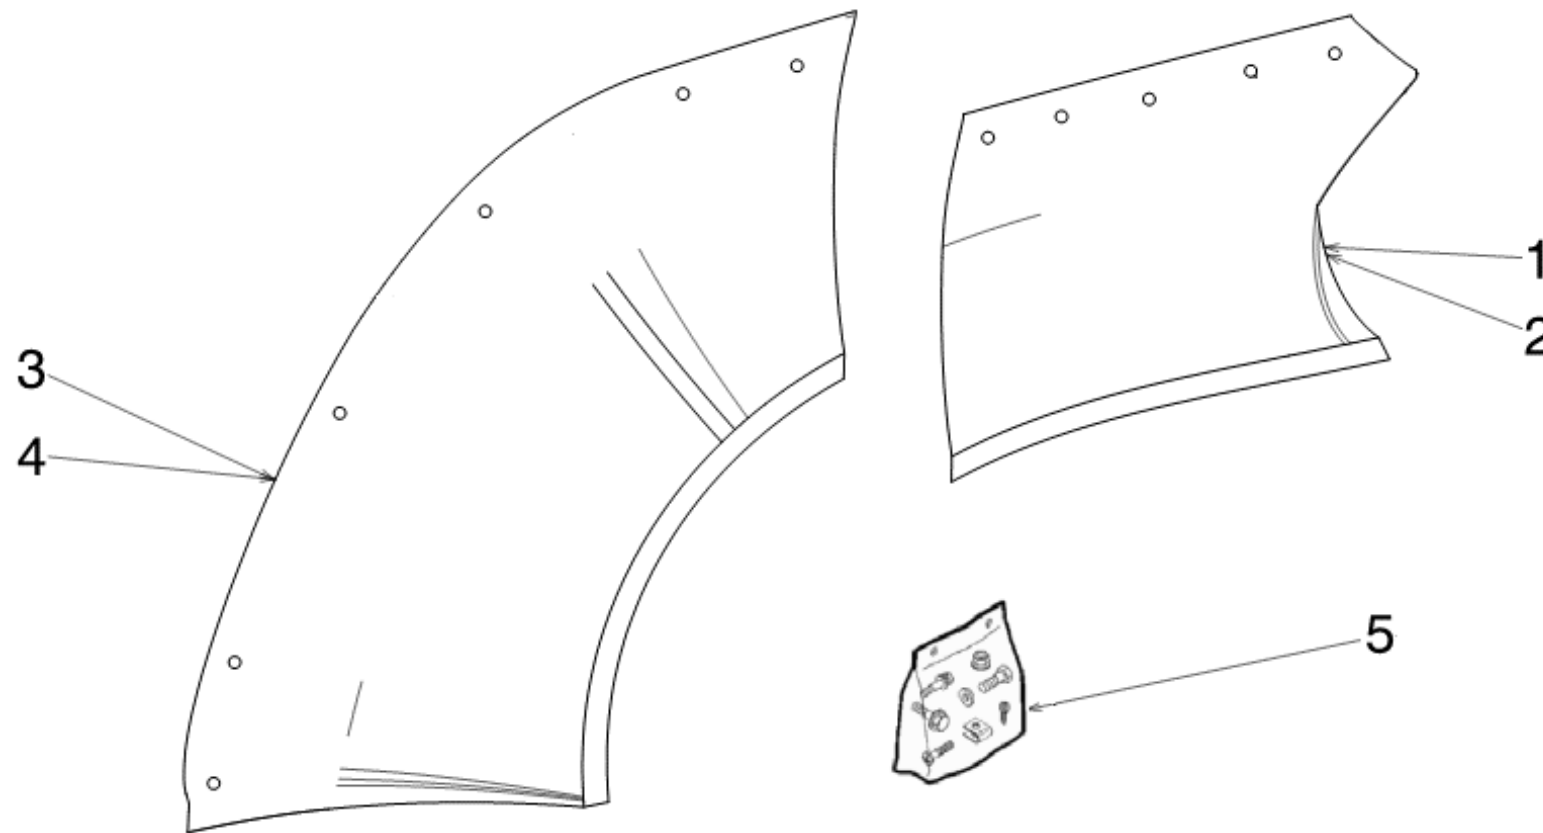


RF01-03-00446 REAR BUMPER ASSY

Pos	Part no.	Description	Q.ty
1	RF01-03-00447	REAR BUMPER	1
2	-	BUTTON HEAD BOLT M6X12	6
3	-	SPRING WASHER 6X12	2
4	50522975	REFLECTOR RH	1
5	50522974	REFLECTOR LH	1

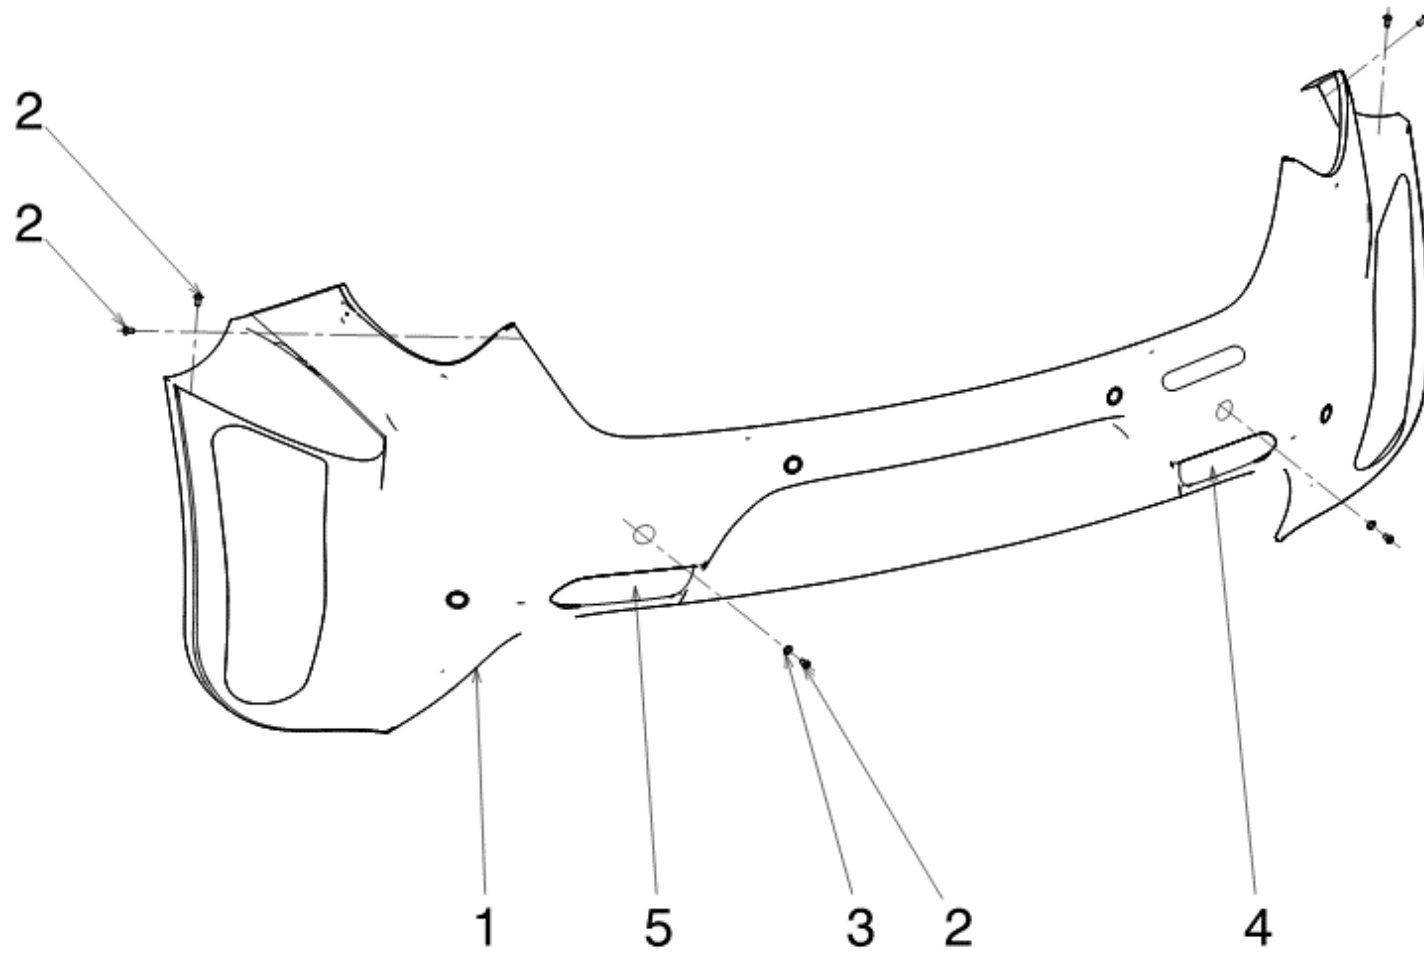

## WHEEL ARCHES


Pos	Part no.	Description	Q.ty
1	RF01-03-00601	FRONT LH WHEEL ARCH	1
2	RF01-03-00602	FRONT RH WHEEL ARCH	6
3	RF01-03-00603	REAR LH WHEEL ARCH	2
4	RF01-03-00604	REAR RH WHEEL ARCH	1

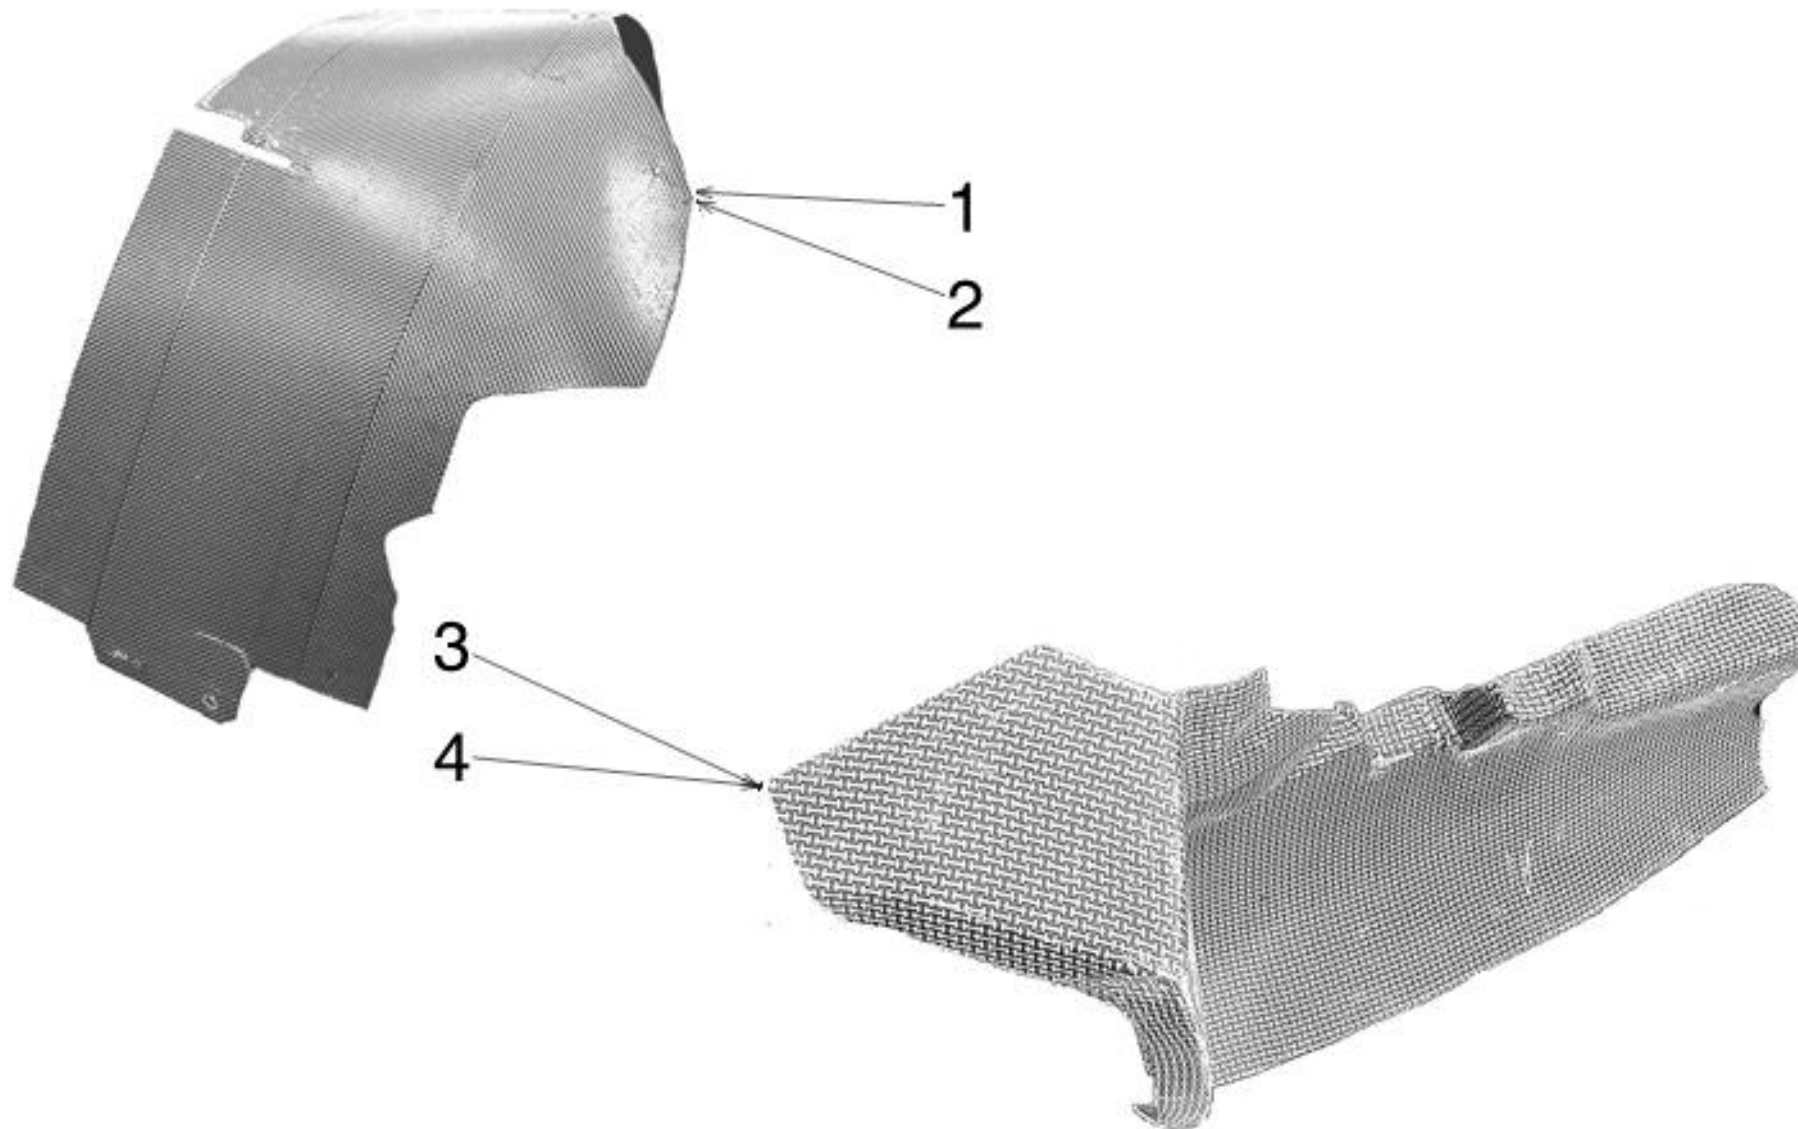




**RF01-03-00728 REAR BULL-BAR ASSY**

Pos	Part no.	Description	Q.ty
1	RF01-03-00727	REAR BULL BAR	1
2	-	PLAIN WASHER 8X24	6
3	-	NUT ASTORI M8	6
4	-	UN OLIVETTA M6	2
5	-	COUNTERSUNK HEAD RIVET ø2.4 L5	4
6	-	HEX SOCKET SCREW M10X60	1
7	-	PLANE WASHER 10X20	1
8	-	SPRING WASHER 10X21	1
9	-	NUT ASTORI M10	1
10	EB 578 R	TOWING STRAP	1

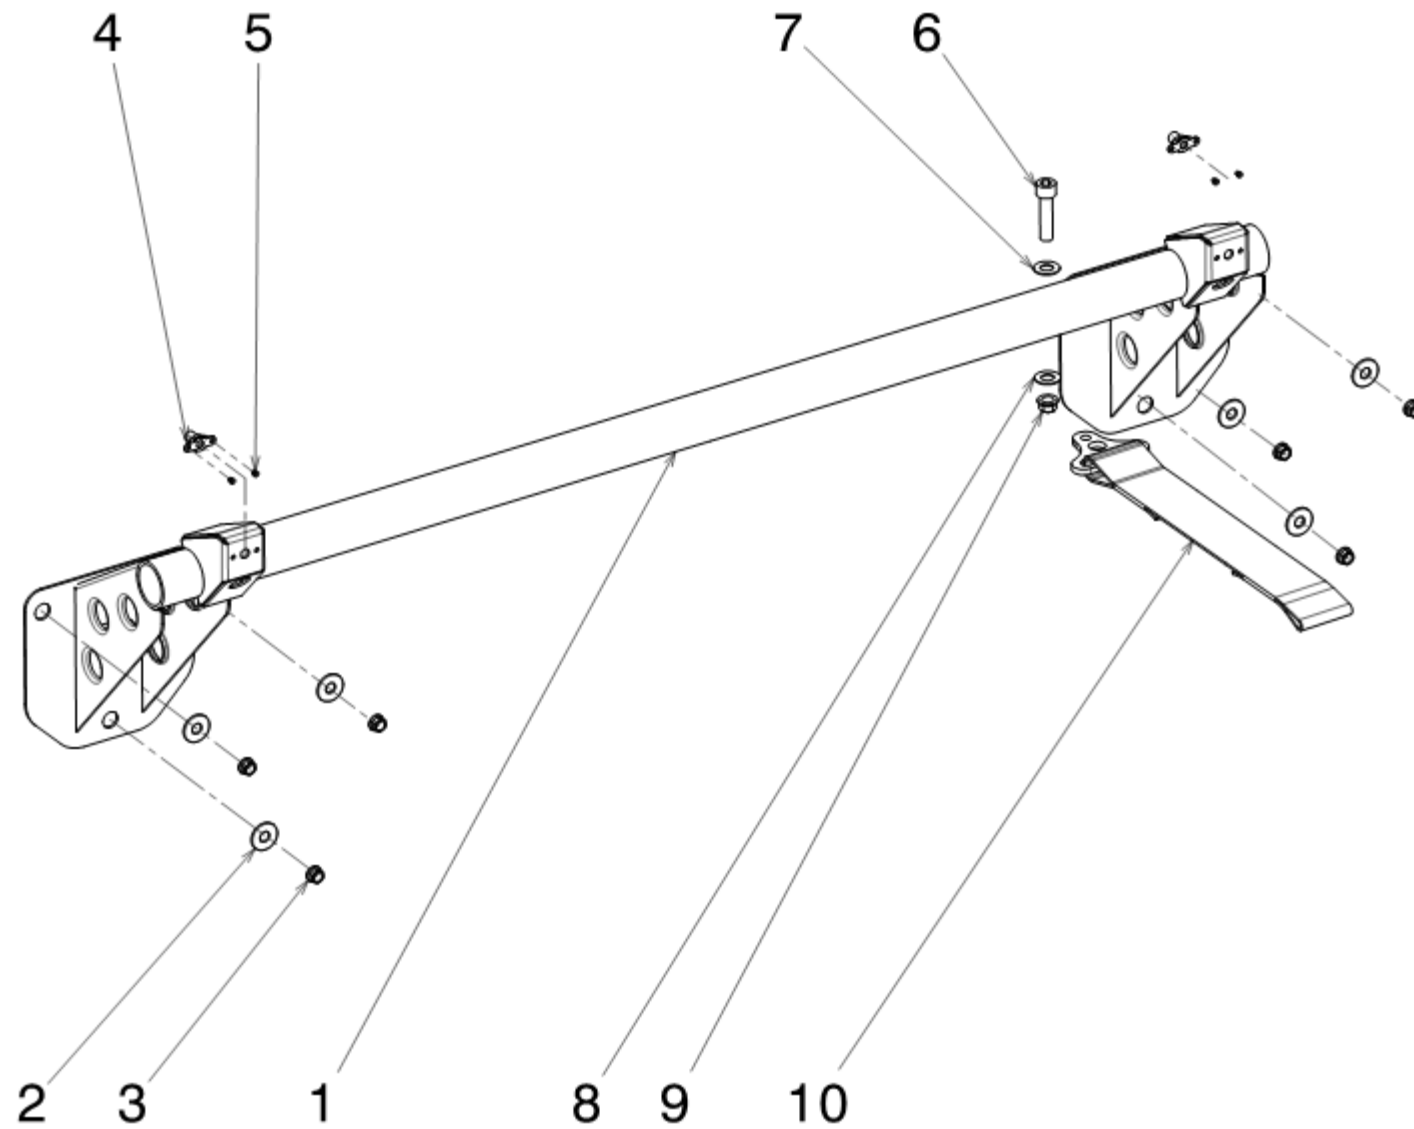


**RF01-03-00480 COMPLETE TAILGATE**

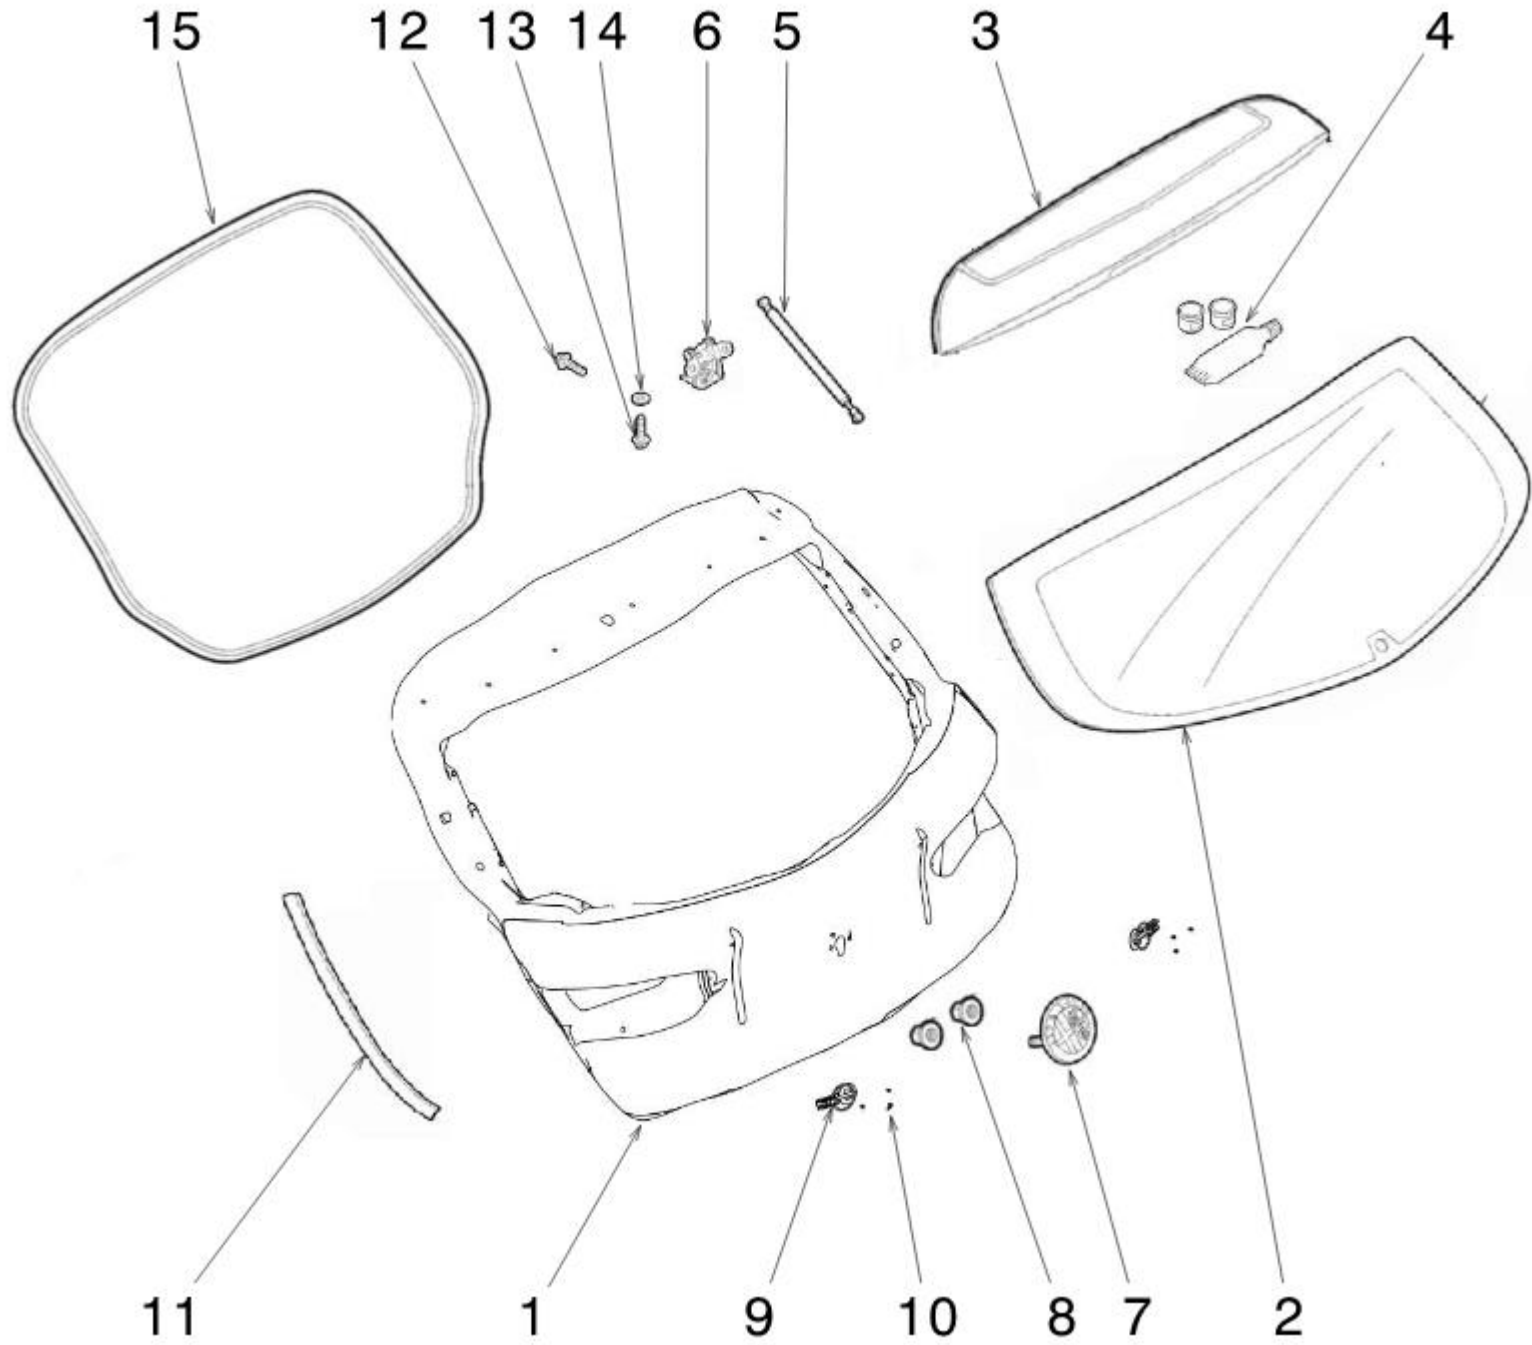

Pos	Part no.	Description	Q.ty
1	RF01-03-00481	TAILGATE	1
2	50521171	REAR WINDSCREEN	1
3	156090609	SPOILER	1
4	71730189	GLUE KIT	1
5	50509830	TAILGATE ROD	2
6	52024838	TAILGATE JOINT	2
7	50538700	ALFA ROMEO LOGO	1
8	14059211	ALFA ROMEO LOGO NUT	2
9	EB492N	QUICK RELEASE BONNET KIT	1
10	-	RIVET DIA3.2 L9	6
11	50526745	WINDSCREEN SEAL	2
12	55192179	SCREW M6	4
13	7770727	SCREW M8	2
14	51963426	WASHER ø8	2
15	50526800	TAILGATE SEAL	1


RF01-03-00424 REAR WING ASSY

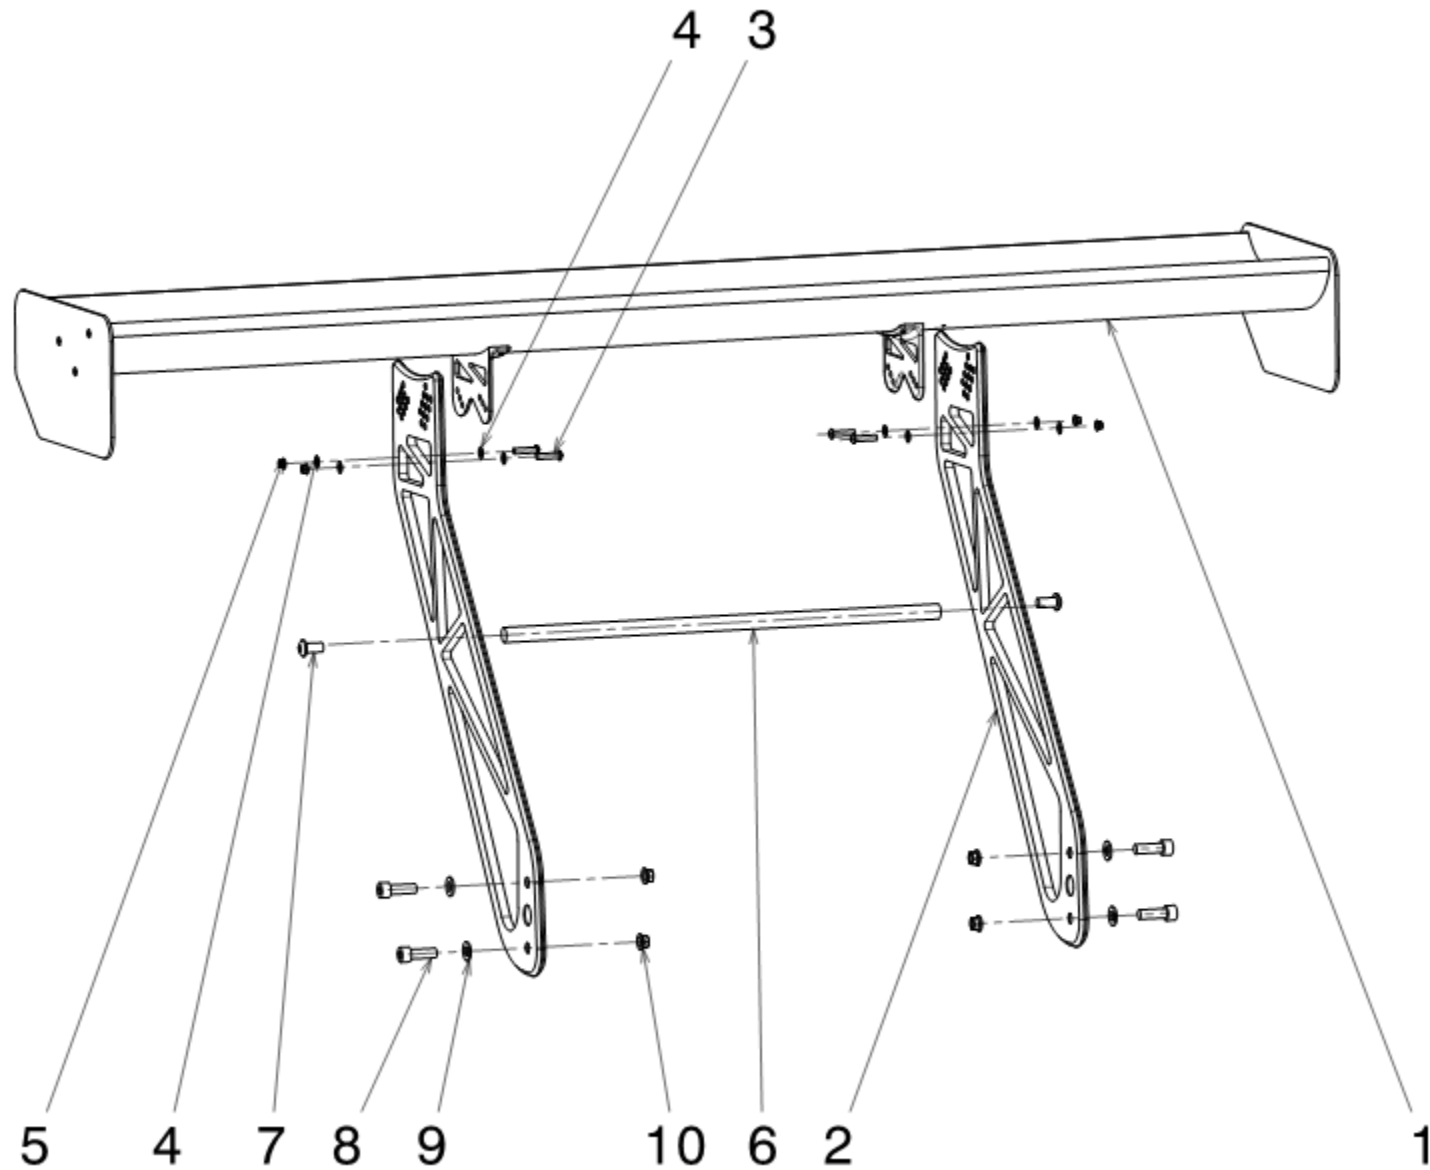


Pos	Part no.	Description	Q.ty
1	RF01-03-00425	REAR WING COMPLETE	1
2	RF01-03-01046	PYLON EVO	2
3	-	BUTTON HEAD BOLT M6x1 L25	4
4	-	SPRING WASHER	8
5	-	NUT ASTORI M6	4
6	RF01-03-01047	REINFORCEMENT PYLON	1
7	-	BUTTON HEAD BOLT M10 L25	2
8		HEX SOCKET SCREW M10X1.5 L30	4
9		PLAIN WASHER M10	4
10		NUT ASTORI M10	4

**RF01-03-00425 REAR WING COMPLETE**

Pos	Part no.	Description	Q.ty
1	RF01-03-00426	REAR WING	1
2	RF01-03-00429	REAR WING STRIP LH	1
3	RF01-03-00430	REAR WING STRIP RH	1
4	-	BUTTON HEAD BOLT M4x10	6
5	RF01-03-00865	BRACKET REAR WING LH	1
6	RF01-03-00864	BRACKET REAR WING RH	1

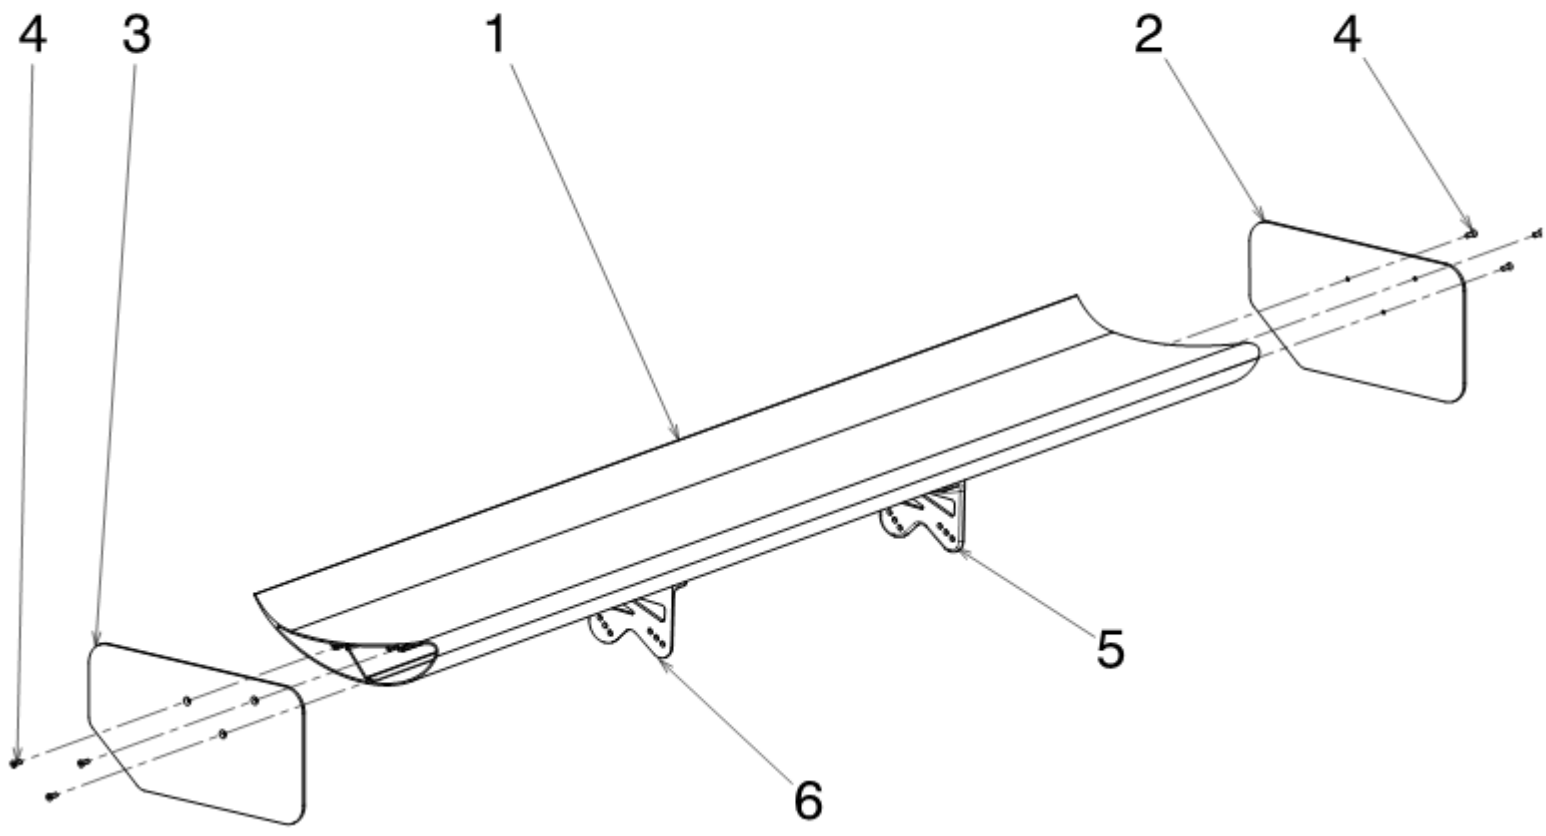


RF01-03-00718 FRONT RH DOOR  
RF01-03-00719 FRONT LH DOOR

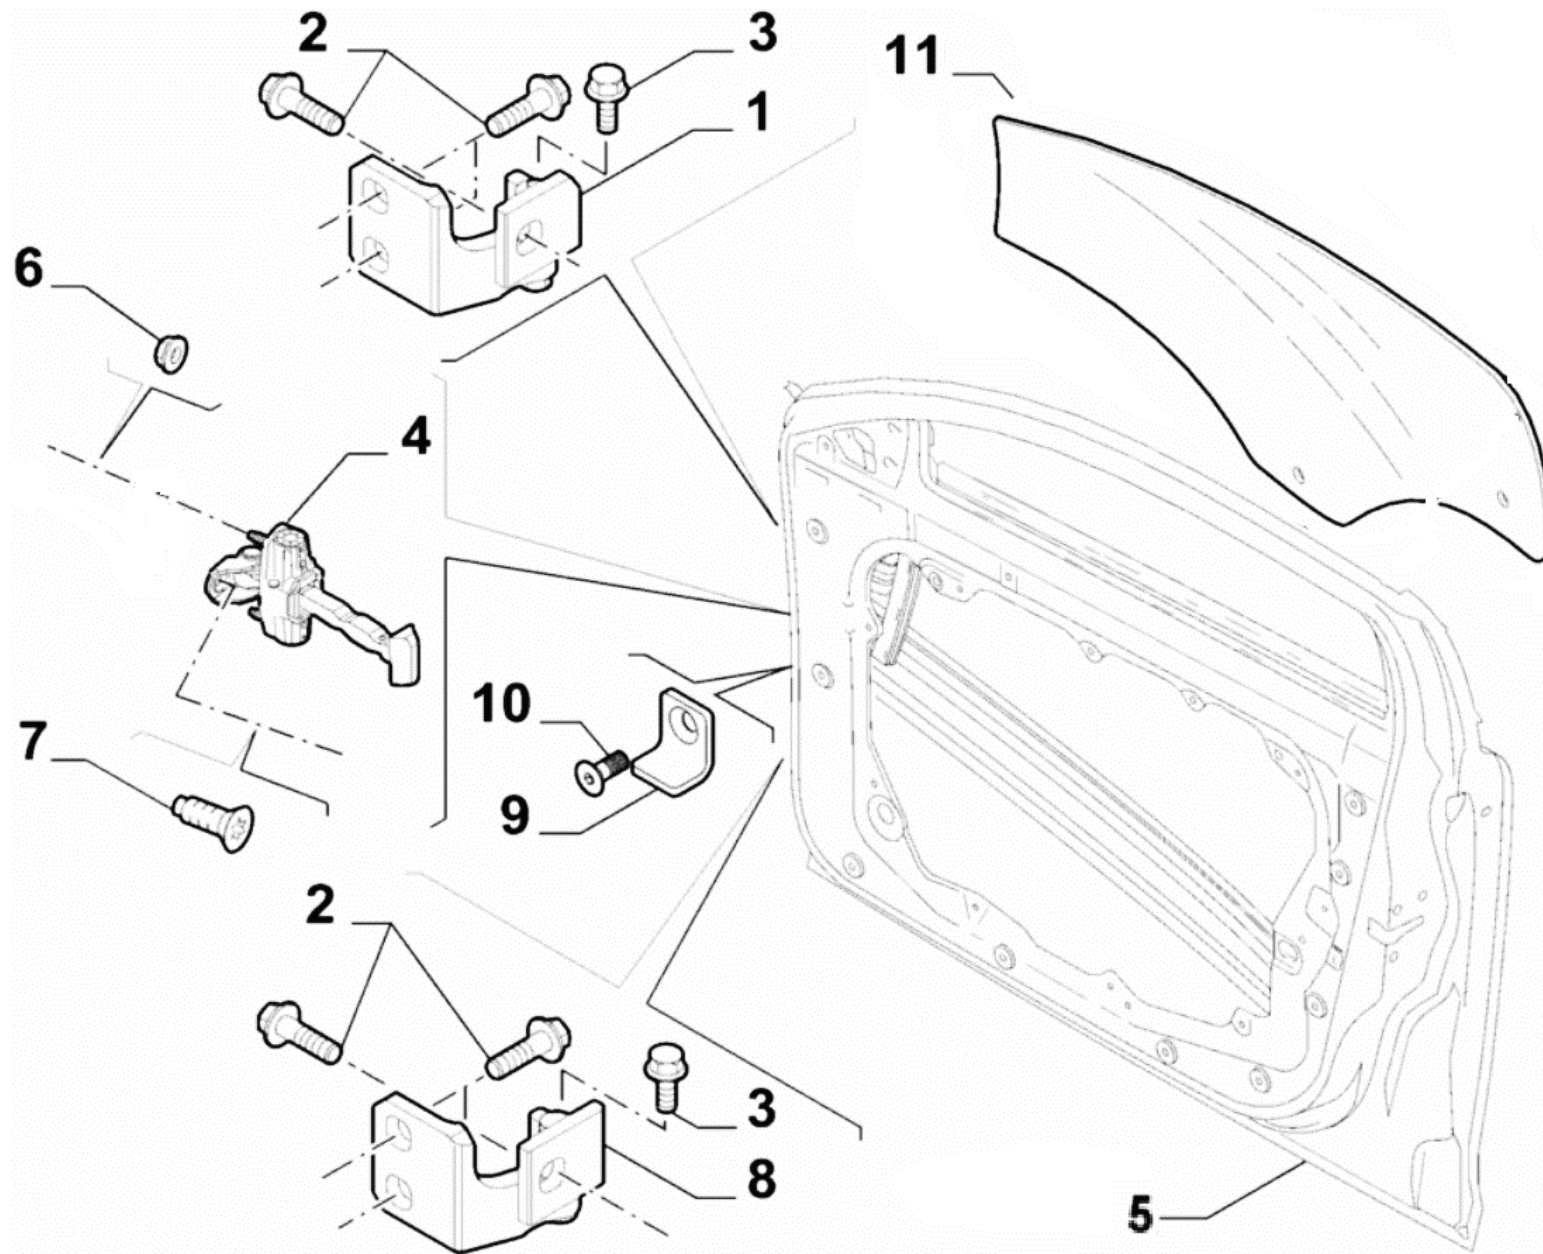

Pos	Part no.	Description	Q.ty
1	50525345	FRONT RIGHT DOOR UPPER JOINT	1
	50525347	FRONT LEFT DOOR UPPER JOINT	1
2	18754324	JOINT SCREW M10	4+4
3	50520124	JOINT UPPER SCREW M8	2+2
4	50509843	FRONT DOOR ROD	1+1
5	50509165	FRONT RH DOOR	1
	50509245	FRONT LH DOOR	1
6	12578118	FRONT DOOR ROD NUT	2+2
7	51876148	FRONT DOOR ROD SCREW	1+1
8	50525346	FRONT RIGHT DOOR LOWER JOINT	1
	50525348	FRONT LEFT DOOR LOWER JOINT	1
9	50509495	BRACKET	1+1
10	60681298	SCREW M8	1+1
11	50529951	FRONT RH WINDOW	1
	50529953	FRONT LH WINDOW	1


RF01-03-00718 FRONT RH DOOR  
 RF01-03-00719 FRONT LH DOOR

Pos	Part no.	Description	Q.ty
1	71754405	INNER FRONT RH PANEL	1
	71754406	INNER FRONT LH PANEL	1
2	51929179	RH WINDOW WIRING LOOM	1
	51929174	LH WINDOW WIRING LOOM	1
3	71754407	FRONT RH WINDOW DRIVE	1
	71754408	FRONT LH WINDOW DRIVE	1
4	50521399	DOOR PANEL RIVET	2+2
5	71777779	FRONT RH WINDOW LIFTER MOTOR	1
	71777780	FRONT LH WINDOW LIFTER MOTOR	1

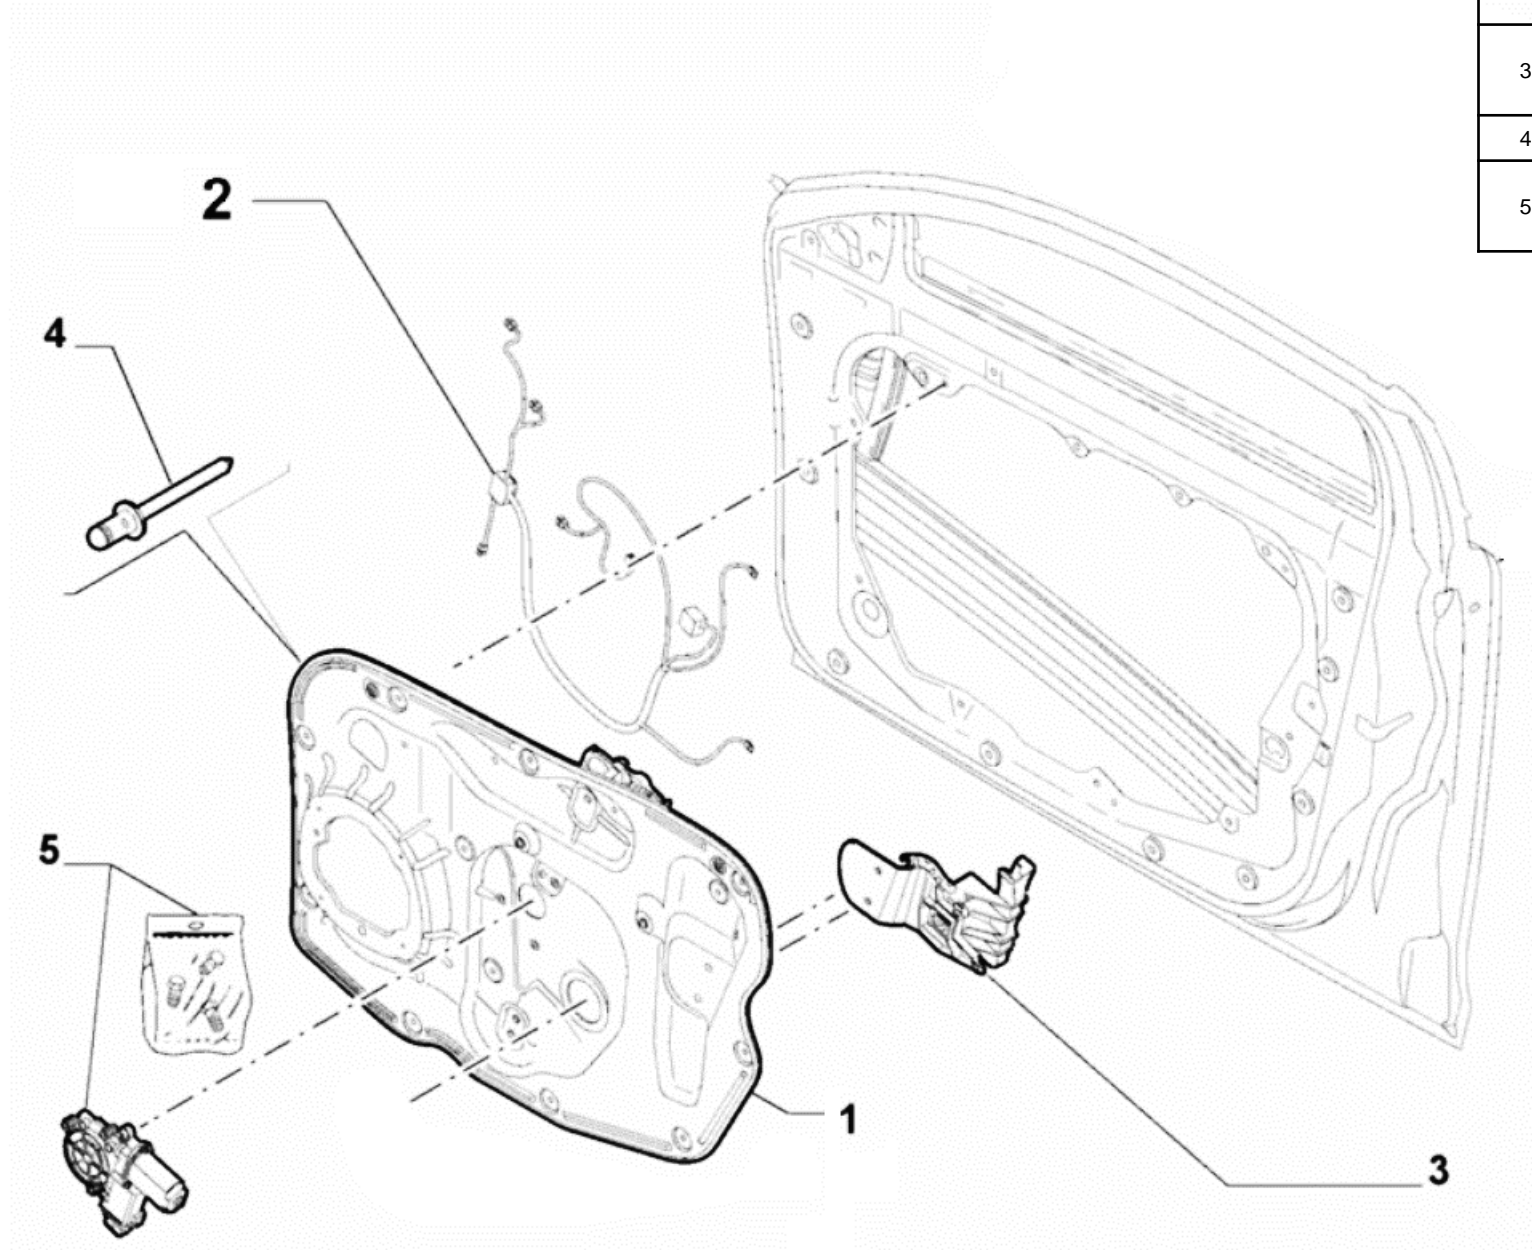


RF01-03-00718 FRONT RH DOOR  
 RF01-03-00719 FRONT LH DOOR

Pos	Part no.	Description	Q.ty
1	71775802	FRONT RH LOCK	1
	71775803	FRONT LH LOCK	1
2	50542569	DOOR HOOK ON CHASSIS	1+1
3	51805249	DOOR HOOK SCREW	2+2
4	46401657	DOOR LOCK SCREW	3+3
5	156106674	FRONT OUTSIDE HANDLE	1+1
6	71773830	FRONT RH HANDLE MECHANISM	1
	71773831	FRONT LH HANDLE MECHANISM	1
7	50511607	FRONT OUTSIDE RH WINDOW SEAL	1
	50511608	FRONT OUTSIDE LH WINDOW SEAL	1
8	50511611	OUTSIDE FRONT RH WINDOW SCRAPER	1
	50511613	OUTSIDE FRONT LH WINDOW SCRAPER	1
9	50509893	FRONT INNER WINDOW SEAL	1,5+1,5

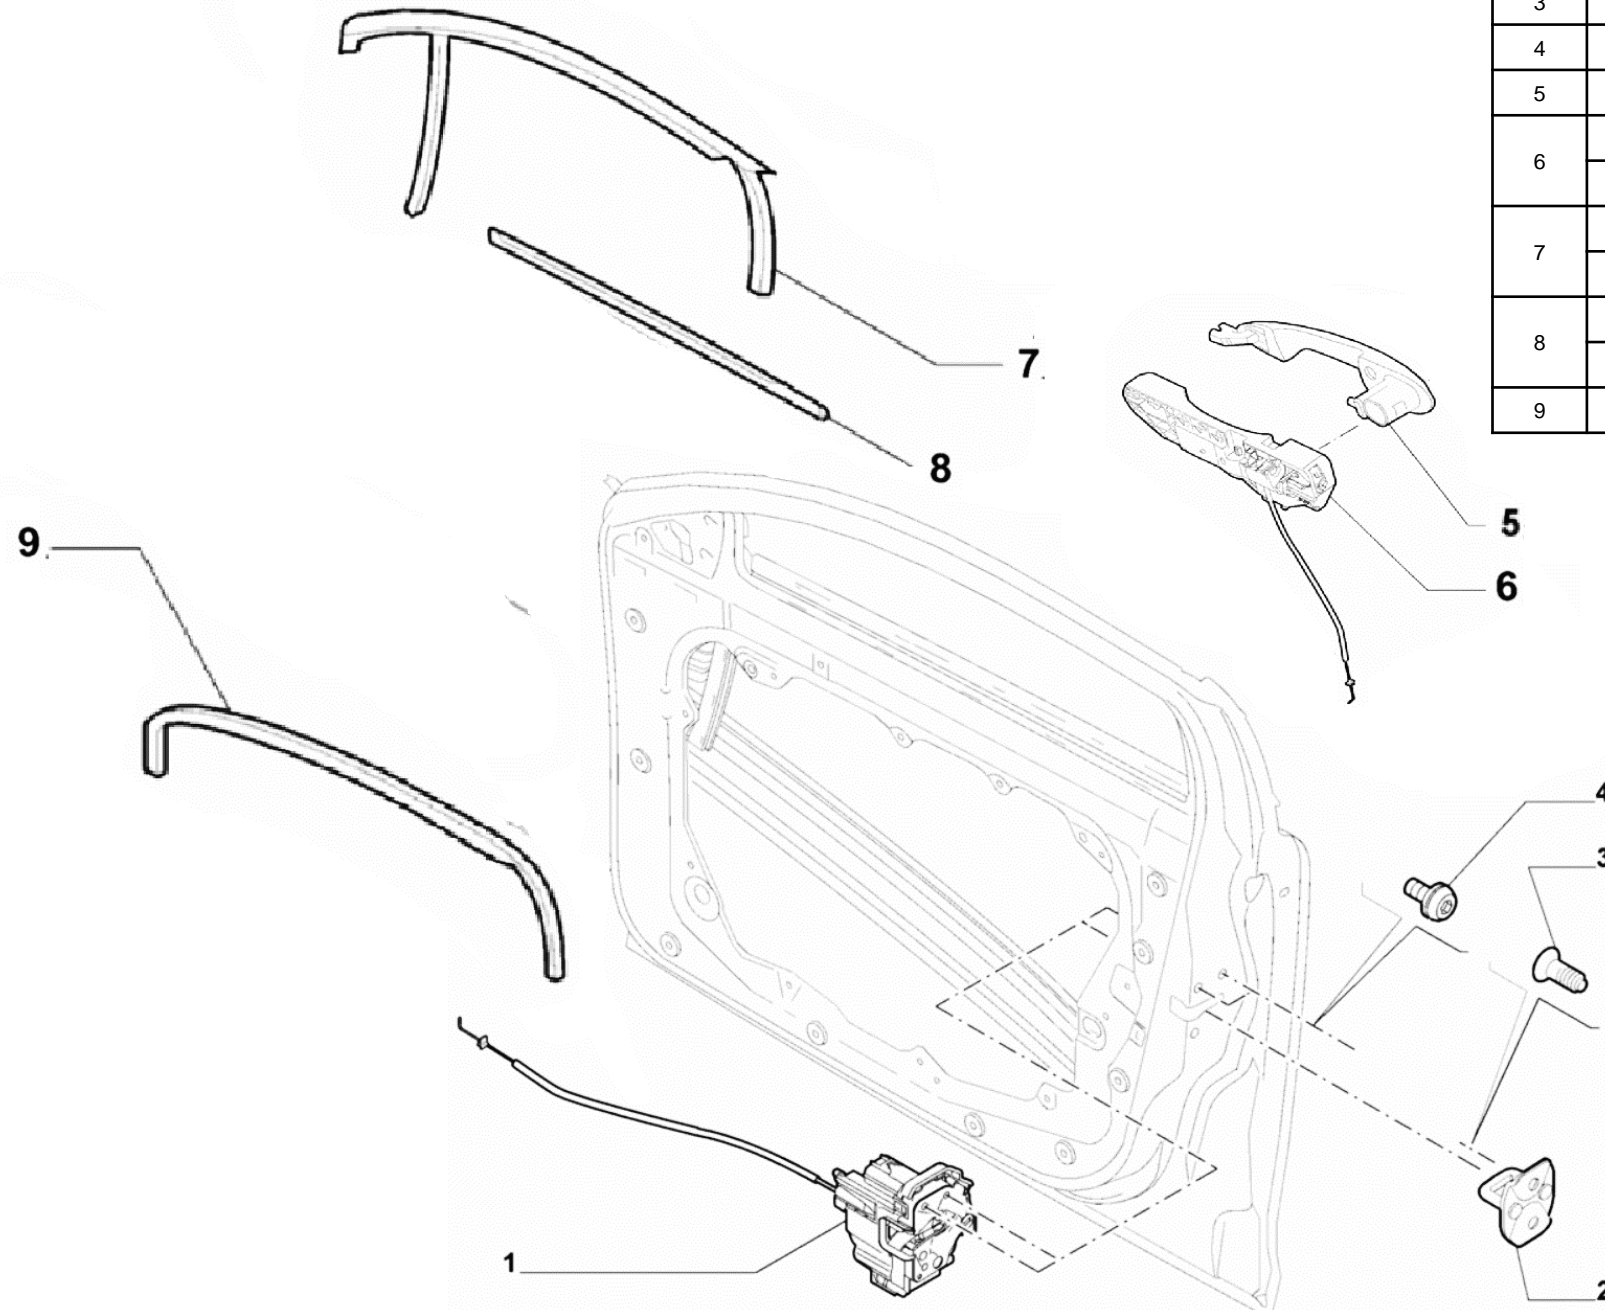

RF01-03-00718 FRONT RH DOOR  
 RF01-03-00719 FRONT LH DOOR


Pos	Part no.	Description	Q.ty
1	156119785	FRONT RH MIRROR	1
	156119790	FRONT LH MIRROR	1
2	156106679	RH MIRROR COVER	1
	156106680	LH MIRROR COVER	1
3	15697804	MIRROR SCREW	3+3
4	82488491	OUTSIDE EMBELLISHMENT LOCK	2+2
5	156091989	INNER FRONT RH EMBELLISHMENT	1
	156091990	INNER FRONT LH EMBELLISHMENT	1
6	15689401	OUTSIDE EMBELLISHMENT SCREW	2+2
7	50509845	FRONT OUTSIDE RH EMBELLISHMENT	1
	50509846	FRONT OUTSIDE LH EMBELLISHMENT	1
8	50521531	FRONT DOOR SEAL	1+1

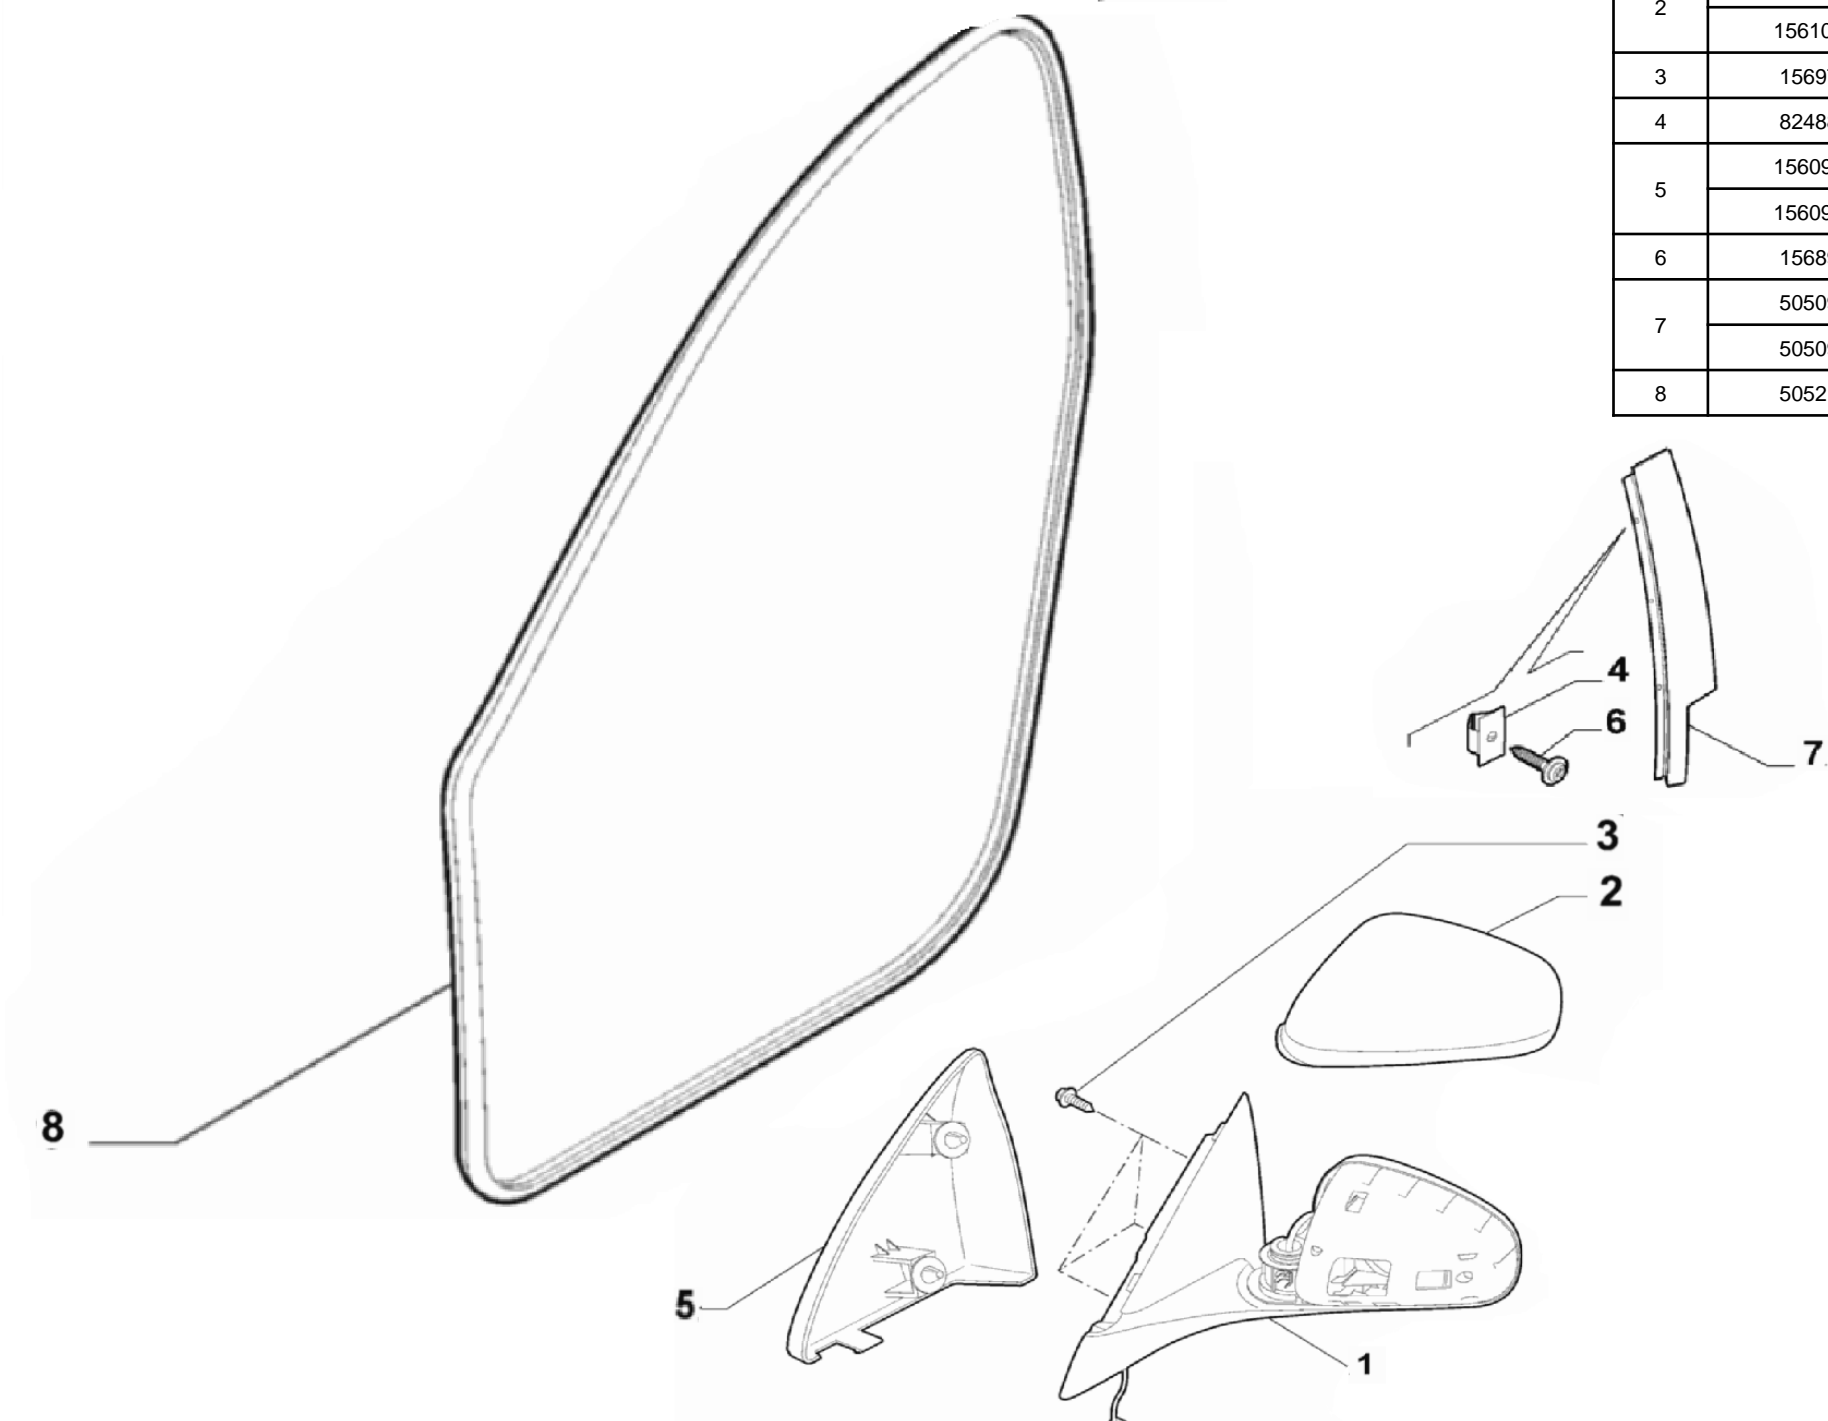




RF01-03-00918 REAR RH DOOR  
 RF01-03-00919 REAR LH DOOR

Pos	Part no.	Description	Q.ty
1	50521442	REAR DOOR ROD	1+1
2	50509298	REAR RH DOOR	1
	50509299	REAR LH DOOR	1
3	12578118	REAR DOOR ROD NUT	2+2
4	51876148	REAR DOOR ROD SCREW	1+1
5	50527243	REAR RH WINDOW	1
	50527245	REAR LH WINDOW	1
6	18754324	JOINT SCREW M10	2+2
7	18754324	JOINT SCREW M10	4+4
8	50525345	REAR UPPER JOINT	1+1
9	50525347	REAR LOWER JOINT	1+1

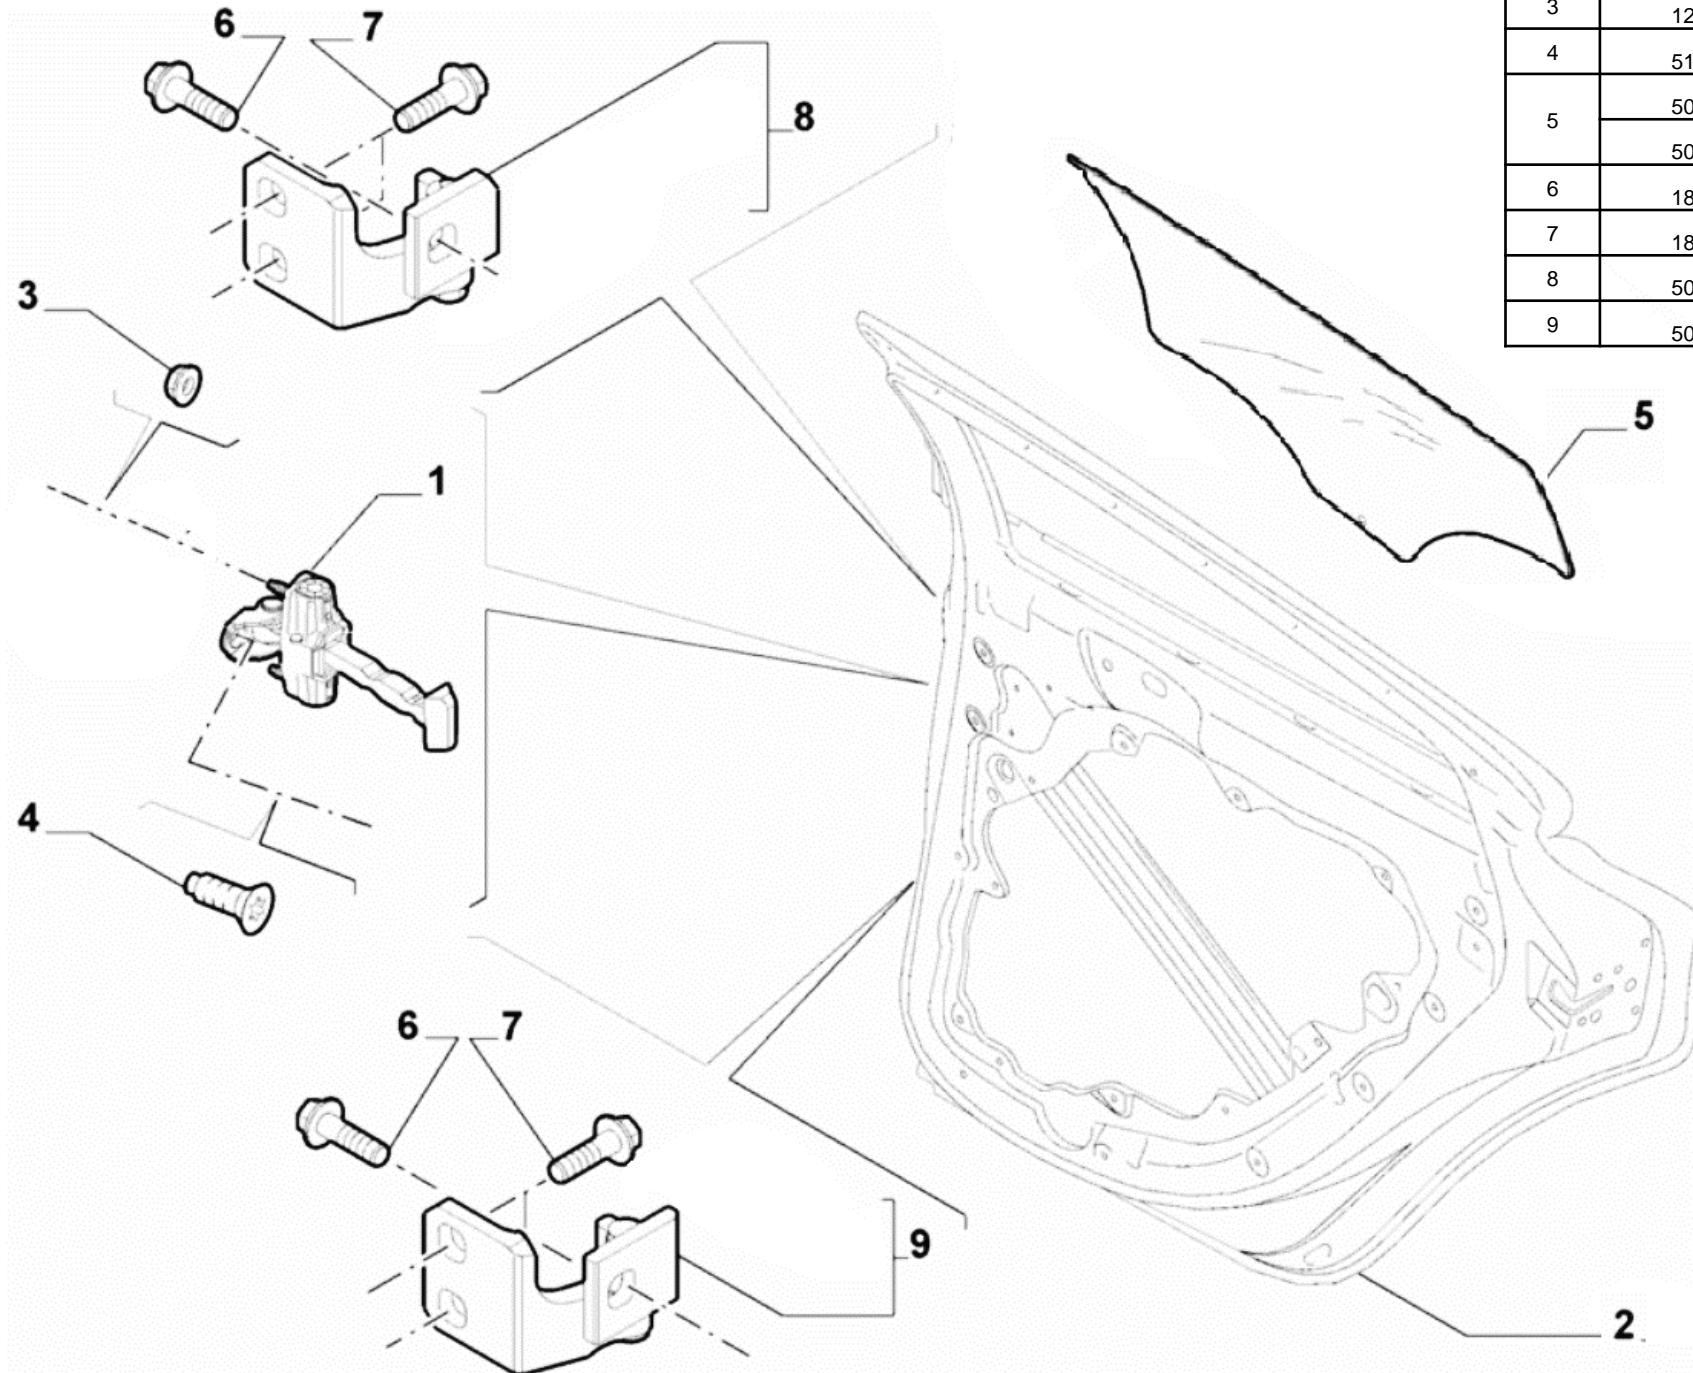


RF01-03-00918 REAR RH DOOR  
 RF01-03-00919 REAR LH DOOR

Pos	Part no.	Description	Q.ty
1	71775808	REAR LH LOCK	1
	71775809	REAR RH LOCK	1
2	50542569	REAR DOOR ON CHASSIS HOOK	1+1
3	156098844	REAR OUTSIDE RH HANDLE	1
	156098845	REAR OUTSIDE LH HANDLE	1
4	50521399	DOOR PANEL RIVET	2+2
5	51805249	HOOK SCREW	2+2
6	46401657	LOCK SCREW	6+6

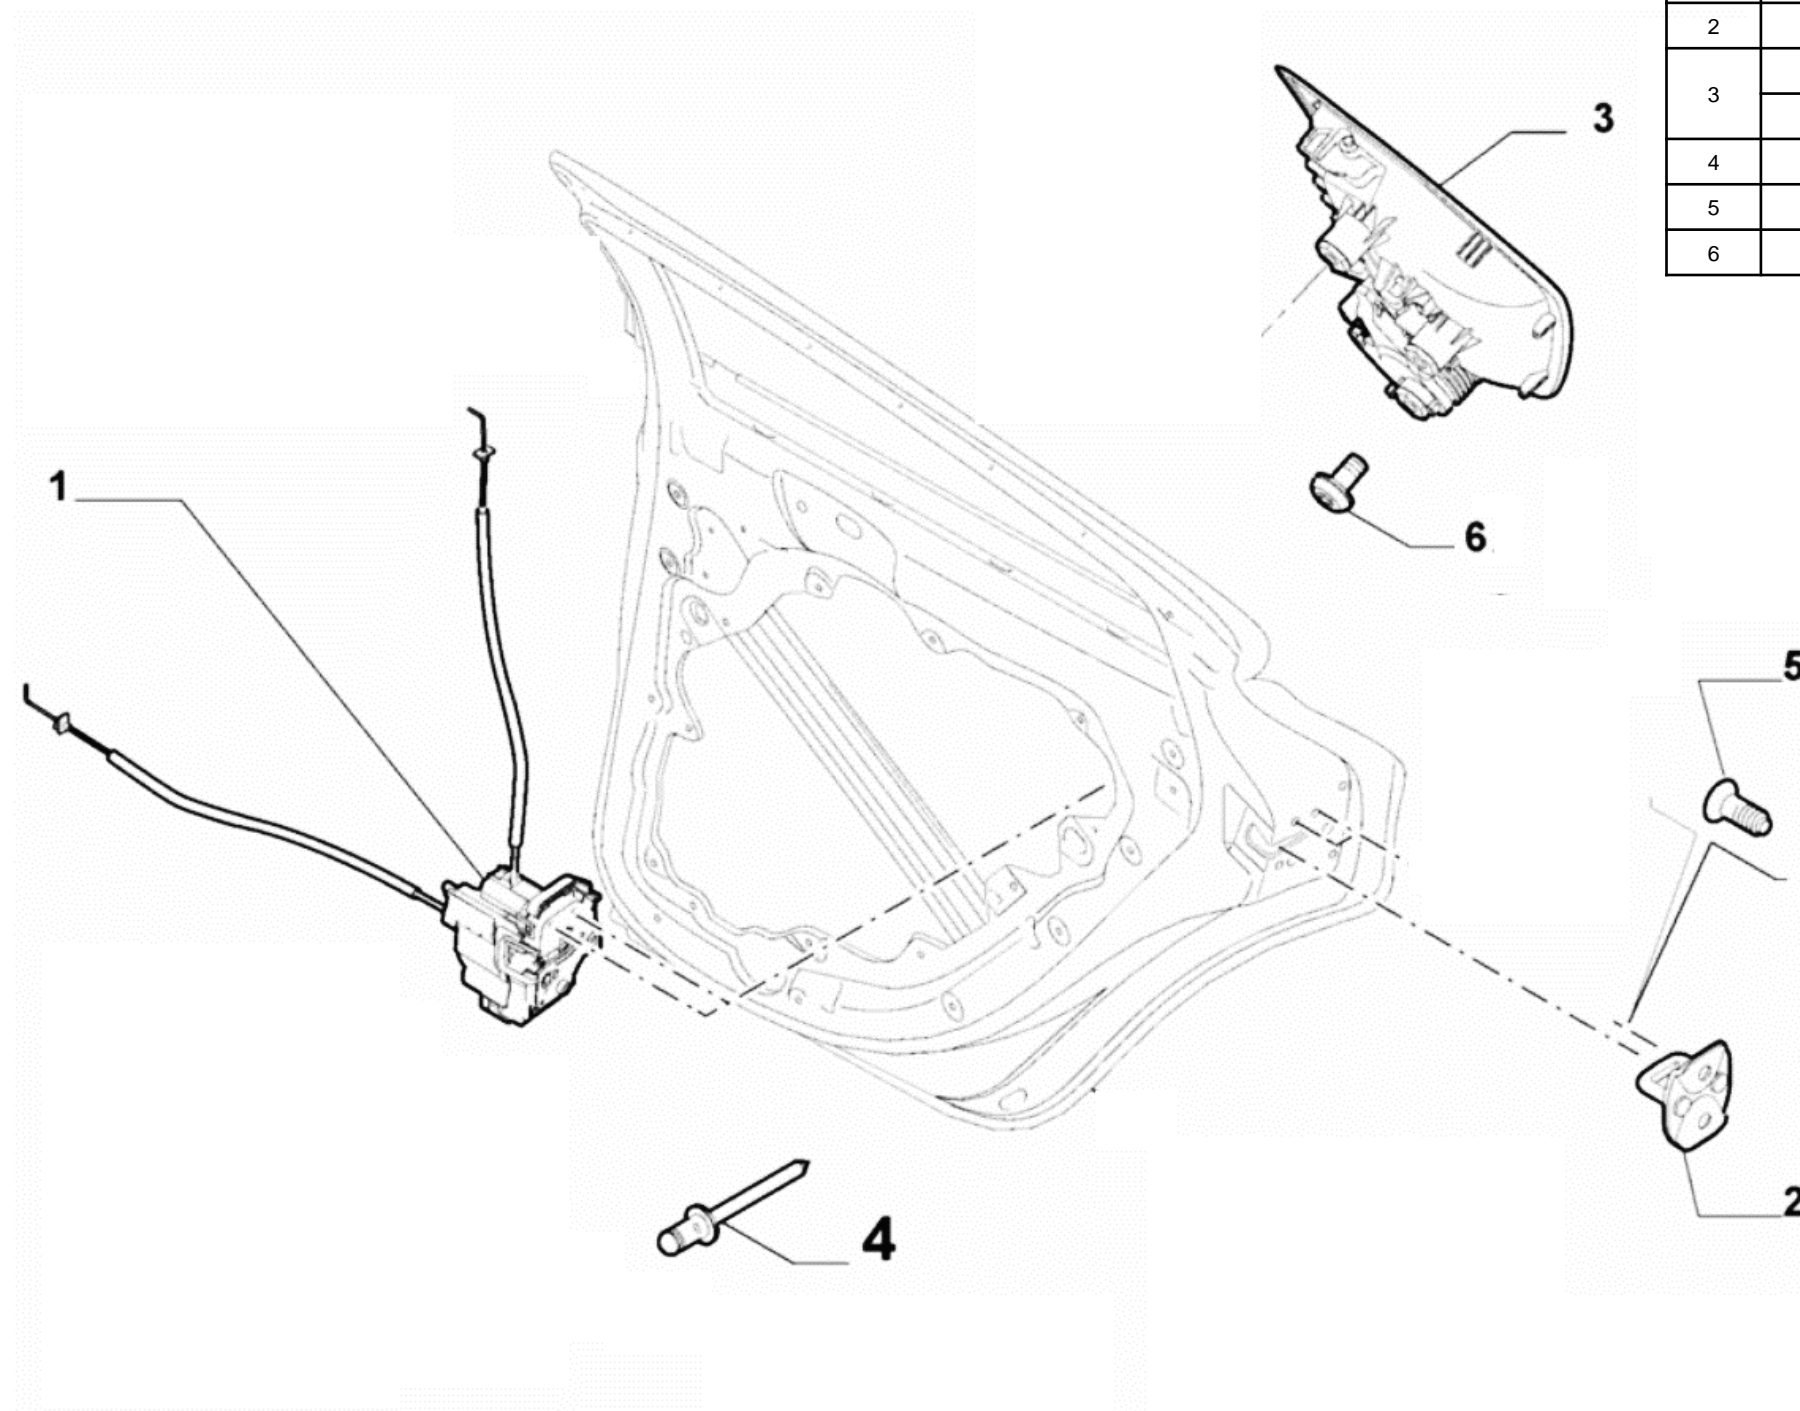


RF01-03-00918 REAR RH DOOR  
 RF01-03-00919 REAR LH DOOR

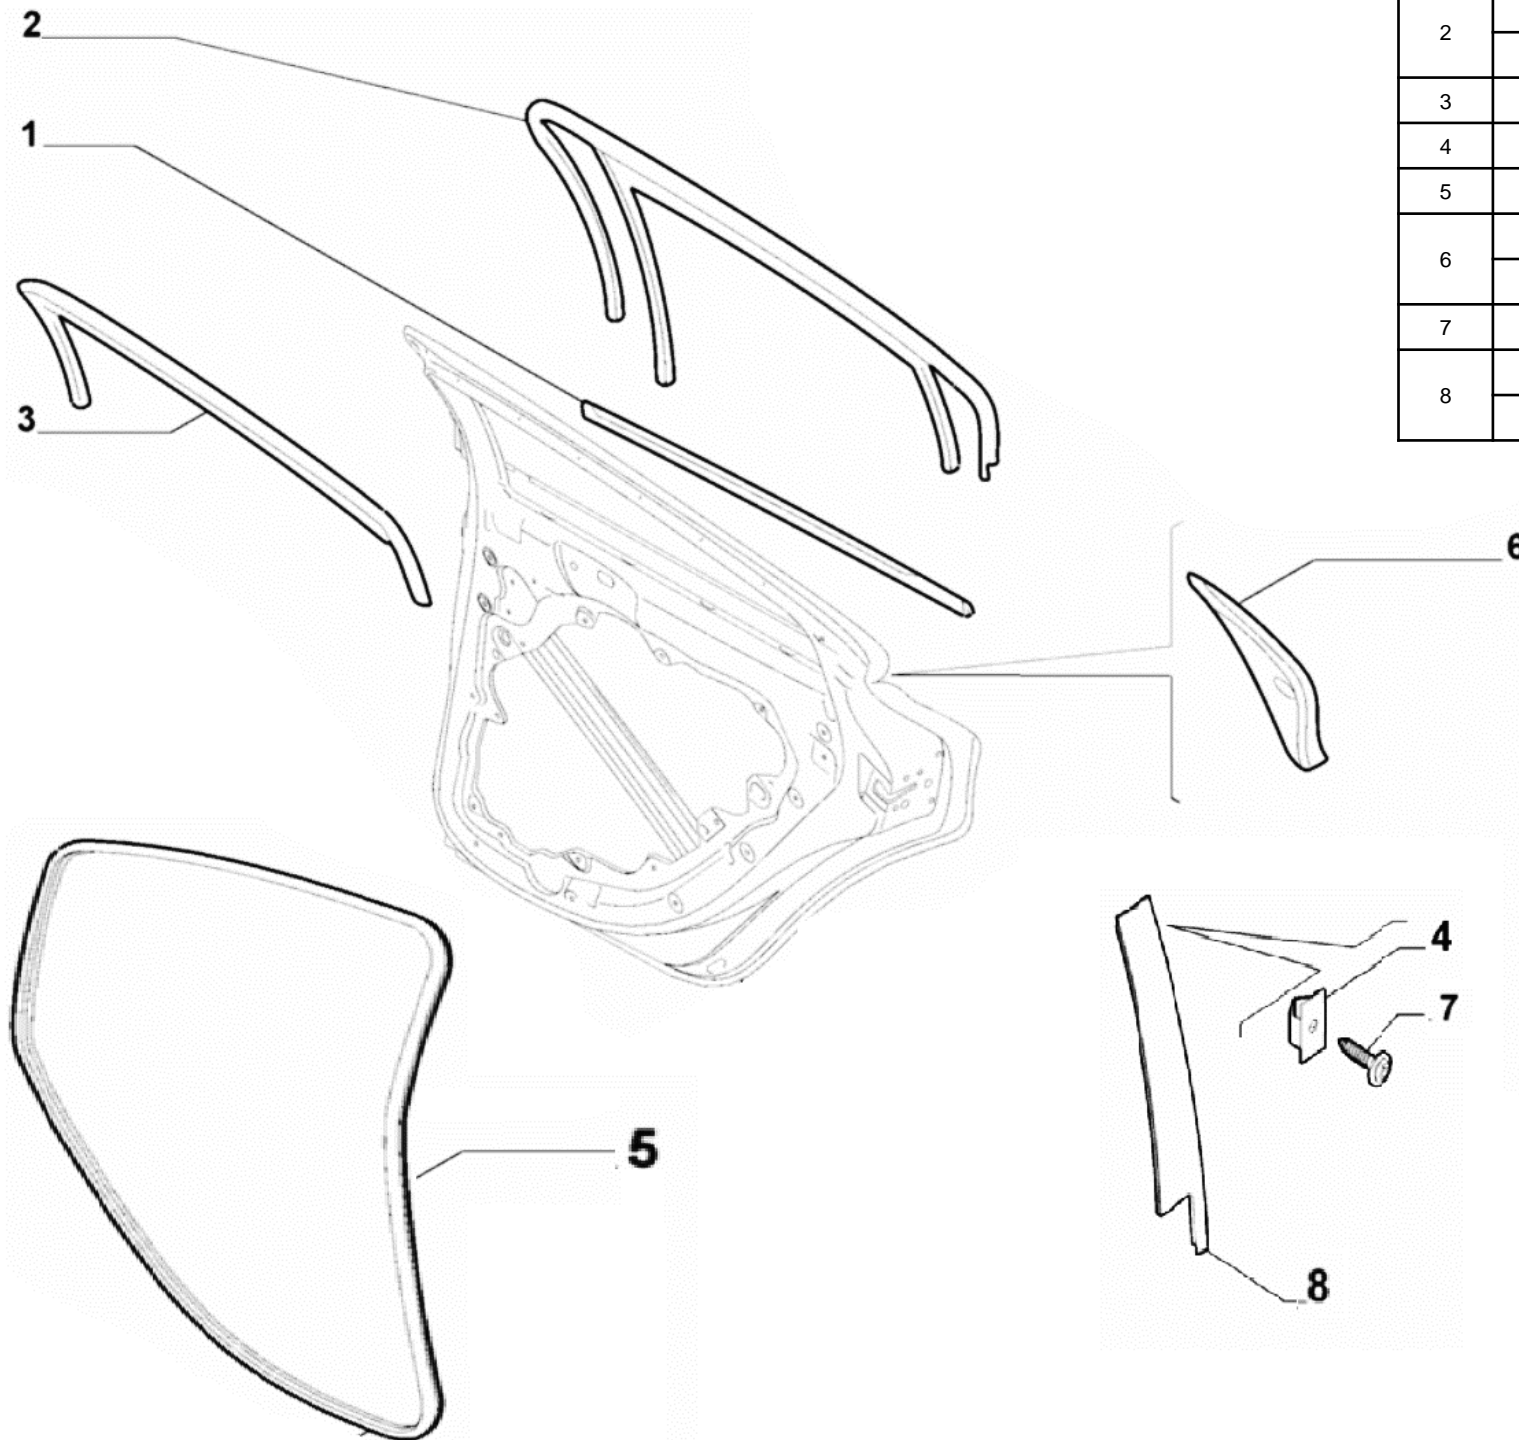


Pos	Part no.	Description	Q.ty
1	50521070	OUTSIDE REAR RH WINDOW SCRAPER	1
	50521072	OUTSIDE REAR LH WINDOW SCRAPER	1
2	50511609	REAR OUTSIDE RH WINDOW SEAL	1
	50511610	REAR OUTSIDE LH WINDOW SEAL	1
3	50509895	REAR INNER WINDOW SEAL	2+2
4	82488491	REAR OUTSIDE EMBELLISHMENT LOCK	2+2
5	50521532	REAR DOOR SEAL	1+1
6	50518941	REAR DOOR INNER RHEMBELLISHMENT	1
	50518942	REAR DOOR INNER LH EMBELLISHMENT	1
7	15689401	OUTSIDE EMBELLISHMENT SCREW	2+2
8	50509852	REAR DOOR OUTSIDE RH EMBELLISHMENT	1
	50509853	REAR DOOR OUTSIDE LH EMBELLISHMENT	1

RF01-04-00491 FRONT SUSPENSION COMPLETE

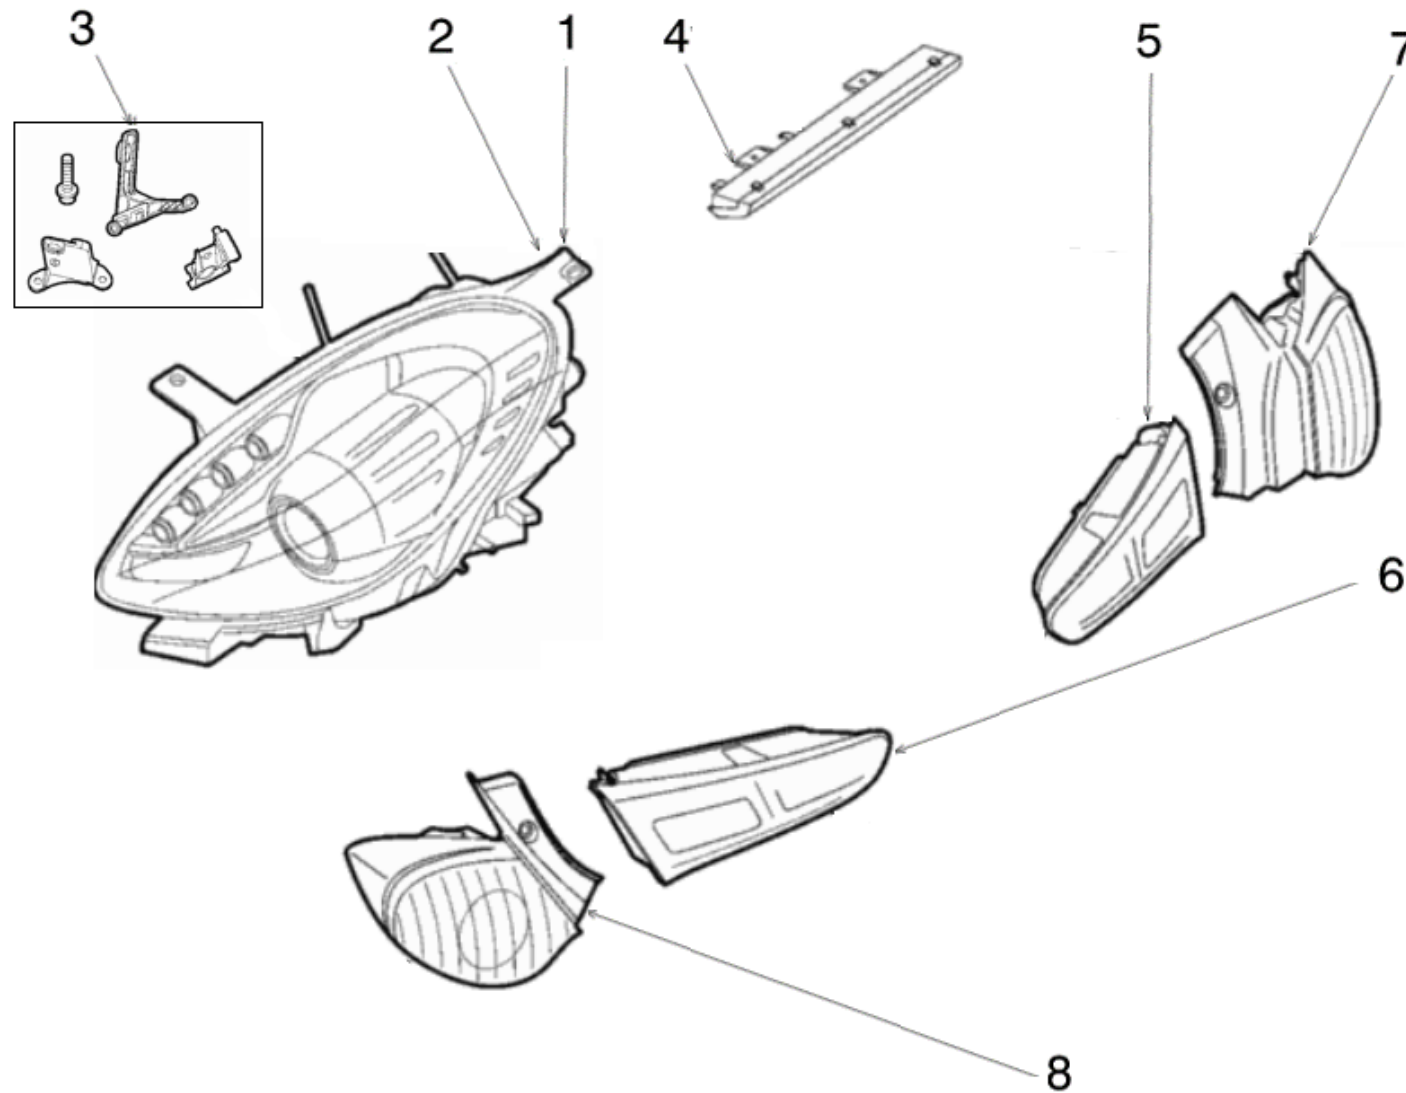


Pos	Part no.	Description	Q.ty
1	50546573	FRONT LH LIGHT	1
2	50546567	FRONT RH LIGHT	1
3	50520261	FRONT LH LIGHT KIT	1
	50520260	FRONT RH LIGHT KIT	1
4	51925086	RAIN LIGHT	1
5	50531132	REAR RH BONNET LIGHT	1
6	50531133	REAR LH BONNET LIGHT	1
7	50513612	REAR RH LIGHT	1
8	50513613	REAR LH LIGHT	1

**RF01-04-00491 FRONT SUSPENSION COMPLETE**

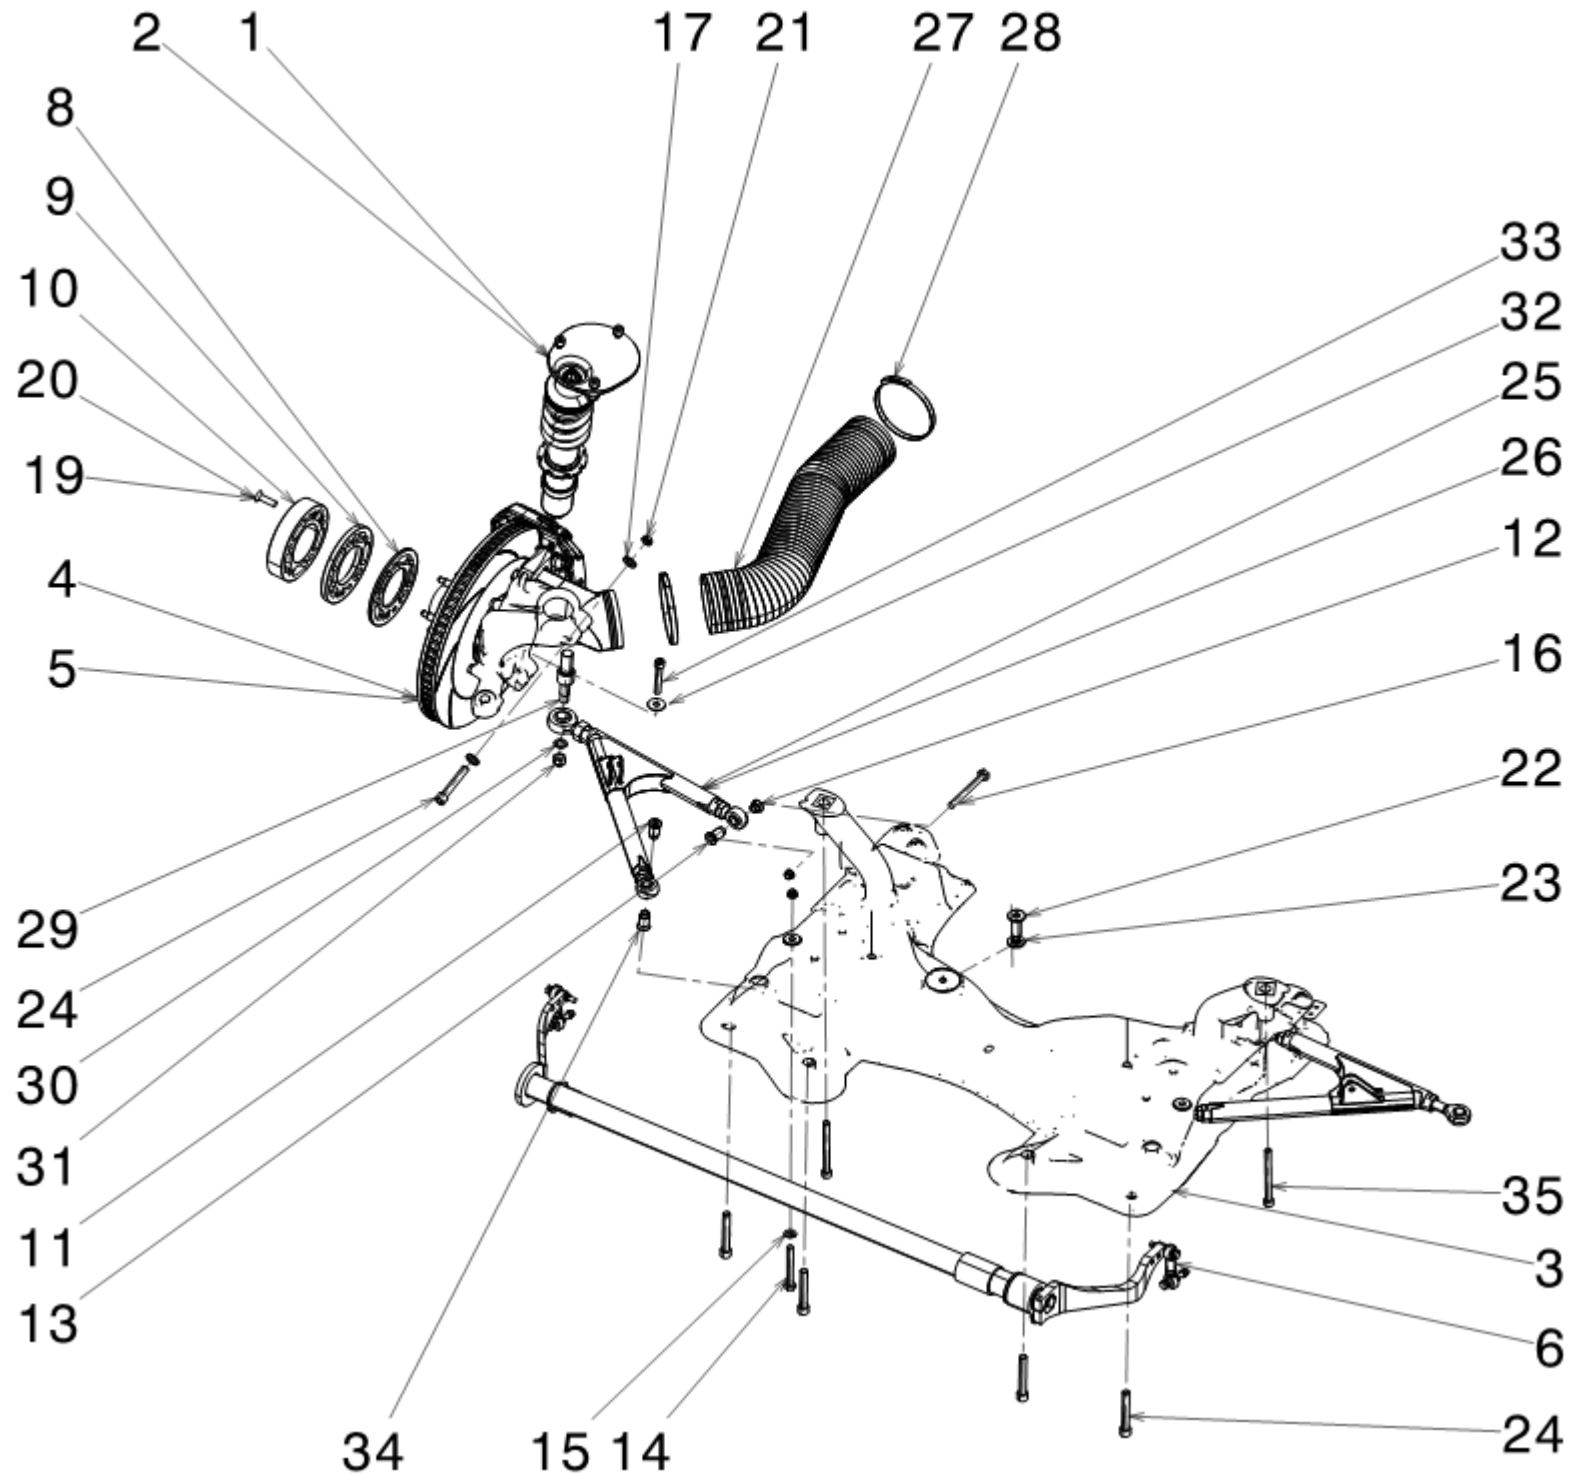


Pos	Part no.	Description	Q.ty
1	RF01-04-00489	FRONT DAMPER COMPLETE LH	1
2	RF01-04-00488	FRONT DAMPER COMPLETE RH	1
3	RF02-04-00723	FRONT SUBFRAME COMPLETE	1
4	RF01-04-00495	UPRIGHT FRONT COMPLETE LH	1
5	RF01-04-00494	UPRIGHT FRONT COMPLETE RH	1
6	RF01-06-00900	FRONT ARB ASSY	1
7	RF01-16-00663	SPEED SENSOR	1
8	RF01-20-00801	WHEEL SPACER 5MM (ALT.)	2
9	RF01-20-00800	WHEEL SPACER 10MM (ALT.)	2
10	RF01-20-00803	WHEEL SPACER 20MM (ALT.)	2
11	RF01-04-01062	FRONT WISHBONE LONG BUSHING FRONT	2
12	RF01-04-01063	FRONT WISHBONE SHORT BUSHING FRONT	4
13	ASTORIM10	NUT ASTORI M10X1.25	4
14		HEX SOCKET SCREW M12x1.75 L80	2
15		SPRING WASHER 10x20	4
16		HEX SOCKET SCREW M12x1.75 L100	2
17		WASHER 12X24	4
18	RF01-16-00663	SPEED SENSOR	1
19		COUNTERSUNK HEAD SCREW M10x1.25 L30	2
20		COUNTERSUNK HEAD SCREW M10x1.25 L40	2
21	ASTORIM12	NUT ASTORI M12x1.50	2
22	RF01-04-00963	TIE ANTITORQUE UPPER BUSHING	1
23	RF01-04-00962	TIE ANTITORQUE LOWER BUSHING	1
24		HEX SOCKET SCREW M12X1.5 L80	6
25	RF01-04-01035	FRONT LEFT WISHBONE ASSY	1
26	RF01-04-01034	FRONT RIGHT WISHBONE ASSY	1
27	SFD-110-1	COOLING FRONT BRAKE PIPE	2
28	TY275MX	TY RAP TY275MX	4
29	RF02-04-01066	FRONT WISHBONE FIXING PIN L20	2
30		WASHER 14	2
31		SELF BLOCKING NUT M14X1.5	2
32		WASHER 10	4
33		HEX SOCKET SCREW M10 L60	2
34	RF01-04-01061	FRONT WISHBONE REAR BUSHING	2
35		HEX SOCKET SCREW M10X1.25 L100	2

RF01-04-01035 FRONT LEFT WISHBONE ASSY  
 RF01-04-01034 FRONT RIGHT WISHBONE ASSY

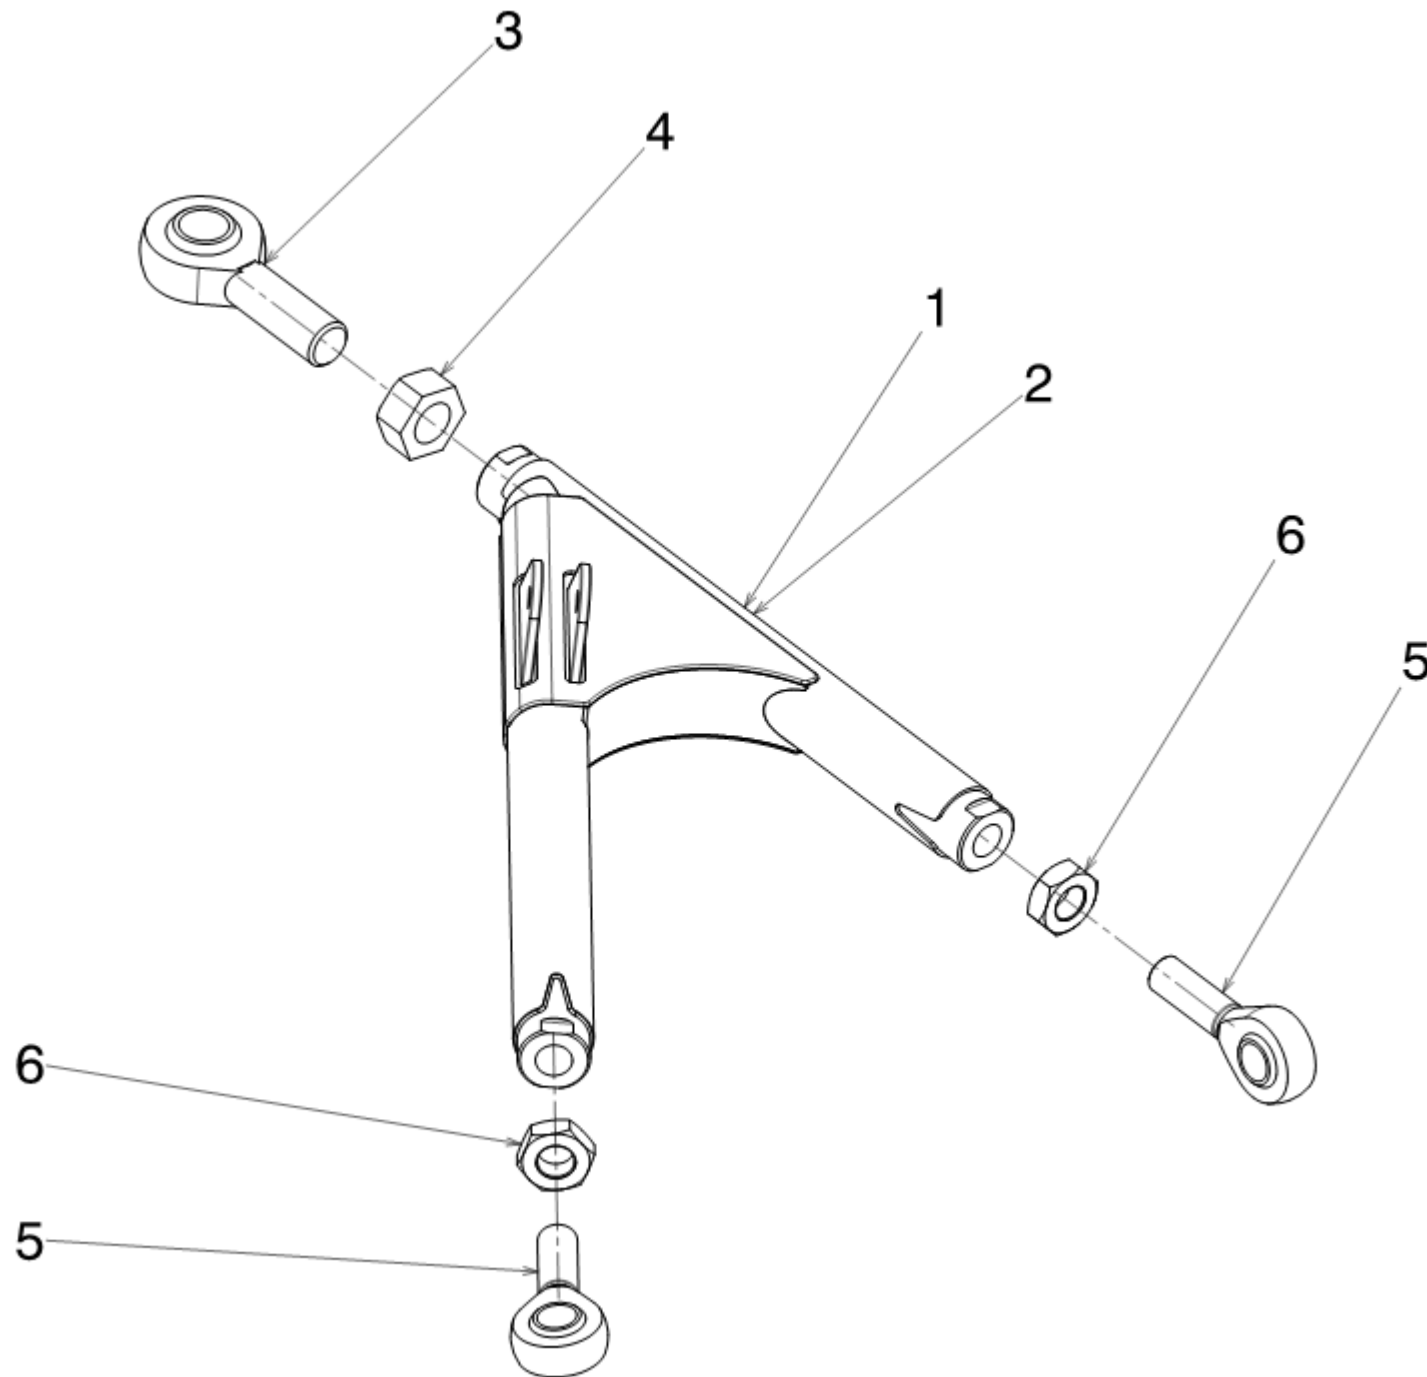


Pos	Part no.	Description	Q.ty
1	RF01-04-01037	FRONT LEFT WISHBONE	1
2	RF01-04-01036	FRONT RIGHT WISHBONE	1
3	1E1264024B	ROAD END M22X1,5	2
4	<b>RF01-04-01069</b>	NUT M22 X 1,5	2
5	ART10E R NMB	ROAD END ART10E (R) NMB	4
6	RF01-04-01067	NUT 5/8 UNF	4

RF01-04-00495 UPRIGHT FRONT COMPLETE LH  
RF01-04-00494 UPRIGHT FRONT COMPLETE RH

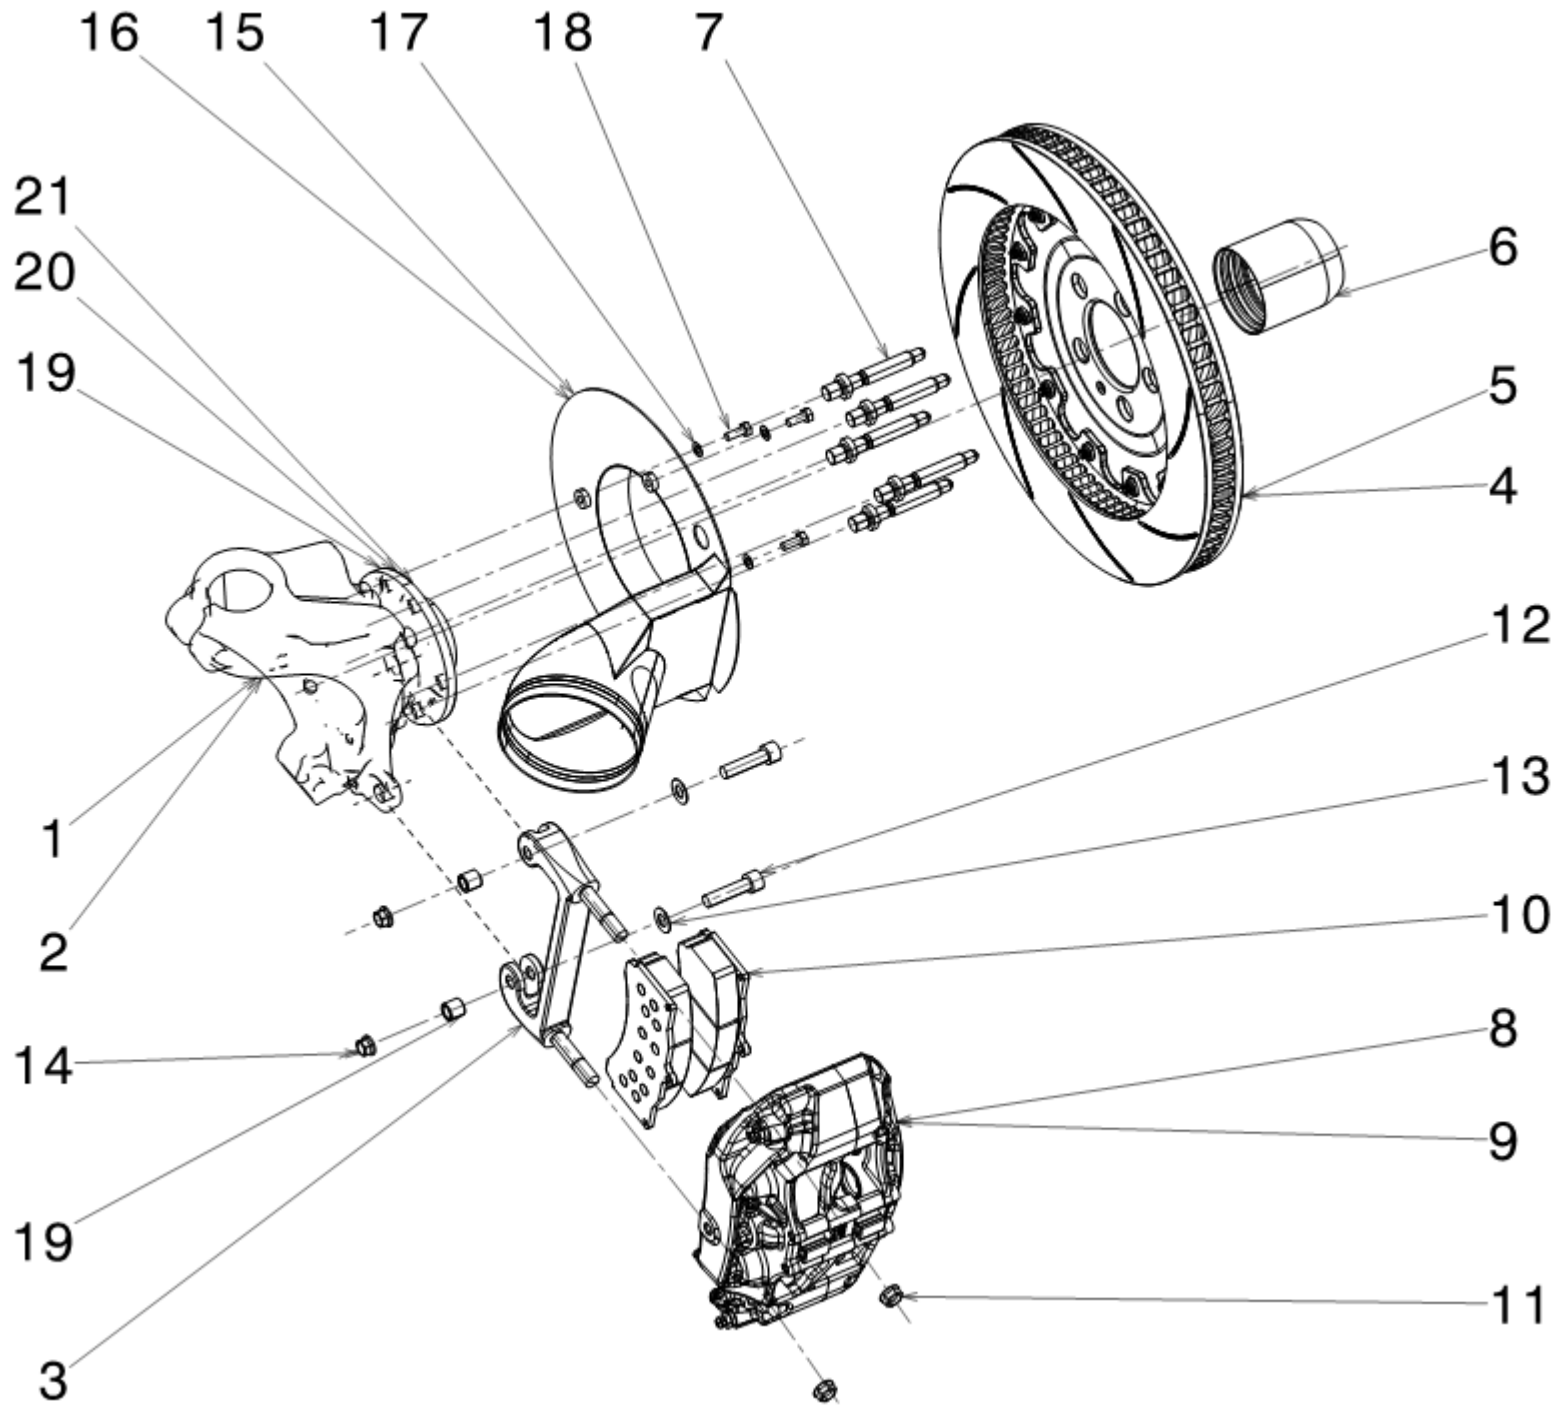

Pos	Part no.	Description	Q.ty
1	RF01-04-00794	FRONT UPRIGHT LH	1
2	RF01-04-00795	FRONT UPRIGHT RH	1
3	RF01-04-00497	CALIPER SUPPORT COMPLETE	1+1
4	RF01-08-00792	FRONT BRAKE DISC ASSY LH	1
5	RF01-08-00793	FRONT BRAKE DISC ASSY RH	1
6	RF01-04-00539	WHEEL CENTERING BUSHING	1+1
7	RF02-20-00547	WHEEL STUD	5+5
8	CP9668-3S7L	FRONT CALIPER LH	1
9	CP9668-2S7L	FRONT CALIPER RH	1
10	RCP050ME202	PADS SET	1
11	-	NUT ASTORI M12	2+2
12	-	HEX SOCKET SCREW M10X1.5 L45	2+2
13	-	SPRING WASHER 10X20	2+2
14	-	NUT ASTORI M10	2+2
15	RF02-08-00821	CALIPER DUCT COMPLETE LH	1
16	RF02-08-00822	CALIPER DUCT COMPLETE RH	1
17	-	SPRING WASHER 6X12	3+3
18	-	HEX SCREW M6X1 L16	3+3
19	51773149	FRONT WHEEL HUB	1+1
20	51813925	FRONT WHEEL BEARING	1+1
21	50523730	FRONT WHEEL BEARING SCREW	4+4

RF01-04-00497 CALIPER SUPPORT COMPLETE

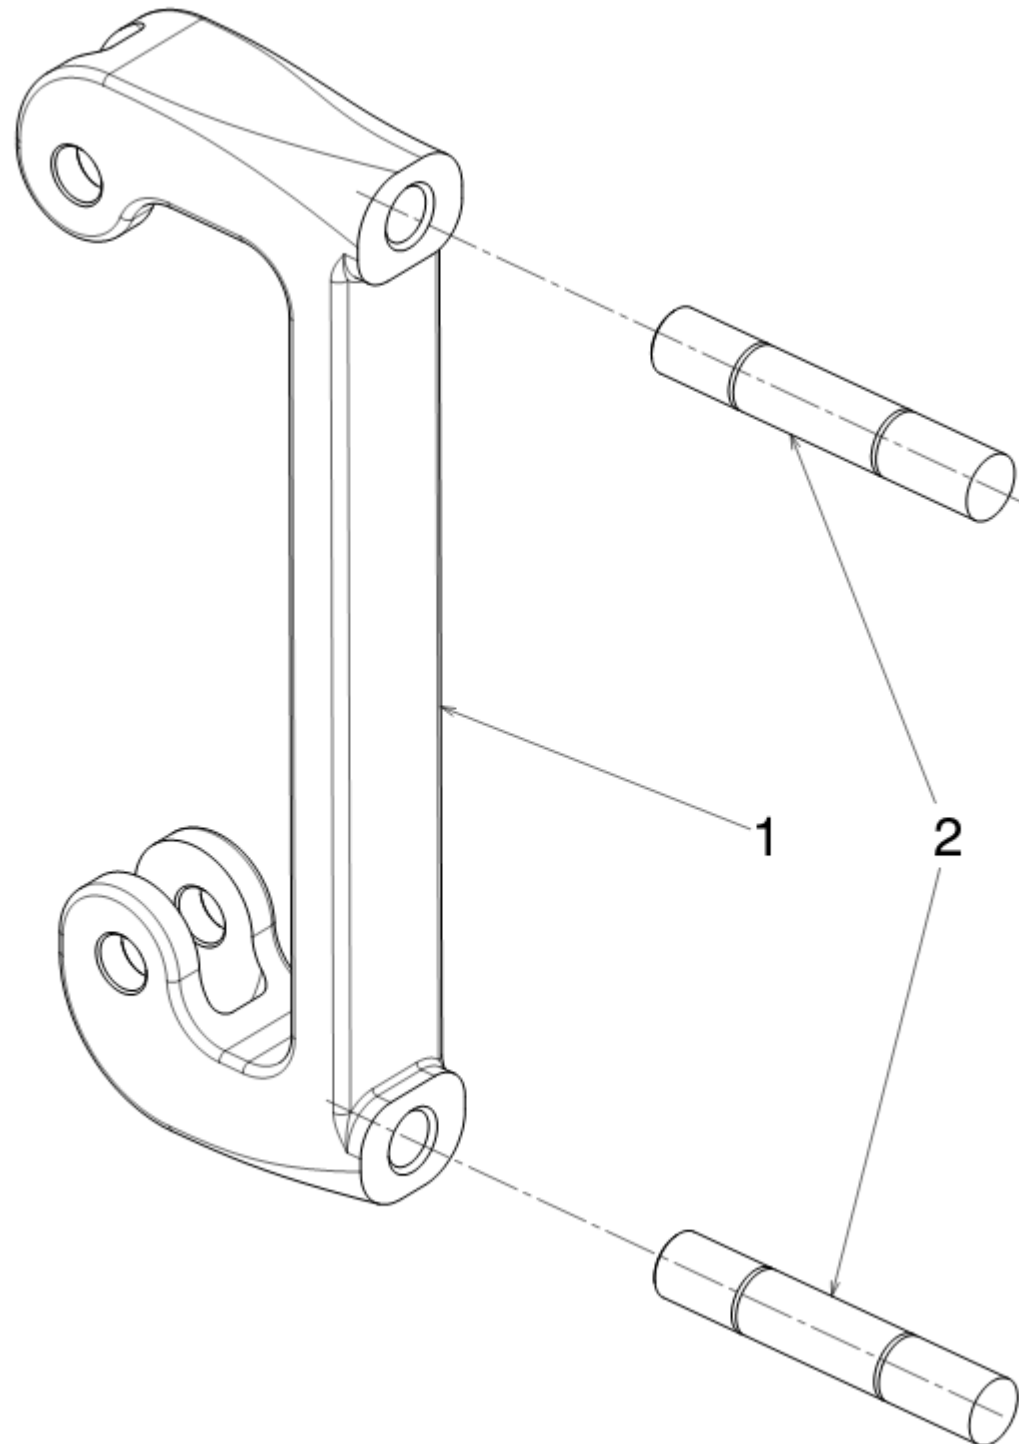


Pos	Part no.	Description	Q.ty
1	RF01-04-00543	SPACER FRONT BRAKE CALIPER	1
2	RF01-08-10548	FIXING STUD FRONT BRAKE CALIPER	2




RF01-08-00792 FRONT BRAKE DISC ASSY LH  
 RF01-08-00793 FRONT BRAKE DISC ASSY RH

Pos	Part no.	Description	Q.ty
1	RF02-04-00511	FRONT BRAKE DISC_D378mm x 36mm LH	1
2	RF02-04-00510	FRONT BRAKE DISC D378mm x 36mm RH	1
3	RF01-04-00501	BELL DISC	1+1
4	CP2494-589K12	KIT BOBBIN J	1+1
5	CP2649-1	THERMAL PAINTS KIT	1

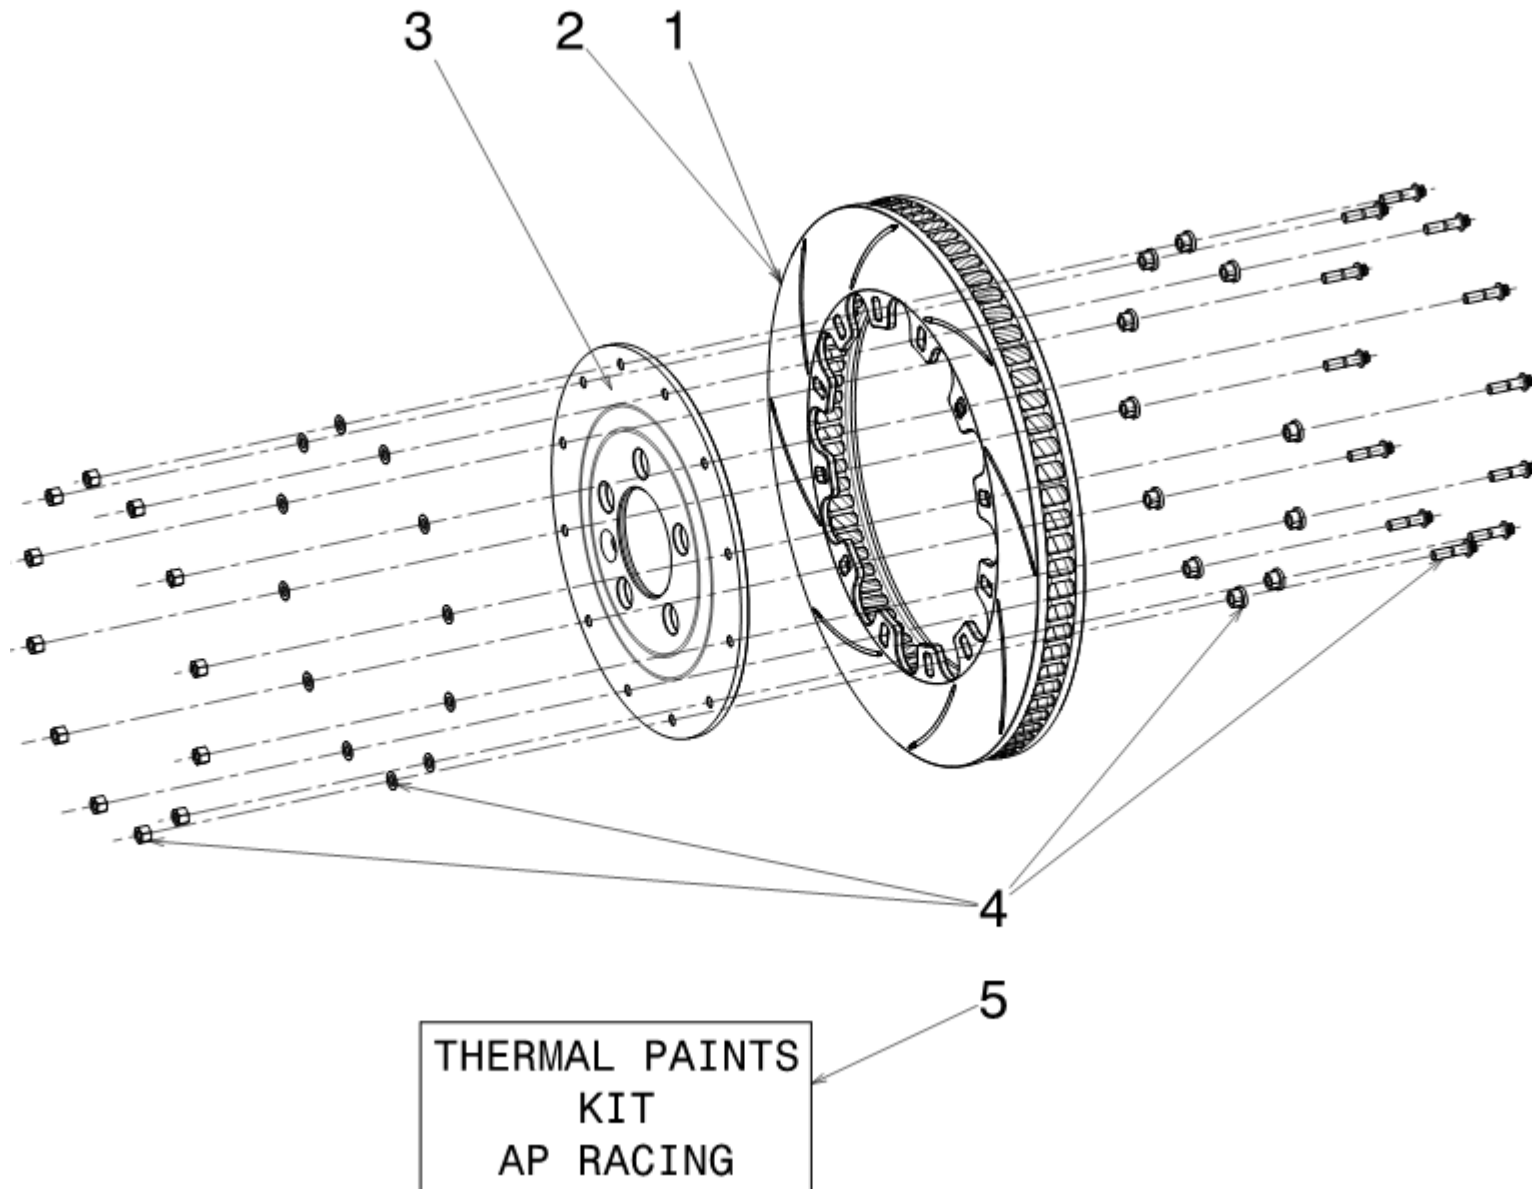


RF01-04-00537 TOP MOUNT ASSY LH  
 RF01-04-00536 TOP MOUNT ASSY RH

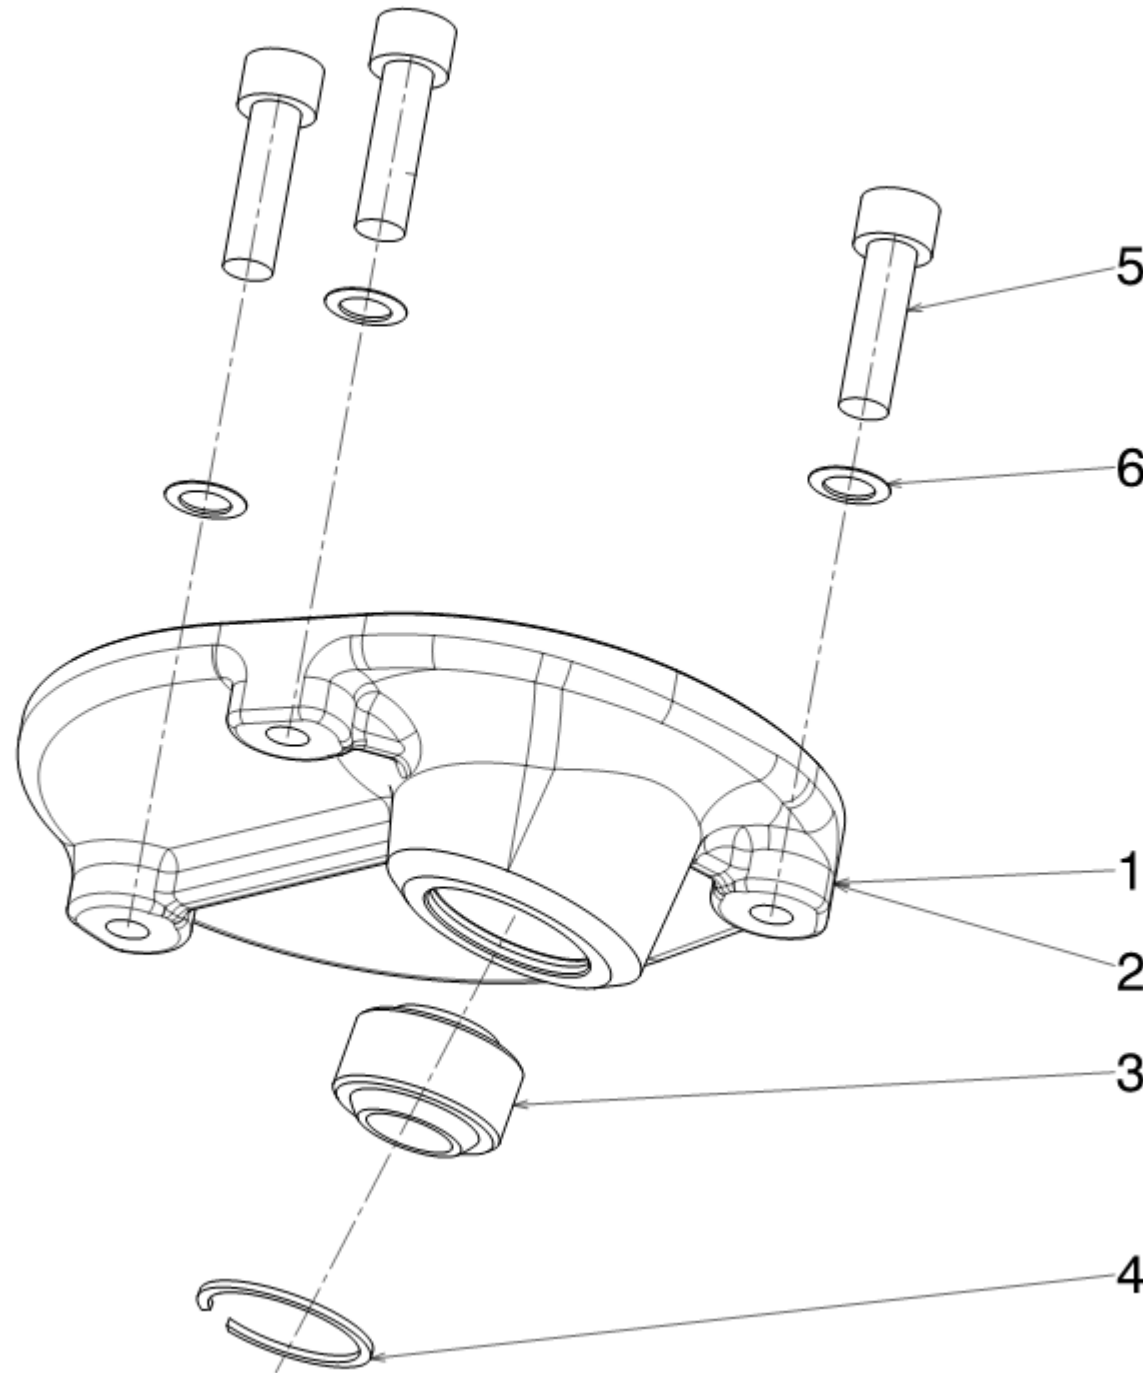


Pos	Part no.	Description	Q.ty
1	RF01-04-10535	TOP MOUNT HIGH CASTER LH	1
2	RF01-04-10534	TOP MOUNT HIGH CASTER RH	1
3	G18D	SPHERICAL BEARING	1+1
4	JV 35	CIRCLIP 35	1+1
5	-	HEX SOCKET SCREW M10X1.25 L25	3+3
6	-	SPRING WASHER 10X16	3+3

RF01-04-00489 FRONT DAMPER COMPLETE LH  
 RF01-04-00488 FRONT DAMPER COMPLETE RH

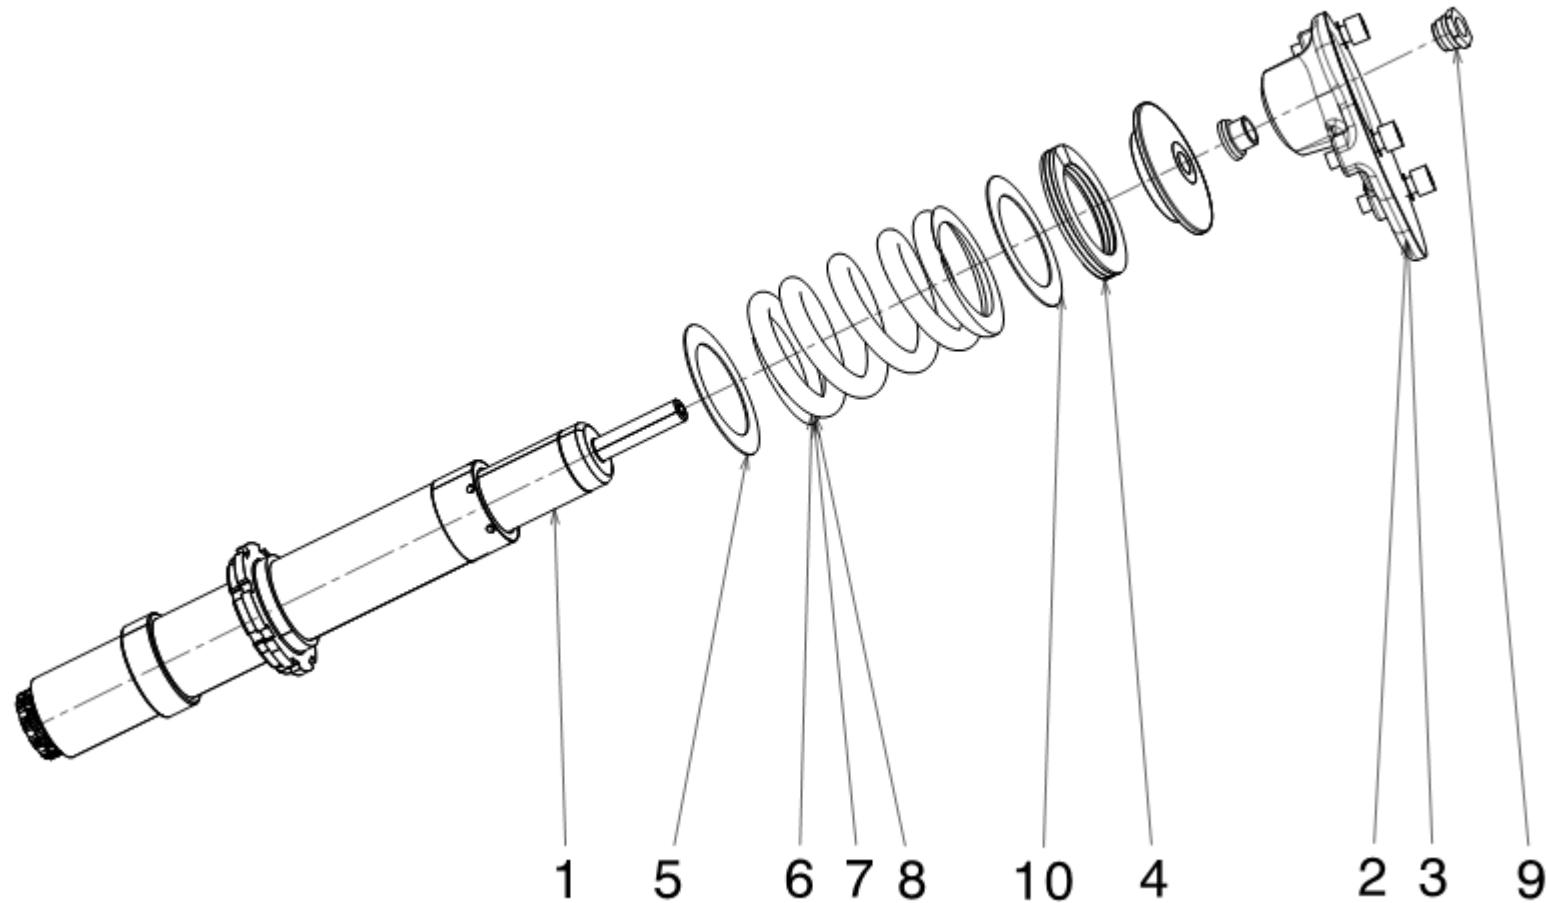


Pos	Part no.	Description	Q.ty
1	RF01-04-00803	FRONT DAMPER	2
2	RF01-04-00537	TOP MOUNT ASSY LH	1
3	RF01-04-00536	TOP MOUNT ASSY RH	1
4	40/60/30	HELPER 40/60/30	2
5	AS 6085	NEEDLE ROLLER THRUST BEARING WASHER	1
6	ERS-H-170-60-90	SPRING (ALT.)	2
7	ERS-H-170-60-100	SPRING (ALT.)	2
8	ERS-H-170-60-110	SPRING (ALT.)	2
9	RF01-04-00965	FRONT DAMPER NUT	1
10	ERSZ1160B	NEEDLE ROLLER THRUST BEARING	1

**RF01-06-00900 FRONT ARB ASSY**

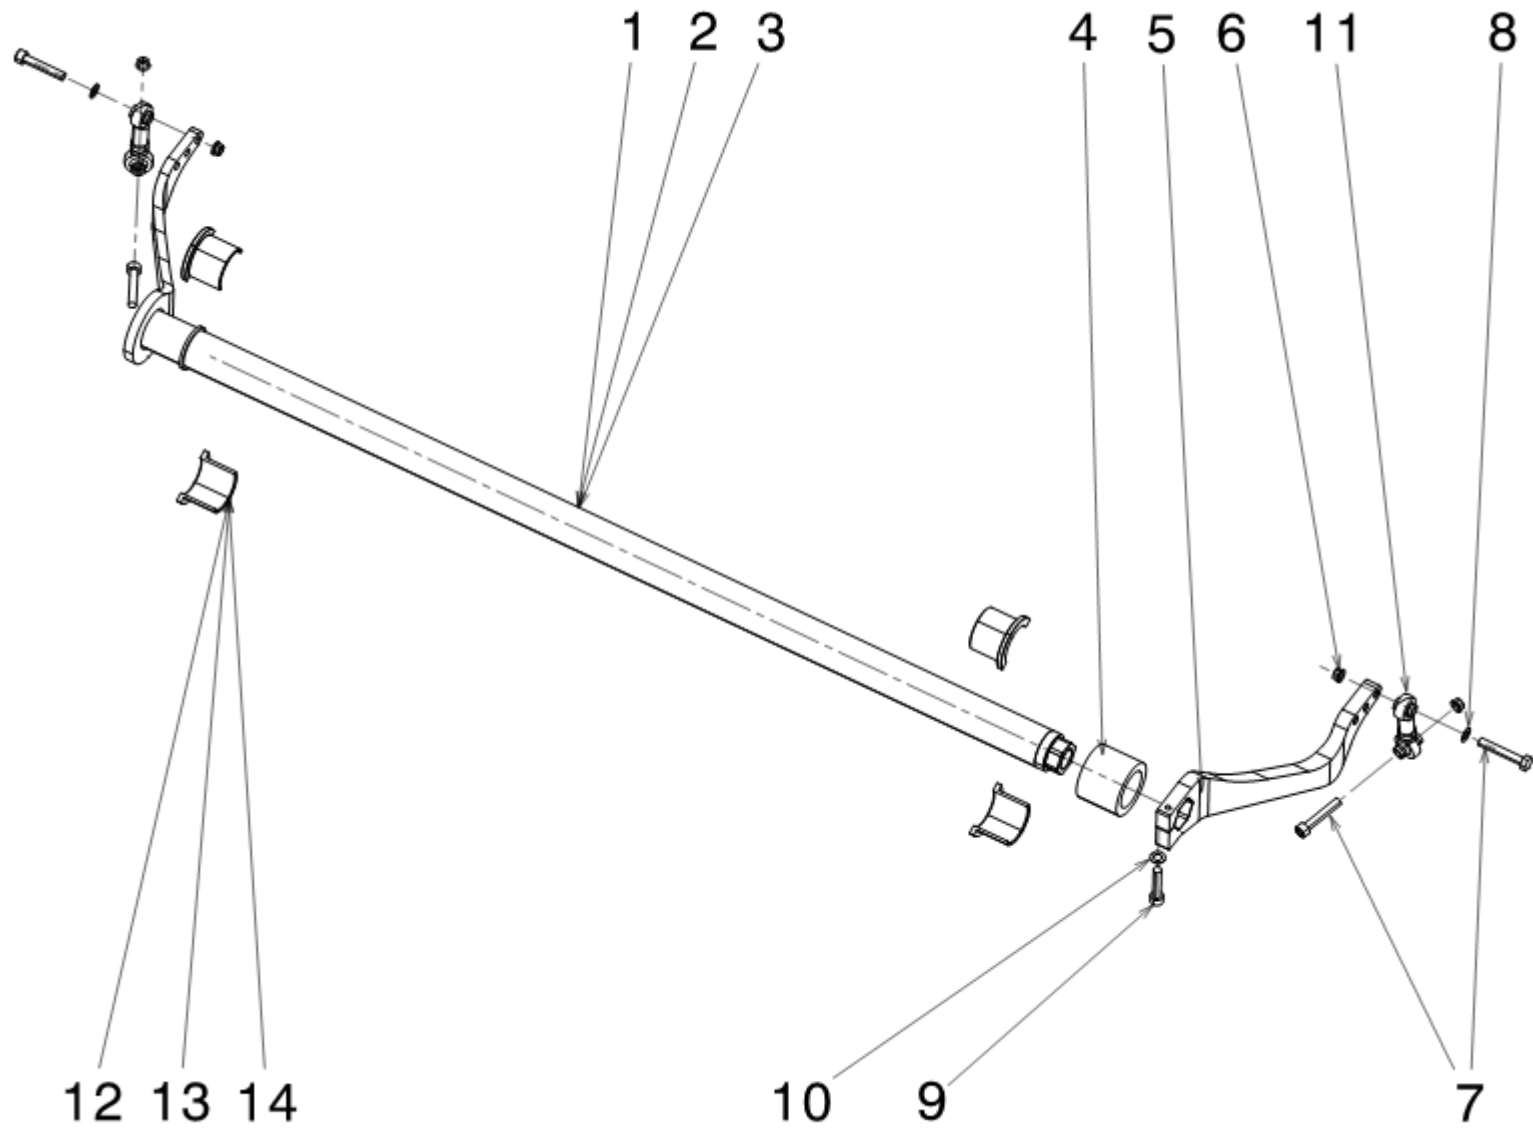

Pos	Part no.	Description	Q.ty
1	RF01-06-00940	FRONT ARB D40x2 COMPLETE (Alt.)	1
2	RF01-06-00930	FRONT ARB D30x2 COMPLETE (Alt.)	1
3	RF01-06-00935	FRONT ARB D35x2 COMPLETE (Alt.)	1
4	RF01-06-00993	BUSHING ARB FIXING RH	1
5	RF02-06-00992	FRONT ARB BLADE RH	1
6	ASTORI M8	NUT ASTORI M8	4
7		HEX SOCKET SCREW PART.THREADED M8 L45	4
8		SPRING WASHER 8X15	2
9		HEX SOCKET SCREW M6 L40	1
10		SPRING WASHER 6X12	1
11	RF02-06-00990	FRONT DROP LINK ASSY	2
12	RF01-06-00945	BUSH CUT FRONT ARB D40	2
13	RF01-06-00947	BUSH CUT FRONT ARB D30	2
14	RF01-06-00946	BUSH CUT FRONT ARB D35	2


**RF02-06-00990 FRONT DROP LINK ARB ASSY**

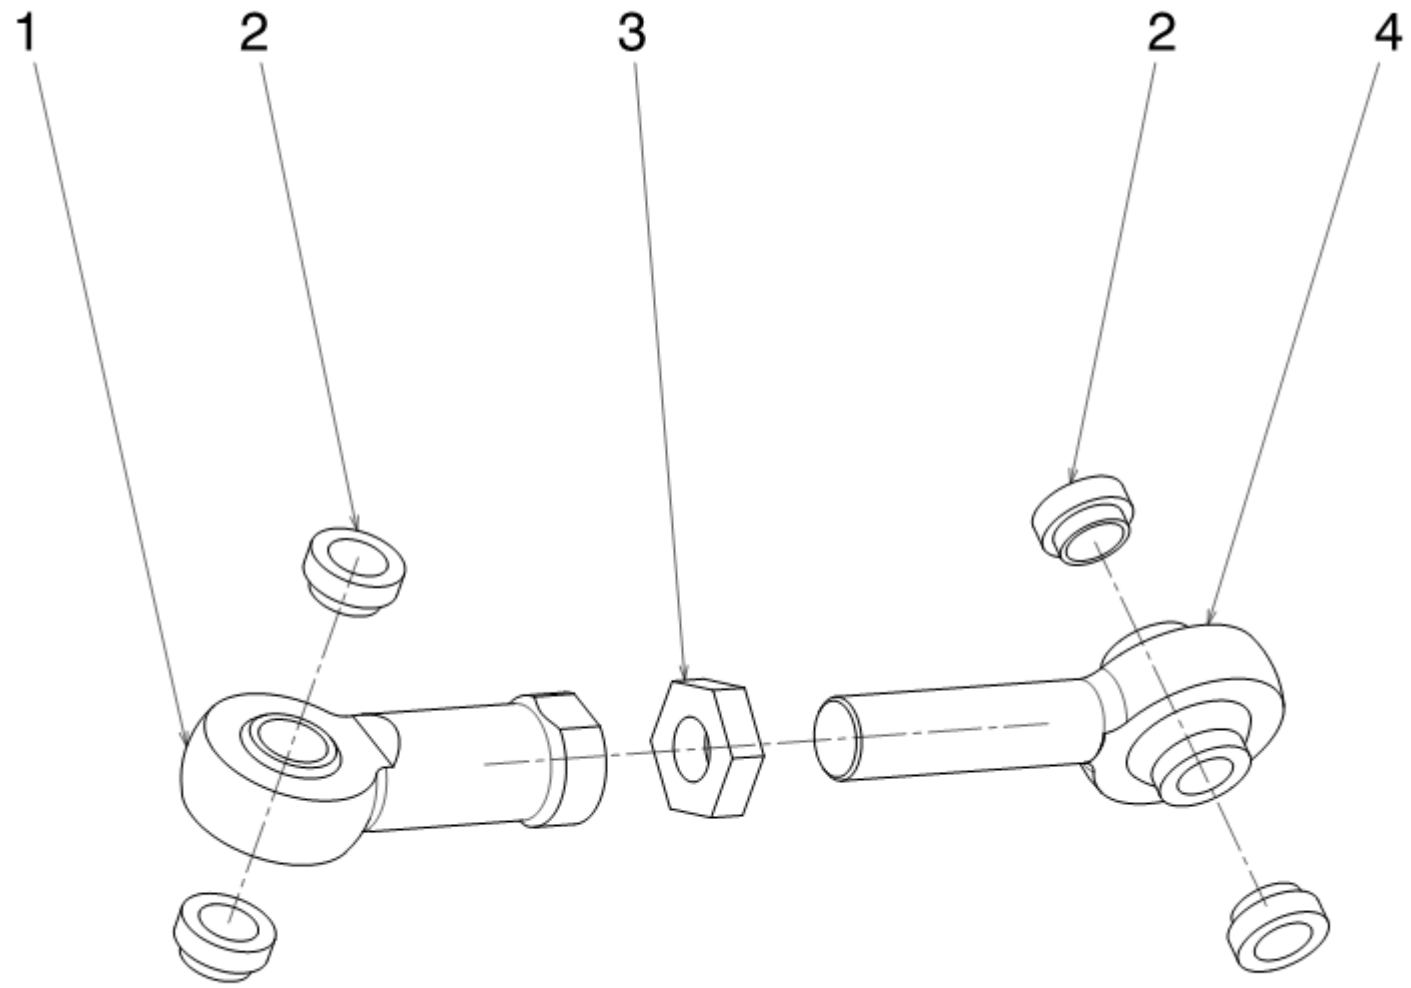

Pos	Part no.	Description	Q.ty
1	KJ 10- 441	ROAD END FEMALE M10x1	1
2	RF02-06-00410	BUSHING REACHING	4
3		HEX NUT M10x1	1
4	KA 10-541	ROAD END MALE M10x1	1


**RF01-07-01065 STEERING SYSTEM ASSEMBLY**

Pos	Part no.	Description	Q.ty
1	OD2042F	STEERING WHEEL OMP	1
2	ODS/020	QUICK RELEASE STEERING OMP	1
3	ODC023171	STEERING WHEEL SPACER OMP	1
4	OD1960	STEERING WHEEL HUB OMP	1
5	RF01-07-00490	STEERING COLUMN ASSY	1
6	RF01-16-00930	DASHBOARD DISPLAY	1
7	RF01-17-01027	DASH SUPPORT LH	1
8	RF02-16-10703	STEERING WHEEL ANGLE SENSOR	1
9	RF01-17-01028	DASH SUPPORT RH	1
10	RF02-16-00702	GEAR 50 SWA	1
11	RF02-16-00660	GEAR 60 SWA	1

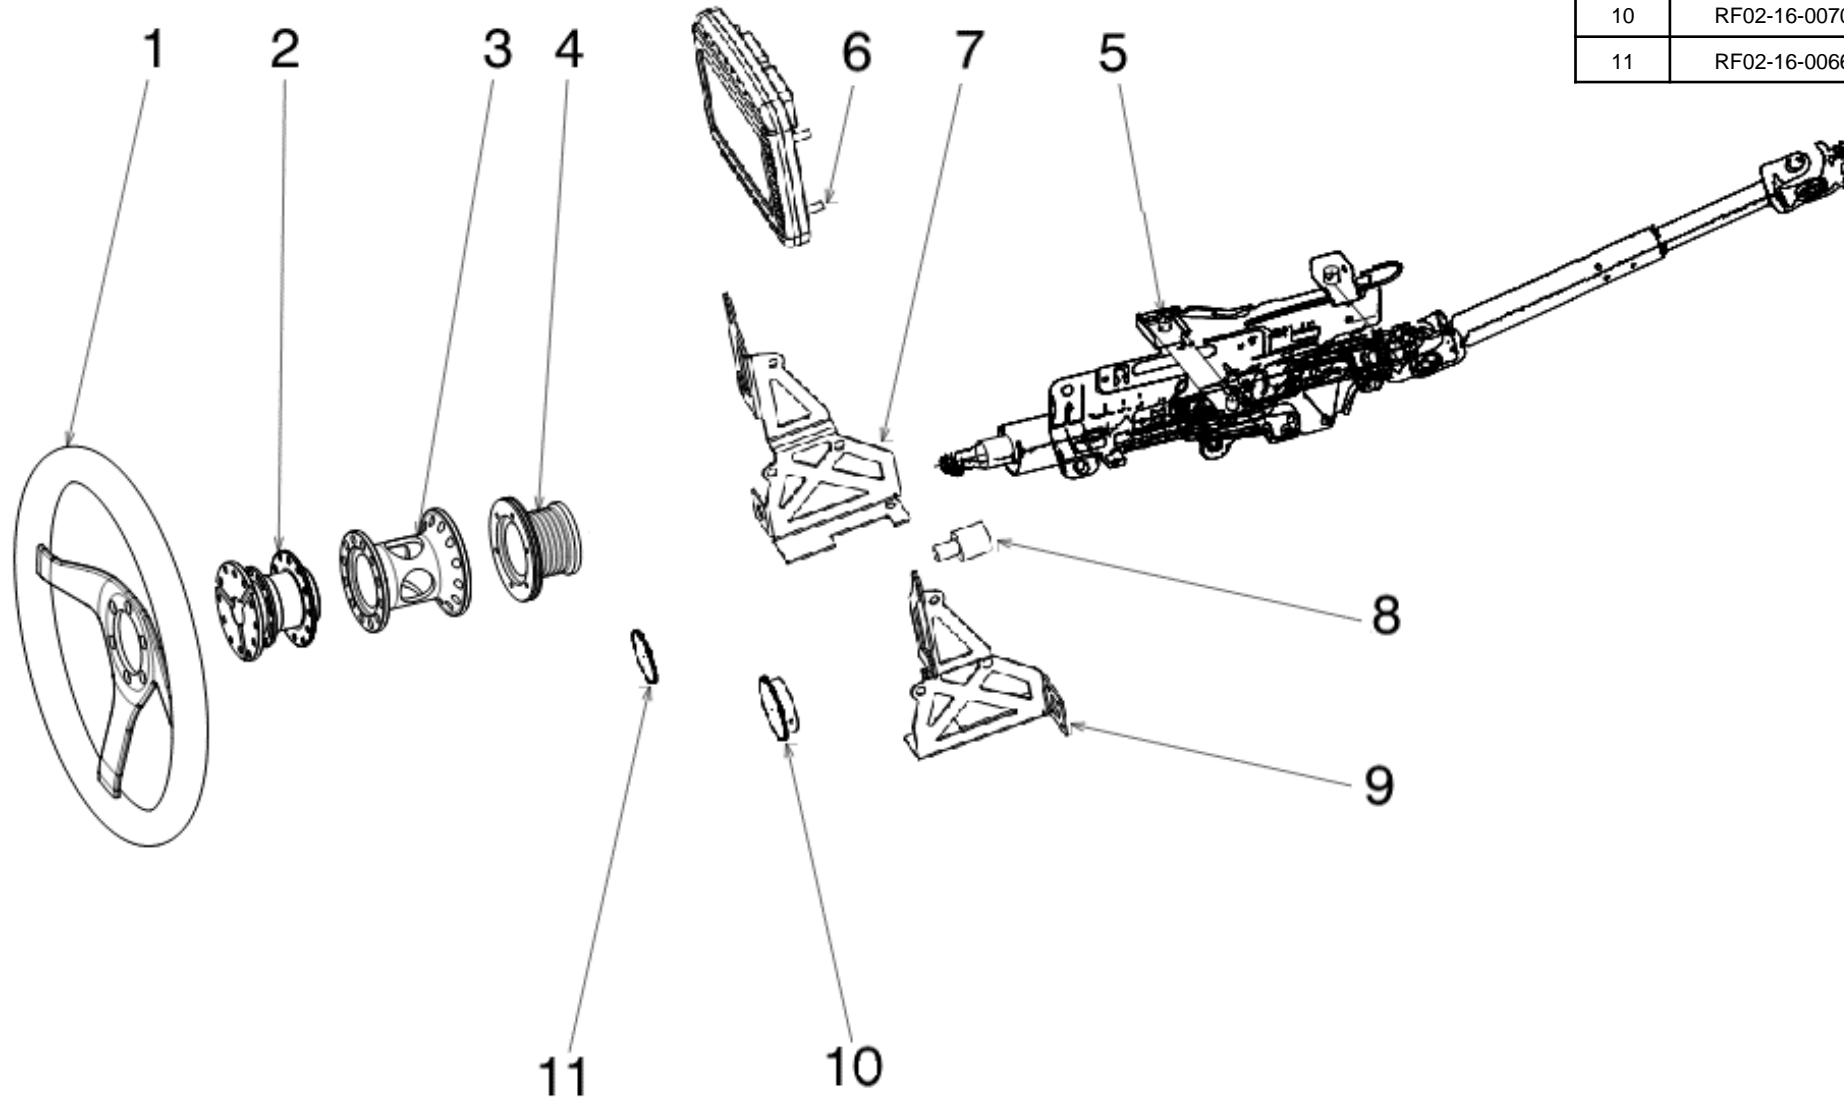


**RF01-07-00786 STEERING RACK COMPLETE**

Pos	Part no.	Description	Q.ty
1	50528728	STEERING RACK	1
2	RF01-07-00785	STEERING ROD ASSY	2
3	ASTORI M10	NUT ASTORI M10X1,25	2
4	RF01-07-00864	STEERING RACK STUD	2
5	RF01-07-00769	BUSHING STEERING RACK	2
6	RF01-07-01017	STEERING RACK SPACER	2
7		HEX SOCKET SCREW M10X1.5 L20	2
8	RF02-07-00703	STEERING RACK CENTERING BUSHING	2
9	RF01-16-01034	STEERING RACK WIRING LOOM	1
10	51805763	STEERING RACK PROTECTION	1
11	50509541	STEERING RACK/CHASSIS PLUG	1
12	51805539	STEERING RACK PLUG	1

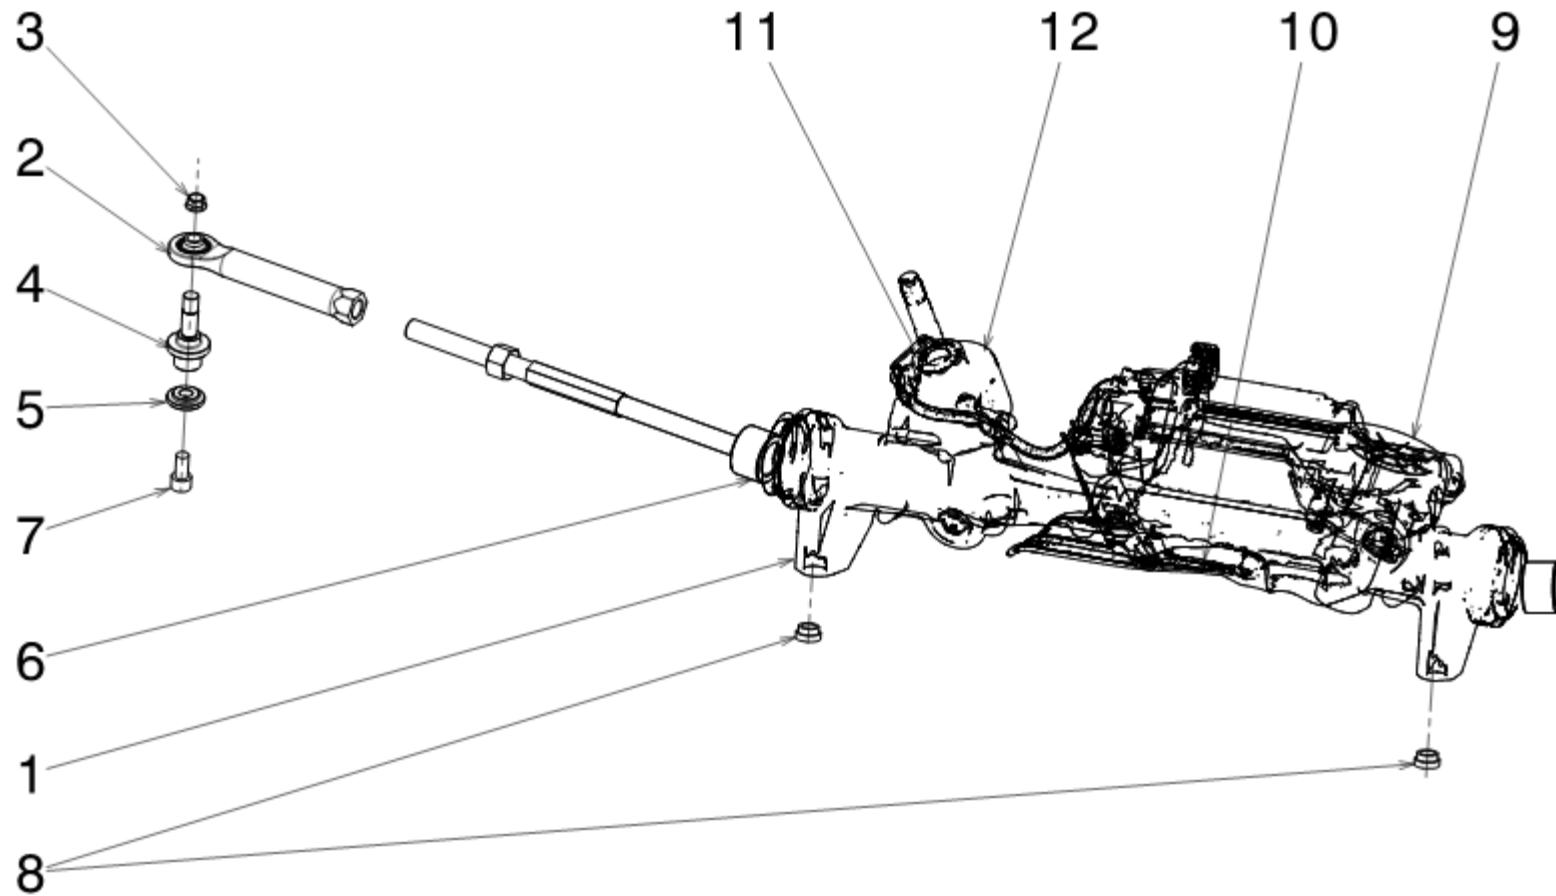


RF01-05-00627 REAR SUSPENSION ASSY

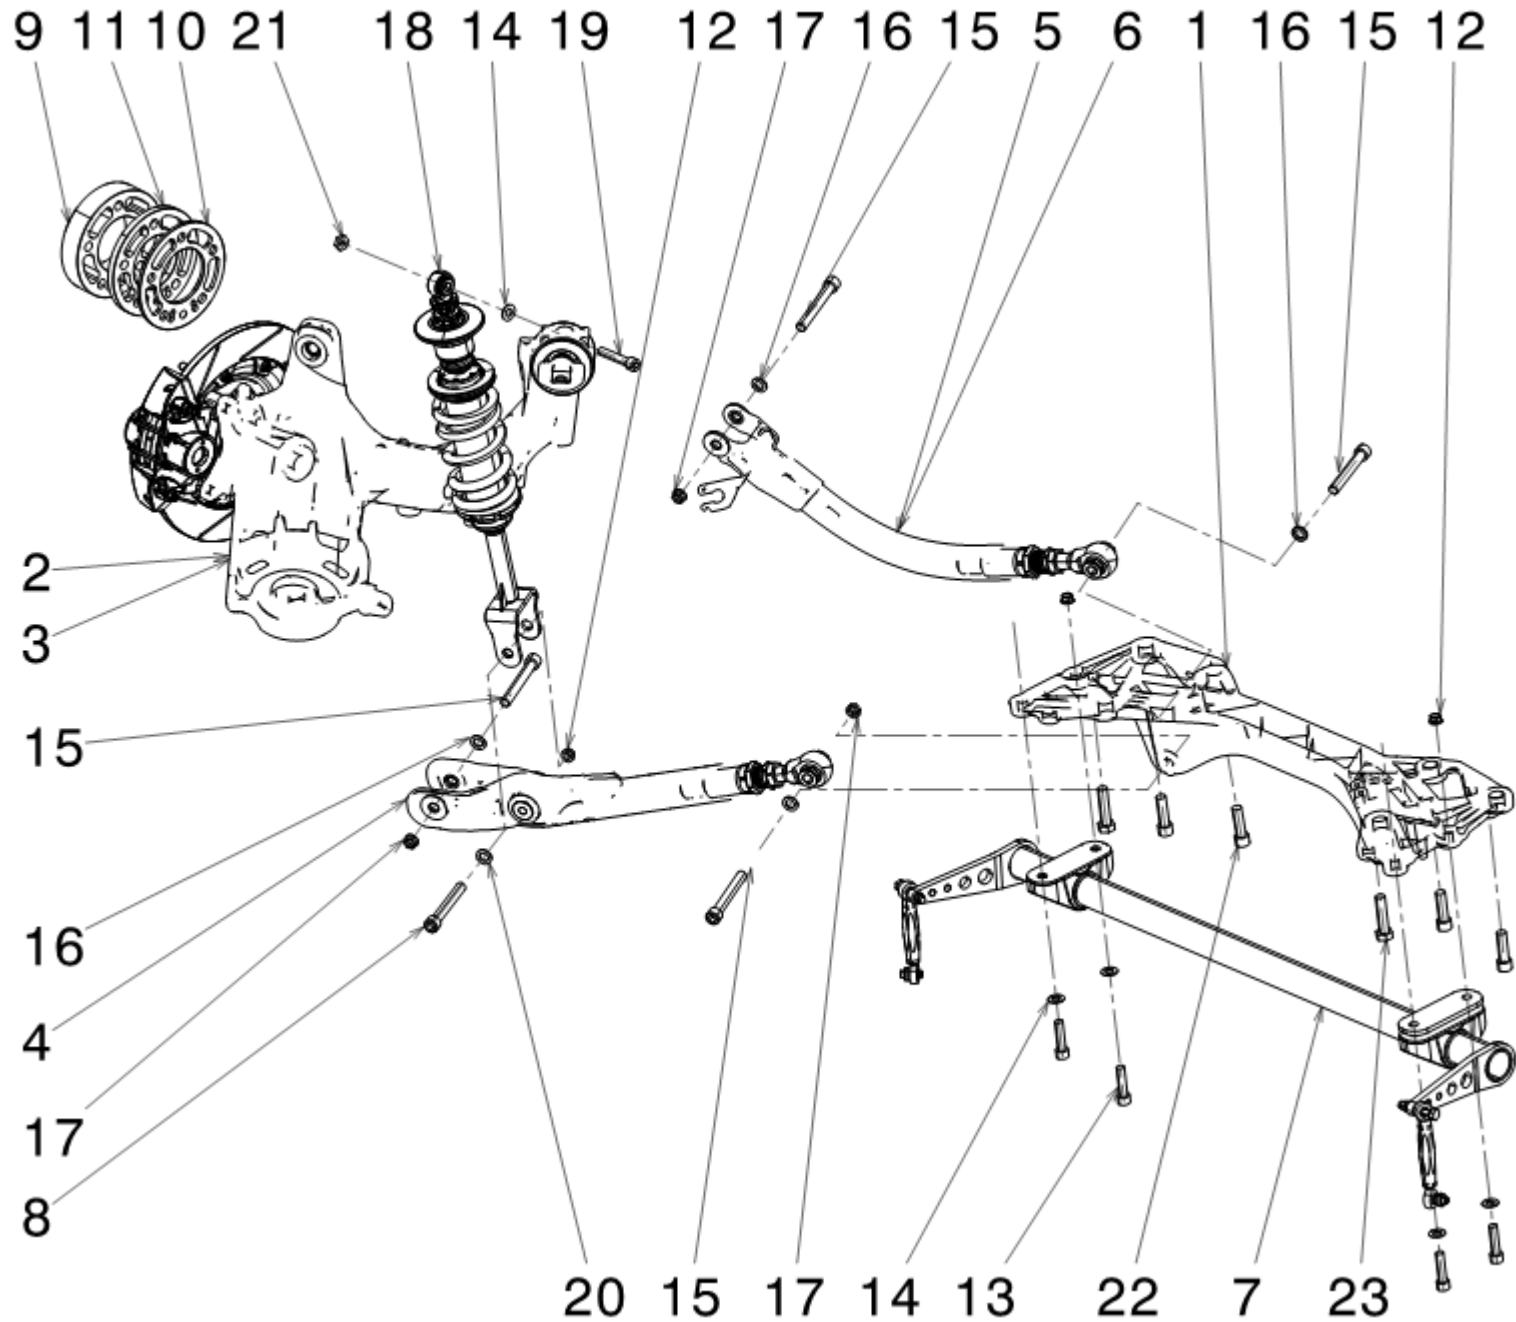

Pos	Part no.	Description	Q.ty
1	RF01-05-00798	REAR SUBFRAME	1
2	RF01-05-00796	ASSY REAR UPRIGHT ASSY LH	1
3	RF01-05-00797	ASSY REAR UPRIGHT ASSY RH	1
4	RF01-05-00625	REAR WISHBONE LOWER ASSY	2
5	RF01-05-00617	REAR LEFT WISHBONE ASSY	1
6	RF01-05-00618	REAR RIGHT WISHBONE ASSY	1
7	RF01-06-00643	REAR ARB ASSY	1
8		HEX SOCKET SCREW M12X90	2
9	RF01-20-00803	WHEEL SPACER 20MM (ALT.)	2
10	RF01-20-00801	WHEEL SPACER 5MM (ALT.)	2
11	RF01-20-00800	WHEEL SPACER 10MM (ALT.)	2
12	ASTORI M10	NUT ASTORI M10x1.25	2
13		HEX SOCKET SCREW M10X1.5 L45	4
14		SPRING WASHER 10X21	6
15		HEX SOCKET SCREW M12X1.75 L90	8
16		PLANE WASHER 12X20	8
17	ASTORI M12	NUT ASTORI M12x1.25	6
18	RF01-05-00876	REAR DAMPER COMPLETE	2
19		HEX SOCKET SCREW M10x1.25 L55	2
20		WASHER 12X24	2
21		NUT M10X1.25	2
22		HEX SOCKET SCREW M12X1.75 L40	4
23		HEX SCREW M12X1.75 L50	2




RF01-05-00796 UPRIGHT REAR ASSY LH  
 RF01-05-00797 UPRIGHT REAR ASSY RH

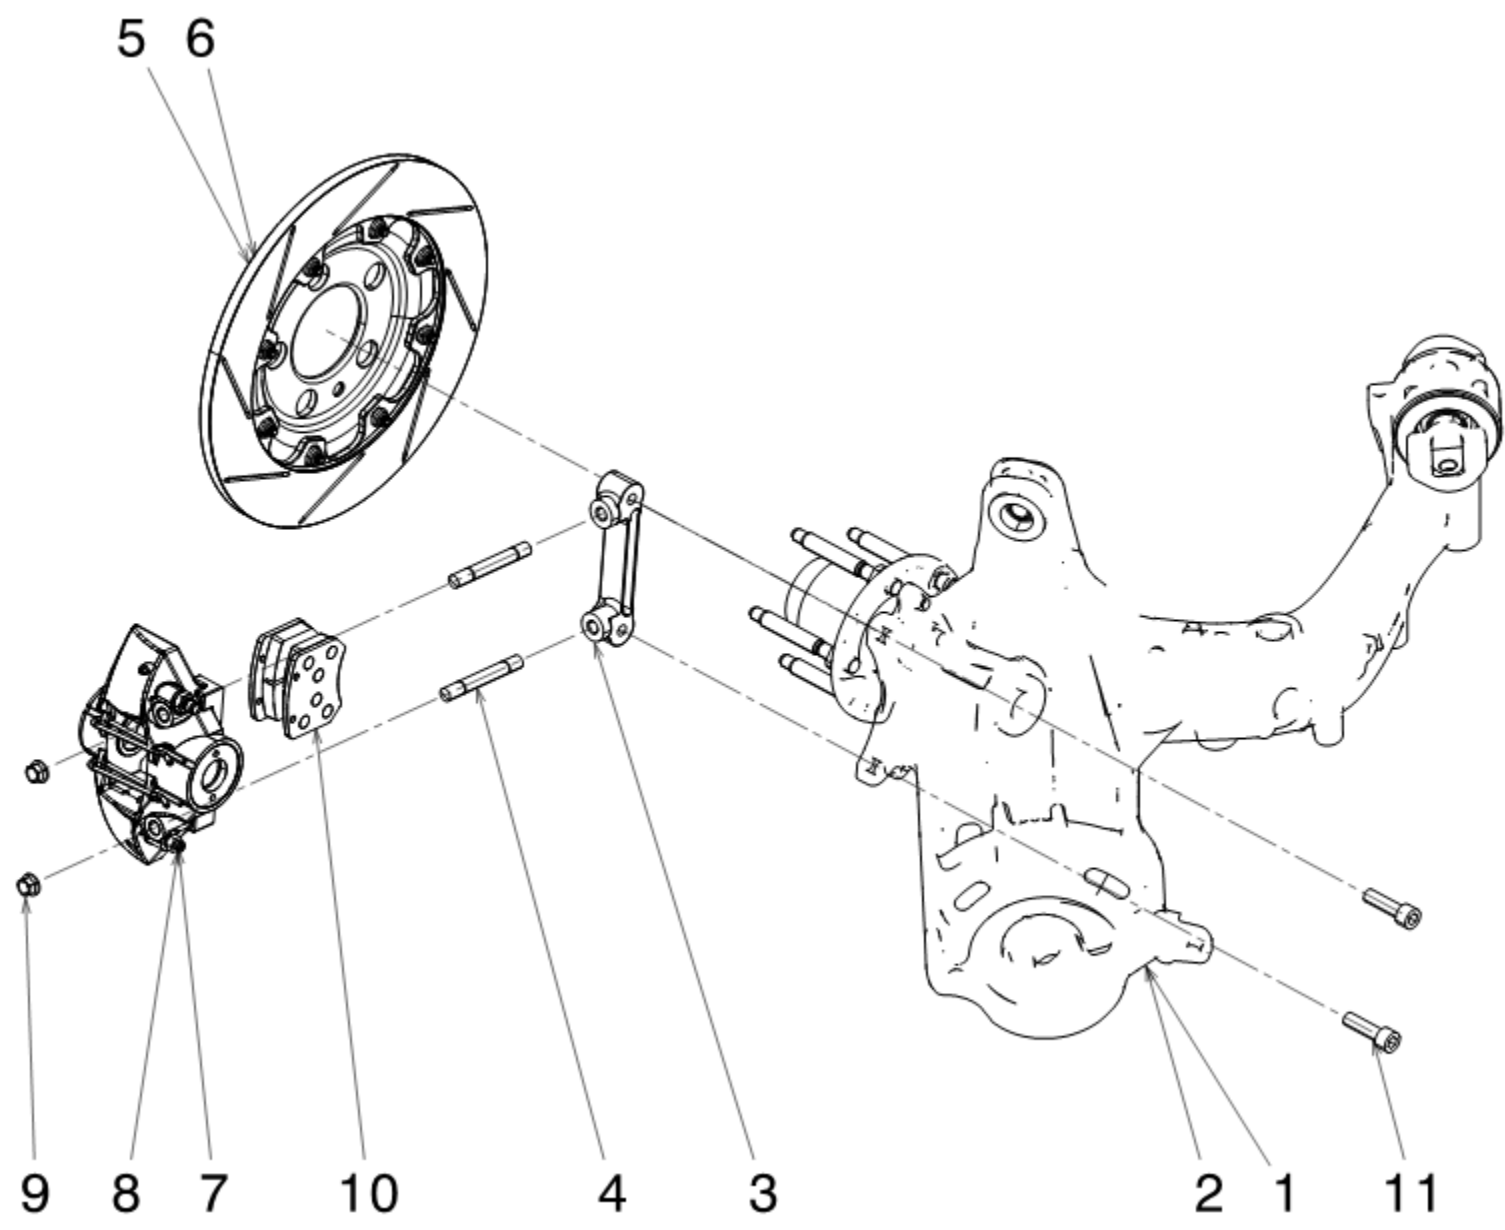


Pos	Part no.	Description	Q.ty
1	RF01-05-00733	REAR UPRIGHT LH COMPLETE	1
2	RF01-05-00734	REAR UPRIGHT RH COMPLETE	1
3	RF01-05-00586	SPACER REAR BRAKE CALIPER	2
4	RF01-05-00645	FIXING STUD REAR BRAKE CALIPER	4
5	RF01-08-00515	REAR BRAKE DISC ASSY LH	1
6	RF01-08-00514	REAR BRAKE DISC ASSY RH	1
7	CP4586-6CD	REAR CALIPER LH	1
8	CP4586-6CD	REAR CALIPER RH	1
9	ASTORI M10	NUT ASTORI M10	4
10	RCP005S90F	PAD	2
11		HEX SOCKET SCREW M10X1.25 L35	4

RF01-05-00733 REAR UPRIGHT LH COMPLETE  
RF01-05-00734 REAR UPRIGHT RH COMPLETE

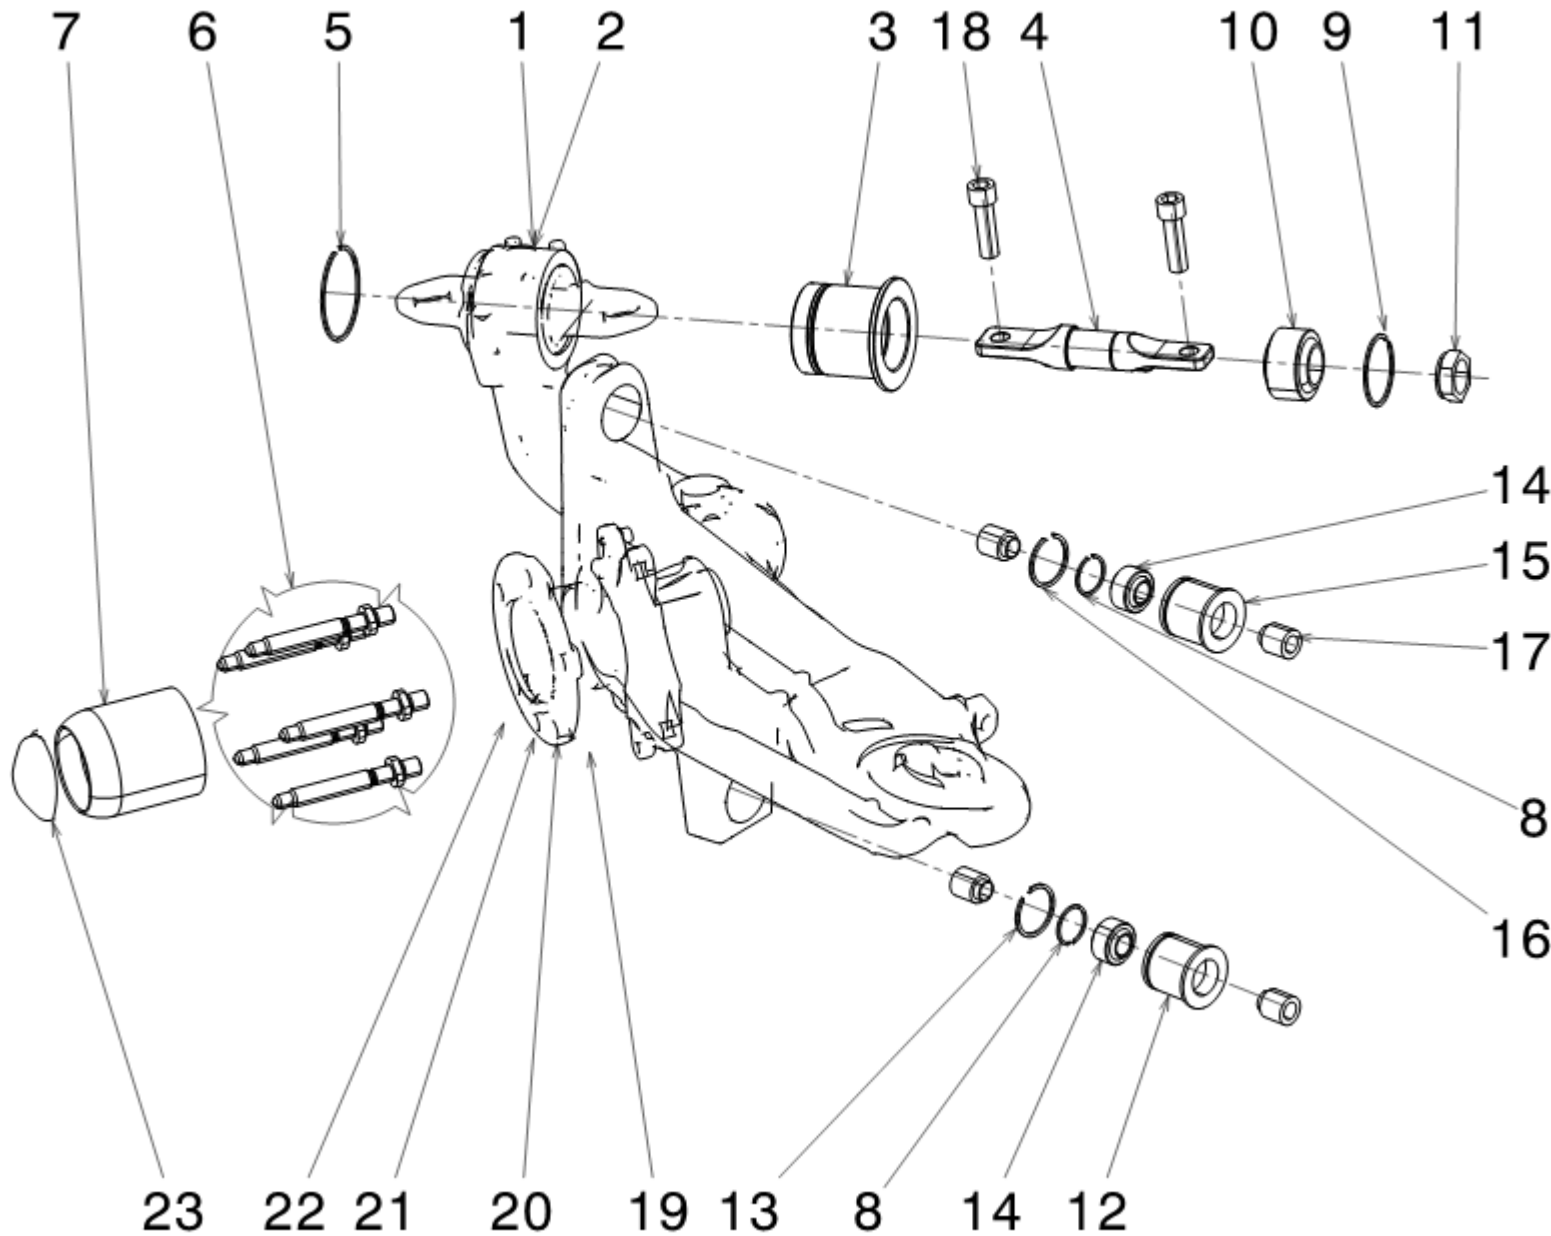


Pos	Part no.	Description	Q.ty
1	RF01-05-00639	REAR UPRIGHT LH MODIFIED	1
2	RF01-05-00640	REAR UPRIGHT RH MODIFIED	1
3	RF02-05-00735	CENTRAL PIN FOR SPHERICAL BEARING BUSHING	2
4	RF01-05-00736	CENTRAL PIN FOR SPHERICAL BEARING	2
5	SE57	SEEGER SE57	2
6	RF02-20-01073	WHEEL STUD	10
7	RF01-04-00539	WHEEL CENTERING BUSHING	2
8	M2400-0250	SEEGER M2400-0250	4
9	M2300-0470	SEEGER M2300-0470	2
10	G25D	SPHERICAL BEARING G25D	2
11	RF01-05-00739	FRONT JOINT REAR SUSPENSION NUT	2
12	RF02-05-00902	BUSHING REAR WISHBONE LOWER	2
13	SE36	SEEGER SE36	2
14	G14D	SPHERICAL BEARING G14D	4
15	RF02-05-00901	BUSHING REAR WISHBONE	2
16	SE35	SEEGER SE35	2
17	RF01-05-00914	JOINT SPACER REAR SUSPENSION	4
18		HEX SOCKET SCREW M12X1.75 L40	4
19	46422765	REAR WHEEL HUB SPACER	1
20	51832400	REAR WHEEL HUB	1
21	7568587	REAR WHEEL HUB WASHER	1
22	7556102	REAR WHEEL HUB NUT	1
23	50515255	REAR WHEEL BEARING CAP	1

**RF01-08-00514 REAR BRAKE DISC ASSY**

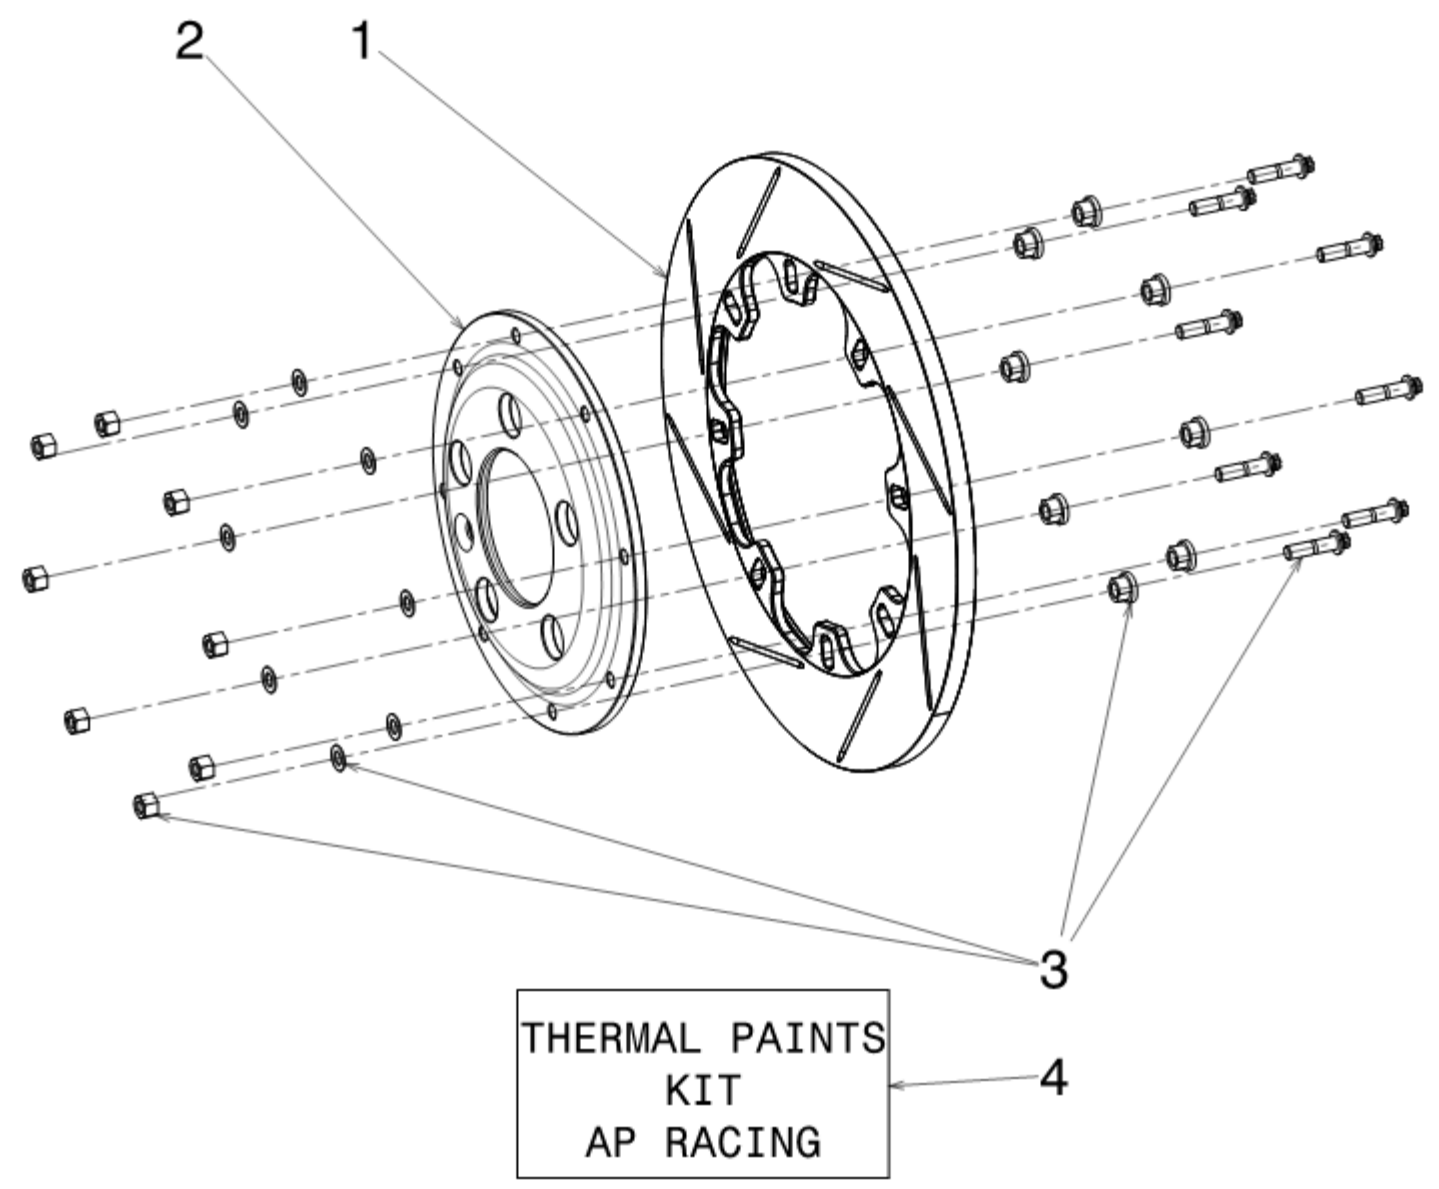


Pos	Part no.	Description	Q.ty
1	RF02-05-00517	REAR BRAKE DISC_D290mm x 10mm LH	1
3	RF02-05-00518	REAR BRAKE DISC_D290mm x 10mm RH	1
2	RF01-05-00516	BELL DISC	1
3	CP2494-589K12	KIT BOBBIN(12-589)	1
4	CP2649-1	THERMAL PAINTS KIT	1

RF01-05-00617 REAR WISHBONE UPPER ASSY LH  
 RF01-05-00618 REAR WISHBONE UPPER ASSY RH

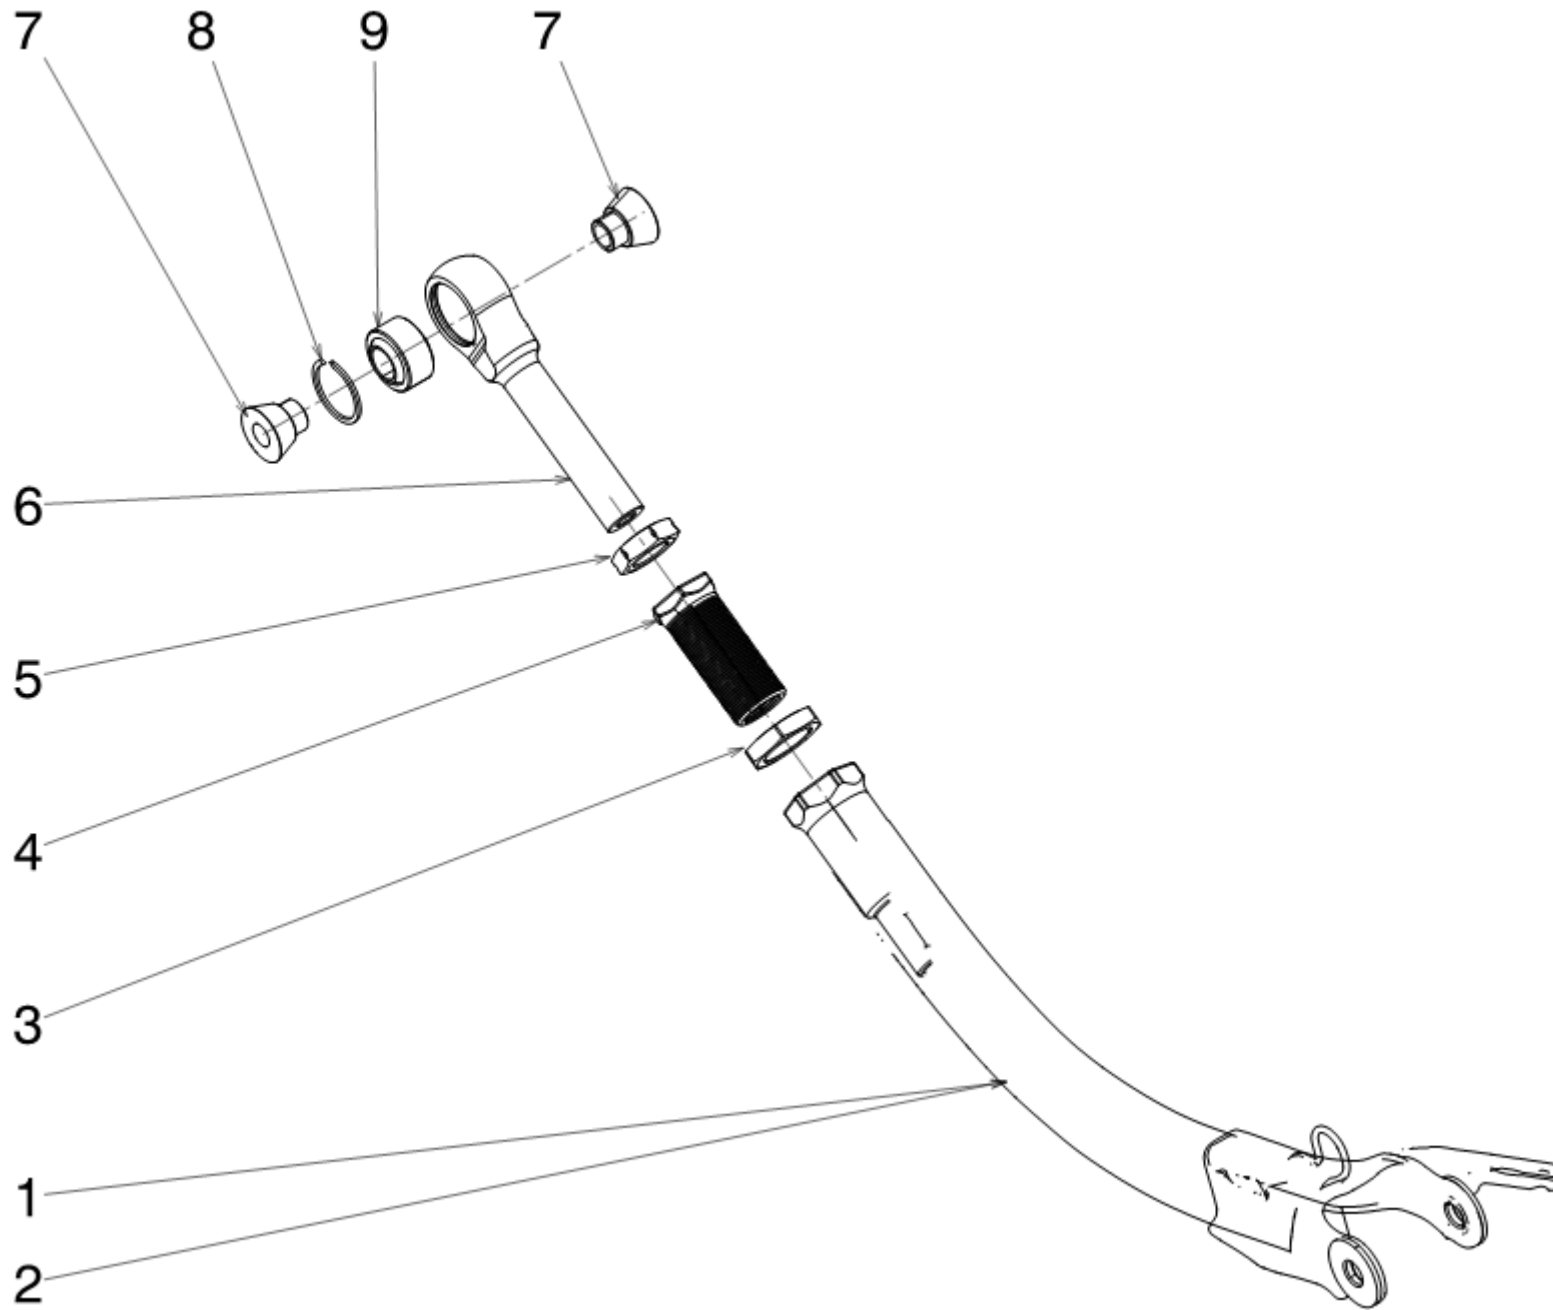


Pos	Part no.	Description	Q.ty
1	RF01-05-00615	REAR WISHBONE UPPER COMPLETE LH	1
2	RF01-05-00616	REAR WISHBONE UPPER COMPLETE RH	1
3	RF01-05-00577	LOCKNUT M28	2
4	RF01-05-00578	THREADED BUSHING INT_EXT	2
5	RF01-05-00575	LOCKNUT M20 LEFTHAND THREAD	2
6	RF01-05-00644	ROAD END ABWT10 MODIFIED	2
7	RF01-05-00620	BUSHING CENTERING RODOBAL	4
8	M2300-0320	SEEGER	2
9	ABWT10	SPHERICAL BEARING	2

**RF01-05-00625 REAR WISHBONE LOWER ASSY**

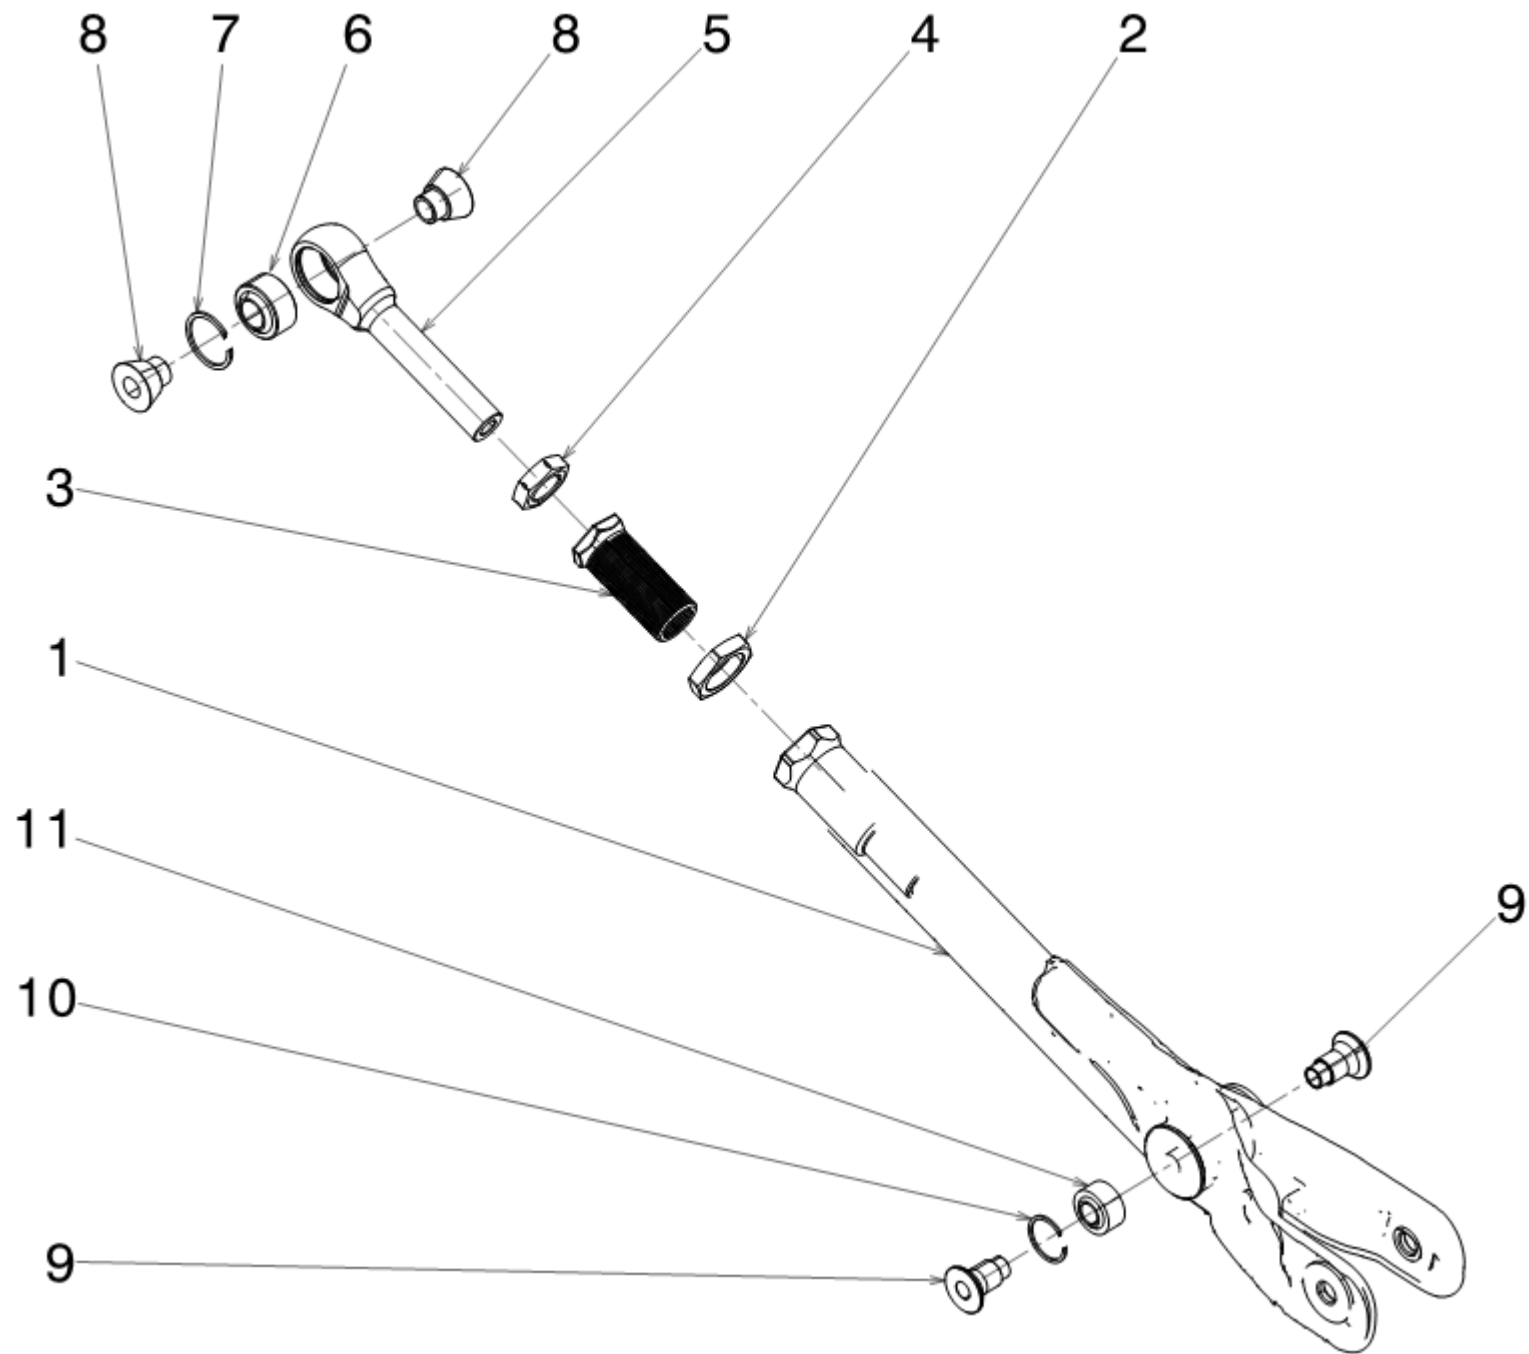


Pos	Part no.	Description	Q.ty
1	RF01-05-00623	REAR WISHBONE LOWER	2
2	RF01-05-00577	LOCKNUT M28	2
3	RF01-05-00578	THREADED BUSHING EXT-INT	2
4	RF01-05-00575	LOCKNUT M20 LEFTHAND THREAD	2
5	RF01-05-00644	ROAD END ABWT10 MODIFIED	2
6	ABWT10	SPHERICAL BEARING	2
7	M2300-0320	SEEGER	2
8	RF01-05-00620	BUSHING CENTERING RODOBAL	4
9	RF01-05-00631	BUSHING FIX RODOBAL REAR DAMPER	4
10	M2300-0260	SEEGER	2
11	G12D	SPHERICAL BEARING G12D	2

RF01-05-00876 REAR DAMPER COMPLETE

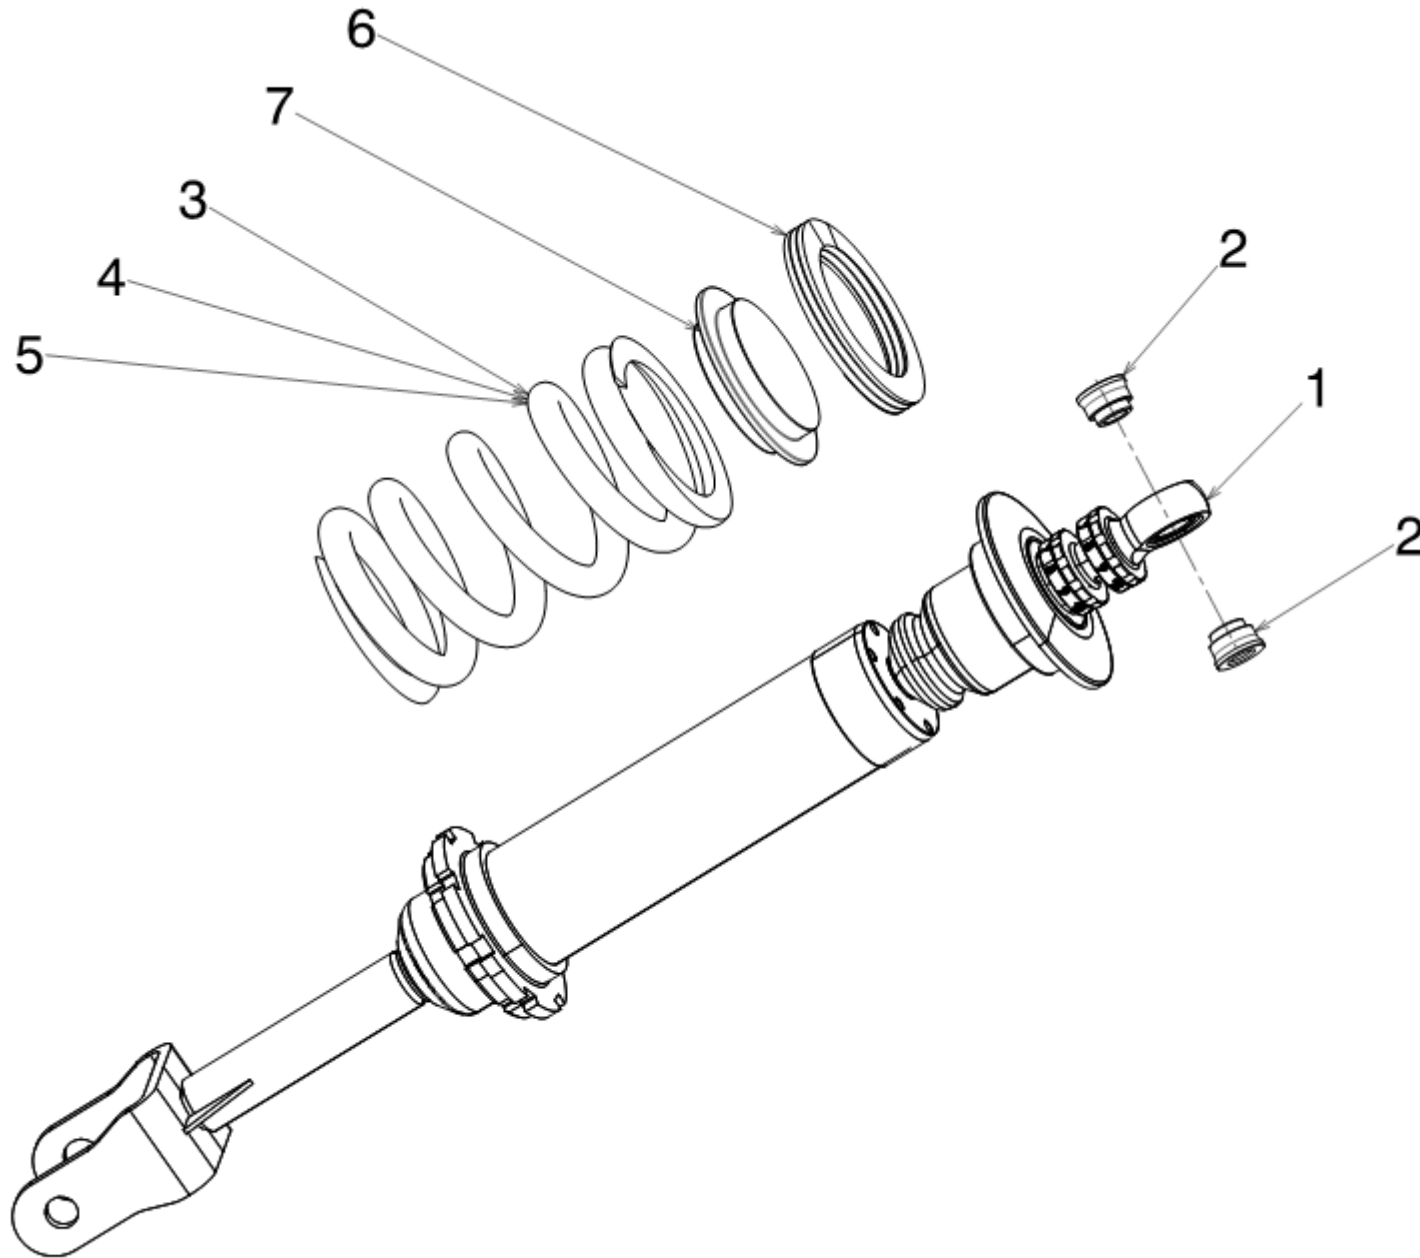

Pos	Part no.	Description	Q.ty
1	RF01-05-00799	REAR DAMPER	1
2	RF01-05-00872	BUSHING REAR DAMPER	2
3	ERS-H-170-60-0100	SPRING	1
4	ERS-H-170-60-0110	SPRING	1
5	ERS-H-170-60-0120	SPRING	1
6	ERS-ZI160B	COUPLING SPACER	1
7	ERS-40-60-30	HELPER	1


**RF01-06-00643 REAR ARB ASSY**

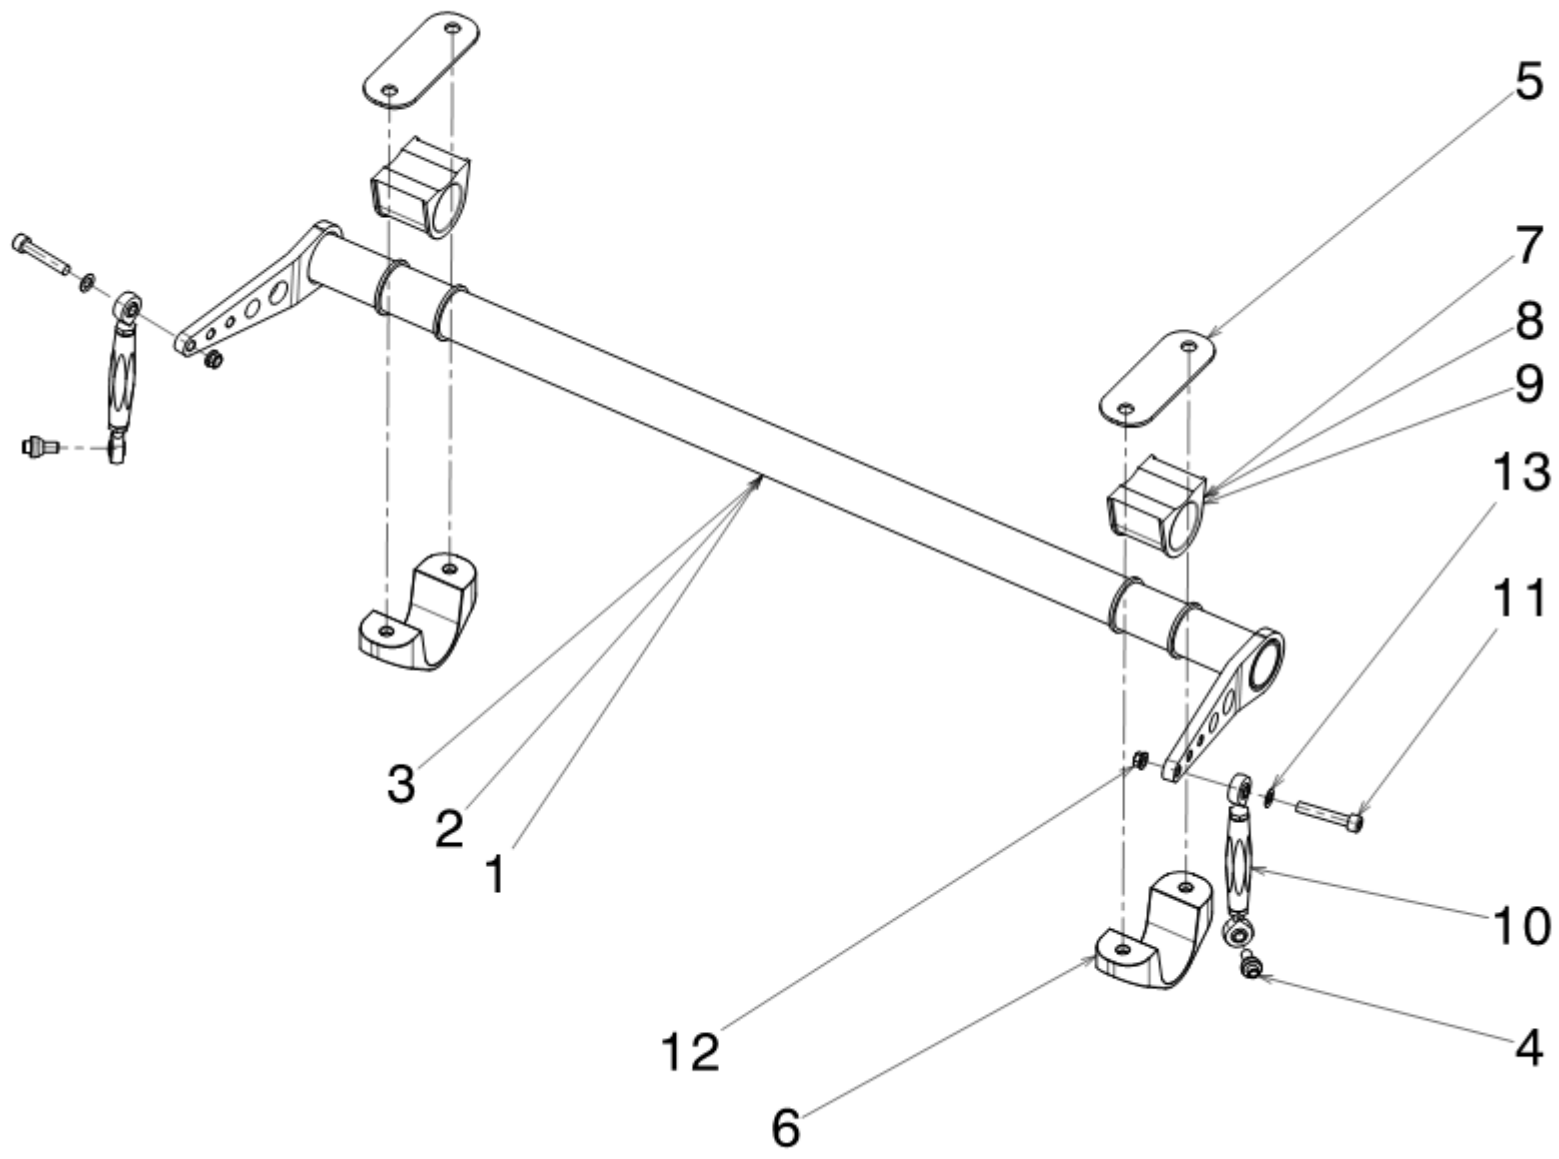

Pos	Part no.	Description	Q.ty
1	RF01-06-00743	REAR ARB COMPLETE D40 (Alt)	1
2	RF01-06-00651	REAR ARB COMPLETE D35 (Alt)	1
3	RF01-06-00655	REAR ARB COMPLETE D30 (Alt)	1
4	RF01-06-00731	SPACER UNIBALL REAR DROP LINK ARB	2
5	RF02-06-00632	REAR PLATE ARB	2
6	RF01-06-00633	REAR CLAMP ARB	2
7	RF01-06-00778	RUBBER BUSHING D40 ARB (Alt)	2
8	RF01-06-00639	RUBBER BUSHING D35 ARB (Alt)	2
9	RF01-06-00640	RUBBER BUSHING D30 ARB (Alt)	2
10	RF01-06-00725	REAR DROP LINK ARB ASSY	2
11		HEX SOCKET SCREW PART. THREAD M8X1.25 L45	2
12		NUT ASTORI M8	2
13		SPRING WASHER 8X15	2


**RF01-06-00725 REAR DROP LINK ARB ASSY**

Pos	Part no.	Description	Q.ty
1	ARYTL5E	ROAD END ARYTL5E R NMB	1
2	D-7/16x20 S	HEX NUT 7/16-20-1 LEFTHAND THREAD	1
3	RF01-06-00726	REAR DROP LINK ARB	1
4	D-7/16x20	HEX NUT 7/16-20-1	1
5	ARYT5E	ROAD END ARYT5E R NMB	1

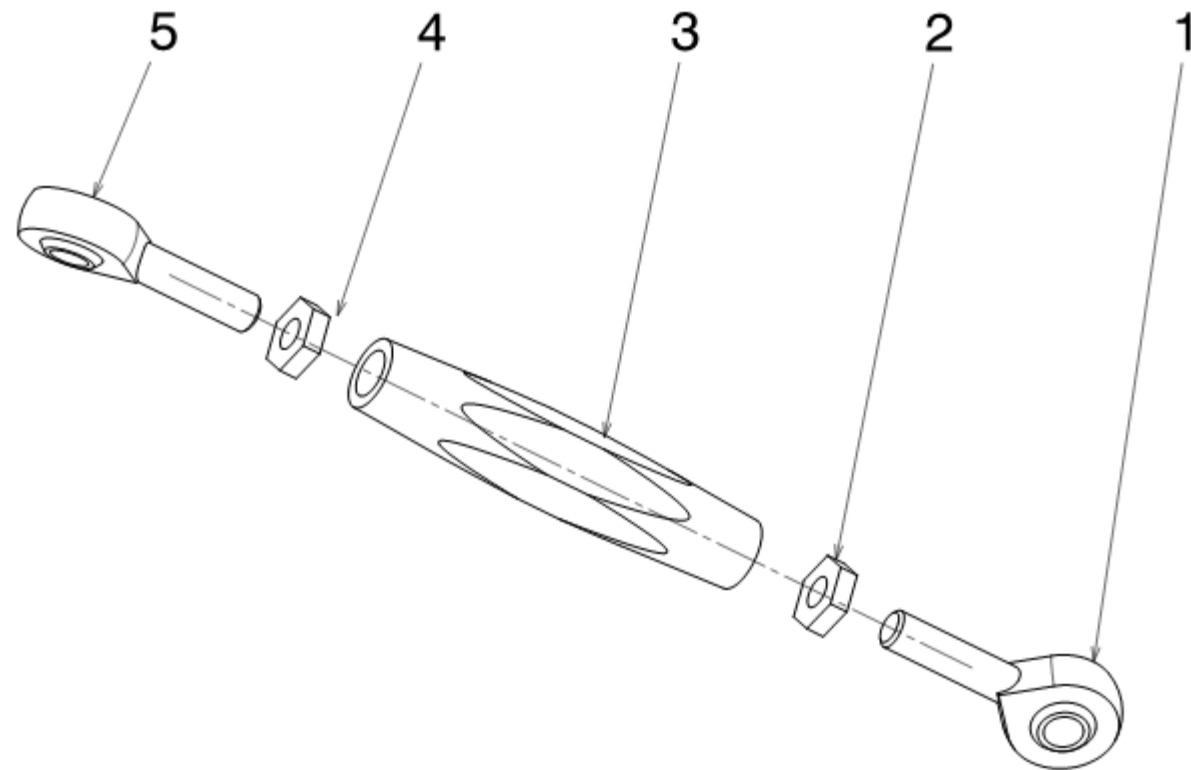






RF01-08-01051 HYDRAULIC SYSTEM BRAKE AND CLUTCH

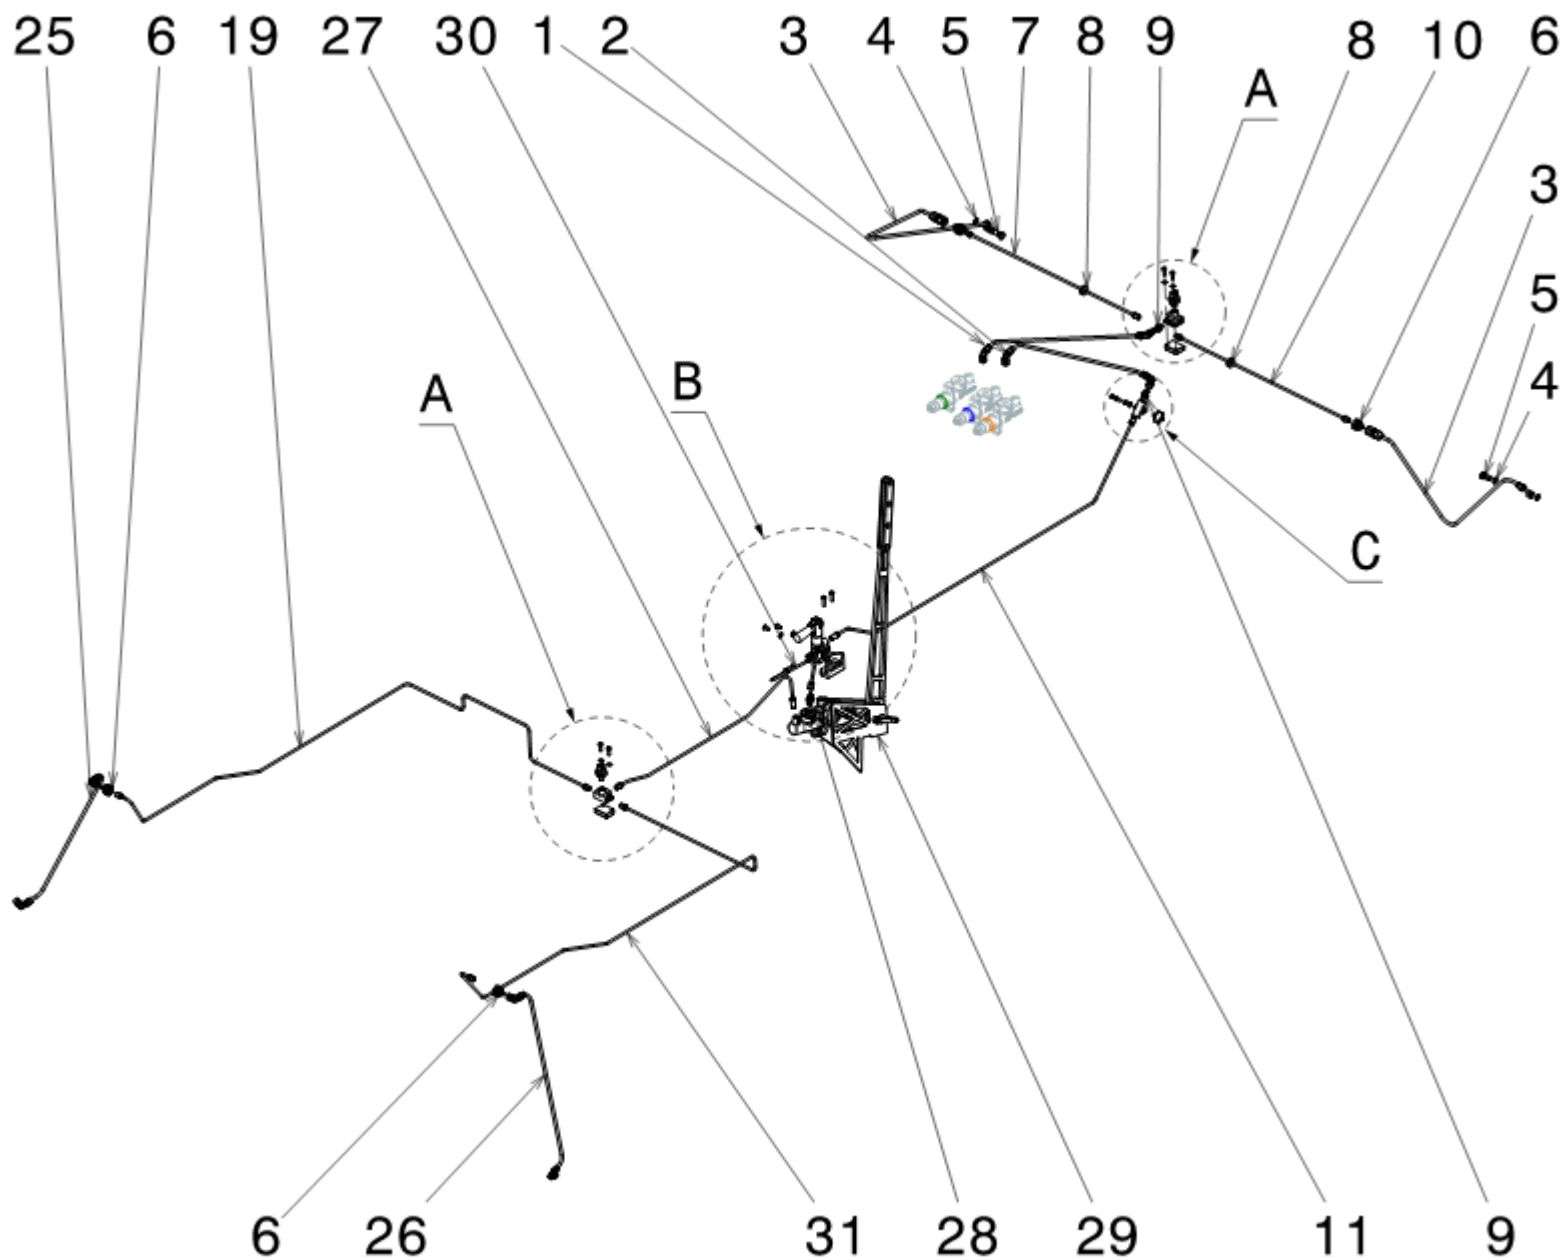


Pos	Part no.	Description	Q.ty
1	RF01-08-00404	REAR BRAKE PUMP FLEXIBLE PIPE	1
2	RF01-08-00405	FRONT BRAKE PUMP FLEXIBLE PIPE	1
3	RF02-08-00401	PIPE CRIMPED FRONT BRAKE CALIPER	2
4		COPPER WASHER	4
5	3211202	BOLT BANJO M10X1	2
6	3102300	BULKHEAD FITTING NIPPLE	4
7	RF01-08-01013	COPPER PIPE FROM FR 4 WAY TO FR LH CALIPER	1
8		RUBBER BULKHEAD	2
9	3213200	JIC MALE TO MALE 10X1	2
10	RF01-08-01012	COPPER PIPE FROM FR 4 WAY TO FR RH CALIPER	1
11	RF01-08-01007	COPPER PIPE FROM 2 WAY TO PROP. VALVE	1
12	RF01-16-00956	PRESSURE SENSOR BRACKING SYSTEM	2
13		HEX SOCKET SCREW M5X25	6
14		SPRING WASHER 5x11	4
15	3226302	4 WAY TUBE	2
16	RF01-08-00704	SPACER 4 WAY TUBE	2
17	3112302	2 WAY TUBE	1
18	RF01-08-00702	2 SPACER 2 WAY TUBE	1
19	RF01-08-01010	COPPER PIPE FROM RR 4 WAY TO RR LH CALIPER	1
20		COUNTERSUNK HEAD SCREW M6X	2
21	RF01-17-00815	PROPORTIONING VALVE SUPPOR	1
22	CP3550 13	PROPORTIONING VALVE	1
23		BUTTON HEAD BOLT M6X12	2
24		SPRING WASHER 6x12	2
25	RF02-08-00403	PIPE CRIMPED REAR BRAKE CALIPER LH	1
26	RF02-08-00402	PIPE CRIMPED REAR BRAKE CALIPER RH	1
27	RF02-08-00622	COPPER PIPE FROM HANDBRAKE TO RR 4 WAY	1
28	03218200	JIC MALE TO MALE 3/4	1
29	RF02-08-00600	COMPLETE HANDBRAKE	1
30	RF02-08-00621	COPPER PIPE FROM PROP. VALVE TO HANDBRAKE	1
31	RF01-08-01011	COPPER PIPE FROM RR 4 WAY TO RR RH CALIPER	1

RF01-08-01051 HYDRAULIC SYSTEM BRAKE AND CLUTCH

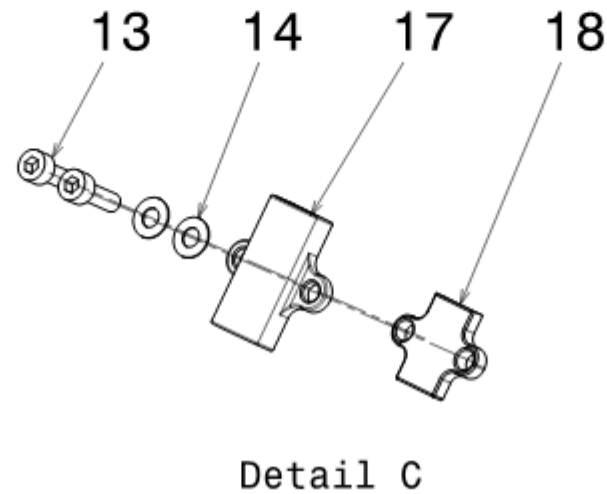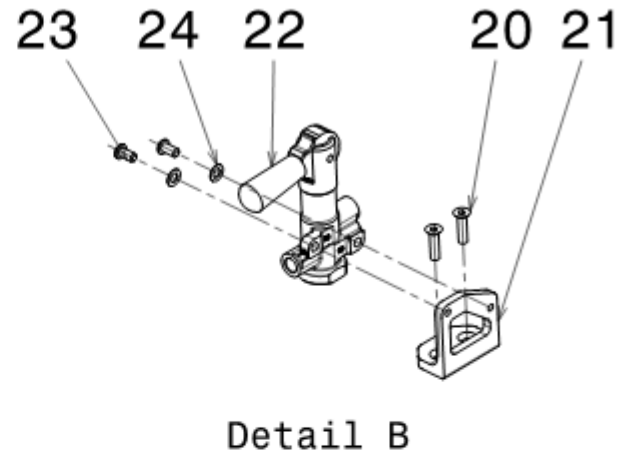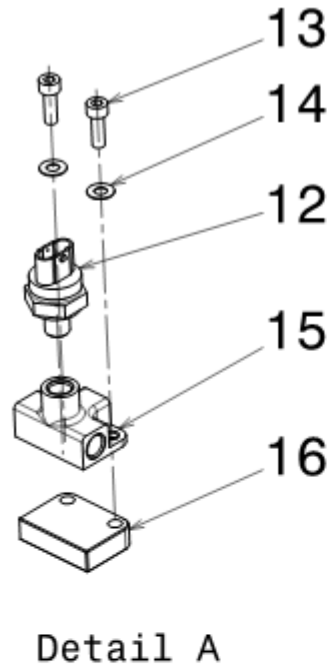

Pos	Part no.	Description	Q.ty
1	RF01-08-00404	REAR BRAKE PUMP FLEXIBLE PIPE	1
2	RF01-08-00405	FRONT BRAKE PUMP FLEXIBLE PIPE	1
3	RF02-08-00401	PIPE CRIMPED FRONT BRAKE CALIPER	2
4		COPPER WASHER	4
5	3211202	BOLT BANJO M10X1	2
6	3102300	BULKHEAD FITTING NIPPLE	4
7	RF01-08-01013	COPPER PIPE FROM FR 4 WAY TO FR LH CALIPER	1
8		RUBBER BULKHEAD	2
9	3213200	JIC MALE TO MALE 10X1	2
10	RF01-08-01012	COPPER PIPE FROM FR 4 WAY TO FR RH CALIPER	1
11	RF01-08-01007	COPPER PIPE FROM 2 WAY TO PROP. VALVE	1
12	RF01-16-00956	PRESSURE SENSOR BRACKING SYSTEM	2
13		HEX SOCKET SCREW M5X25	6
14		SPRING WASHER 5x11	4
15	3226302	4 WAY TUBE	2
16	RF01-08-00704	SPACER 4 WAY TUBE	2
17	3112302	2 WAY TUBE	1
18	RF01-08-00702	2 SPACER 2 WAY TUBE	1
19	RF01-08-01010	COPPER PIPE FROM RR 4 WAY TO RR LH CALIPER	1
20		COUNTERSUNK HEAD SCREW M6X	2
21	RF01-17-00815	PROPORTIONING VALVE SUPPOR	1
22	CP3550 13	PROPORTIONING VALVE	1
23		BUTTON HEAD BOLT M6X12	2
24		SPRING WASHER 6x12	2
25	RF02-08-00403	PIPE CRIMPED REAR BRAKE CALIPER LH	1
26	RF02-08-00402	PIPE CRIMPED REAR BRAKE CALIPER RH	1
27	RF02-08-00622	COPPER PIPE FROM HANDBRAKE TO RR 4 WAY	1
28	03218200	JIC MALE TO MALE 3/4	1
29	RF02-08-00600	COMPLETE HANDBRAKE	1
30	RF02-08-00621	COPPER PIPE FROM PROP. VALVE TO HANDBRAKE	1
31	RF01-08-01011	COPPER PIPE FROM RR 4 WAY TO RR RH CALIPER	1


**RF02-08-00600 HANDBRAKE**

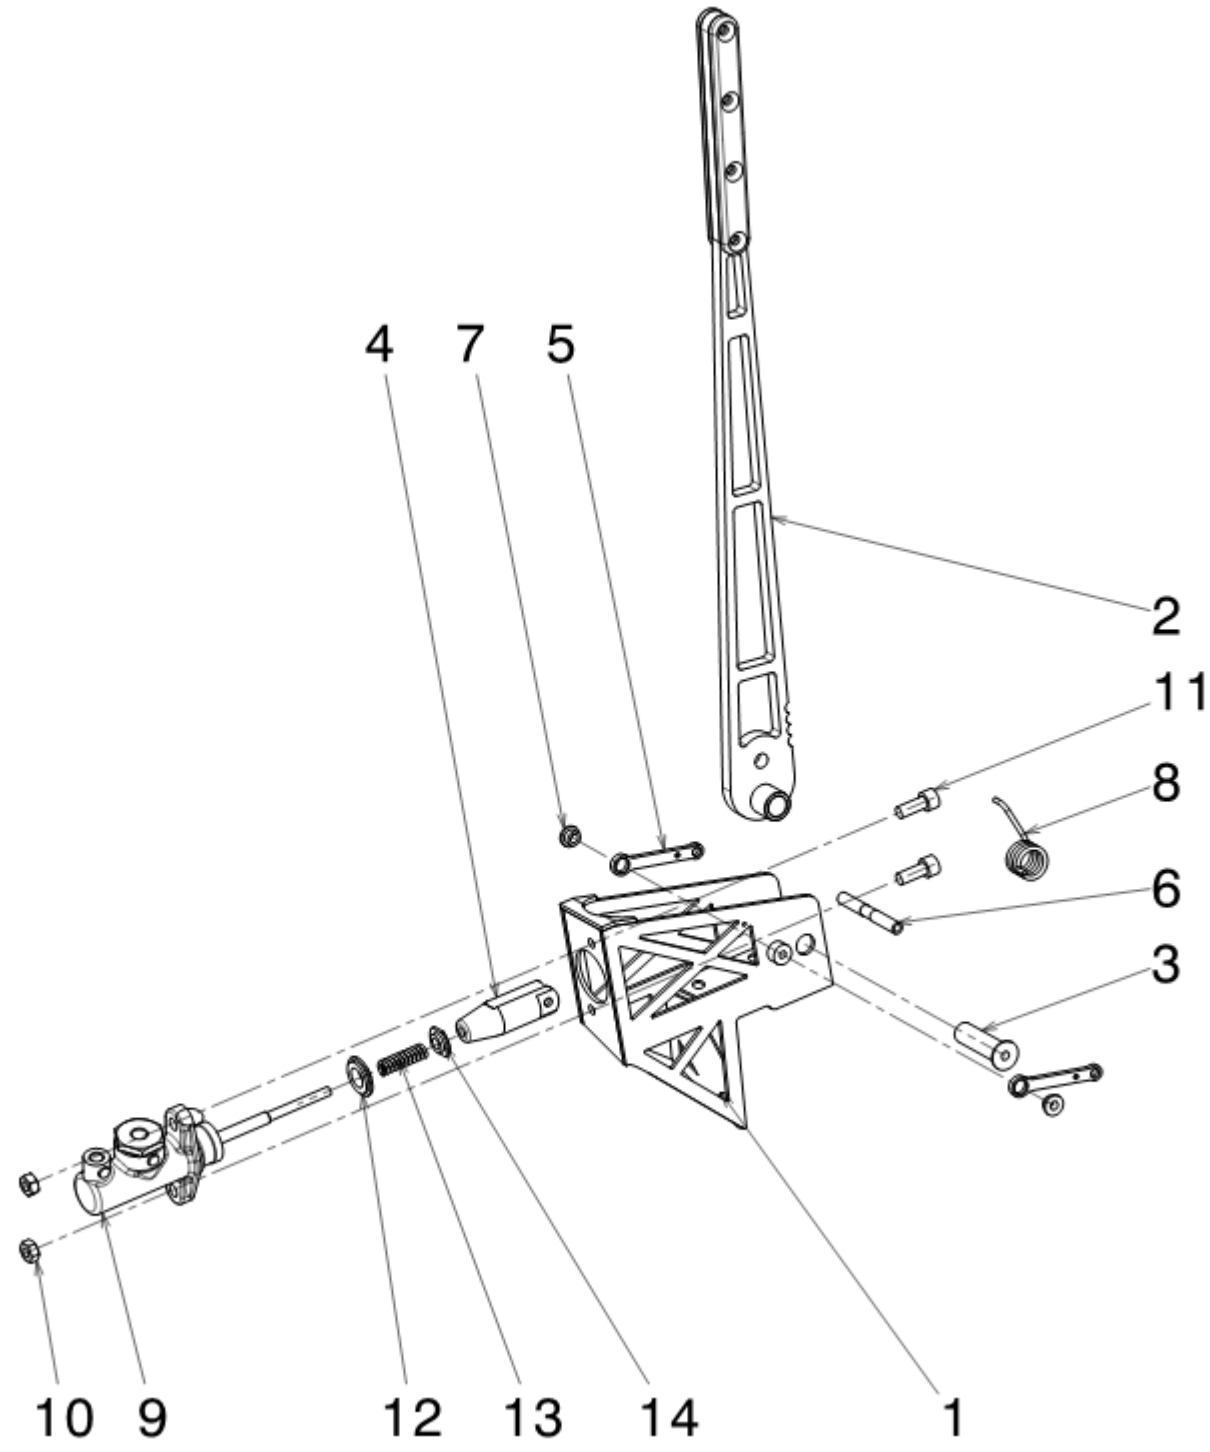

Pos	Part no.	Description	Q.ty
1	RF02-08-00618	SUPPORT HANDBRAKE ASSEMBLY	1
2	RF02-08-00616	LEVER HANDBRAKE ASSEMBLY	1
3	RF02-08-00604	SPACER HANDBRAKE	1
4	RF02-08-00610	WISHBONE HANDBRAKE	1
5	RF02-08-00607	LEVER	2
6	RF02-08-00605	TUBE	1
7	RF02-08-00608	BUSHING HANDBRAKE	2
8	D.190.200.0225	SPRING	1
9	RF02-08-00620	HANDBRAKE PUMP ASSEMBLY	1
10		NUT	2
11		SCREW	2
12	RF02-08-00614	PLATE HANDBRAKE PUMP	1
13		SPRING	1
14	RF02-08-00615	PLATE SPRING	1


RF01-20-00677 WHEEL ASSY

Pos	Part no.	Description	Q.ty
1	RF01-20-01050	WHEEL RIM	1
2	CP23	WHEEL NUT	5

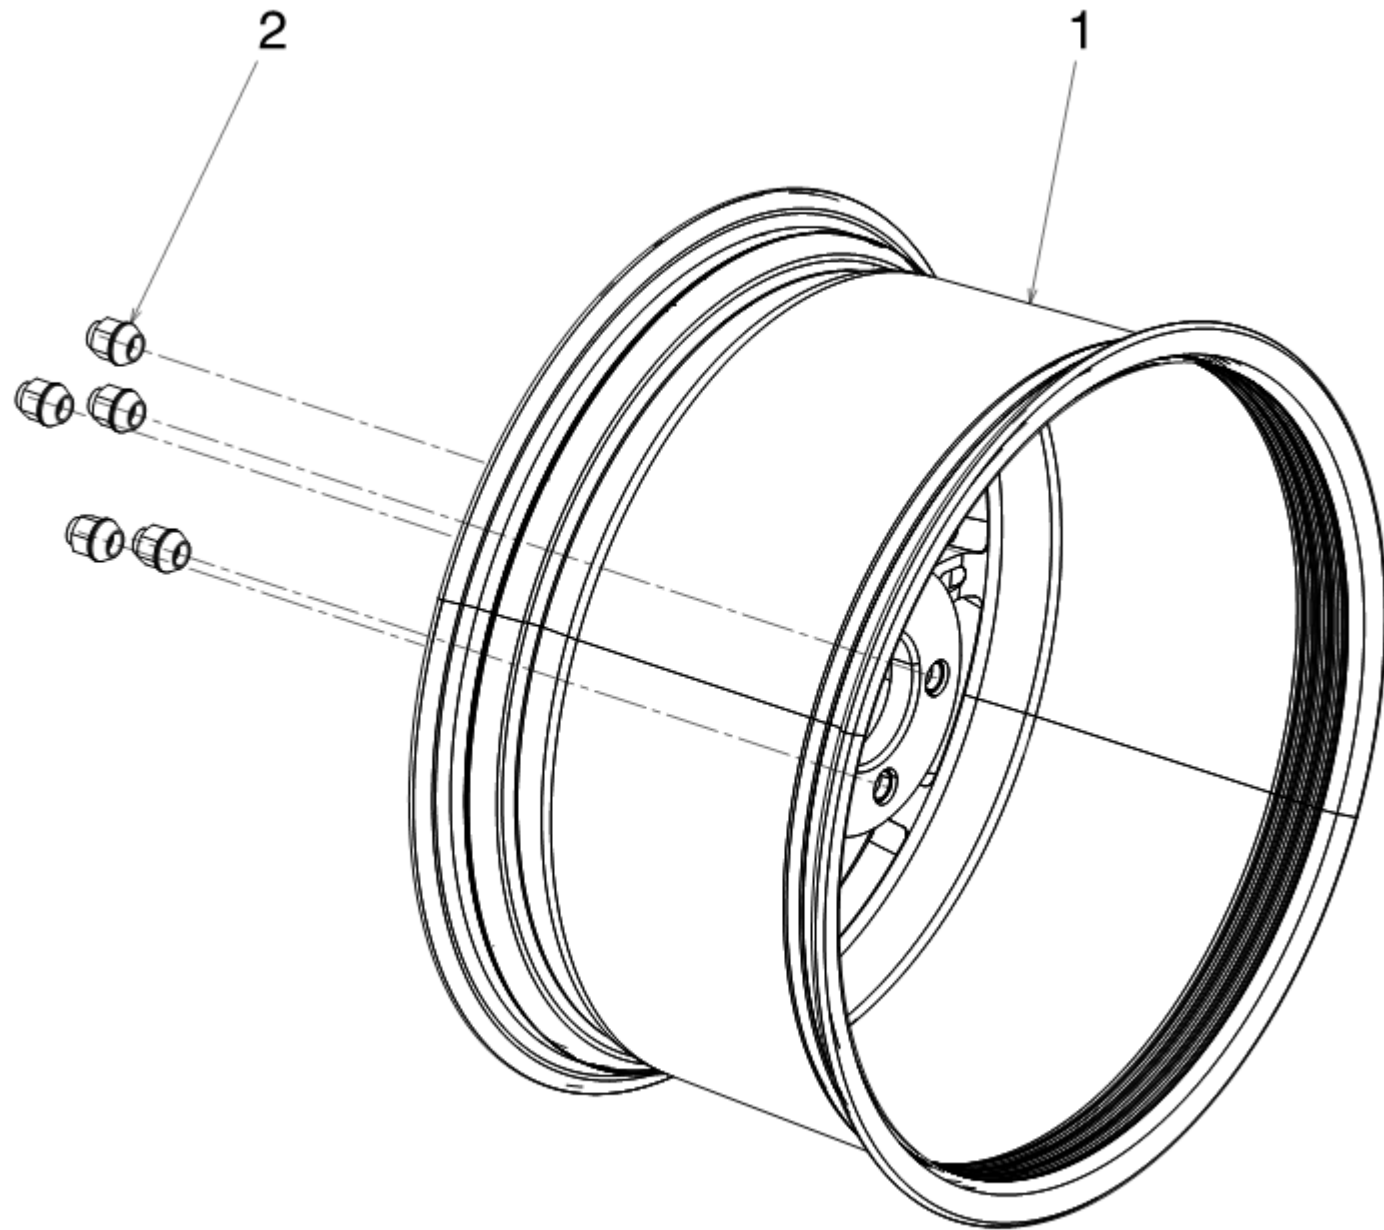


**RF01-12-00820 TRANSMISSION ASSY**

Pos	Part no.	Description	Q.ty
1	RF01-12-00806	MIDSHAFT SUPPORT ASSY	1
2	RF01-12-01071	CENTRAL DRIVE SHAFT	1
3	RF01-12-01073	DRIVE SHAFT	2
4		JOINT GEARBOX SIDE	2
5		JOINT WHELL SIDE	2
6	RF01-05-00620-1	BUSHING JOINT WHELL SIDE	2
7		TRIPOD BOOT	4

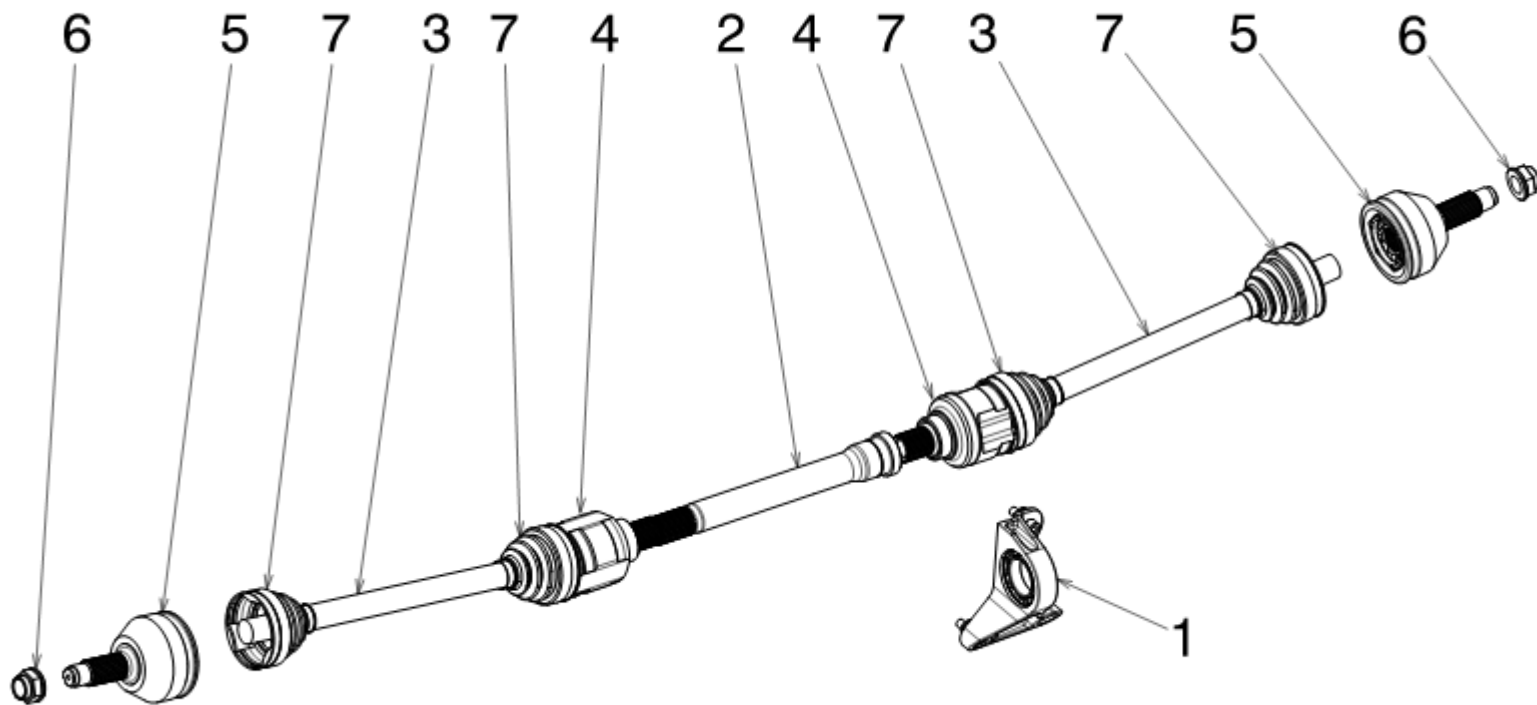


**RF01-12-00806 MIDSHAFT SUPPORT ASSY**

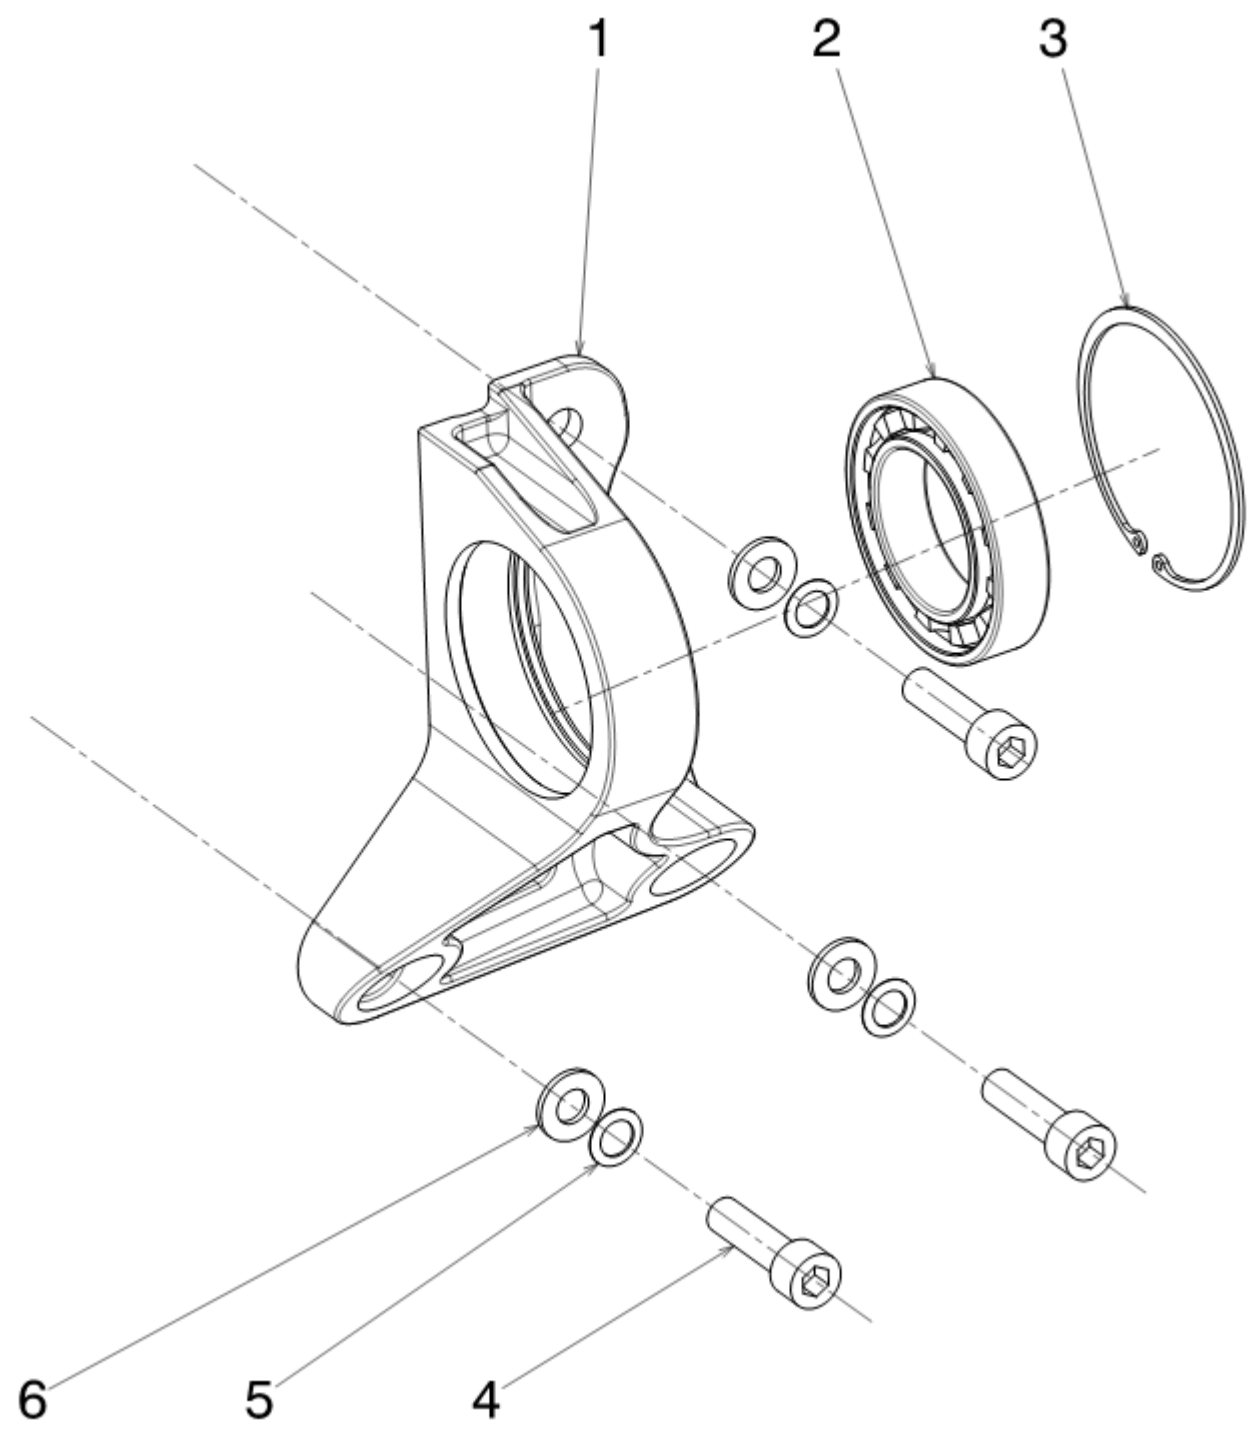


Pos	Part no.	Description	Q.ty
1	RF01-12-00567	MIDSHAFT SUPPORT	1
2	6009-2RS1	ROLLER BEARINGS SKF 75x16x45	1
3		SEEGER 78mm	1
4		HEX SOCKET SCREW M10x1,50 L25	3
5		KNURLED WASHER 10X16	3
6		PLANE WASHER 10X20	3

RF01-12-00716 GEARBOX ASSY

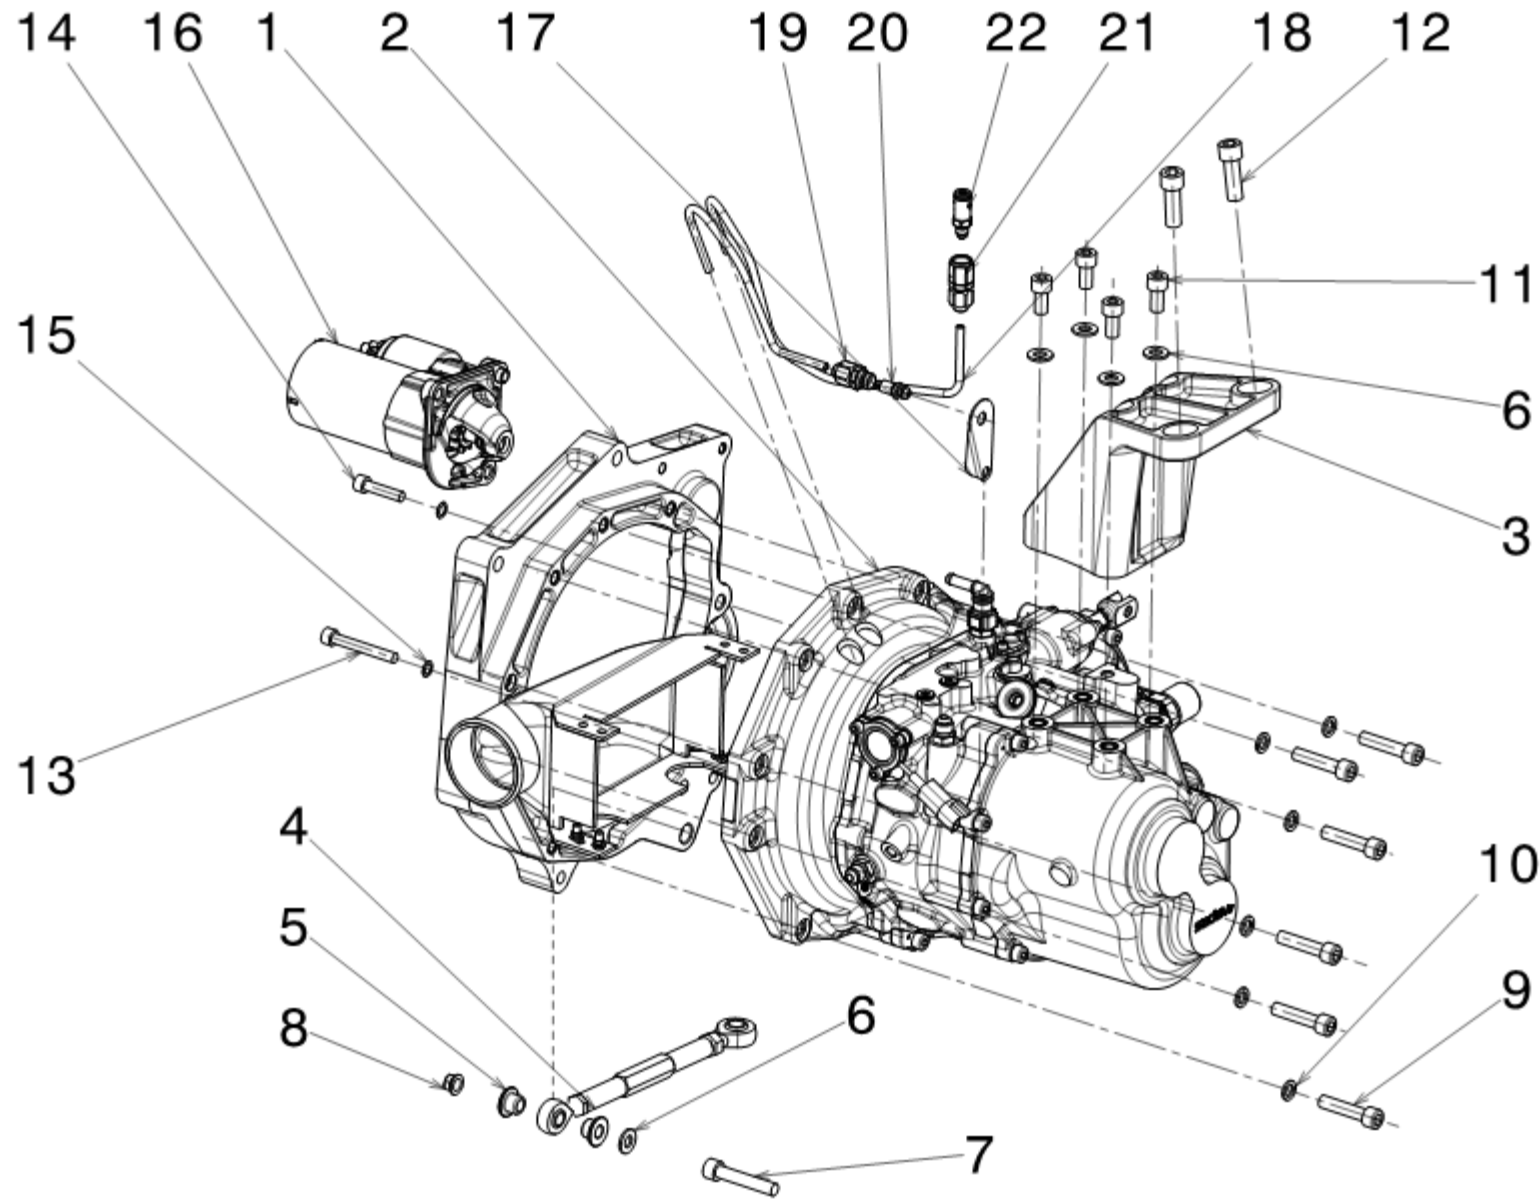

Pos	Part no.	Description	Q.ty
1	RF01-12-00544	BELL HOUSING	1
2	BV ST82-14	GEARBOX SADEV	1
3	RF01-12-00816	GEARBOX SUPPORT	1
4	RF01-12-00552	TIE ANTITORQUE ASSY	1
5	RF01-12-00553	BUSHING ANTITORQUE	2
6		PLAIN WASHER 10X20	5
7		HEX SCREW M10X1.25X55	1
8		ASTORI NUT M10X1.25	1
9		HEX SOCKET SCREW M10x1.25 L40	6
10		PLANE WASHER 10X16	6
11		HEX SOCKET SCREW M10X20	4
12		HEX SOCKET SCREW M12X1.25 L35	2
13		HEX SOCKET SCREW M8X60	1
14		HEX SOCKET SCREW M8 L40	1
15		TOOTHED WASHER 8X13	2
16		STARTER MOTOR ASSY	1
17	RF01-12-01077	BRACKET BLEED CLUTCH	1
18		PIPE DASH 3	2
19		THREADED DASH3	1
20		BLEED NIPPLE CLUTCH	1
21	ATEC 642-100	THREADED DASH3	1
22	SPH03-1652-BA	THREADED FEMALE STAUBLI	1




**RF01-12-00716 GEARBOX ASSY**

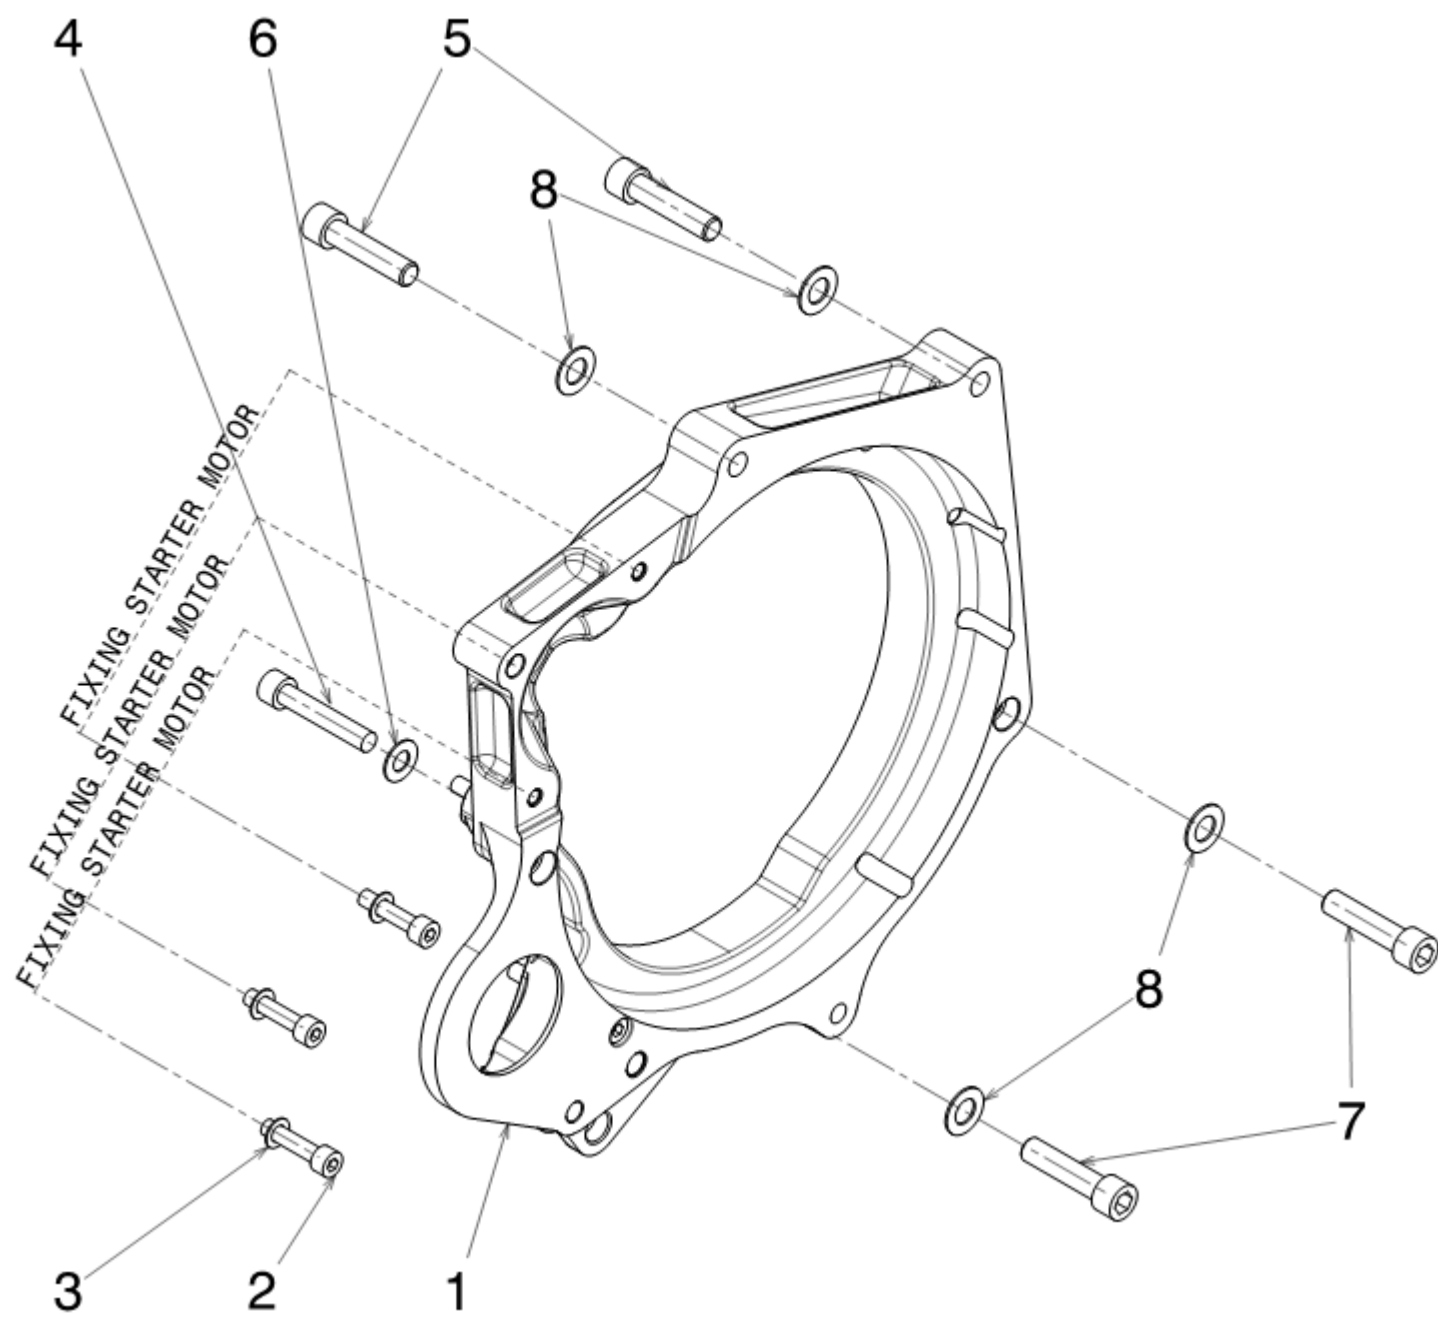

Pos	Part no.	Description	Q.ty
1	RF01-12-00544	BELL HOUSING	1
2		HEX SOCKET SCREW M8x1.25 L=35	3
3		SPRING WASHER 8x15	3
4		HEX SOCKET SCREW M10X1.25 L=60	3
5		HEX SOCKET SCREW M12X1.25 L=60	2
6		SPRING WASHER 10x20	1
7		HEX SOCKET SCREW M12X50	2
8		SPRING WASHER 12x24	4




RF01-12-00716 GEARBOX ASSY

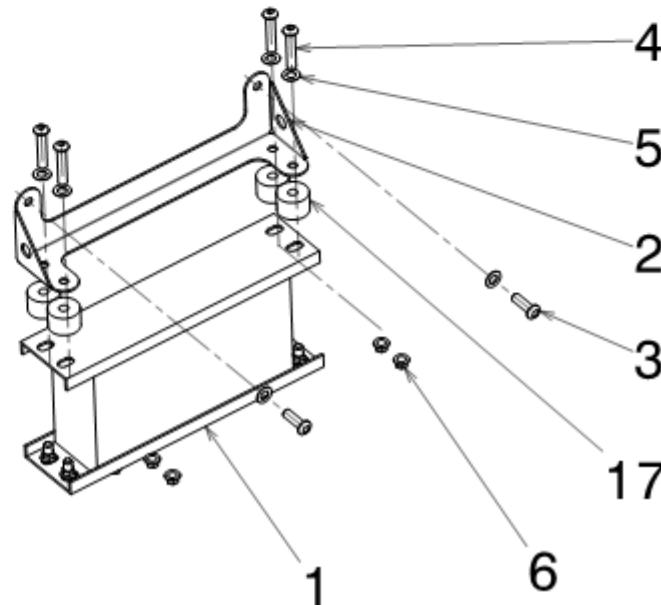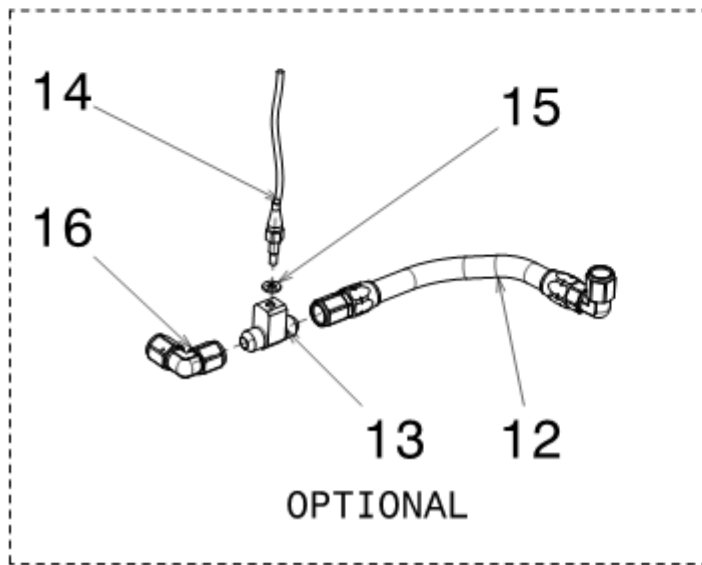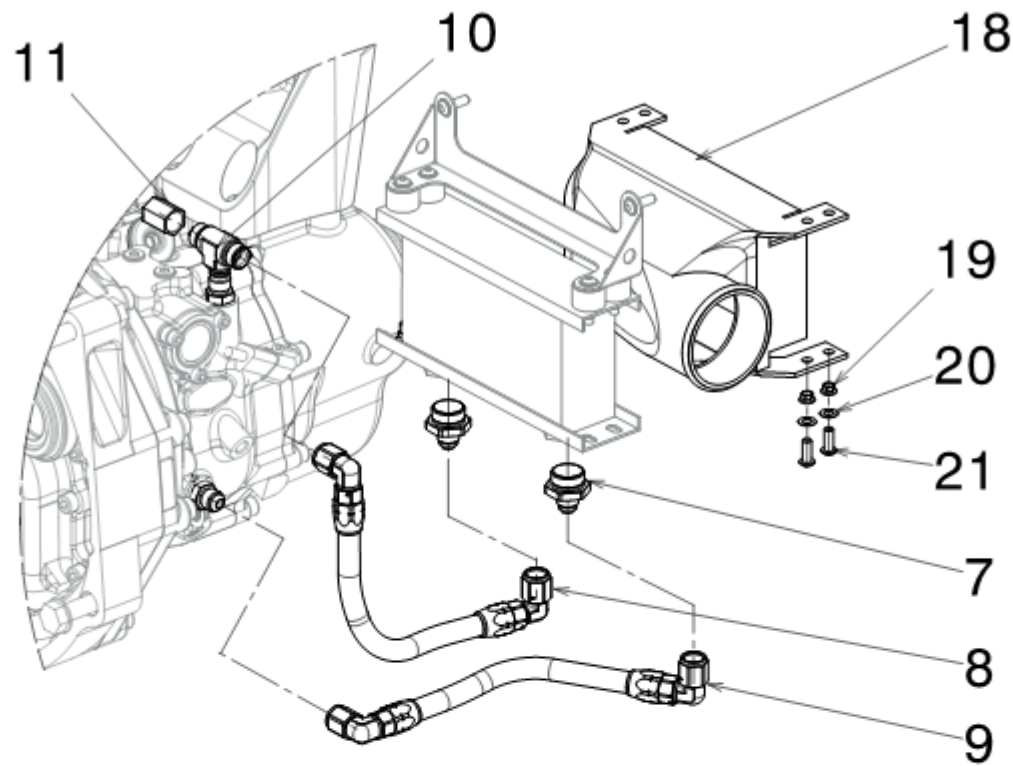


Pos	Part no.	Description	Q.ty
1	50-113-7612	GEARBOX RADIATOR	1
2	RF01-12-00961	BRACKET GEARBOX RADIATOR	1
3		BUTTON HEAD BOLT M6x20	2
4		BUTTON HEAD BOLT M6x16	4
5		SPRING WASHER 6x12	6
6		NUT ASTORI M6	4
7	ATEC 649-187	ADAPTERS RADIATOR	2
8	RF01-12-01035	PIPE OIL RADIATOR GEARBOX 1	1
9	RF01-12-01036	PIPE OIL RADIATOR GEARBOX 2	1
10		3-WAY MALE-FEMALE-MALE	1
11		JUNCTION	1
12	RF01-12-01037	PIPE OIL RADIATOR GEARBOX OPT	1
13	RF01-12-00968	JUNCTION DASH_6 FOR TEMPERATURE SENSOR	1
14	PT1000	TEMPERATURE SENSOR	1
15		COPPER WASHER 6X12	2
16		JUNCTION 90 DEG. FEMALE-FEMALE	1
17	RF01-12-01018	RUBBER SPACERS GEARBOX RADIATOR	4
18	RF02-09-01019	COOLING GEARBOX RADIATOR	1
19		NUT ASTORI M6	4
20		SPRING WASHER 6X12	4
21		BUTTON HEAD BOLT M6x16	4

**RF01-12-00552 TIE ANTITORQUE ASSY**

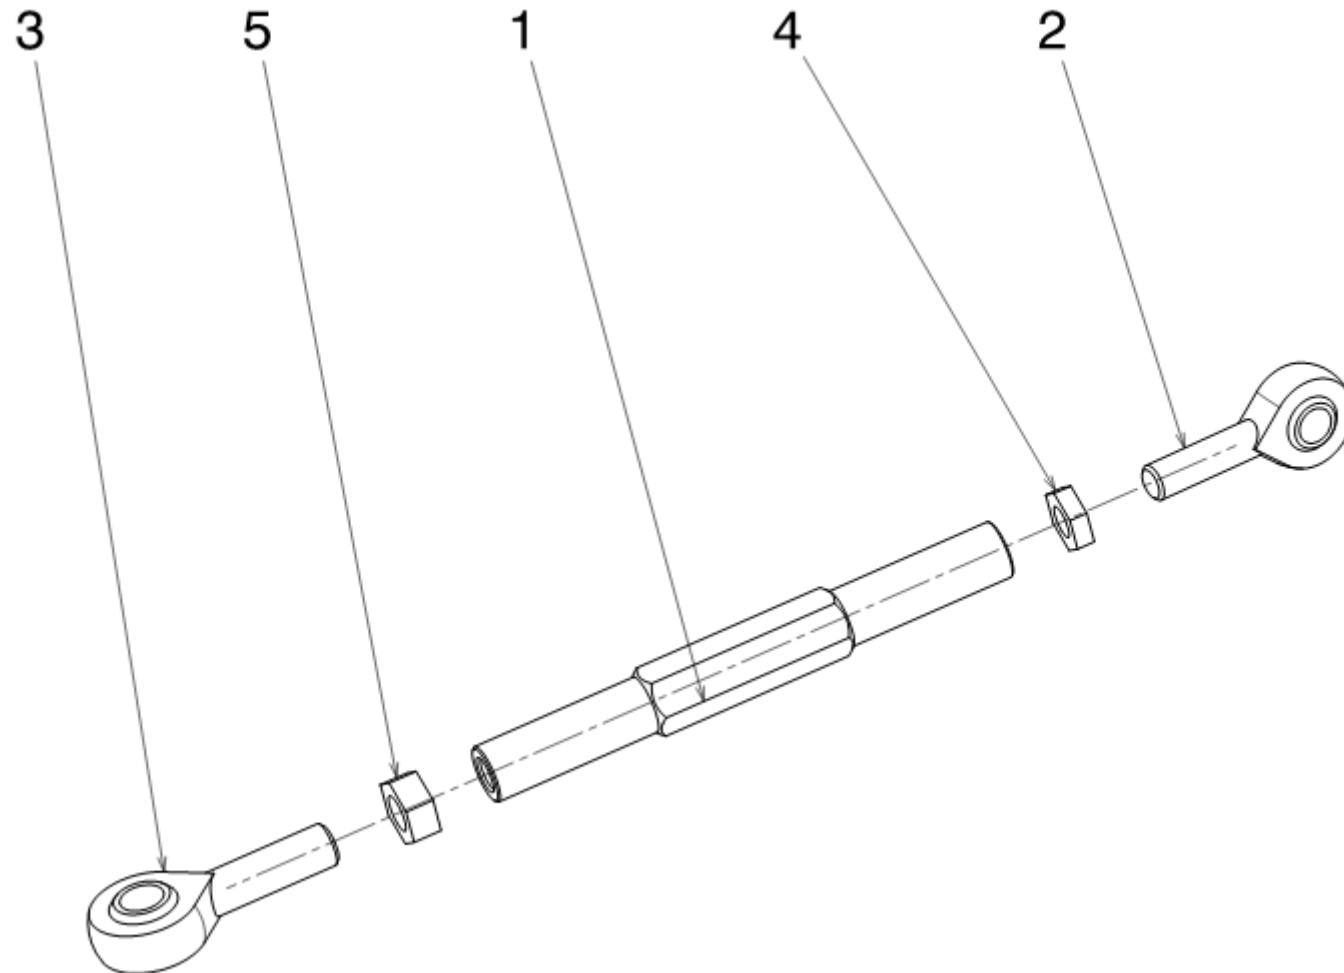


Pos	Part no.	Description	Q.ty
1	RF01-12-00551	TIE ANTITORQUE	1
2	KAL 10 D	MALE BALL JOINT M10 LEFT	1
3	KA 12 D	MALE BALL JOINT M12	1
4		NUT M10x1,50 LH	1
5		NUT M12x1,75	1

## RF01-16-00940 COMPLETE GEARBOX ACTUATOR

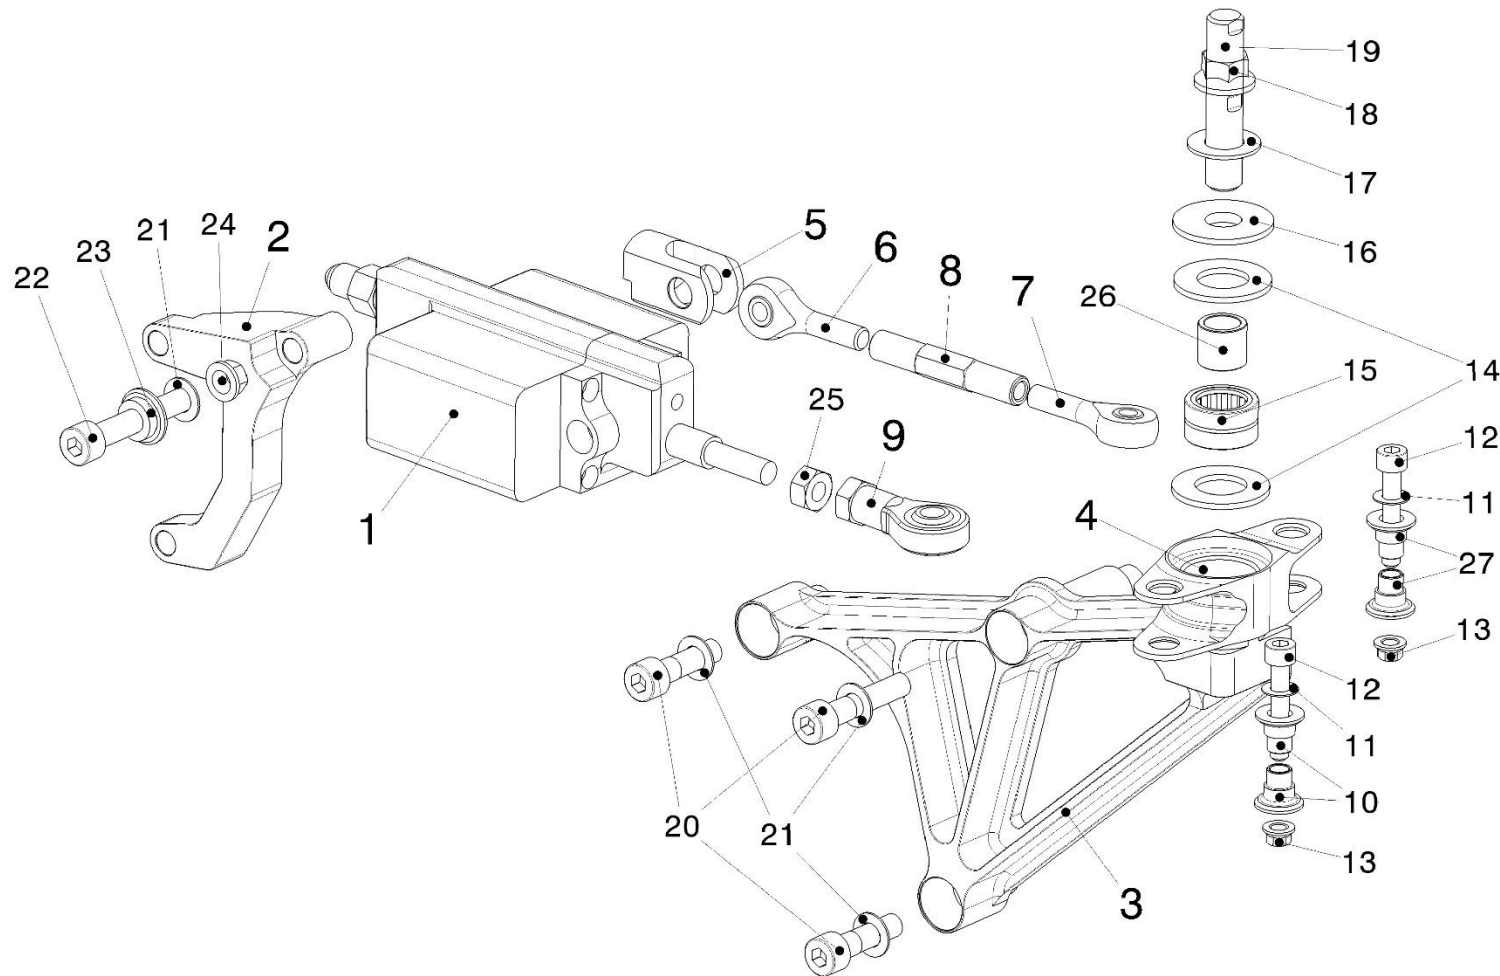

Pos	Part no.	Description	Q.ty
1	RF01-16-00941	GEARBOX ACTUATOR	1
2	RF01-16-01050	GEARBOX ACTUATOR SUPPORT	1
3	RF01-16-01040	ROCKER SUPPORT	1
4	RF01-16-01042	ROCKER	1
5	RF01-16-00946	GEARBOX FORK	1
6	KAL 06 D	MALE LH BALL JOINT	1
7	KA 06 D	MALE RH BALL JOINT	1
8	RF01-16-01006	GEARBOX ACTUATOR ROD	1
9	KJ 08 D	FEMALE BALL JOINT	1
10	RF01-16-01048	ACTUATOR/ROCKER SPACER	2
11		HEX SOCKET SCREW M8 L40	3
12		BUTTON HEAD SCREW M6 L40	2
13		SELF LOCKING NUT M6	3
14	RF01-16-01044	TEFLON SPACER	2
15	RF01-16-01043	ROCKER BEARING	1
16	RF01-16-01046	ROCKER STUD SPACER	1
17		WASHER 12X24	1
18		NUT M12	1
19	RF01-16-01047	ROCKER STUD	1
20		HEX SOCKET M8 L30	2
21		KNURLED WASHER 8X16	3
22		HEX SOCKET M8 L50	1
23	RF01-16-01051	ACTUATOR/SUPPORT SPACER	1
24		SELF LOCKING NUT M8	1
25		NUT M8	1
26	RF01-16-01045	ROCKER BEARING INNER BUSHING	1
27	RF01-16-01049	GEARBOX/ROCKER SPACER	2
28	RF01-16-01052	GEARBOX FORK/ROD SPACER	2
29		HEX SOCKET SCREW M6 L26	1
30		GEARBOX FORK SCREW	1
31		NUT M6 RH	1
32		NUT M6 LH	1


**RF01-16-00940 COMPLETE GEARBOX  
 ACTUATOR**

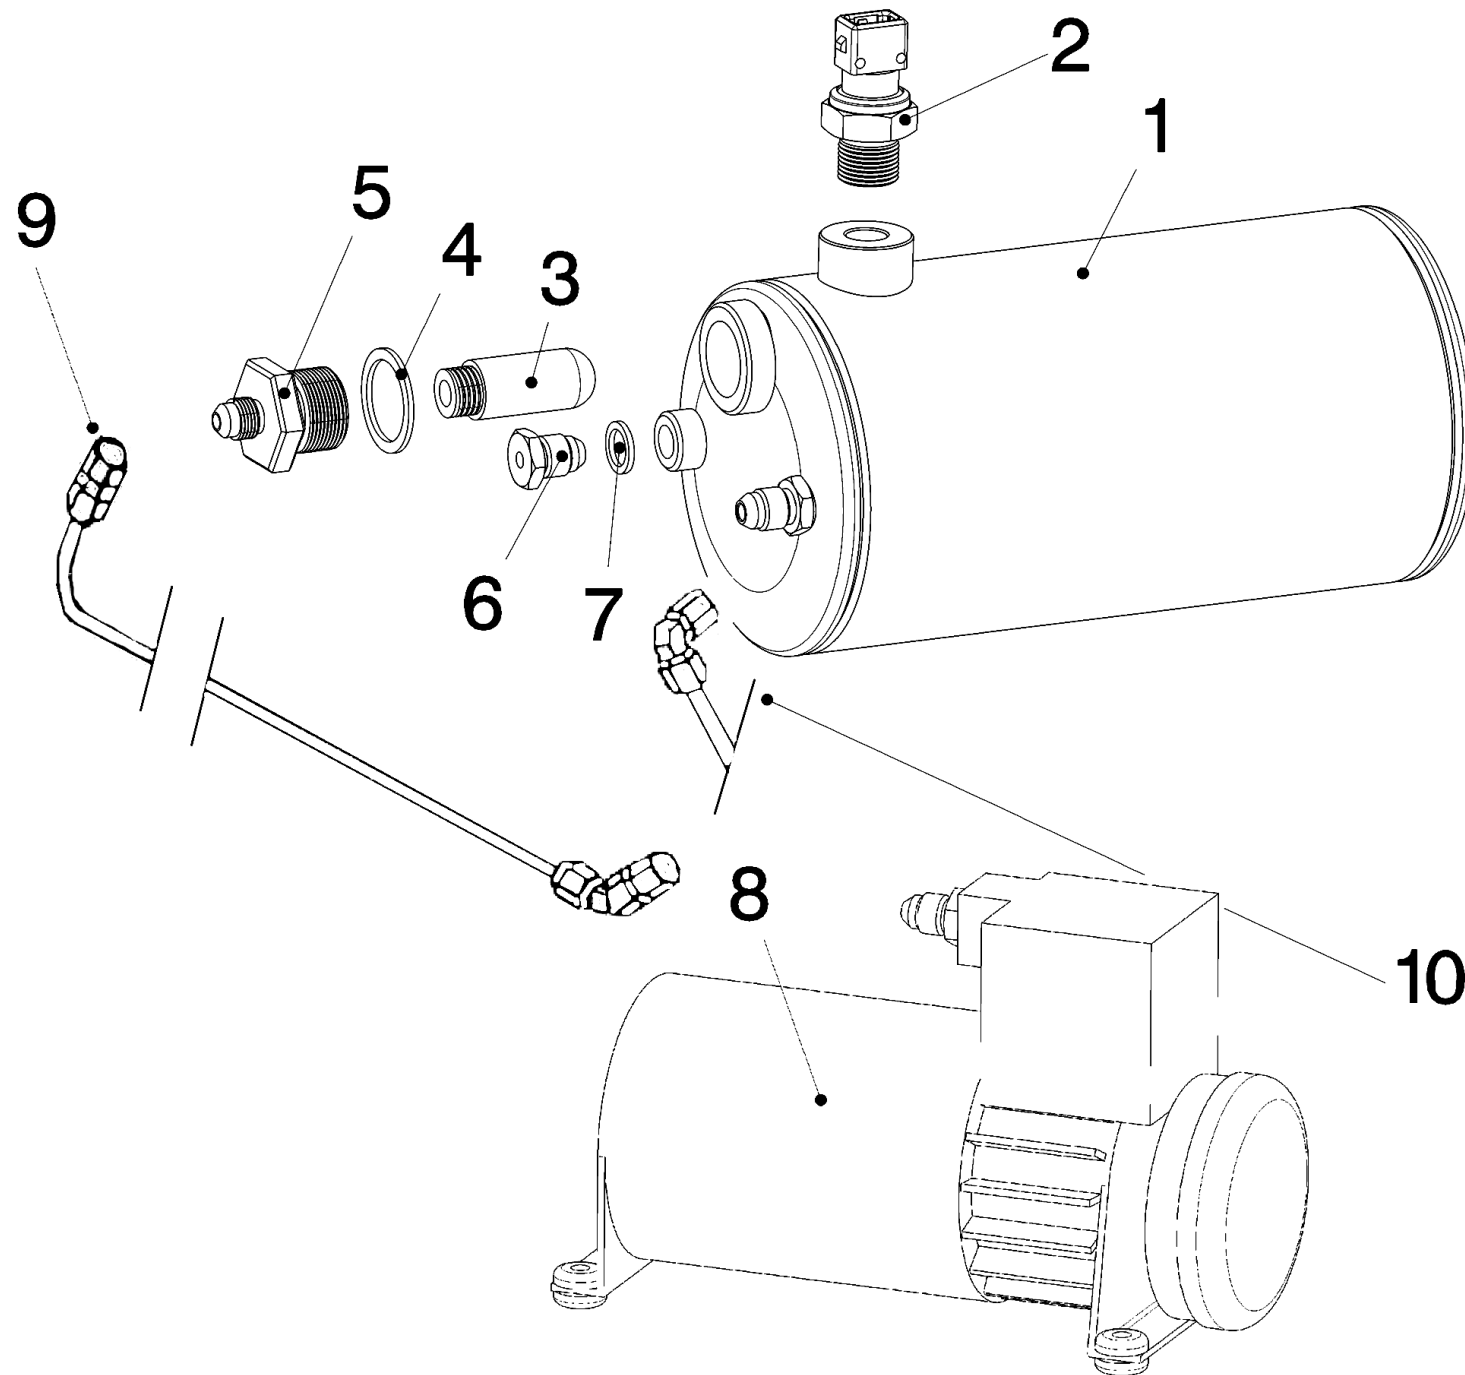

Pos	Part no.	Description	Q.ty
1	RF01-16-00949	COMPRESSED AIR TANK	1
2	RF01-16-00950	AIR PRESSURE SENSOR	1
3	RF01-16-00949-FIL	AIR FILTER	1
4		COPPER WASHER	1
5		ADAPTER M22 – DASH4	1
6		SCREW DASH4	1
7		COPPER WASHER	1
8	RF01-16-00948	COMPRESSOR	1
9	RF02-12-00422	COMPRESSOR/TANK AIR PIPE	1
10	RF02-12-00421	TANK/ACTUATOR AIR PIPE	1


**RF02-16-01091 COMPLETE STEERING  
 WHEEL PLATE**

Pos	Part no.	Description	Q.ty
1	RF02-16-01092	STEERING WHEEL PLATE	1
2	RF02-16-01094	RH PADDLESHIFT	1
3	RF02-16-01093	LH PADDLESHIFT	1

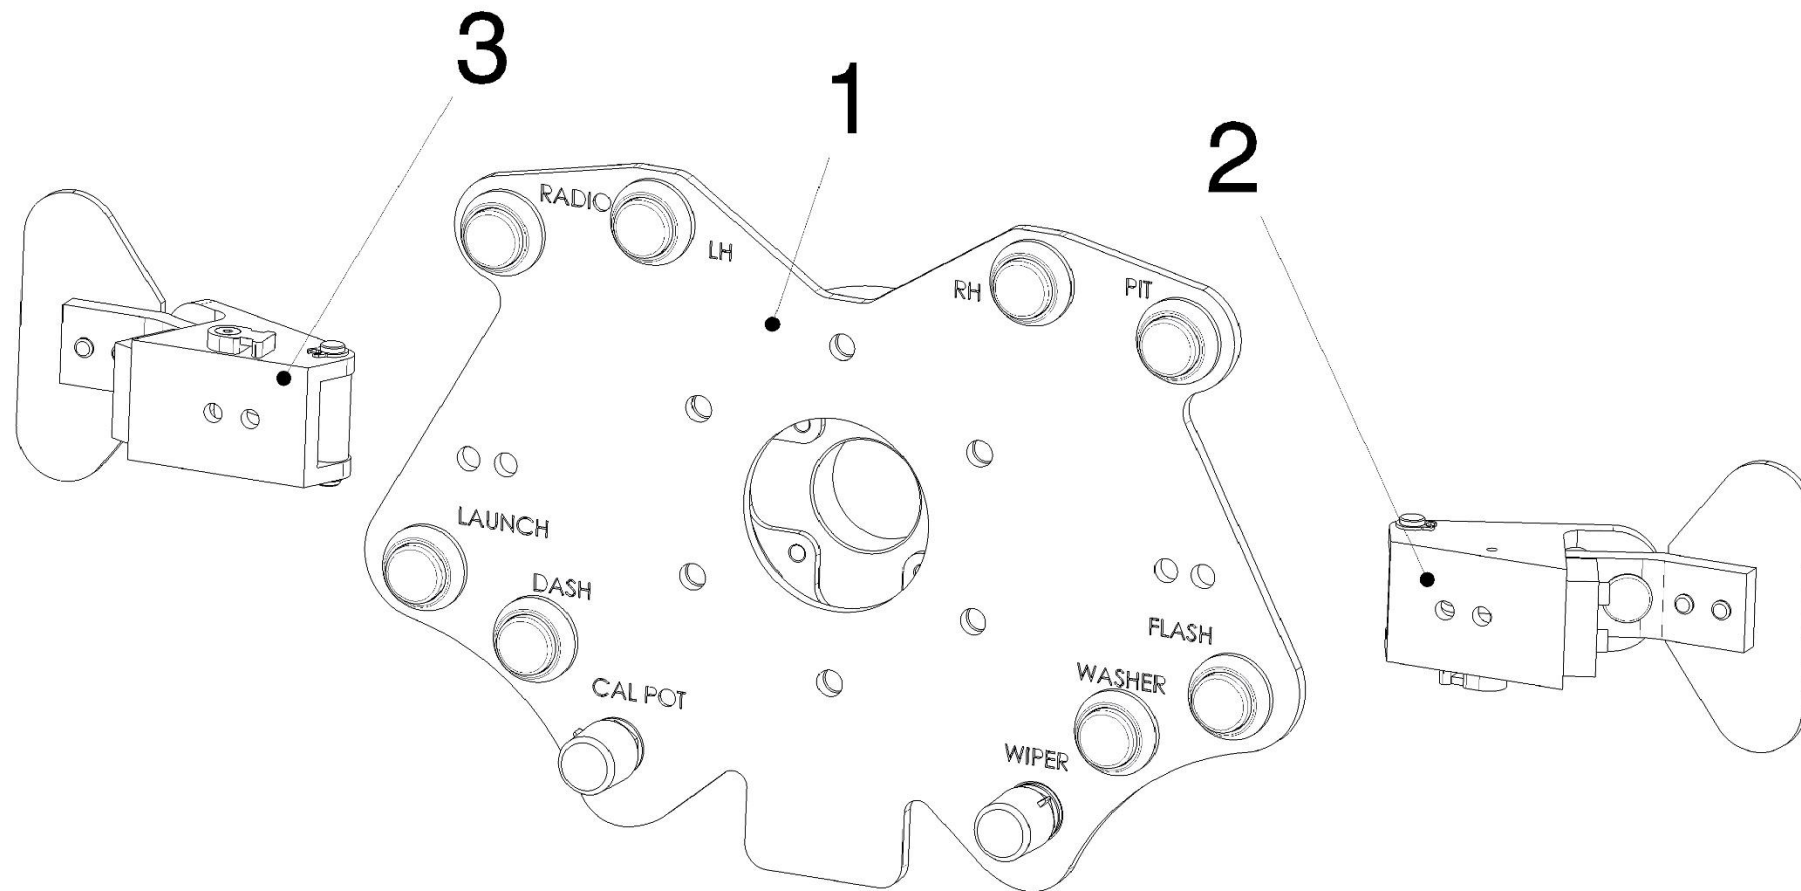


RF01-14-00698 CATCH TANK ASSY

Pos	Part no.	Description	Q.ty
1	RF01-14-00699	CATCH TANK ASSEMBLY	1
2	3109-06-10	JOINT 10X1 90° FOR RILSAN	3
3		JOINT M5	3
4	TB-RILSAN-6MM	RILSAN HOSE 6MM	0,1M
5		COPPER WASHER M5	1
6		BUTTON HEAD SOCKET SCREW M5X	1

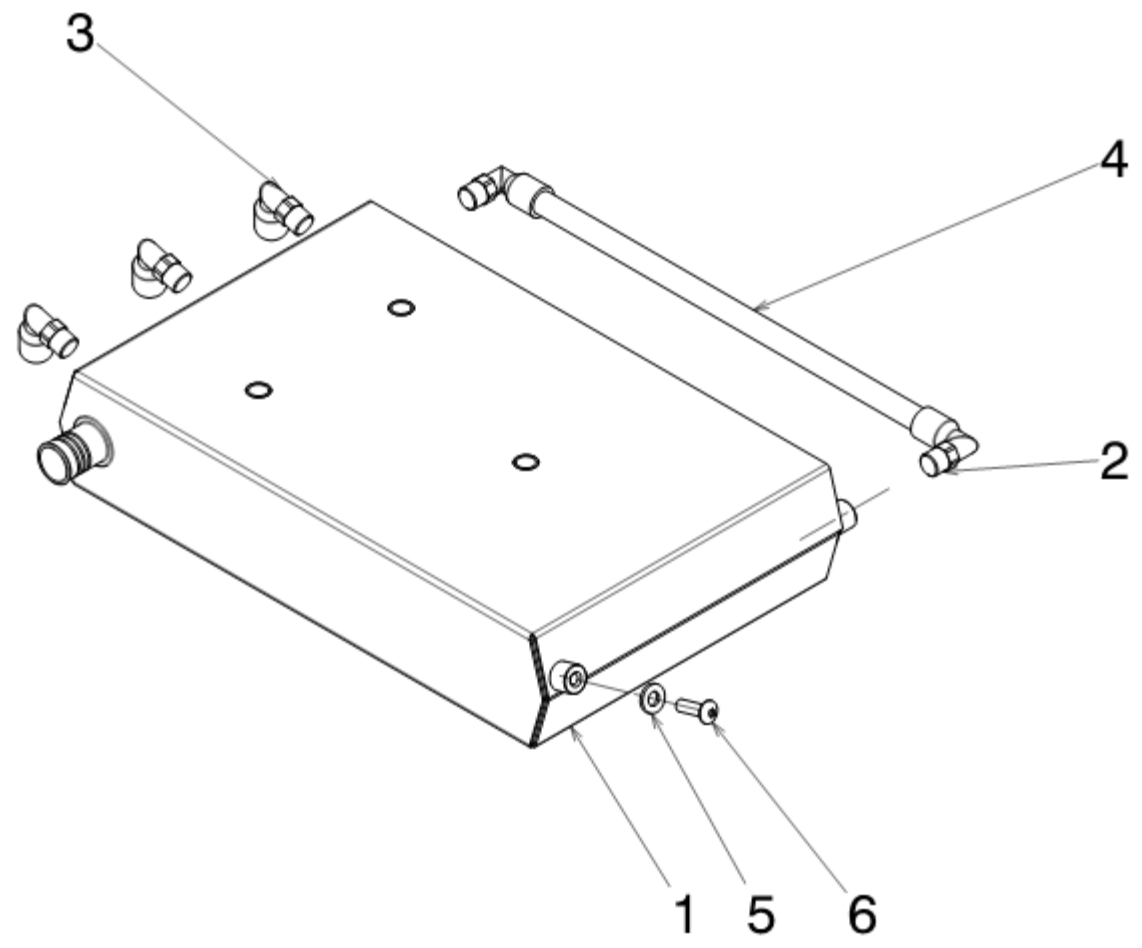


MANCA LUNGHEZZA VITE

**RF01-17-00669 INTERIOR EQUIPMENT**

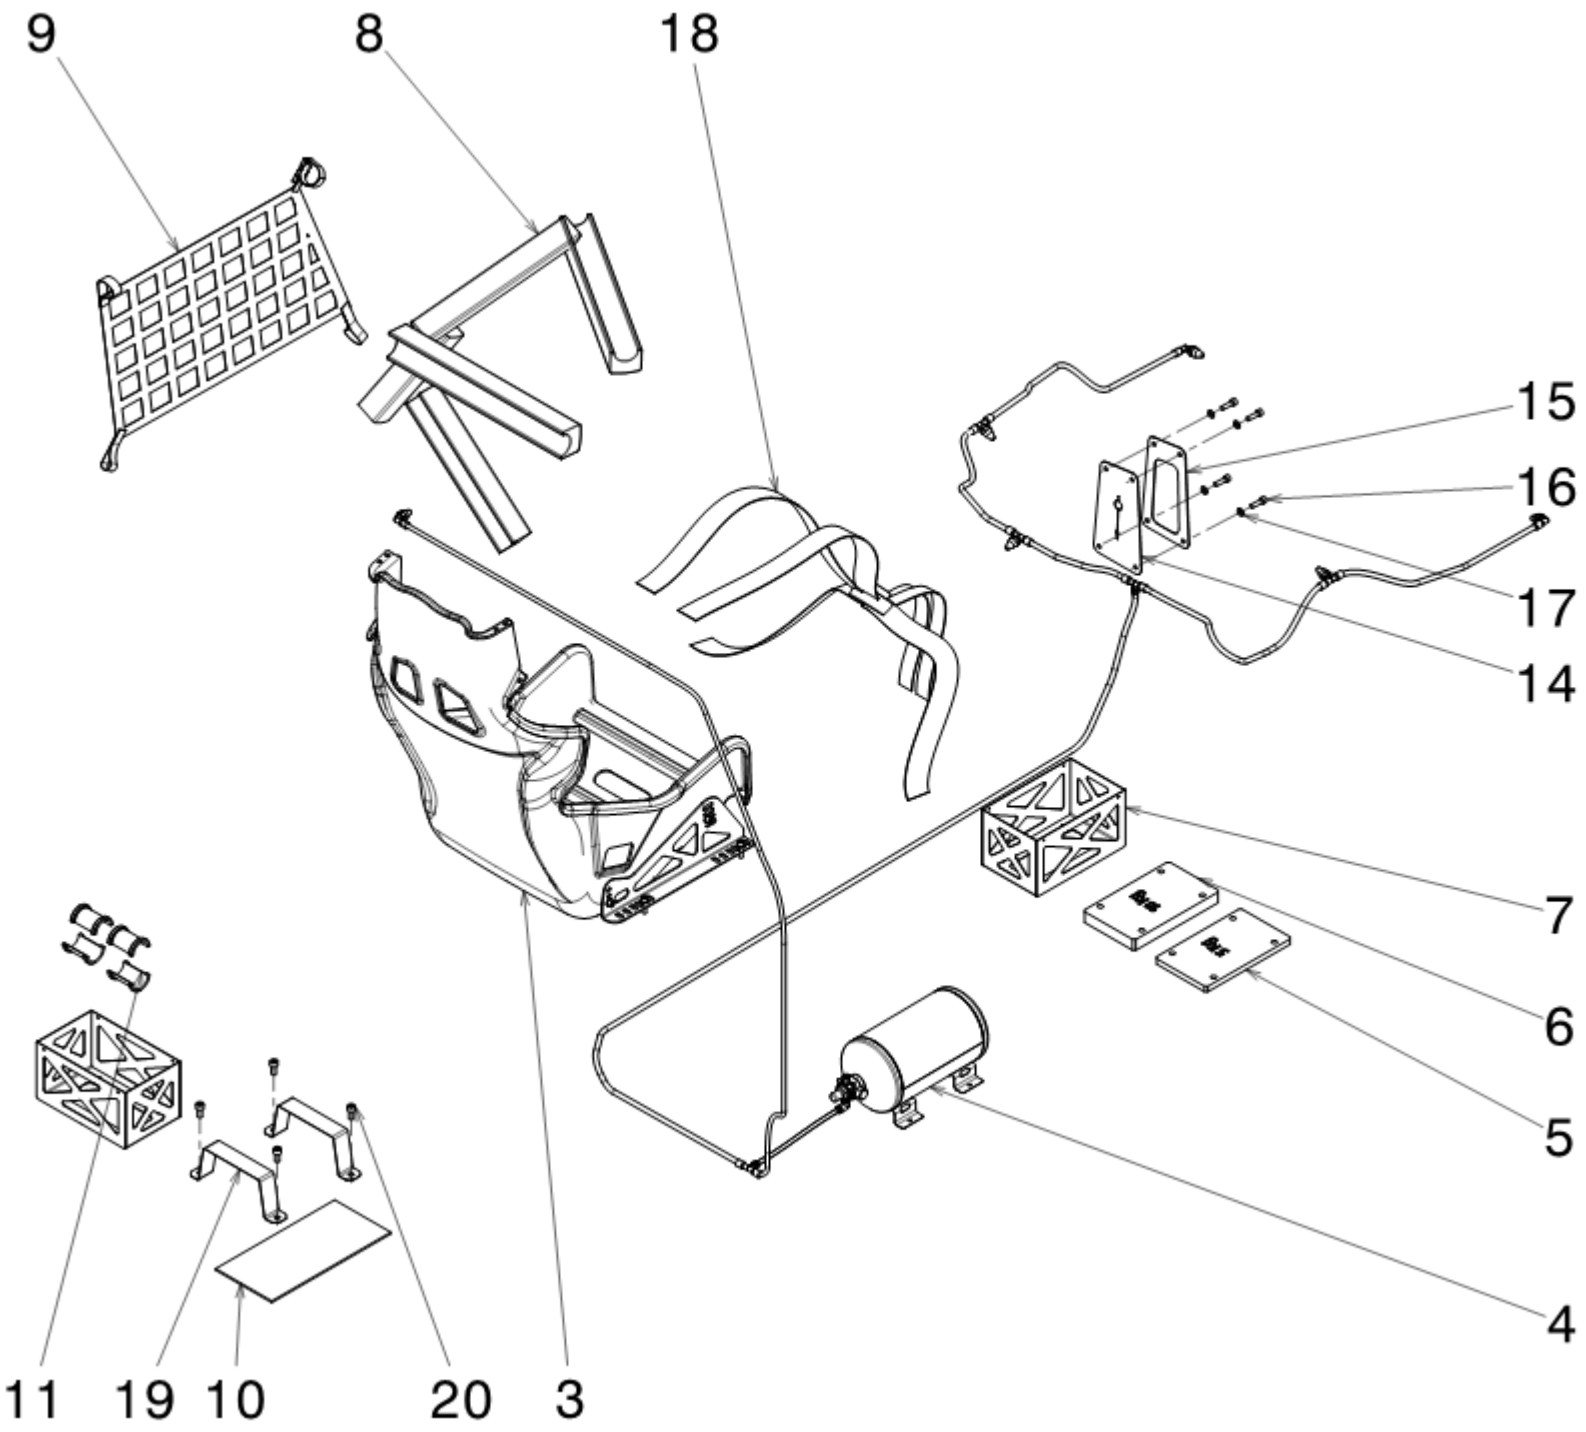

Pos	Part no.	Description	Q.ty
1	RF01-17-00967	DASHBOARD	1
2	RF01-17-01094	DASHBOARD COLUMN	2
3	RF01-18-00565	DRIVER SEAT ASSY	1
4	RF01-17-01040	EXTINGUISHING SYSTEM	1
5	RF01-17-00605	BALLAST 5KG	2
6	RF01-17-00610	BALLAST 10KG	2
7	RF01-17-00570	BALLAST BOX	2
8	AA115A	ROLLBAR PADDING	5
9	NA/1870/NT	WINDOW NET	1
10	RF01-17-01080	SUPPORT BATTERY	1
11	RF01-17-01070	SPACER BELT	4
12	30002603	FAN WINDSCREEN DEMISTING	1
13	RF01-17-00734	SUPPORT FAN WINDSCREEN DEMISTING	1
14	RF01-17-01201	SEALING BULKHEAD WIRING	1
15	RF01-17-01044	FAN PIPE DIAMETER 76	1
16	RF01-17-01048	DASHBOARD PIPE DIAMETER 41 RH	1
17	RF01-17-01049	DASHBOARD PIPE DIAMETER 41 LH	1
18	DA806F61	RACING SEAT BELT HARNESS RED	1
19	3Z1C62579B	BATTERY FIXING BRACKET	2
20		HEX SOCKET SCREW M10x1.5 L20	4


**RF01-17-00669 INTERIOR EQUIPMENT**

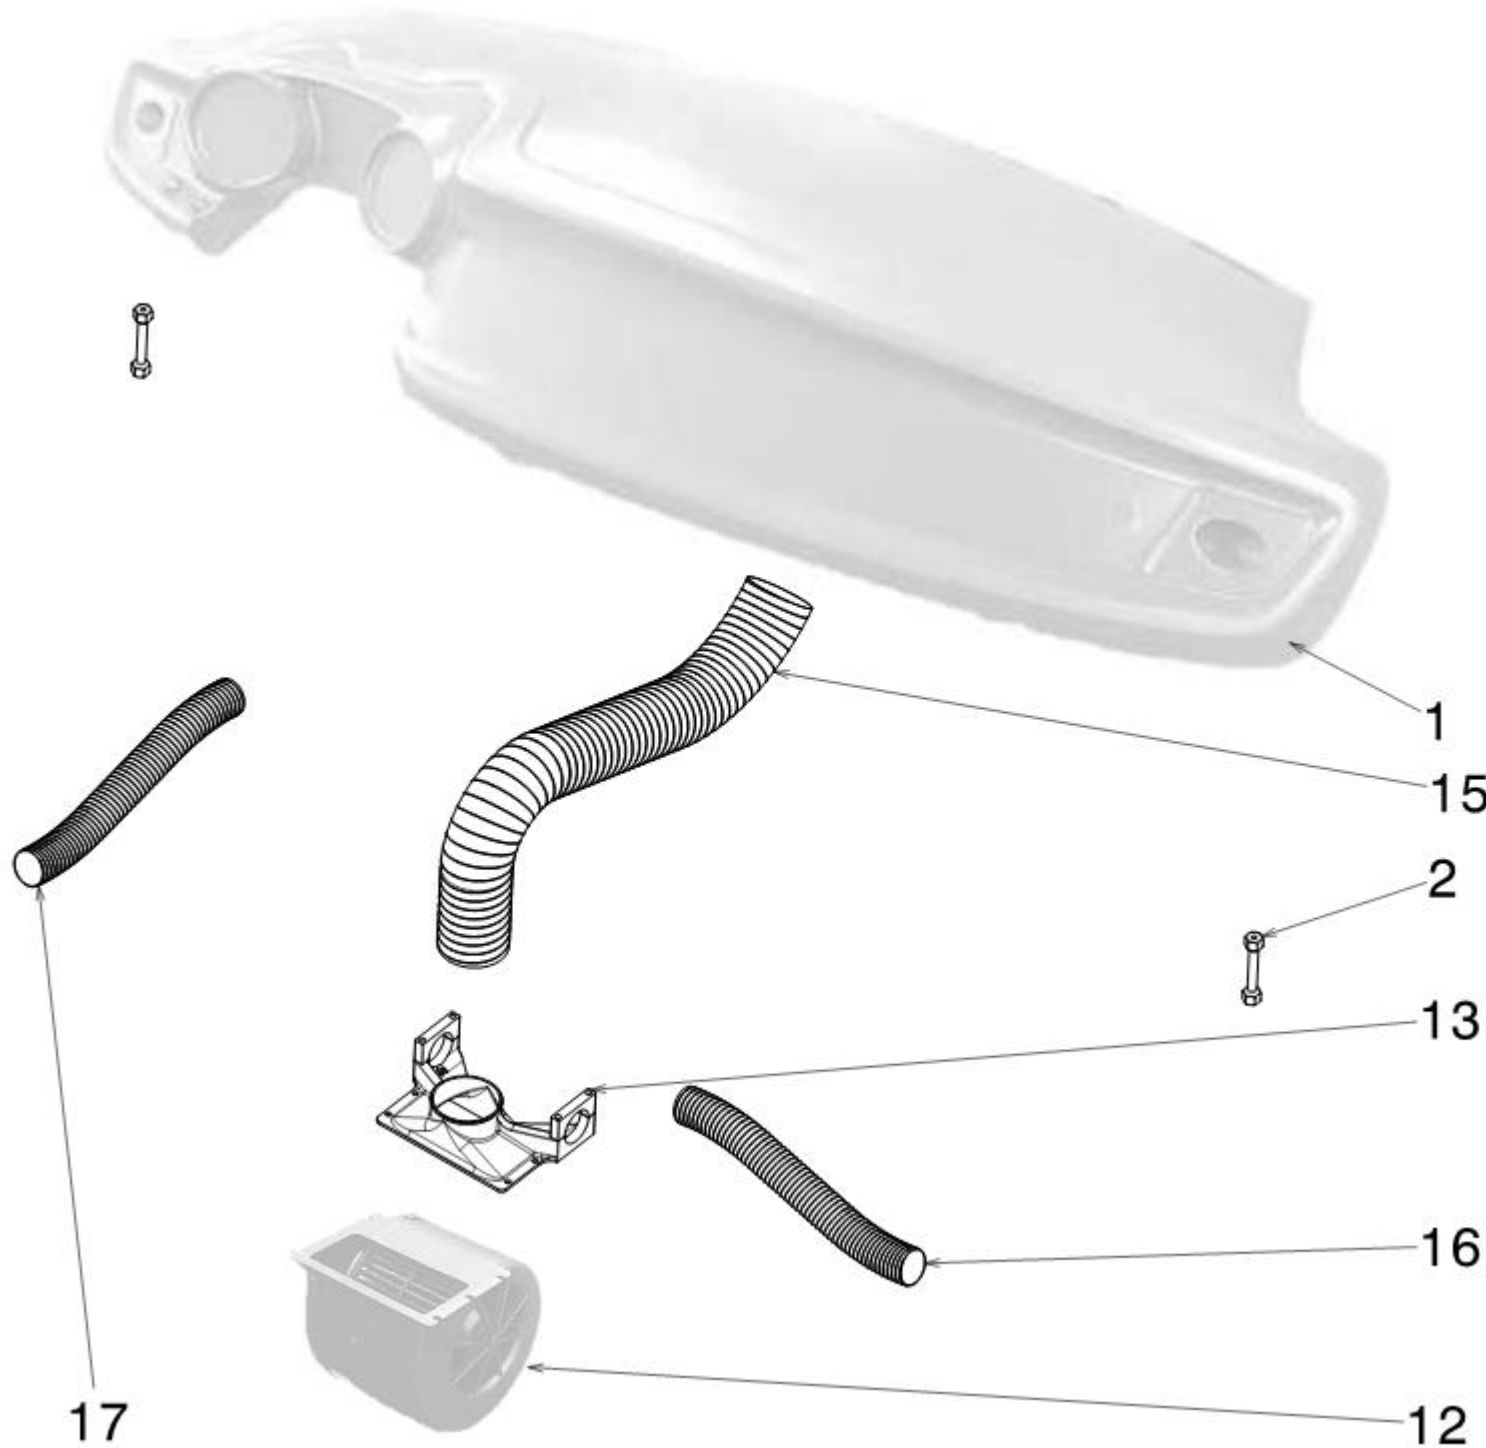

Pos	Part no.	Description	Q.ty
1	RF01-17-00967	DASHBOARD	1
2	RF01-17-01094	DASHBOARD COLUMN	2
3	RF01-18-00565	DRIVER SEAT ASSY	1
4	RF01-17-01040	EXTINGUISHING SYSTEM	1
5	RF01-17-00605	BALLAST 5KG	2
6	RF01-17-00610	BALLAST 10KG	2
7	RF01-17-00570	BALLAST BOX	2
8	AA115A	ROLLBAR PADDING	5
9	NA/1870/NT	WINDOW NET	1
10	RF01-17-01080	SUPPORT BATTERY	1
11	RF01-17-01070	SPACER BELT	4
12	30002603	FAN WINDSCREEN DEMISTING	1
13	RF01-17-00734	SUPPORT FAN WINDSCREEN DEMISTING	1
14	RF01-17-01201	SEALING BULKHEAD WIRING	1
15	RF01-17-01044	FAN PIPE DIAMETER 76	1
16	RF01-17-01048	DASHBOARD PIPE DIAMETER 41 RH	1
17	RF01-17-01049	DASHBOARD PIPE DIAMETER 41 LH	1
18	DA806F61	RACING SEAT BELT HARNESS RED	1
19	3Z1C62579B	BATTERY FIXING BRACKET	2
20		HEX SOCKET SCREW M10x1.5 L20	4




**RF01-08-01100 PEDALBOX WITH PUMP**

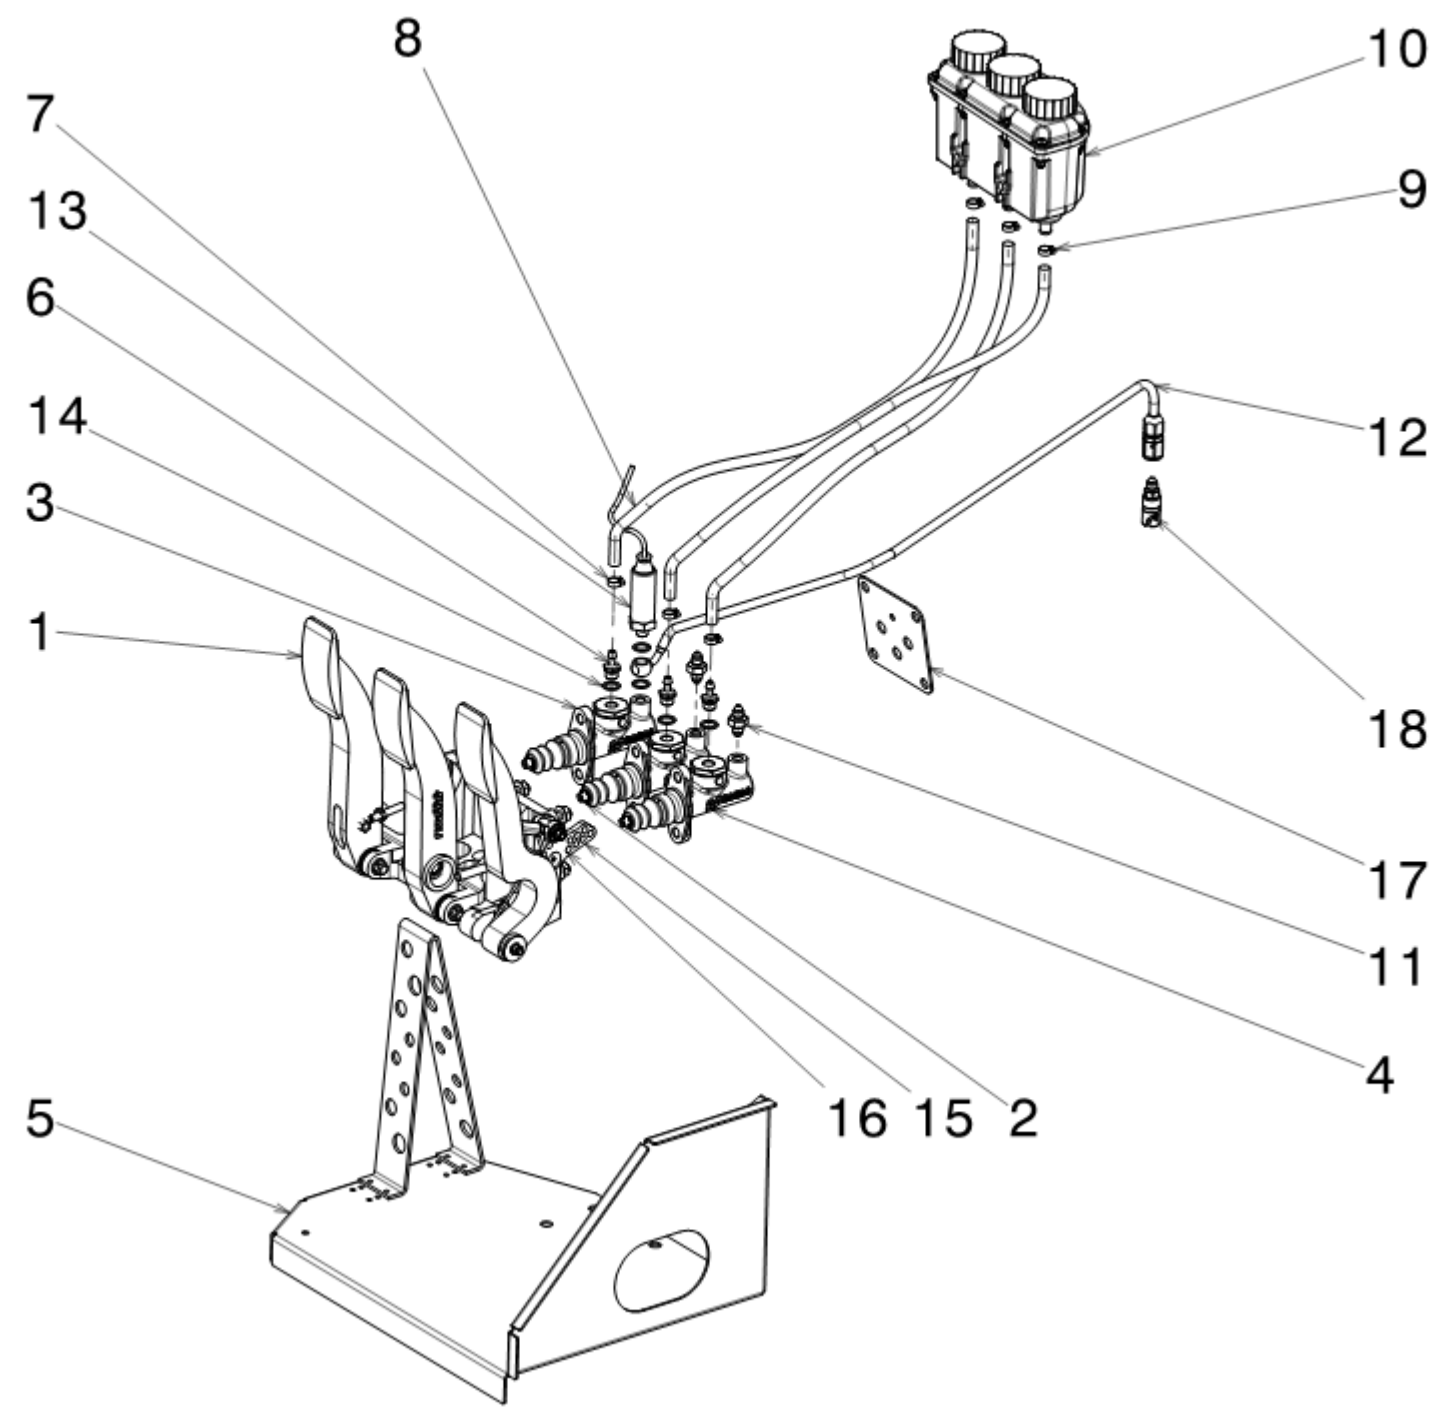


Pos	Part no.	Description	Q.ty
1	72-603	PEDALBOX ASSEMBLY TILTON 72-603	1
2	CP2623-91PRT11	5 EXTRA SHORT MASTER CYLINDER BLUE	1
3	CP2623-92PRT11	5 EXTRA SHORT MASTER CYLINDER GREEN	1
4	CP2623-93PRT11	5 EXTRA SHORT MASTER CYLINDER ORANGE	1
5	RF01-17-00950	PEDALBOX FOOTREST	1
6	CP2376-15	PUSH ON ADAPTOR (AP RACING)	3
7		METAL CLAMP D15	3
8	CP6614-102	RUBBER HOSE (L700)	1
9		METAL CLAMP D17	1
10	72-576	CHAMBER PLASTIC RESERVOIR	1
11	03212200	ADAPTOR 3/8"X 24UNF	2
12	RF02-08-00406	PIPE CLUTCH MASTER CYLINDER	1
13	RF01-16-01310	CLUTCH PRESSURE SENSOR	1
14		COPPER WASHER	2
15		THROTTLE KIT	1
16		THROTTLE POTENTIOMETER	1
17	RF01-17-01202	SEALING BULKHEAD BRAKE HOSES	1
18	SPH 03-7652	THREADED MALE STAUBLI	1

**RF01-17-01040 EXTINGUISHING SYSTEM**

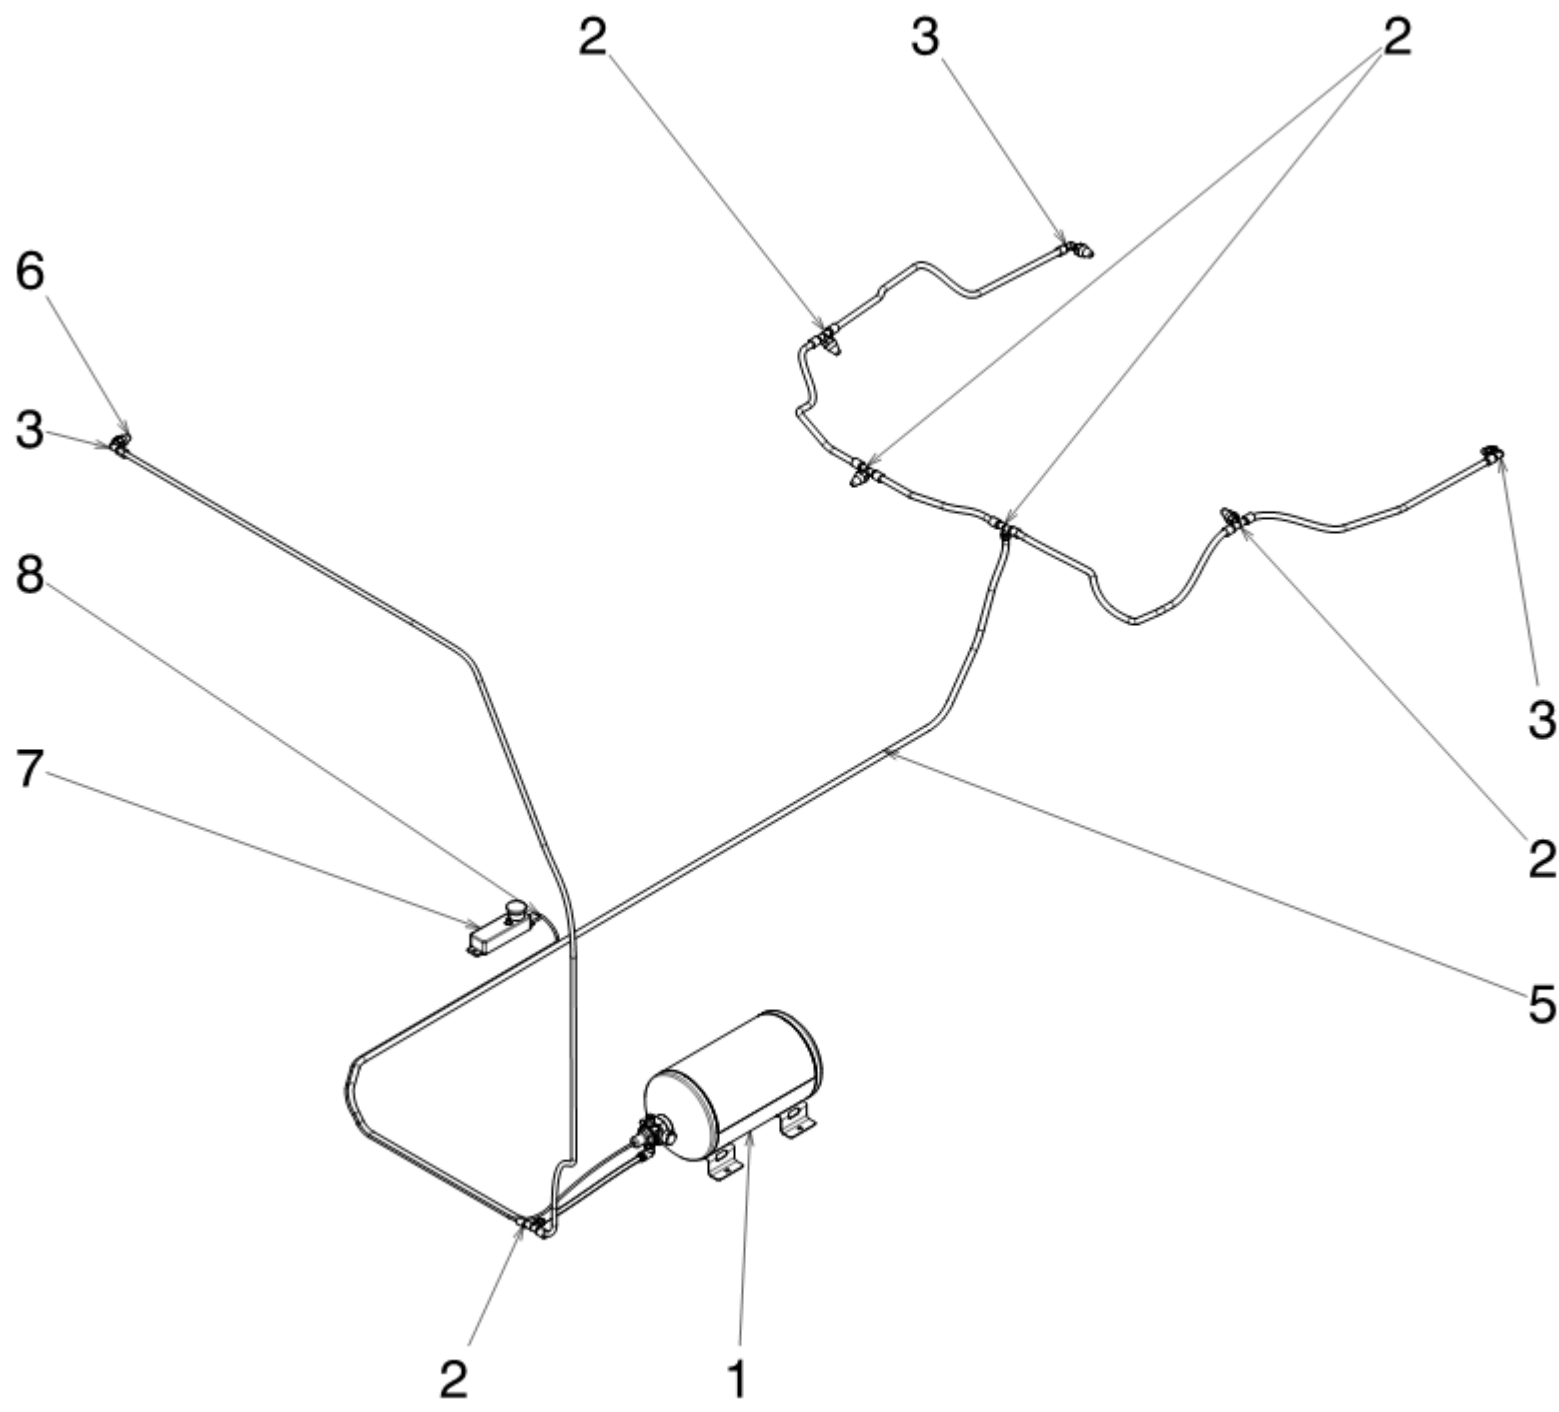


Pos	Part no.	Description	Q.ty
1		FIRE EXTINGUISHER OMP	1
2		3-WAY CONNECTION	5
3		90° CONNECTION	3
4		SHEAT	30
5		PIPE AND SHEAT	1
6		ATOMISER NOZZLE	6
7		CONTROL BOX	1
8		CONTROL BOX CABLE	1

**RF01-18-00565 DRIVER SEAT ASSY**

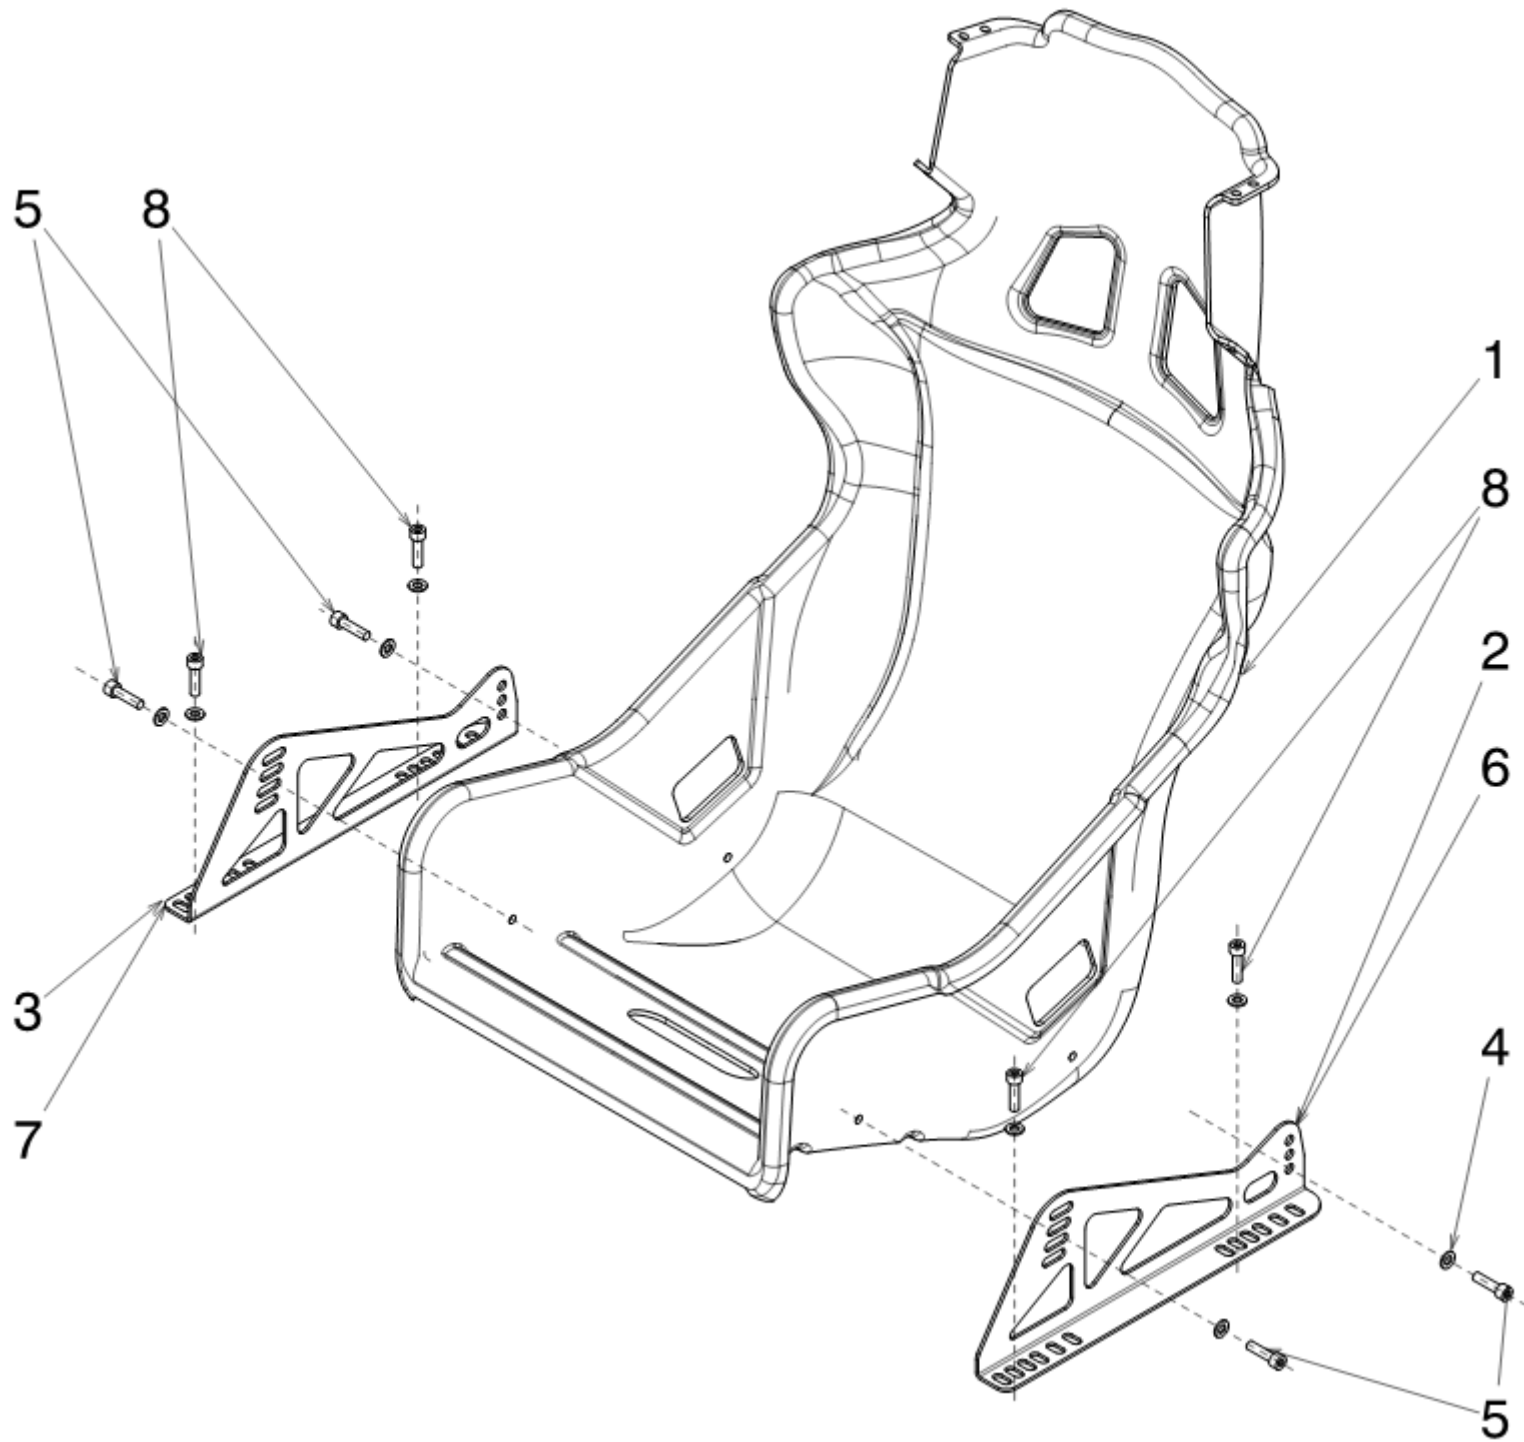


Pos	Part no.	Description	Q.ty
1	HTE400-R	SEAT OMP	1
2	RF01-18-00807	SEAT BRACKET LH	1
3	RF01-18-00808	SEAT BRACKET RH	1
4	-	PLANE WASHER 8X16	8
5	-	HEX SOCKET SCREW M8X25	4
6	RF01-18-00985	SEAT BRACKET HIGH LH (OPT)	1
7	RF01-18-00986	SEAT BRACKET HIGH RH (OPT)	1
8	-	HEX SOCKET SCREW M8X30	4

**RF01-22-01022 AIRJACK SYSTEM**

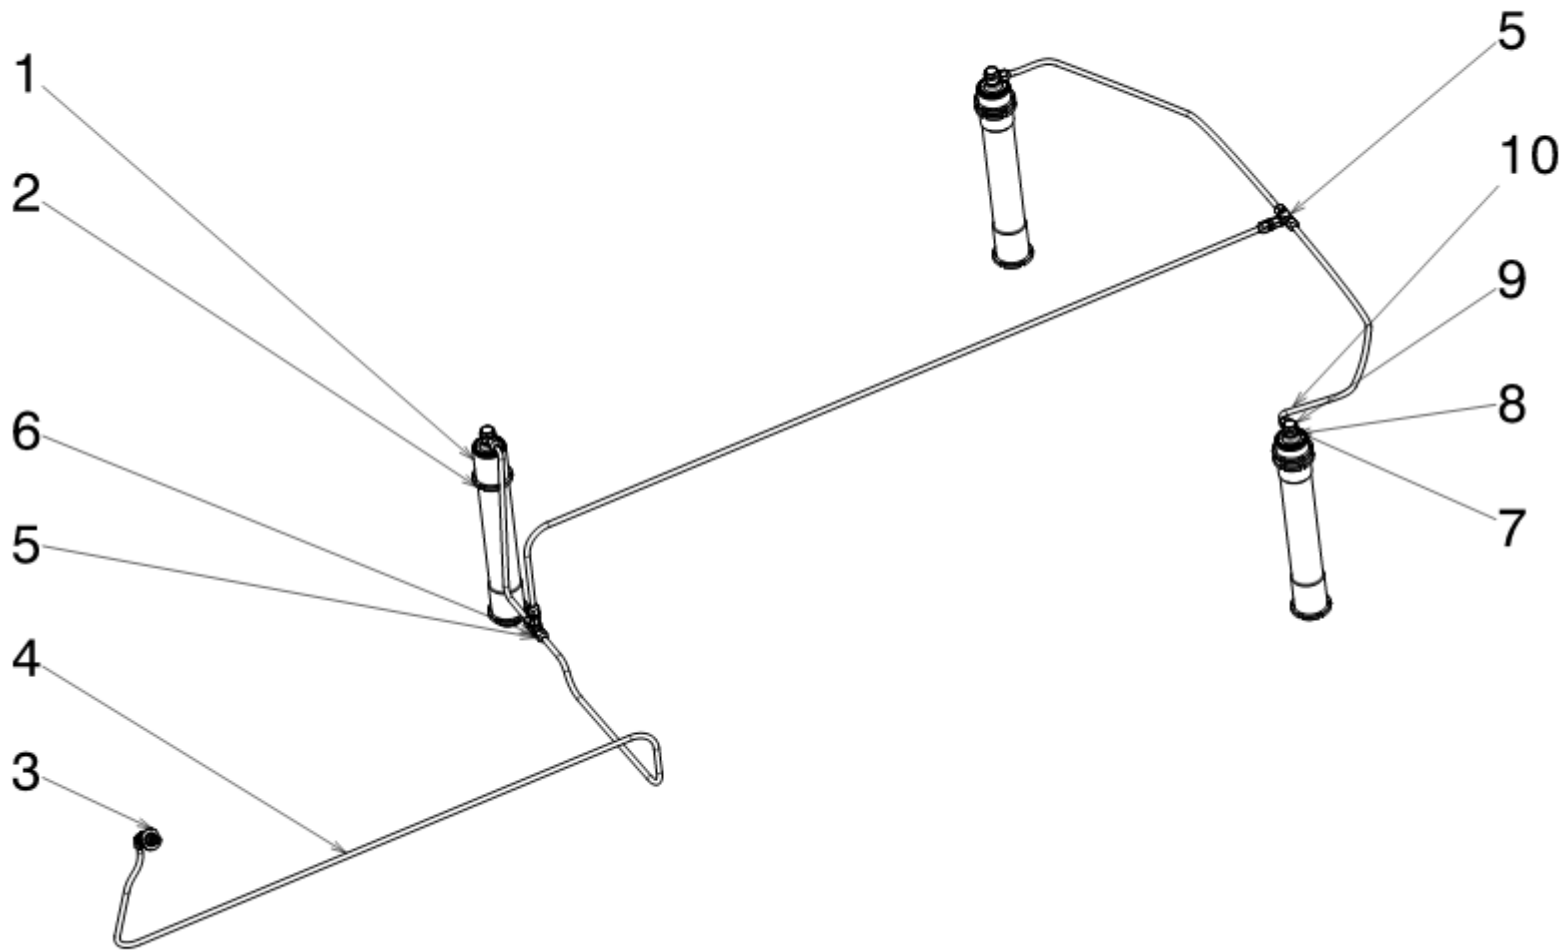


Pos	Part no.	Description	Q.ty
1	CP3985-310	AIRJACK	3
2	CP2820-110	MOUNTING RING	8
3	LL-16-PLUS	KRONOTEC LL-16-PLUS	1
4	06812300	PIPE AIRJACK KIT ALU DIAM10	2
5	ATEC 647-098	JUNCTION 3 WAY DASH6	2
6	ATEC 647-072	JUNCTION STRAIGHT DASH6	1
7	ATEC 647-078	BANJO DASH6	3
8	ATEC 649-307	WASHER ALUMINUM 14	6
9	ATEC 649-392	SCREW BANJO	3
10	ATEC 647-015	JUNCTION	1

**WIRING LOOM**

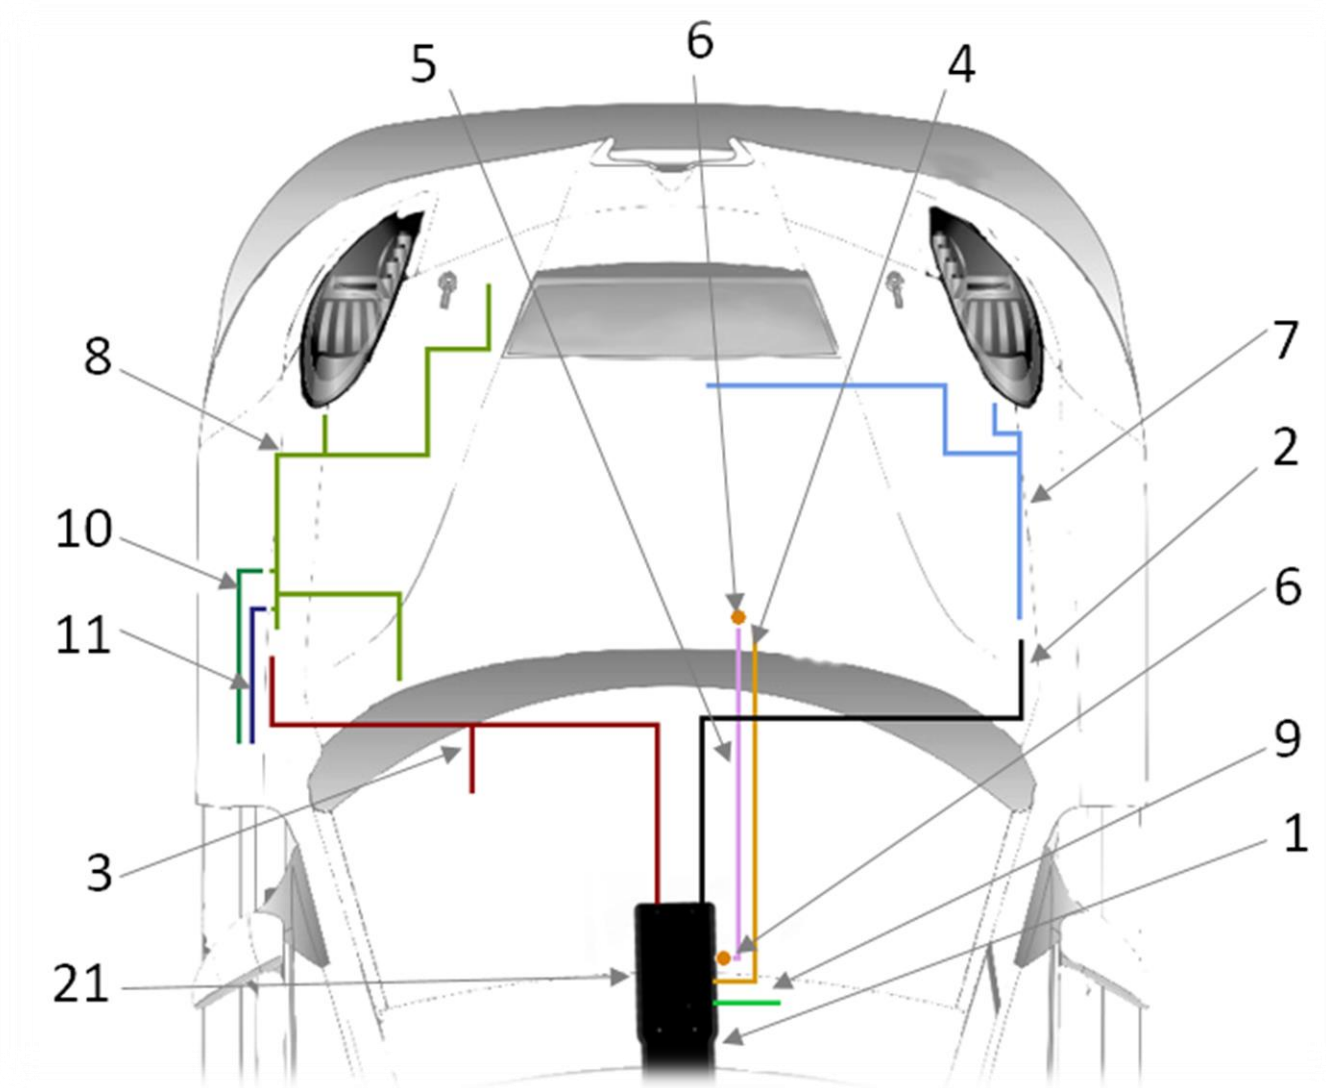

Pos	Part no.	Description	Q.ty
1	RF02-16-01091	COMPLETE CONSOLE	1
2	RF02-16-00600	INNER FRONT RH WIRING	1
3	RF02-16-00601	INNER FRONT LH WIRING	1
4	RF02-16-00897	ENGINE EXTENSION WIRING	1
5	RF02-16-00903	POWER CABLE CONSOLE/ENGINE COMPARTMENT	1
6		BULKHEAD CONNECTOR	3
7	RF02-16-00891	ENGINE COMPARTMENT FRONT RH WIRING	1
8	RF02-16-00892	ENGINE COMPARTMENT FRONT LH WIRING	1
9		DATA LOGGER WIRING	1
10	RF02-16-00895	KILL SWITCH	1
11	RF02-16-00896	EXTERNAL FIRE EXTINGUISHER WIRING	1
12	RF02-16-00628	TAILGATE WIRING	1
13	RF02-16-00602	REAR WIRING	1
14	RF02-16-00606/H	HP FUEL PUMP WIRING	1
15	RF02-16-00606/L	LP FUEL PUMP WIRING	1
16	RF02-16-00901	BATTERY POWER CABLE	1
17	RF02-16-00815	ANDERSON (OPTIONAL)	1
18	RF01-16-10601	GPS (OPTIONAL)	1
19	KER30	BATTERY	1
20	RF02-16-00902	POWER CABLE BATTERY/CONSOLE	1
21	RF01-16-00921	POWER BOX	1


**WIRING LOOM**

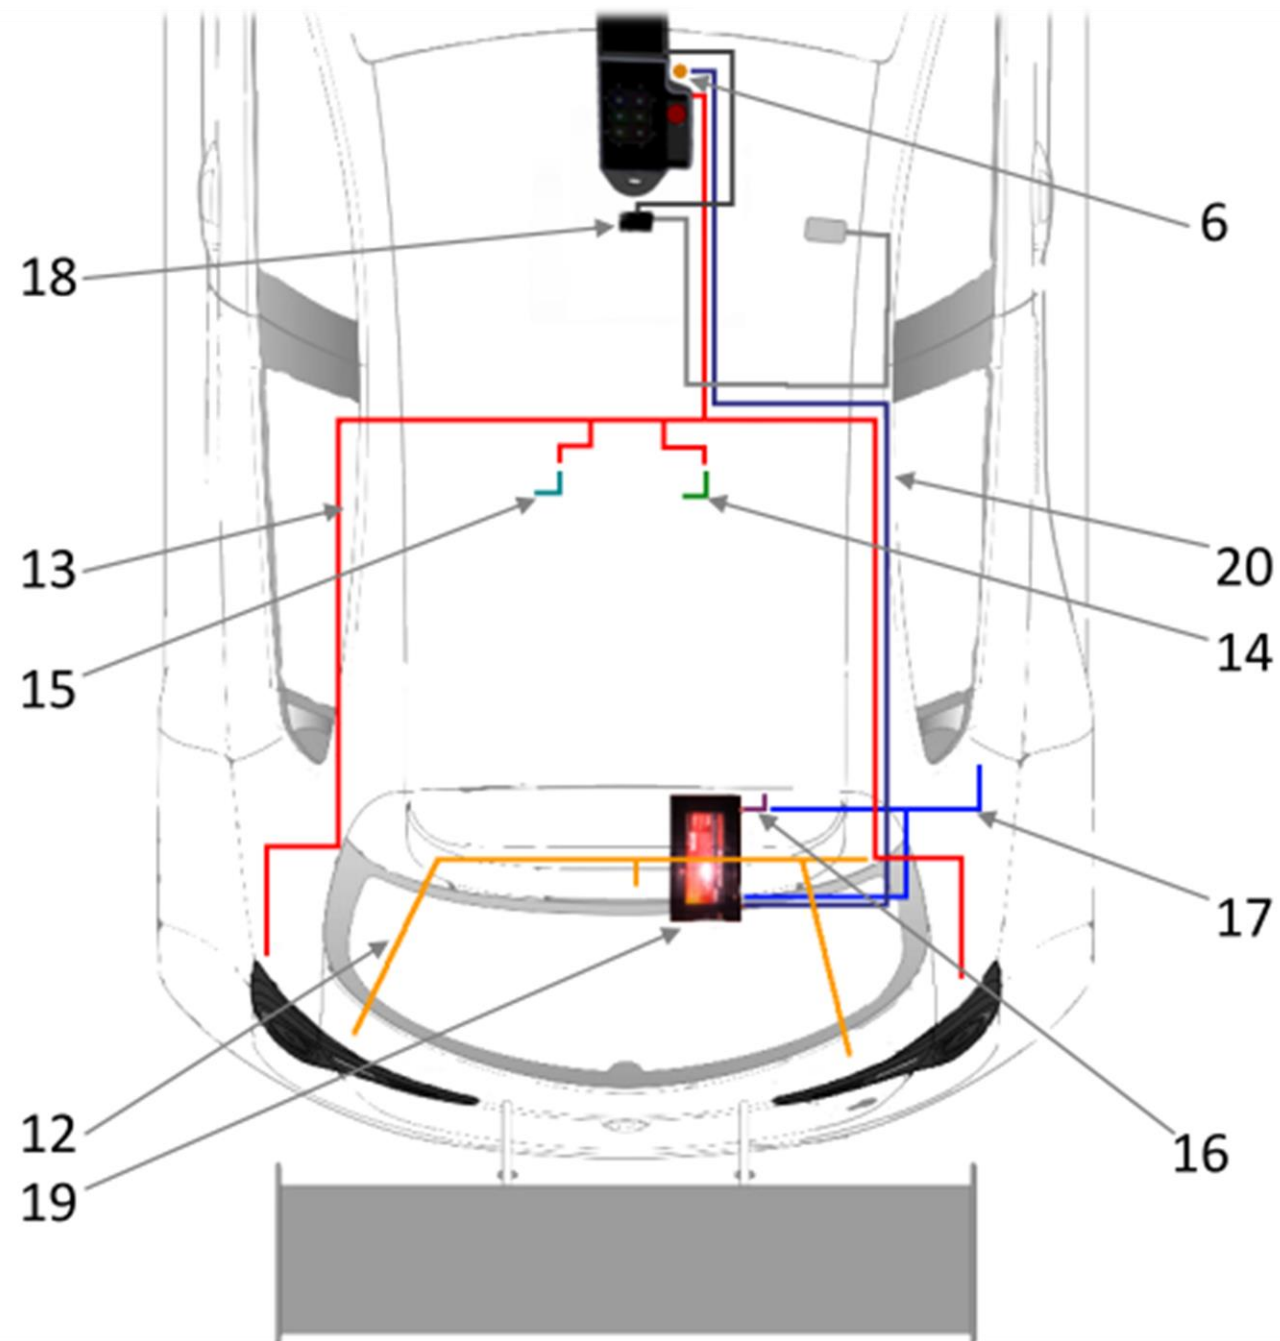

Pos	Part no.	Description	Q.ty
1	RF02-16-01091	COMPLETE CONSOLE	1
2	RF02-16-00600	INNER FRONT RH WIRING	1
3	RF02-16-00601	INNER FRONT LH WIRING	1
4	RF02-16-00897	ENGINE EXTENSION WIRING	1
5	RF02-16-00903	POWER CABLE CONSOLE/ENGINE COMPARTMENT	1
6		BULKHEAD CONNECTOR	3
7	RF02-16-00891	ENGINE COMPARTMENT FRONT RH WIRING	1
8	RF02-16-00892	ENGINE COMPARTMENT FRONT LH WIRING	1
9		DATA LOGGER WIRING	1
10	RF02-16-00895	KILL SWITCH	1
11	RF02-16-00896	EXTERNAL FIRE EXTINGUISHER WIRING	1
12	RF02-16-00628	TAILGATE WIRING	1
13	RF02-16-00602	REAR WIRING	1
14	RF02-16-00606/H	HP FUEL PUMP WIRING	1
15	RF02-16-00606/L	LP FUEL PUMP WIRING	1
16	RF02-16-00901	BATTERY POWER CABLE	1
17	RF02-16-00815	ANDERSON (OPTIONAL)	1
18	RF01-16-10601	GPS (OPTIONAL)	1
19	KER30	BATTERY	1
20	RF02-16-00902	POWER CABLE BATTERY/CONSOLE	1
21	RF01-16-00921	POWER BOX	1


**ELECTRONIC UNIT**

Pos	Part no.	Description	Q.ty
1	RF02-16-10111	ECU COOLING DUCT	1
2	RF01-16-01017	ECU SUPPORT	1
3	RF01-16-01308	ECU	1
4	A656041	ECU COOLING FAN	1

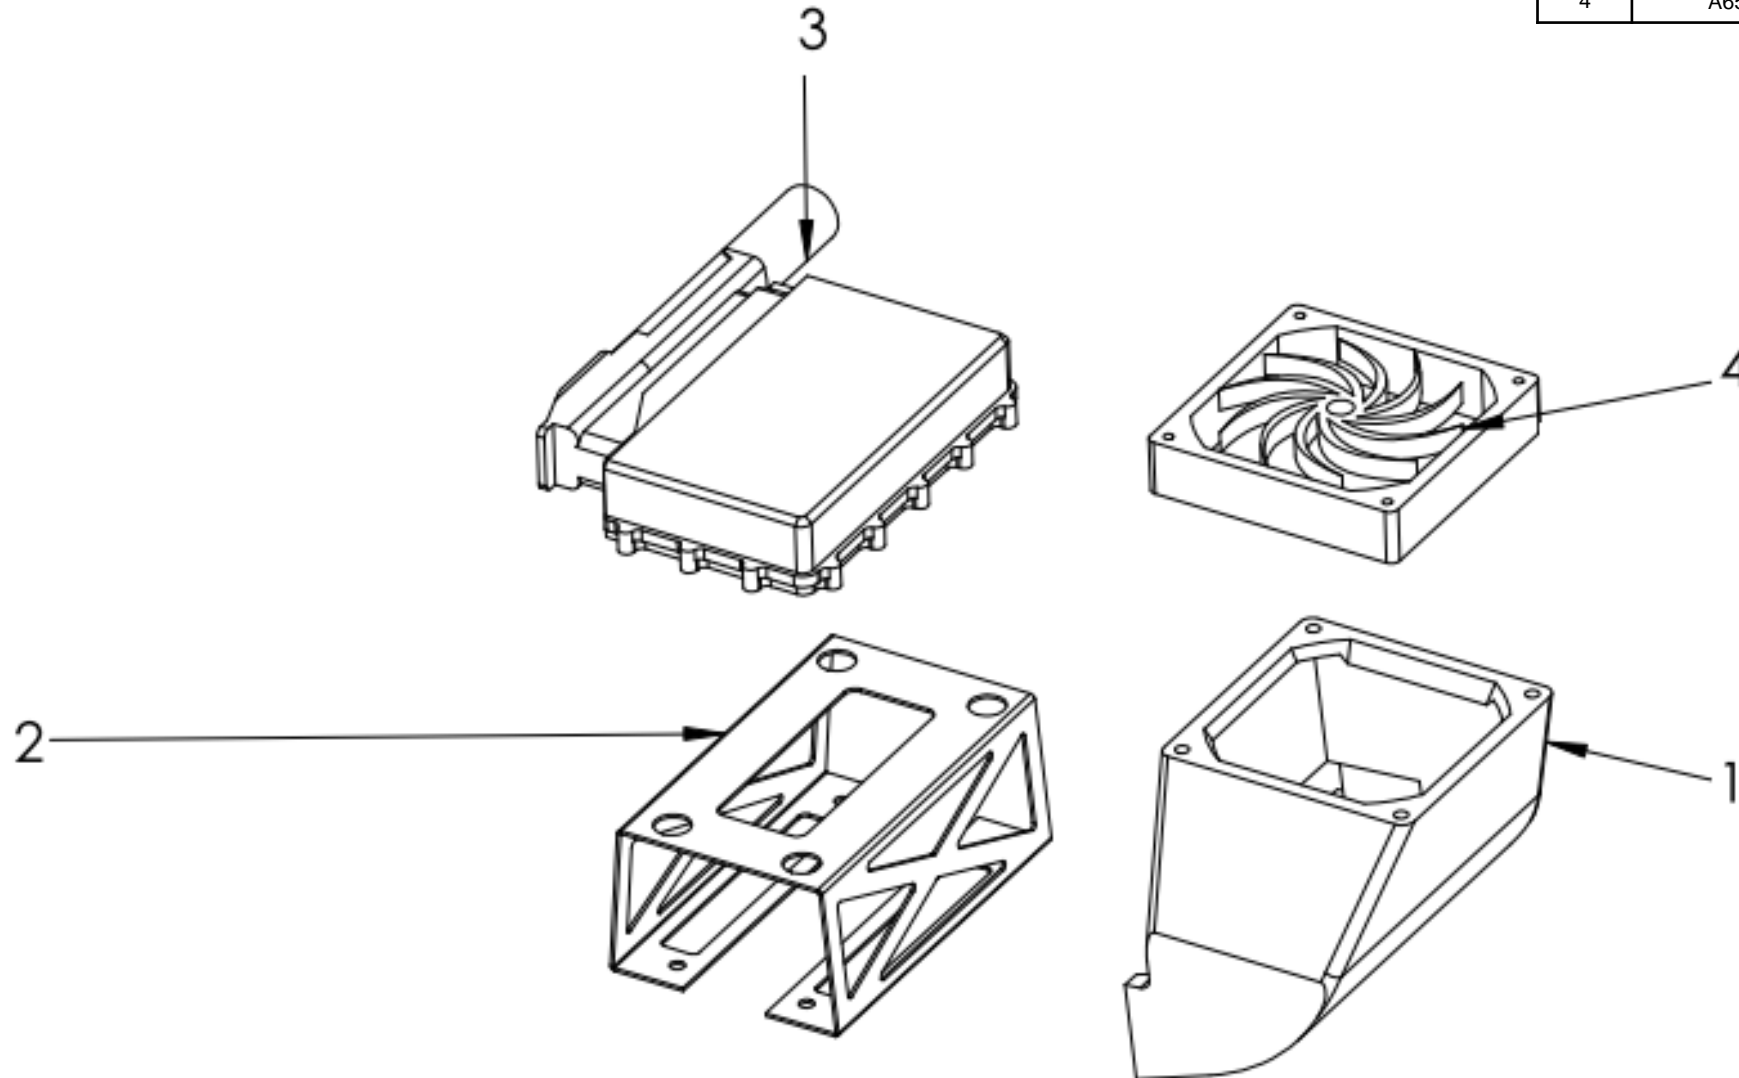


**RF01-19-01076 FUEL SYSTEM ASSY**

Pos	Part no.	Description	Q.ty
1	RF02-19-01111	CARBON TANK SUPPORT	1
2		WASHER	15
3		HEX SOCKET SCREW M6X1 L20	15
4		THREADED INSERT M6	15
5	RF01-19-00887	TANK ASSY	1
6	RF01-19-01110	FUEL SYSTEM	1

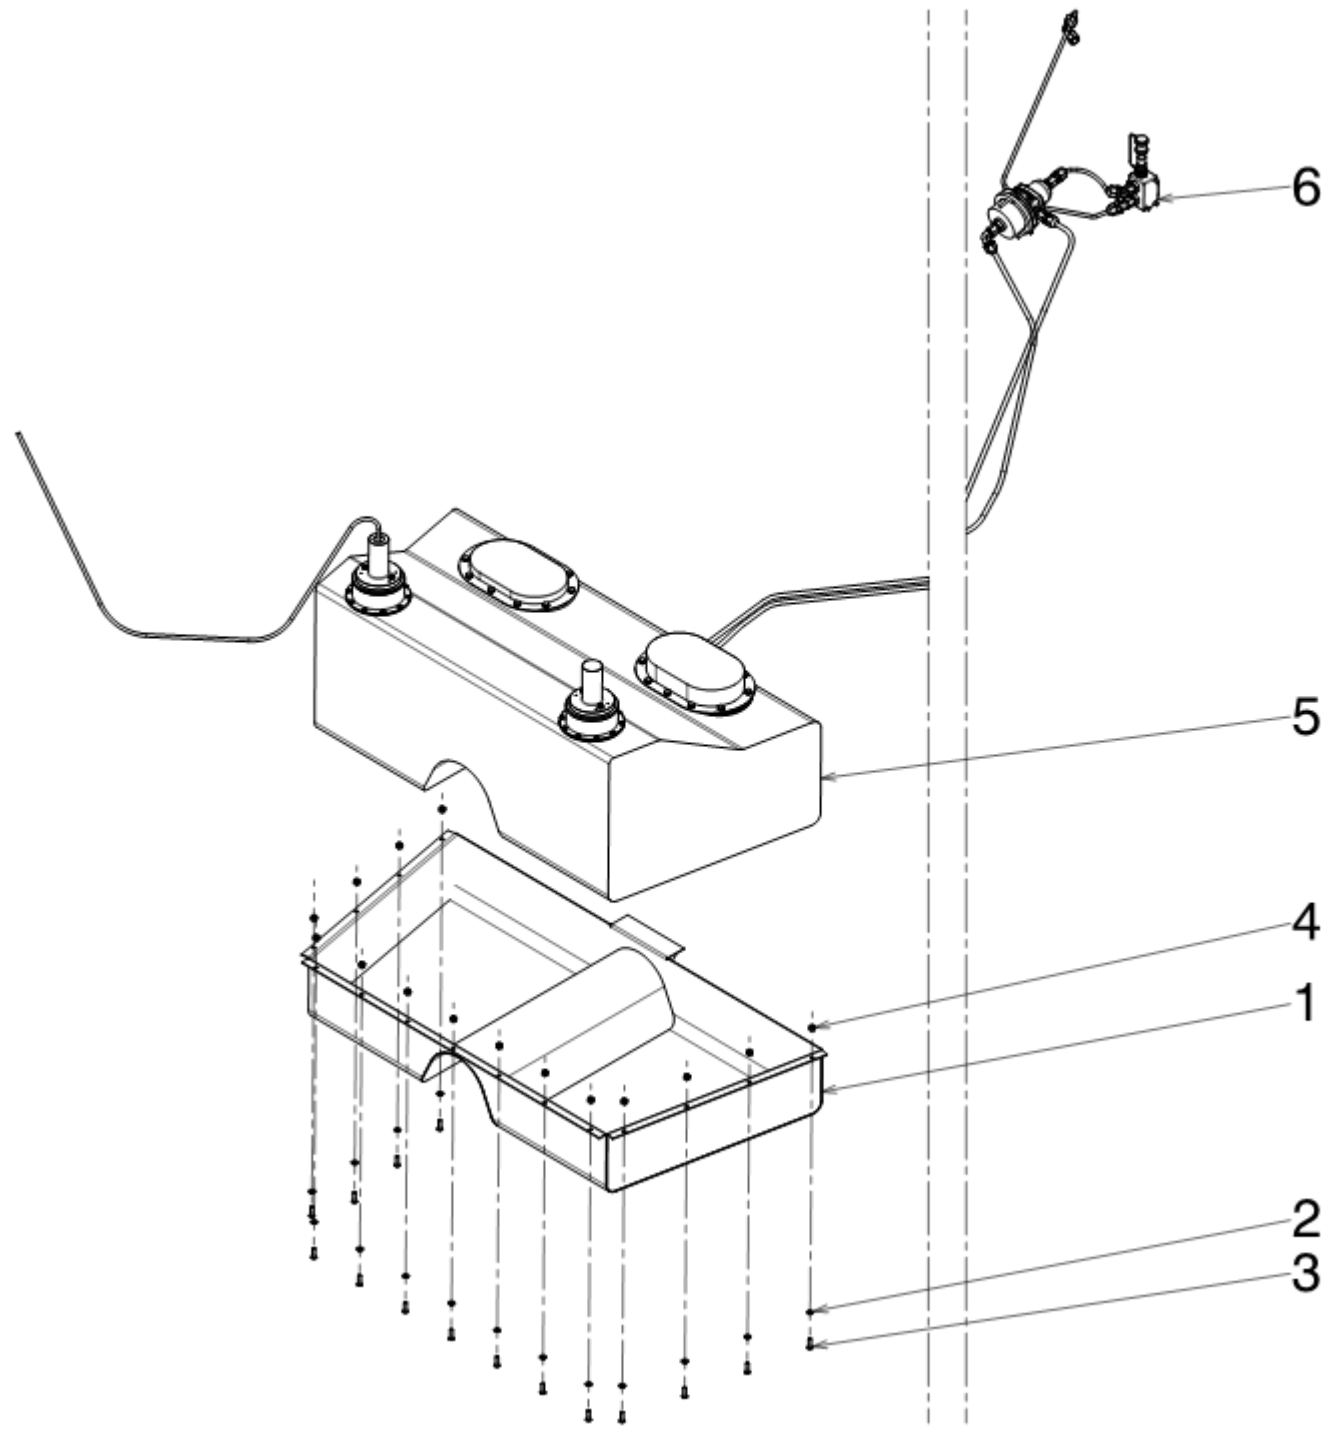




**RF01-19-01110 FUEL SYSTEM**

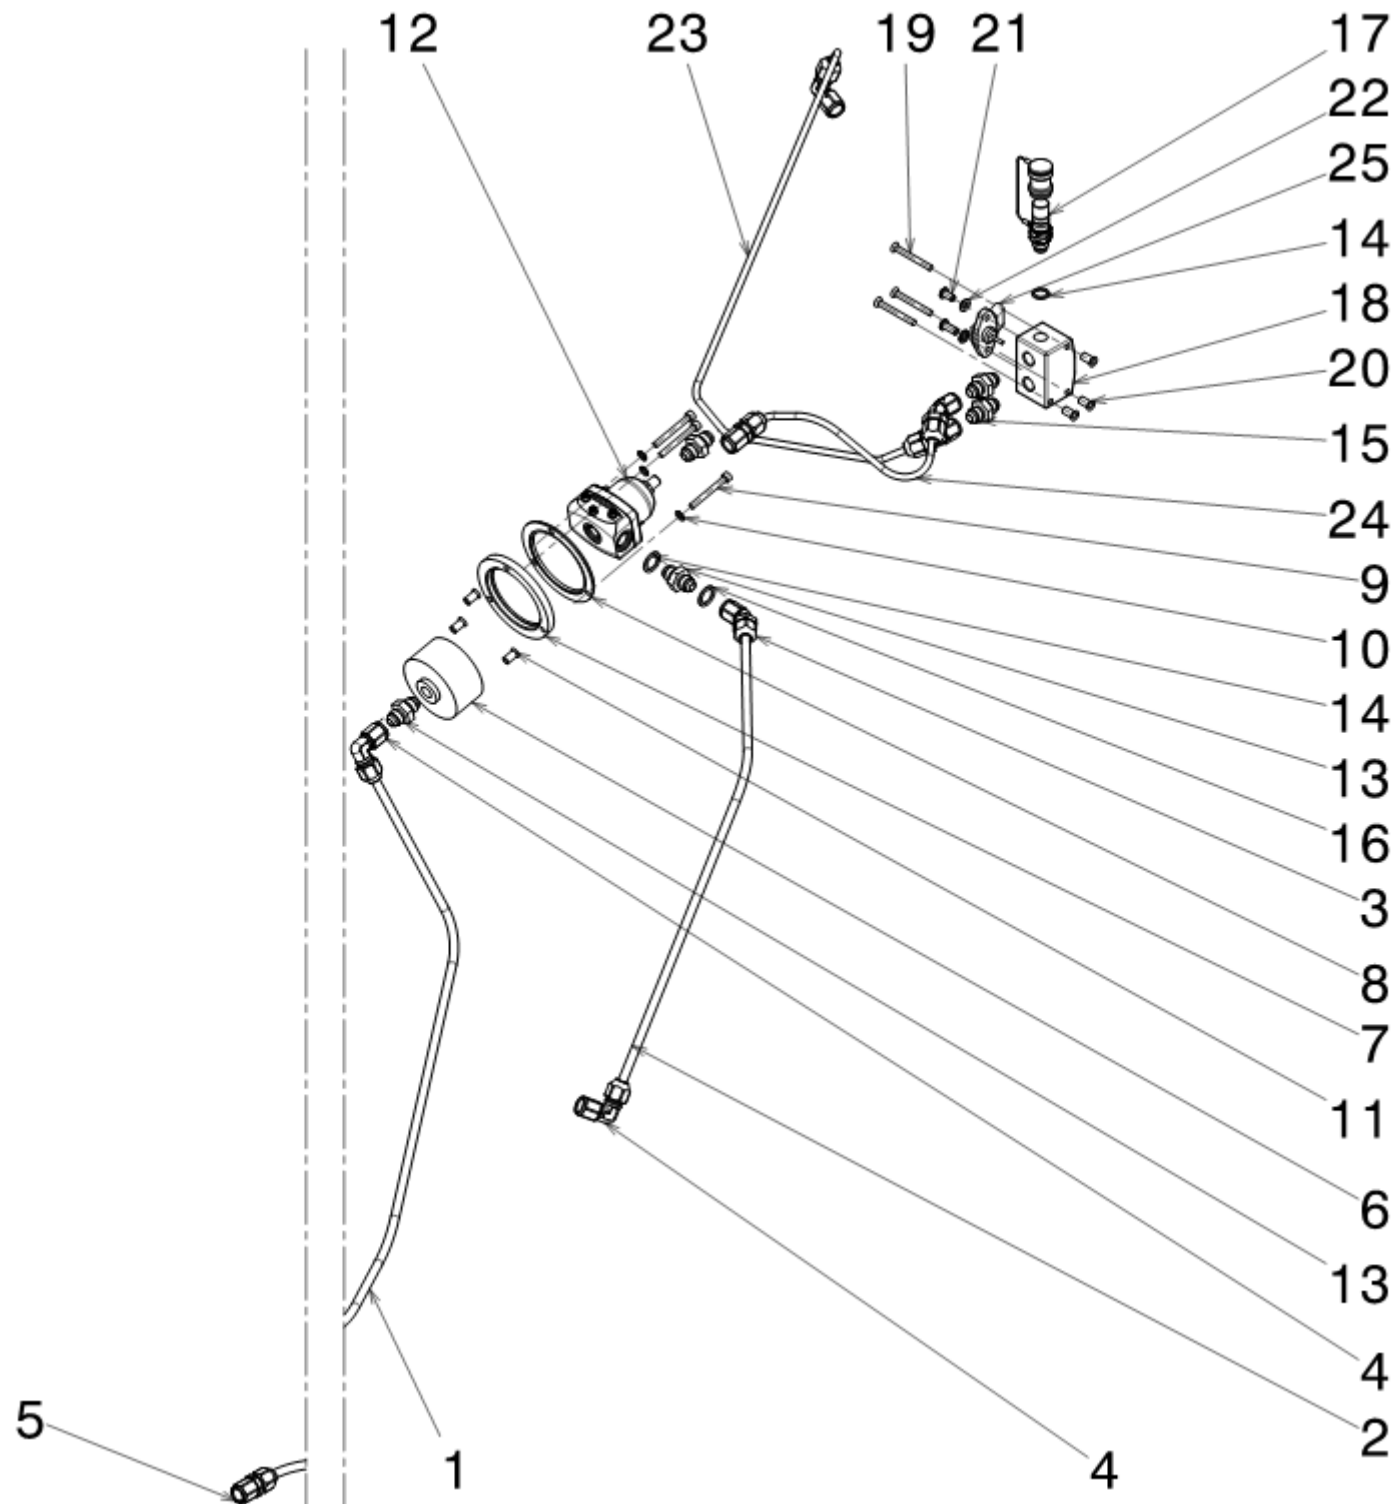

Pos	Part no.	Description	Q.ty
1		FEED STAINLESS BRAIDED HOSE PIPE DASH6 L	1
2		RETURN STAINLESS BRAIDED HOSE PIPE DASH6 L	1
3	E-TEC804506	45° FORGED LOW PROFILE FEMALE AN	3
4	E-TEC809006	90° FORGED LOW PROFILE FEMALE AN	2
5	E-TEC800106	STRAIGHT FEMALE AN	1
6		FUEL FILTER	1
7	RF01-25-00853	FLANGE FUEL FILTER	1
8	RF01-25-00854	COVER FILTER	1
9		HEX SOCKET SCREW M5X25	3
10		WASHER 5X10	3
11		THREADED INSERT FUEL FILTER	3
12	B-FL53502	BOSH PRESSURE FUEL REGULATOR	1
13	E-TEC981506	NIPPLE DASH6	2
14		COPPER WASHER	3
15	061415300	NIPPLE DASH6 M4X1,5	2
16		COPPER WASHER M18X1,5	2
17	SPT08.7655	STAUBLI	1
18	RF01-19-00812	HOUSING FOR PLUG VALVE PICK FUEL	1
19		COUNTERSUNK HEAD SCREW M5X50	3
20		THREADED INSERT HOUSING	3
21		BUTTON HEAD BOLT M6X16	2
22		WASHER 6X12	2
23		STAINLESS BRAIDED HOSE DASH6 L	1
24		STAINLESS BRAIDED HOSE DASH6 L	1
25		SENSOR FUEL	1


**DA MODIFICARE**

**RF01-19-00887 TANK ASSY**

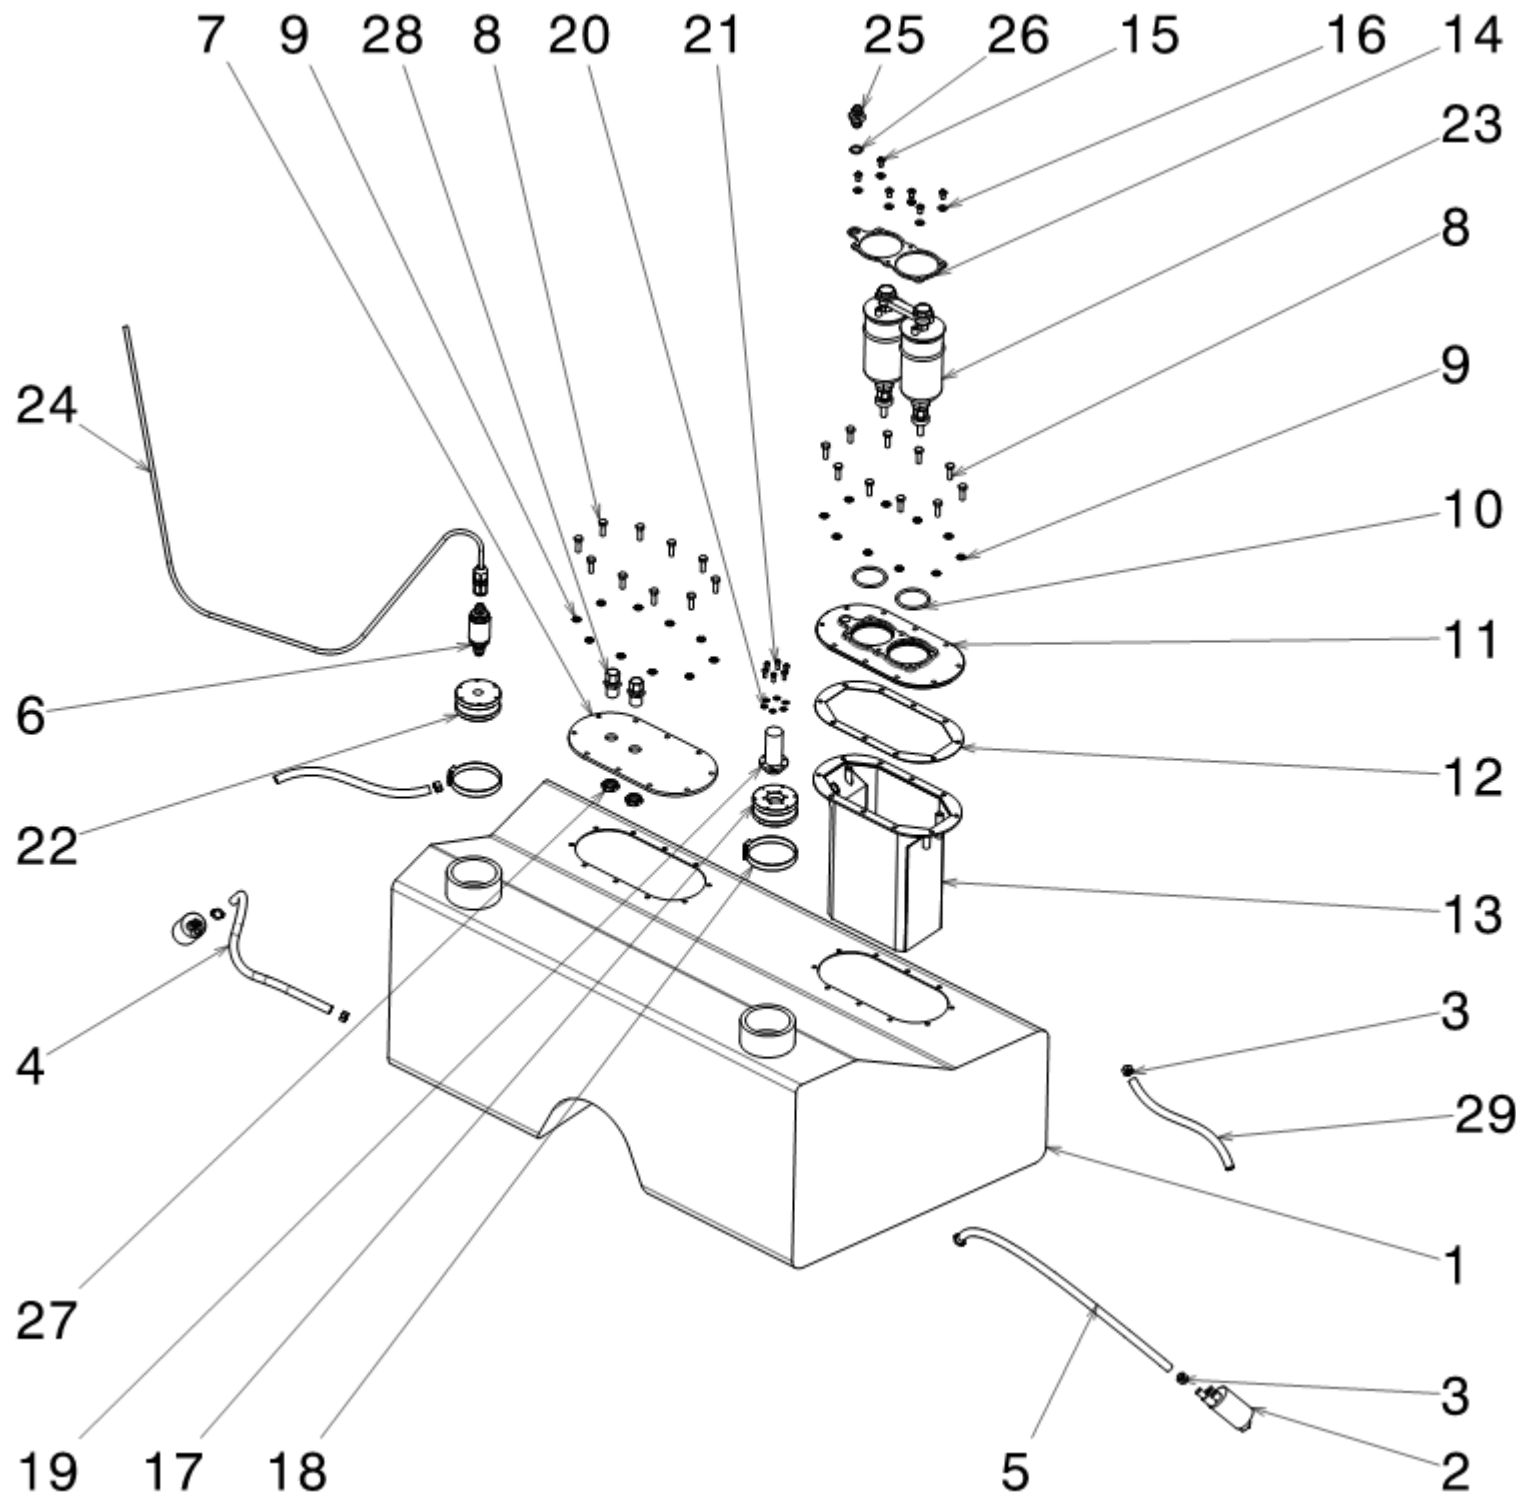


Pos	Part no.	Description	Q.ty
1	RF01-19-00888	RUBBER FUEL TANK 100L	1
2	RF01-19-00889	LOW PRESSURE PUMP	2
3		METAL CLAMP FOR LIFT PUMP HOSE	6
4		RUBBER HOSE FOR LHS LIFT PUMP	1
5		RUBBER HOSE FOR RHS LIFT PUMP	1
6	24102018(SF)	VENT VALVE	2
7	RF01-19-01101	TANK CLOSING FLANGE LHS	1
8		HEX SCREW M6X20	20
9		WASHER 6X12	20
10		O-RING FOR FLANGE	2
11	RF01-19-01099	NOURICE UPPER FLANGE	1
12	RF01-19-01100	NOURICE SEAL	1
13	RF01-19-01098	WELDED NOURICE ASSY	1
14	RF01-19-01105	PUMPS FLANGE BOLTED TO THE NOURICE	1
15		BOLT FOR PUMPS FLANGE	6
16		WASHER FOR PUMPS FLANGE	6
17	RF01-19-02095	PLUG D65 FUEL FILL	1
18		CLAMP FOR FUEL FILL PLUG	2
19	N00916298	STAUBLI FOR FUEL FILL PLUG	1
20		WASHER 4X8	6
21		HEX SOCKET SCREW M4 L10	6
22	RF01-19-02096	PLUG D65 FUEL VENT	1
23	RF01-19-01104	HP PUMP ASSY	1
24	RF02-19-00412	TANK VENT PIPE	1
25	061415300	FITTING DASH 6	1
26		COPPER WASHER 14	1
27		LOCKNUT	2
28		PLASTIC FITTING	2
29		OVERFLOW HOSE	2

RF01-19-00887 TANK ASSY

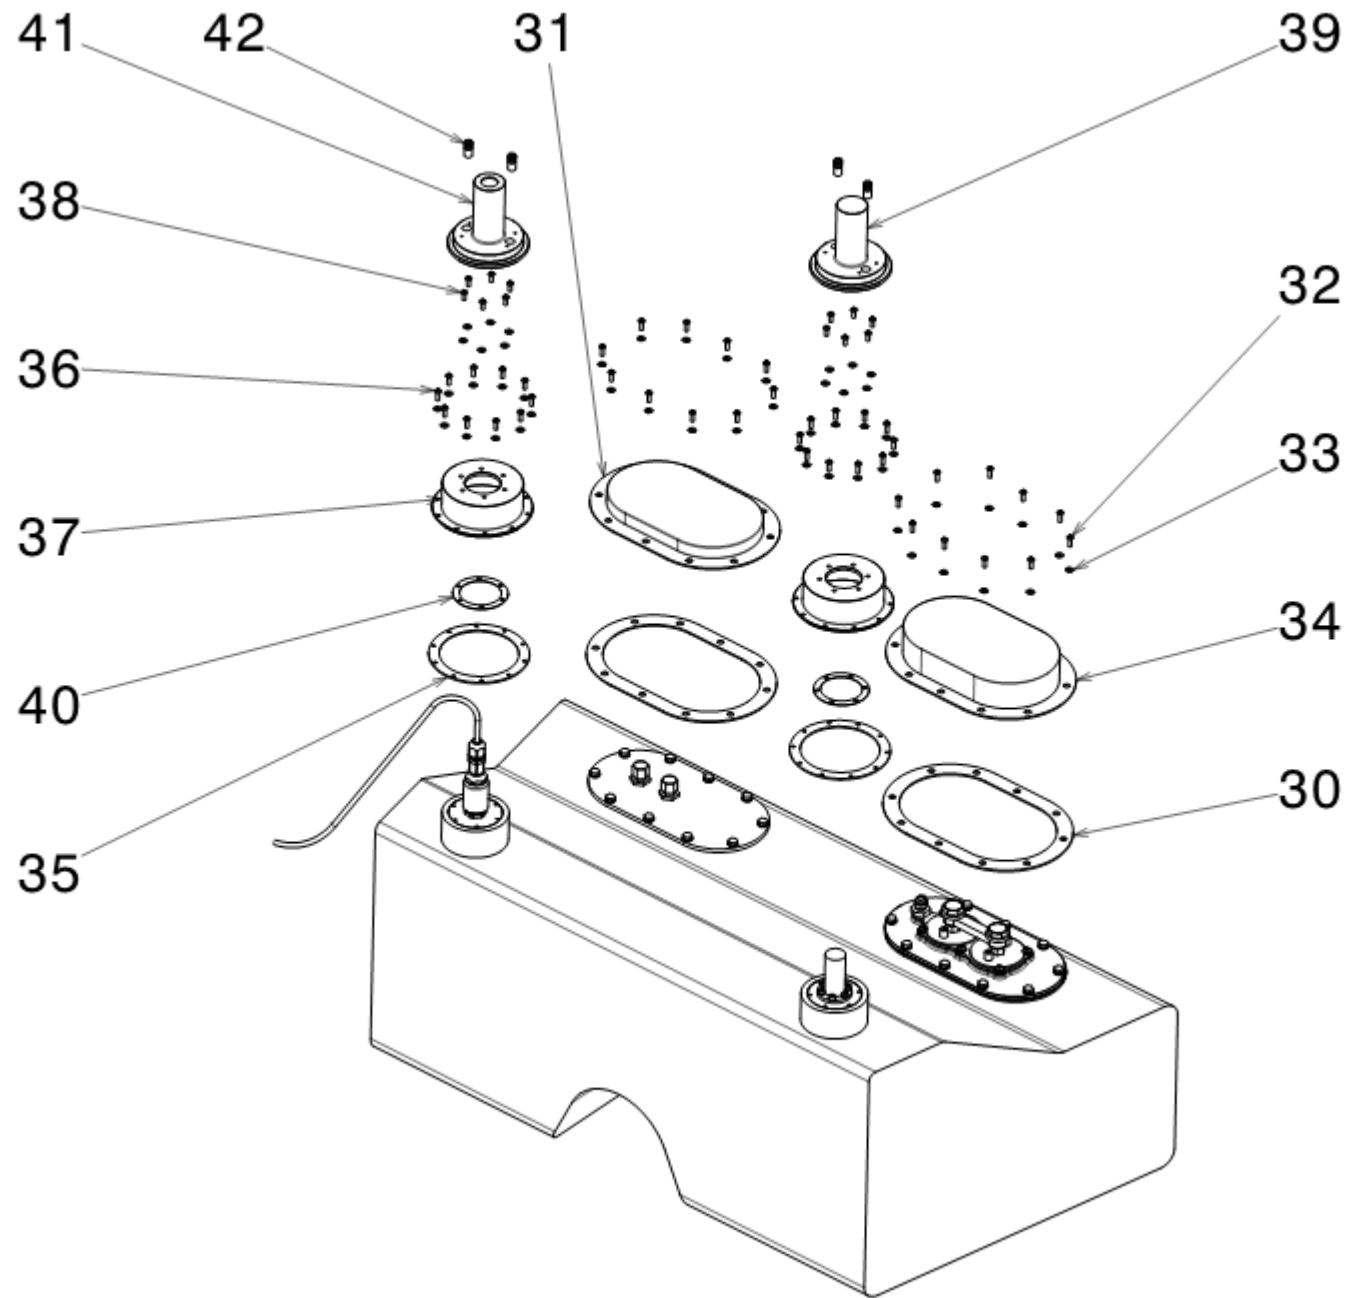

Pos	Part no.	Description	Q.ty
30	RF01-19-01115	TANK COVER SEAL	2
31	RF01-19-01102	TANK COVER LHS	1
32		BUTTON HEAD BOLT M4X12	20
33		WASHER 4X8	52
34	RF01-19-01103	TANK COVER RHS SIDE	1
35	RF01-19-01116	TANK COVER SEAL UPPER	2
36		BUTTON HEAD BOLT M4X10	20
37	RF01-19-01108	ALUMINIUM COVER FOR TANK PLUGS	2
38		BUTTON HEAD BOLT M4X8	12
39	RF02-19-01118	SAFETY CAP STAUBLI	1
40	RF02-19-01109	SAFETY CAP SEALING	2
41	RF02-19-01119	SAFETY CAP FUEL VENT	1
42	RF02-19-01121	SAFETY CAP LOCKING BUSH	4

**RF01-19-01104 HP PUMP ASSY**

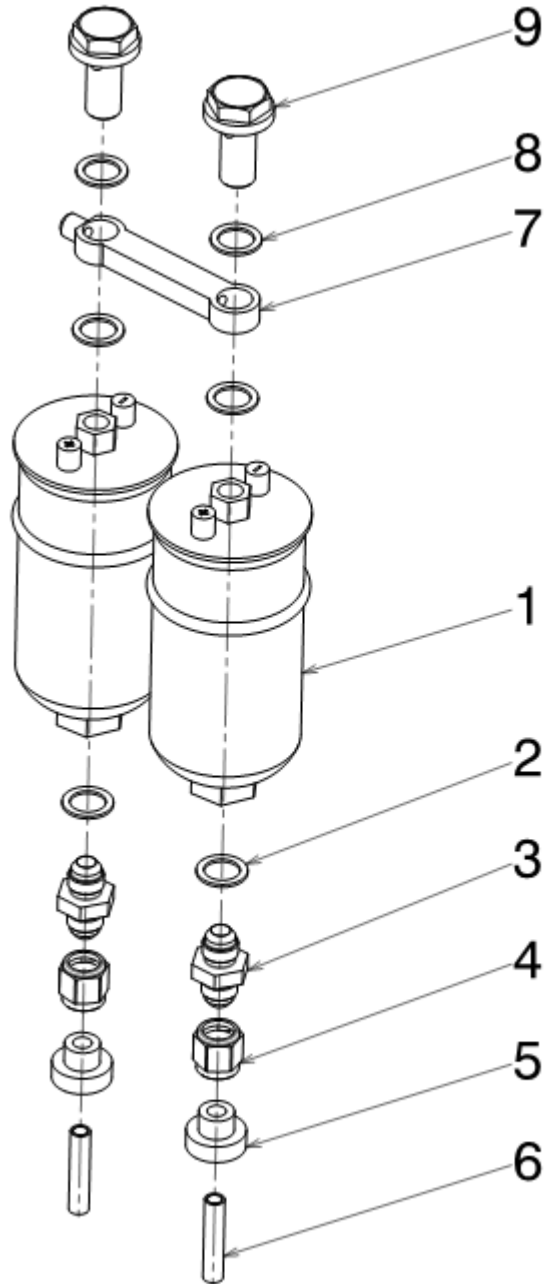

Pos	Part no.	Description	Q.ty
1	BE-44508	HIGH PRESSURE PUMP	2
2		COPPER WASHERS FOR PUMP	2
3	061815300	FITTING DASH6 M18X1,5	2
4	581806	FITTING DASH6 FOR ALUMINIUM PIPE	2
5	581906	OGIVE FOR ALUMINIUM PIPE FITTING	2
6		DIP TUBE ALUMINUM	2
7	06301300	DOUBLE BANJO DASH6	1
8	RF02-19-01112	DOUBLE BANJO WASHER	4
9	ETEC 59291215	BANJO BOLT DASH6	2