


### Troubleshooting

Relay will not turn on with engine running	Insufficient overvoltage caused by faulty battery or alternator
Relay cycles under load	Faulty car battery Faulty electrical connections Excessive length or insufficient gauge of supply leads Single supply lead only used instead of double Excessive load – Discharged Leisure Battery or short
Long delay before turning off	Battery maintaining overvoltage. Normal with new battery

### Note

If a heavy load fridge is known to be fitted to the customer's caravan, it is strongly recommended that either twin feed cables are fitted or that a single 56/0.3 cable is fitted to avoid cycling caused by excessive line voltage drop.

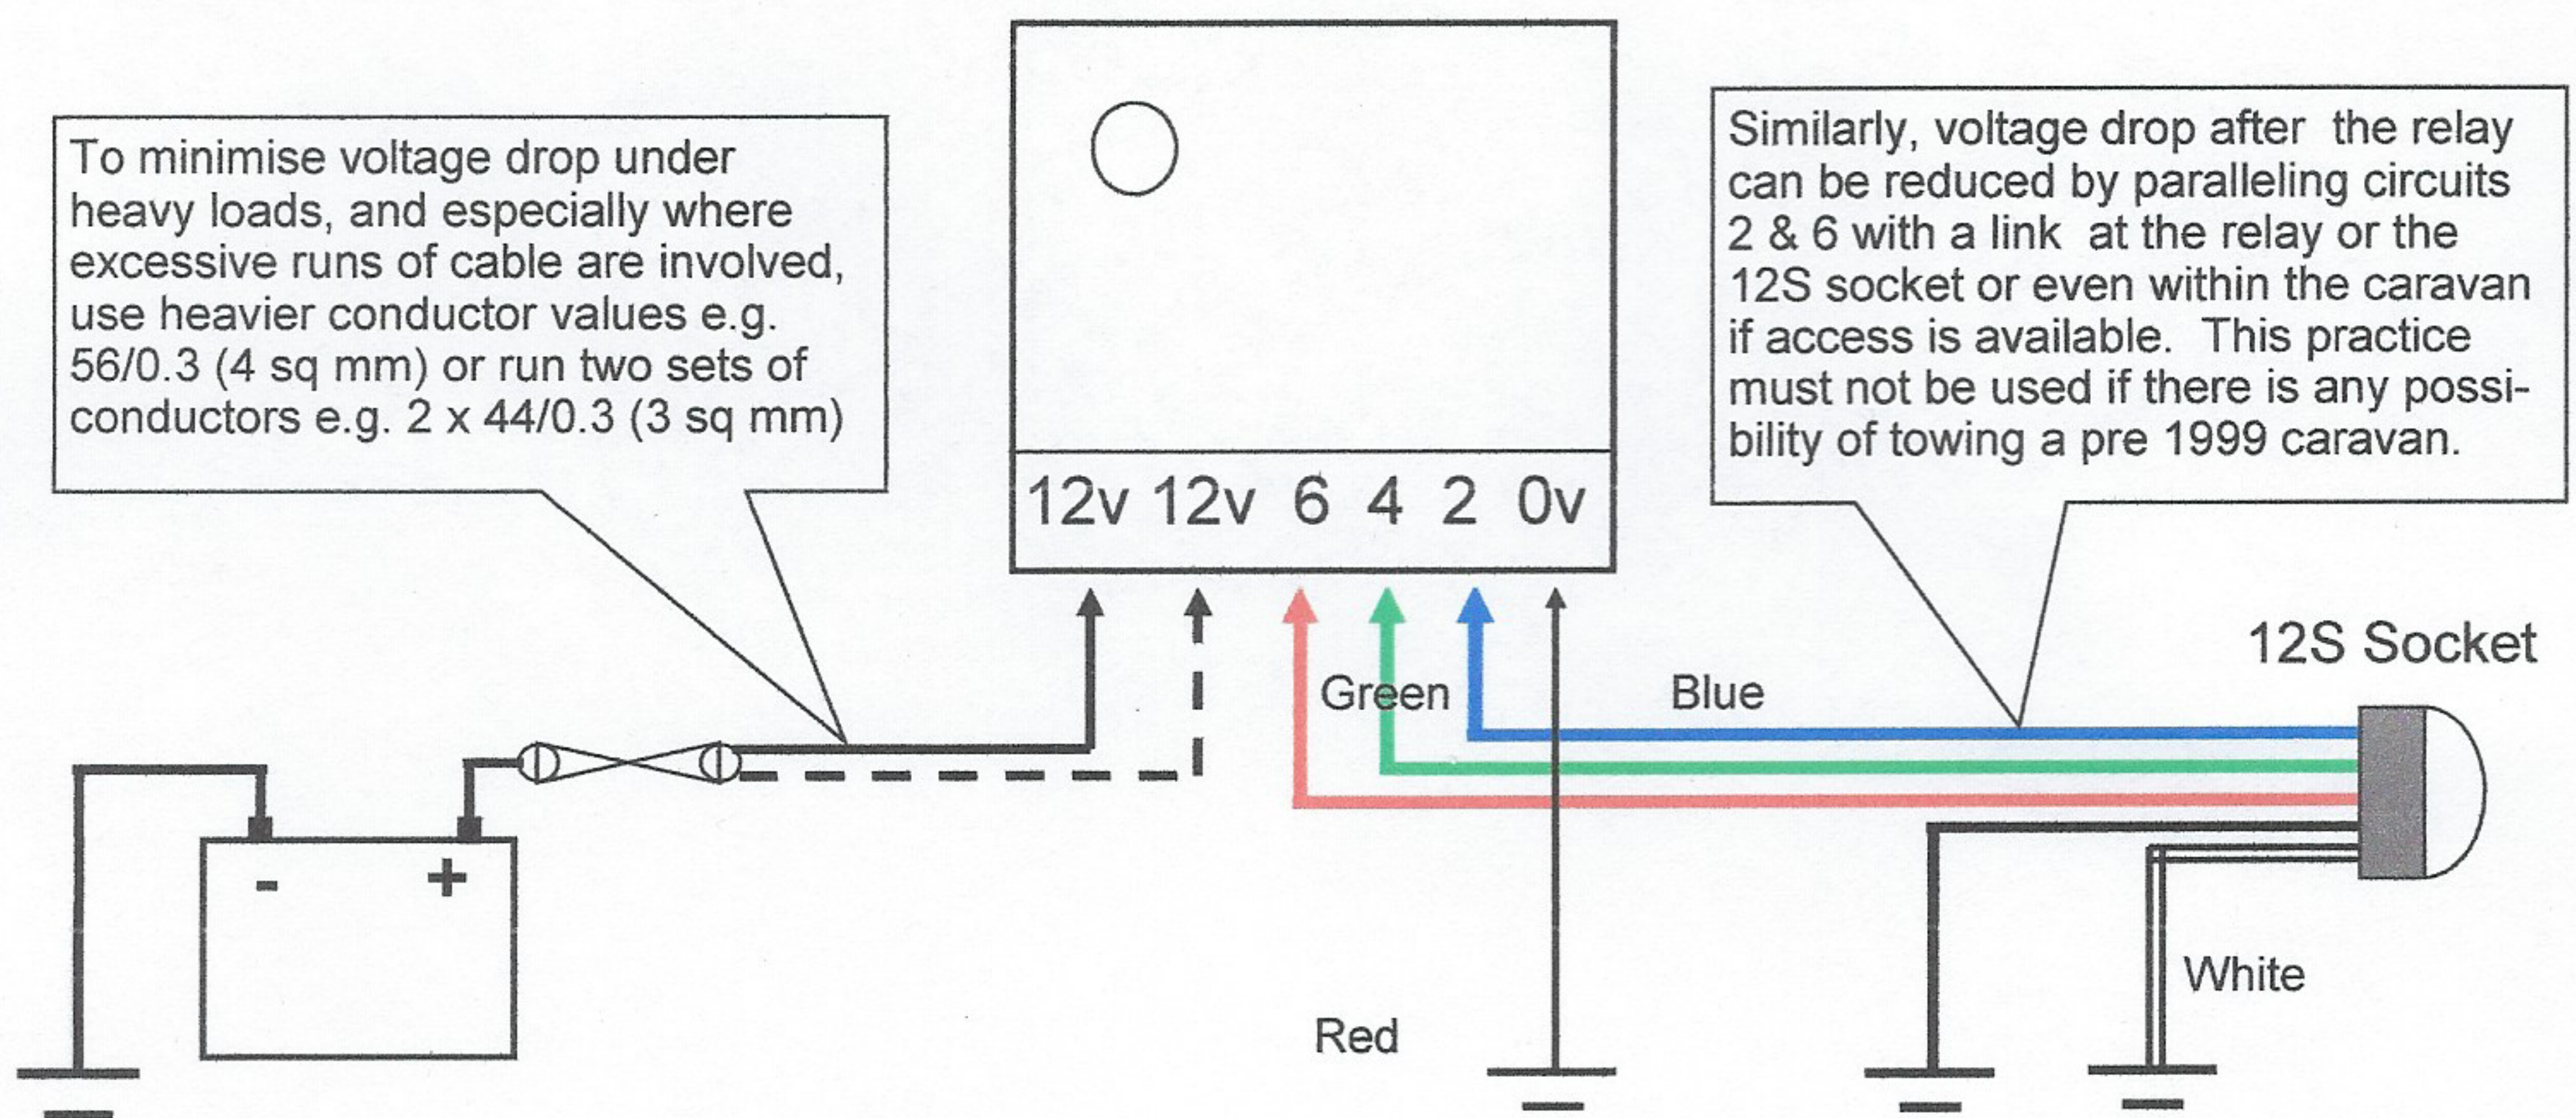

For 13 Pin variants see the connection table above.